



TBM 850

From S/N 346 thru S/N 433

PILOT'S INFORMATION MANUAL

CAUTION

THIS INFORMATION MANUAL IS A NON-OFFICIAL COPY OF THE PILOT'S OPERATING HANDBOOK AND MAY BE USED FOR GENERAL INFORMATION PURPOSES ONLY.

IT IS NOT KEPT CURRENT AND THEREFORE CANNOT BE USED AS A SUBSTITUTE FOR AIRWORTHINESS AUTHORITIES APPROVED MANUAL WHICH IS THE ONLY ONE INTENDED FOR OPERATION OF THE AIRPLANE.

The lists of effective pages in this manual correspond to those of the basic Pilot's Operating Handbook.

The content of this document is the property of DAHER AEROSPACE. It is supplied in confidence and commercial security of its contents must be maintained. It must not be used for any purpose other than that for which it is supplied, nor may information contained in it be disclosed to unauthorized persons. It must not be reproduced nor transmitted in any form in whole or in part without permission in writing from the owners of the Copyright.
Information in this document is subject to change without notice.

© 2020 - DAHER AEROSPACE - All rights reserved

For any information concerning this document, please contact :

DAHER AEROSPACE

Customer care
65921 TARBES CEDEX 9
FRANCE

TELEPHONE : 33 (0)5.62.41.73.00
TELEFAX : 33 (0)5.62.41.76.54

April 14, 2020 – Rev. 8

P/N : T00.DMNPIPYE

Printed in FRANCE

PIM - DO NOT USE FOR FLIGHT OPERATIONS

TABLE OF CONTENTS

	SECTION
GENERAL	1
LIMITATIONS	2
EMERGENCY PROCEDURES	3
NORMAL PROCEDURES	4
PERFORMANCE	5
WEIGHT AND BALANCE	6
DESCRIPTION	7
AIRPLANE HANDLING, SERVICING AND MAINTENANCE	8
SUPPLEMENTS	9

LIST OF EFFECTIVE PAGES AND VALIDITIES

ORIGINAL ISSUE OF OCTOBER 31, 2005

From S/N 346 thru S/N 433

P/N DMNFM00EE0R8EN

Page No.	Revision No.	Page No.	Revision No.	Page No.	Revision No.
■ Title	8	■ 0.21	8	1.5.2	0
			8	1.5.3	0
1	7	0.23	8	1.5.4	0
2	3	0.24	8	1.6.1	0
		0.25	8	1.6.2	0
A	0	0.26	8		
B	0	0.27	8	■ 2.0.1	8
C	0	0.28	8	2.0.2	0
D	0			2.1.1	1
				2.1.2	0
		1.0.1	0	2.1.2	0
0.1	8	1.0.2	0	2.2.1	5
0.2	8	1.1.1	7	2.2.2	0
0.3	8	1.1.2	0	■ 2.3.1	8
0.4	5	1.2.1	5	2.3.2	8
0.5	0	1.2.2	0	2.3.3	8
0.6	0	1.3.1	0	2.3.4	0
0.7	1	1.3.2	5	2.4.1	4
0.8	2	1.3.3	7	2.4.2	0
0.9	3	1.3.4	0	2.5.1	5
0.10	3	1.4.1	0	2.5.2	0
0.11	4	1.4.2	0	2.6.1	5
0.12	5	1.4.3	5	2.6.2	0
0.13	5	1.4.4	0	2.6.3	5
0.14	5	1.4.5	0	2.6.4	0
0.15	5	1.4.6	0	2.6.5	0
0.16	6	1.4.7	5	2.6.6	5
0.17	6	■ 1.4.8	8	2.6.7	6
0.18	7	1.4.9	8	2.6.8	0
0.19	8	1.4.10	0	2.7.1	5
0.20	8	1.5.1	0	2.7.2	0

2.8.1	0	3.5.2	0	3.11.4	5
2.8.2	5	3.5.3	5	3.11.5	6
2.9.1	0	3.5.4	5	3.11.6	0
2.9.2	5	3.5.5	5	3.12.1	0
2.9.3	0	3.5.6	0	3.12.2	0
2.9.4	0	3.6.1	0	3.12.3	0
2.9.5	0	3.6.2	5	3.12.4	0
2.9.6	0	■ 3.6.3	8	3.13.1	0
2.9.7	0	3.6.4	5	3.13.2	0
2.9.8	0	3.7.1	5	3.13.3	0
2.9.9	0	3.7.2	5	3.13.4	0
2.9.10	0	3.7.3	0	■ 3.13.5	8
2.9.11	5	3.7.4	5	3.13.6	8
2.9.12	6	3.7.5	5	■ 3.13.7	8
		3.7.6	5	3.13.8	0
		3.7.7	5		
3.0.1	5	3.7.8	0	4.0.1	6
3.0.2	5	3.7.9	5	4.0.2	6
3.0.3	5	3.7.10	5	4.1.1	0
■ 3.1.1	8	3.8.1	5	4.1.2	0
3.1.2	0	3.8.2	5	4.2.1	0
3.2.1	0	3.8.3	0	4.2.2	0
3.2.2	0	3.8.4	0	4.3.1	0
3.3.1	0	3.9.1	0	4.3.2	0
3.3.2	5	3.9.2	7	4.3.3	0
3.3.3	5	3.9.3	7	4.3.4	0
3.3.4	5	■ 3.9.4	8	4.3.5	0
3.3.5	0	3.9.5	8	4.3.6	6
3.3.6	5	3.9.6	5	4.3.7	0
3.3.7	5	3.9.7	0	4.3.8	0
3.3.8	0	3.9.8	0	4.3.9	5
3.3.9	0	3.9.9	0	4.3.10	0
3.3.10	5	3.9.10	0	4.3.11	4
3.3.11	6	3.10.1	0	4.3.12	0
3.3.12	0	3.10.2	0	4.3.13	5
3.3.13	5	3.10.3	3	■ 4.3.14	8
3.3.14	0	3.10.4	0	4.3.15	5
3.4.1	5	3.10.5	0	4.3.16	5
3.4.2	5	3.10.6	5	4.3.17	5
3.4.3	6	3.11.1	5	4.3.18	5
3.4.4	5	3.11.2	5	4.3.19	5
3.5.1	5	3.11.3	5	4.3.20	5

4.3.21	5	4.4.13	0	4.4.55	5
4.3.22	5	4.4.14	0	4.4.56	5
4.3.23	5	4.4.15	0	4.4.57	5
4.3.24	5	4.4.16	8	4.4.58	5
4.3.25	5	4.4.17	8	4.4.59	5
4.3.26	5	4.4.18	8	4.4.60	6
4.3.27	5	4.4.19	8	4.4.61	6
4.3.28	5	4.4.20	8	4.4.62	5
4.3.29	6	4.4.21	5	4.4.63	5
4.3.30	8	4.4.22	5	4.4.64	6
4.3.31	8	4.4.23	5	4.4.65	8
4.3.32	8	4.4.24	5	4.4.66	5
4.3.33	8	4.4.25	5	4.4.67	8
4.3.34	8	4.4.26	5	4.4.68	7
4.3.35	8	4.4.27	5	4.4.69	8
4.3.36	8	4.4.28	5	4.4.70	8
4.3.37	8	4.4.29	5	4.4.71	8
4.3.38	8	4.4.30	5	4.4.72	8
4.3.39	8	4.4.31	5	4.5.1	5
4.3.40	8	4.4.32	5	4.5.2	6
4.3.41	8	4.4.33	5	4.5.3	5
4.3.42	8	4.4.34	5	4.5.4	5
4.3.43	8	4.4.35	5	4.5.5	5
4.3.44	8	4.4.36	5	4.5.6	5
4.3.45	8	4.4.37	5	4.5.7	5
4.3.46	8	4.4.38	5	4.5.8	0
4.3.47	8	4.4.39	5	4.5.9	5
4.3.48	8	4.4.40	5	4.5.10	5
4.3.49	8	4.4.41	5	4.5.11	5
4.3.50	8	4.4.42	8	4.5.12	5
4.4.1	0	4.4.43	8	4.5.13	5
4.4.2	0	4.4.44	8	4.5.14	5
4.4.3	0	4.4.45	6	4.5.15	8
4.4.4	0	4.4.46	6	4.5.16	5
4.4.5	6	4.4.47	6	4.5.17	5
4.4.6	0	4.4.48	6	4.5.18	5
4.4.7	0	4.4.49	6	4.5.19	6
4.4.8	0	4.4.50	6	4.5.20	5
4.4.9	0	4.4.51	8	4.5.21	5
4.4.10	0	4.4.52	6	4.5.22	5
4.4.11	5	4.4.53	6	4.5.23	8
4.4.12	0	4.4.54	5	4.5.24	5

4.5.25	5	5.10.10	0	6.1.1	7
4.5.26	0	5.10.11	0	6.1.2	0
		5.10.12	0	6.2.1	0
5.0.1	0	5.10.13	0	6.2.2	0
5.0.2	0	5.10.14	0	6.3.1	7
5.1.1	0	5.10.15	0	6.3.2	7
5.1.2	0	5.10.16	0	6.4.1	7
5.2.1	1	5.10.17	0	6.4.2	7
5.2.2	0	5.10.18	0	6.4.3	7
5.3.1	5	5.11.1	0	6.4.4	7
5.3.2	0	5.11.2	2	6.4.5	7
5.4.1	8	5.11.3	2	6.4.6	7
5.4.2	0	5.11.4	2	6.4.7	7
5.5.1	0	5.11.5	2	6.4.8	7
5.5.2	0	5.11.6	2	6.4.9	7
5.6.1	0	5.11.7	2	6.4.10	7
5.6.2	0	5.11.8	2	6.4.11	7
5.7.1	0	5.11.9	0	6.4.12	7
5.7.2	0	5.11.10	2	6.4.13	7
5.8.1	2	5.11.11	2	6.4.14	7
5.8.2	2	5.11.12	2	6.4.15	7
5.8.3	2	5.11.13	2	6.4.16	7
5.8.4	2	5.11.14	2	6.4.17	7
5.8.5	2	5.11.15	2	6.4.18	7
5.8.6	2	5.11.16	2	6.5.1	0
5.8.7	2	5.11.17	0	6.5.2	0
5.8.8	0	5.11.18	0		
5.8.9	2	5.11.19	0	7.0.1	8
5.8.10	0	5.11.20	0	7.0.2	5
5.9.1	8	5.11.21	0	7.0.3	8
5.9.2	8	5.11.22	0	7.0.4	0
5.9.3	8	5.12.1	0	7.1.1	0
5.9.4	0	5.12.2	0	7.1.2	0
5.10.1	0	5.13.1	0	7.2.1	0
5.10.2	0	5.13.2	0	7.2.2	0
5.10.3	0	5.14.1	6	7.2.3	8
5.10.4	0	5.14.2	6	7.2.4	2
5.10.5	0	5.14.3	6	7.2.5	0
5.10.6	0	5.14.4	0	7.2.6	0
5.10.7	0			7.2.7	0
5.10.8	0	6.0.1	7	7.2.8	0
5.10.9	0	6.0.2	0	7.3.1	8

7.3.2	0	7.4.10	5	7.7.6	0
7.3.3	0	7.4.11	0	7.7.7	0
7.3.4	0	7.4.12	0	7.7.8	0
7.3.5	0	7.4.13	6	7.7.9	6
7.3.6	0	7.4.14	0	7.7.10	0
7.3.7	0	7.4.15	0	7.7.11	0
7.3.8	0	7.4.16	0	7.7.12	0
7.3.9	0	7.4.17	0	7.8.1	0
7.3.10	0	7.4.18	0	7.8.2	0
7.3.11	5	7.5.1	8	7.8.3	0
7.3.12	0	7.5.2	8	7.8.4	0
7.3.13	0	7.5.3	0	7.8.5	0
7.3.14	0	7.5.4	6	7.8.6	0
7.3.15	5	7.5.5	5	7.8.7	0
7.3.16	0	7.5.6	0	7.8.8	0
7.3.17	0	7.5.7	6	7.8.9	0
7.3.18	0	7.5.8	0	7.8.10	0
7.3.19	0	7.5.9	8	7.8.11	0
7.3.20	6	7.5.10	0	7.8.12	0
7.3.21	0	7.5.11	8	7.8.13	0
7.3.22	0	7.5.12	0	7.8.14	0
7.3.23	0	7.6.1	0	7.8.15	0
7.3.24	0	7.6.2	0	7.8.16	0
7.3.25	0	7.6.3	0	7.8.17	0
7.3.26	0	7.6.4	5	7.8.18	0
7.3.27	0	7.6.5	8	7.8.19	0
7.3.28	0	7.6.6	5	7.8.20	0
7.3.29	0	7.6.7	0	7.8.21	0
7.3.30	3	7.6.8	0	7.8.22	0
7.3.31	3	7.6.9	3	7.8.23	0
7.3.32	0	7.6.10	0	7.8.24	0
7.3.33	0	7.6.11	0	7.9.1	0
7.3.34	0	7.6.12	5	7.9.2	0
7.4.1	0	7.6.13	0	7.9.3	0
7.4.2	0	7.6.14	0	7.9.4	0
7.4.3	0	7.6.15	0	7.9.5	0
7.4.4	0	7.6.16	0	7.9.6	0
7.4.5	0	7.7.1	0	7.9.7	0
7.4.6	0	7.7.2	0	7.9.8	5
7.4.7	5	7.7.3	0	7.9.9	0
7.4.8	0	7.7.4	6	7.9.10	0
7.4.9	0	7.7.5	5	7.9.11	0

7.9.12	3	8.2.1	0
7.9.13	3	8.2.2	0
7.9.14	0	8.3.1	0
7.10.1	8	8.3.2	0
7.10.2	8	8.4.1	0
7.10.3	8	8.4.2	0
7.10.4	8	8.5.1	0
7.10.5	8	8.5.2	0
7.10.6	8	8.6.1	0
7.10.7	8	8.6.2	0
7.10.8	8	8.6.3	5
7.10.9	8	8.6.4	0
7.10.10	8	8.6.5	0
7.10.11	8	8.6.6	0
7.10.12	8	8.7.1	7
7.11.1	0	8.7.2	7
7.11.2	0	8.7.3	5
7.11.3	0	8.7.4	3
7.11.4	8	8.7.5	3
7.12.1	0	8.7.6	5
7.12.2	0	8.7.7	0
7.12.3	0	8.7.8	8
7.12.4	0	8.7.9	8
7.12.5	0	8.7.10	8
7.12.6	0	8.7.11	8
7.13.1	6	8.7.12	0
7.13.2	5	8.7.13	0
7.13.3	0	8.7.14	0
7.13.4	0	8.8.1	6
7.14.1	0	8.8.2	0
7.14.2	0	8.9.1	0
7.15.1	0	8.9.2	0
7.15.2	6		
7.15.3	6	Section 9	
7.15.4	6	(See log of	
7.15.5	6	Supplements)	
7.15.6	6		
8.0.1	0		
8.0.2	0		
8.1.1	0		
8.1.2	0		

LIST OF EFFECTIVE PAGES AND VALIDITIES

NOTE : *Bold-faced and italic types are used for "BRAZIL" specific pages.*

ORIGINAL ISSUE OF SEPTEMBER 30, 2006

From S/N 346 thru S/N 433

P/NDMNFM00EE0R8BZ

Page No.	Revision No.	Page No.	Revision No.	Page No.	Revision No.
Title	8	0.20	7	1.4.8	8
		0.21	8	1.4.9	8
1	7	0.22	8	1.4.10	0
2	3	0.23	8	1.5.1	0
		0.24	8	1.5.2	0
A	0	0.25	8	1.5.3	0
B	0	0.26	8	1.5.4	0
C	0	0.27	8	1.6.1	0
D	0	0.28	8	1.6.2	0
		0.29	8		
0.1	8	0.30	8	2.0.1	8
0.2	8			2.0.2	0
0.3	8	1.0.1	0	2.1.1	0
0.4	5	1.0.2	0	2.1.2	0
0.5	0	1.1.1	7	2.2.1	5
0.6	0	1.1.2	0	2.2.2	0
0.7	1	1.2.1	5	2.3.1	8
0.8	2	1.2.2	0	2.3.2	8
0.9	3	1.3.1	0	2.3.3	8
0.10	3	1.3.2	5	2.3.4	0
0.11	4	1.3.3	7	2.4.1	4
0.12	4	1.3.4	0	2.4.2	0
0.13	5	1.4.1	0	2.5.1	5
0.14	5	1.4.2	0	2.5.2	0
0.15	5	1.4.3	5	2.6.1	5
0.16	5	1.4.4	0	2.6.2	0
0.17	6	1.4.5	0	2.6.3	5
0.18	6	1.4.6	0	2.6.4	0
0.19	7	1.4.7	5	2.6.5	0

2.6.6	5	3.4.1	5	3.10.5	0
2.6.7	6	3.4.2	5	3.10.6	5
2.6.8	0	3.4.3	6	3.11.1	5
2.7.1	5	3.4.4	5	3.11.2	5
2.7.2	0	3.5.1	5	3.11.3	5
2.8.1	0	3.5.2	0	3.11.4	5
2.8.2	5	3.5.3	5	3.11.5	6
2.9.1	0	3.5.4	5	3.11.6	0
2.9.2	5	3.5.5	5	3.12.1	0
2.9.3	0	3.5.6	0	3.12.2	0
2.9.4	0	3.6.1	0	3.12.3	0
2.9.5	0	3.6.2	5	3.12.4	0
2.9.6	0	3.6.3	8	3.13.1	0
2.9.7	0	3.6.4	5	3.13.2	0
2.9.8	0	3.7.1	5	3.13.3	0
2.9.9	0	3.7.2	5	3.13.4	0
2.9.10	0	3.7.3	0	3.13.5	8
2.9.11	5	3.7.4	5	3.13.6	8
2.9.12	6	3.7.5	5	3.13.7	8
		3.7.6	5	3.13.8	0
		3.7.7	5		
3.0.1	5	3.7.8	0	4.0.1	6
3.0.2	5	3.7.9	5	4.0.2	6
3.0.3	5	3.7.10	5	4.1.1	0
3.0.4	0	3.8.1	5	4.1.2	0
3.1.1	8	3.8.2	5	4.2.1	0
3.1.2	0	3.8.3	0	4.2.2	0
3.2.1	0	3.8.4	0	4.3.1	0
3.2.2	0	3.9.1	0	4.3.2	0
3.3.1	0	3.9.2	7	4.3.3	0
3.3.2	5	3.9.3	7	4.3.4	0
3.3.3	5	3.9.4	8	4.3.5	0
3.3.4	5	3.9.5	8	4.3.6	6
3.3.5	0	3.9.6	5	4.3.7	0
3.3.6	5	3.9.7	0	4.3.8	0
3.3.7	5	3.9.8	0	4.3.9	5
3.3.8	0	3.9.9	0	4.3.10	0
3.3.9	0	3.9.10	0	4.3.11	4
3.3.10	5	3.10.1	0	4.3.12	0
3.3.11	6	3.10.2	0	4.3.13	5
3.3.12	0	3.10.3	3	4.3.14	8
3.3.13	5	3.10.4	0	4.3.15	5
3.3.14	0				

4.3.16	5	4.4.8	0	4.4.50	6
4.3.17	5	4.4.9	0	4.4.51	8
4.3.18	5	4.4.10	0	4.4.52	6
4.3.19	5	4.4.11	5	4.4.53	6
4.3.20	5	4.4.12	0	4.4.54	5
4.3.21	5	4.4.13	0	4.4.55	5
4.3.22	5	4.4.14	0	4.4.56	5
4.3.23	5	4.4.15	0	4.4.57	5
4.3.24	5	4.4.16	8	4.4.58	5
4.3.25	5	4.4.17	8	4.4.59	5
4.3.26	5	4.4.18	8	4.4.60	6
4.3.27	5	4.4.19	8	4.4.61	6
4.3.28	5	4.4.20	8	4.4.62	5
4.3.29	6	4.4.21	5	4.4.63	5
4.3.30	8	4.4.22	5	4.4.64	6
4.3.31	8	4.4.23	5	4.4.65	8
4.3.32	8	4.4.24	5	4.4.66	5
4.3.33	8	4.4.25	5	4.4.67	8
4.3.34	8	4.4.26	5	4.4.68	7
4.3.35	8	4.4.27	5	4.4.69	8
4.3.36	8	4.4.28	5	4.4.70	8
4.3.37	8	4.4.29	5	4.4.71	8
4.3.38	8	4.4.30	5	4.4.72	8
4.3.39	8	4.4.31	5	4.5.1	5
4.3.40	8	4.4.32	5	4.5.2	6
4.3.41	8	4.4.33	5	4.5.3	5
4.3.42	8	4.4.34	5	4.5.4	5
4.3.43	8	4.4.35	5	4.5.5	5
4.3.44	8	4.4.36	5	4.5.6	5
4.3.45	8	4.4.37	5	4.5.7	5
4.3.46	8	4.4.38	5	4.5.8	0
4.3.47	8	4.4.39	5	4.5.9	5
4.3.48	8	4.4.40	5	4.5.10	5
4.3.49	8	4.4.41	5	4.5.11	5
4.3.50	8	4.4.42	8	4.5.12	5
4.4.1	0	4.4.43	8	4.5.13	5
4.4.2	0	4.4.44	8	4.5.14	5
4.4.3	0	4.4.45	6	4.5.15	8
4.4.4	0	4.4.46	6	4.5.16	5
4.4.5	6	4.4.47	6	4.5.17	5
4.4.6	0	4.4.48	6	4.5.18	5
4.4.7	0	4.4.49	6	4.5.19	6

4.5.20	5	5.10.5	0	5.14.3	6
4.5.21	5	5.10.6	0	5.14.4	0
4.5.22	5	5.10.7	0		
■ 4.5.23	8	5.10.8	0	6.0.1	7
4.5.24	5	5.10.9	0	6.0.2	0
4.5.25	5	5.10.10	0	6.1.1	7
4.5.26	0	5.10.11	0	6.1.2	0
		5.10.12	0	6.2.1	0
5.0.1	0	5.10.13	0	6.2.2	0
5.0.2	0	5.10.14	0	6.3.1	7
5.1.1	0	5.10.15	0	6.3.2	7
5.1.2	0	5.10.16	0	6.4.1	7
5.2.1	1	5.10.17	0	6.4.2	7
5.2.2	0	5.10.18	0	6.4.3	7
5.3.1	5	5.11.1	0	6.4.4	7
5.3.2	0	5.11.2	2	6.4.5	7
■ 5.4.1	8	5.11.3	2	6.4.6	7
5.4.2	0	5.11.4	2	6.4.7	7
5.5.1	0	5.11.5	2	6.4.8	7
5.5.2	0	5.11.6	2	6.4.9	7
5.6.1	0	5.11.7	2	6.4.10	7
5.6.2	0	5.11.8	2	6.4.11	7
5.7.1	0	5.11.9	0	6.4.12	7
5.7.2	0	5.11.10	2	6.4.13	7
5.8.1	2	5.11.11	2	6.4.14	7
5.8.2	2	5.11.12	2	6.4.15	7
5.8.3	2	5.11.13	2	6.4.16	7
5.8.4	2	5.11.14	2	6.4.17	7
5.8.5	2	5.11.15	2	6.4.18	7
5.8.6	2	5.11.16	2	6.5.1	0
5.8.7	2	5.11.17	0	6.5.2	0
5.8.8	0	5.11.18	0		
5.8.9	2	5.11.19	0	■ 7.0.1	8
5.8.10	0	5.11.20	0	7.0.2	5
■ 5.9.1	8	5.11.21	0	■ 7.0.3	8
5.9.2	8	5.11.22	0	7.0.4	0
5.9.3	8	5.12.1	0	7.1.1	0
5.9.4	0	5.12.2	0	7.1.2	0
5.10.1	0	5.13.1	0	7.2.1	0
5.10.2	0	5.13.2	0	7.2.2	0
5.10.3	0	5.14.1	6	■ 7.2.3	8
5.10.4	0	5.14.2	6	7.2.4	2

7.2.5	0	7.4.5	0	7.7.1	0
7.2.6	0	7.4.6	0	7.7.2	0
7.2.7	0	7.4.7	5	7.7.3	0
7.2.8	0	7.4.8	0	7.7.4	6
7.3.1	8	7.4.9	0	7.7.5	5
7.3.2	0	7.4.10	5	7.7.6	0
7.3.3	0	7.4.11	0	7.7.7	0
7.3.4	0	7.4.12	0	7.7.8	0
7.3.5	0	7.4.13	6	7.7.9	6
7.3.6	0	7.4.14	0	7.7.10	0
7.3.7	0	7.4.15	0	7.7.11	0
7.3.8	0	7.4.16	0	7.7.12	0
7.3.9	0	7.4.17	0	7.8.1	0
7.3.10	0	7.4.18	0	7.8.2	0
7.3.11	5	7.5.1	8	7.8.3	0
7.3.12	0	7.5.2	8	7.8.4	0
7.3.13	0	7.5.3	0	7.8.5	0
7.3.14	0	7.5.4	6	7.8.6	0
7.3.15	5	7.5.5	5	7.8.7	0
7.3.16	0	7.5.6	0	7.8.8	0
7.3.17	0	7.5.7	6	7.8.9	0
7.3.18	0	7.5.8	0	7.8.10	0
7.3.19	0	7.5.9	8	7.8.11	0
7.3.20	6	7.5.10	0	7.8.12	0
7.3.21	0	7.5.11	8	7.8.13	0
7.3.22	0	7.5.12	0	7.8.14	0
7.3.23	0	7.6.1	0	7.8.15	0
7.3.24	0	7.6.2	0	7.8.16	0
7.3.25	0	7.6.3	0	7.8.17	0
7.3.26	0	7.6.4	5	7.8.18	0
7.3.27	0	7.6.5	8	7.8.19	0
7.3.28	0	7.6.6	5	7.8.20	0
7.3.29	0	7.6.7	0	7.8.21	0
7.3.30	3	7.6.8	0	7.8.22	0
7.3.31	3	7.6.9	3	7.8.23	0
7.3.32	0	7.6.10	0	7.8.24	0
7.3.33	0	7.6.11	0	7.9.1	0
7.3.34	0	7.6.12	5	7.9.2	0
7.4.1	0	7.6.13	0	7.9.3	0
7.4.2	0	7.6.14	0	7.9.4	0
7.4.3	0	7.6.15	0	7.9.5	0
7.4.4	0	7.6.16	0	7.9.6	0

7.9.7	0		
7.9.8	5	8.0.1	0
7.9.9	0	8.0.2	0
7.9.10	0	8.1.1	0
7.9.11	0	8.1.2	0
7.9.12	3	8.2.1	0
7.9.13	3	8.2.2	0
7.9.14	0	8.3.1	0
7.10.1	8	8.3.2	0
7.10.2	8	8.4.1	0
7.10.3	8	8.4.2	0
7.10.4	8	8.5.1	0
7.10.5	8	8.5.2	0
7.10.6	8	8.6.1	0
7.10.7	8	8.6.2	0
7.10.8	8	8.6.3	5
7.10.9	8	8.6.4	0
7.10.10	8	8.6.5	0
7.10.11	8	8.6.6	0
7.10.12	8	8.7.1	7
7.11.1	0	8.7.2	7
7.11.2	0	8.7.3	5
7.11.3	0	8.7.4	3
7.11.4	8	8.7.5	3
7.12.1	0	8.7.6	5
7.12.2	0	8.7.7	0
7.12.3	0	8.7.8	8
7.12.4	0	8.7.9	8
7.12.5	0	8.7.10	8
7.12.6	0	8.7.11	8
7.13.1	6	8.7.12	0
7.13.2	5	8.7.13	0
7.13.3	0	8.7.14	0
7.13.4	0	8.8.1	6
7.14.1	0	8.8.2	0
7.14.2	0	8.9.1	0
7.15.1	0	8.9.2	0
7.15.2	6		
7.15.3	6	Section 9	
7.15.4	6	(See log of	
7.15.5	6	Supplements)	
7.15.6	6		

SECTION 1**GENERAL****TABLE OF CONTENTS**

	Page
1.1 GENERAL	1.1.1
1.2 THREE VIEW DRAWING	1.2.1
1.3 DESCRIPTIVE DATA	1.3.1
ENGINE	1.3.1
PROPELLER	1.3.1
FUEL	1.3.2
ENGINE OIL	1.3.3
MAXIMUM CERTIFICATED WEIGHTS	1.3.3
STANDARD AIRPLANE WEIGHTS	1.3.3
CABIN AND ENTRY DIMENSIONS	1.3.4
SPECIFIC LOADINGS	1.3.4
1.4 ABBREVIATIONS AND TERMINOLOGY	1.4.1
METEOROLOGICAL TERMINOLOGY	1.4.1
GENERAL AIRSPEED TERMINOLOGY AND SYMBOLS	1.4.1
POWER TERMINOLOGY	1.4.3
AIRPLANE PERFORMANCE AND FLIGHT PLANNING TERMINOLOGY	1.4.4
WEIGHT AND BALANCE TERMINOLOGY	1.4.4
GENERAL ABBREVIATIONS	1.4.6
RADIO - NAVIGATION ABBREVIATIONS	1.4.9
EFIS ABBREVIATIONS	1.4.10
1.5 CONVERSION FACTORS	1.5.1
1.6 PRESSURE AND STANDARD ATMOSPHERE	1.6.1
STANDARD ATMOSPHERE	1.6.1
PRESSURE CONVERSION TABLE	1.6.2

INTENTIONALLY LEFT BLANK

1.1 - GENERAL

This Handbook contains 9 Sections, and includes the material required by FAR Part 23 to be furnished to the pilot for operation of the TBM 850 airplane. It also contains supplemental data supplied by the manufacturer.

Section 1 provides basic data and information of general interest. It also contains definitions or explanations of abbreviations and terminology commonly used.

The general for complex optional systems are given in Section 9, "Supplements" of the Pilot's Operating Handbook.


PART 135 OPERATIONS

For 14 CFR 135 operations, TBM aircraft alternative source of electric power is able to supply 150 percent of the electrical loads of all required instruments and equipment for safe emergency operation of the aircraft for at least 1 hour.

Electrical load shedding procedure provided in Section 3 of this POH must be followed in order to meet the requirements of that Paragraph under 14 CFR 135.163(f)(2).


INTENTIONALLY LEFT BLANK

1.2 - THREE VIEW DRAWING

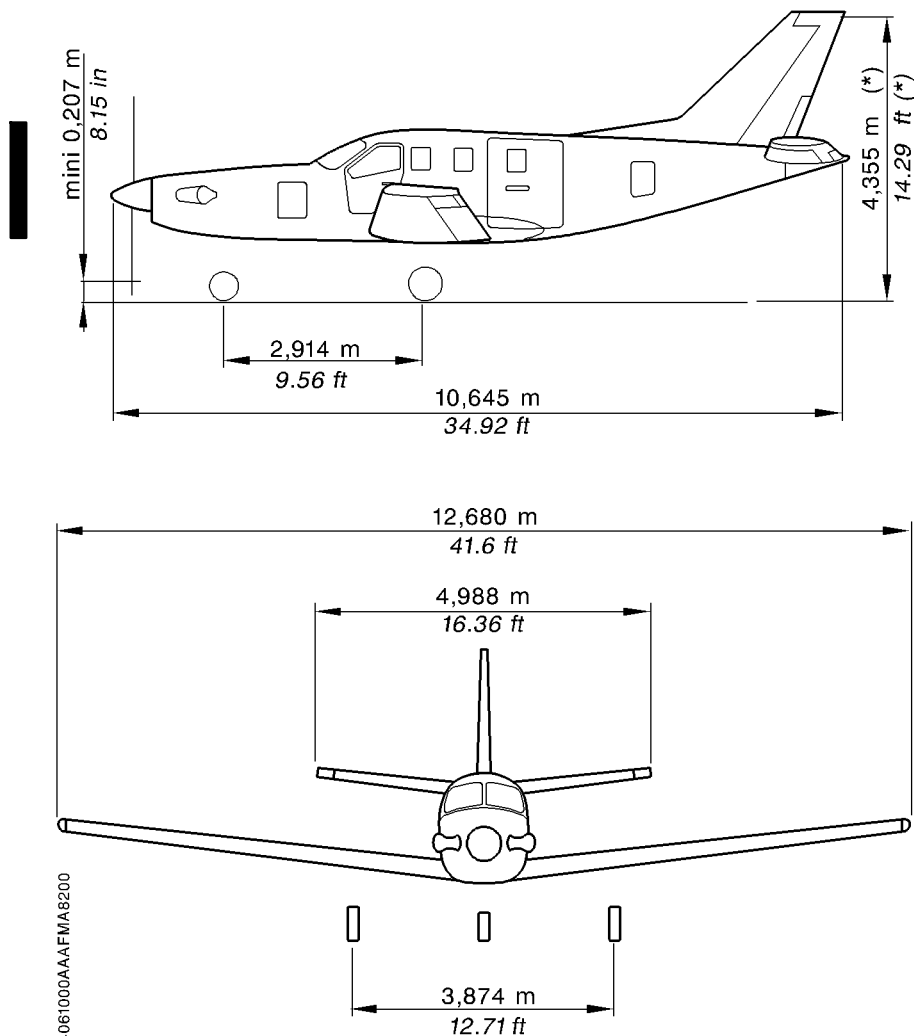

- * Avion en ligne de vol avec amortisseur AV détendu
- * Airplane on line of flight with extended FWD shock absorber

Figure 1.2.1 (1/2) - THREE VIEW DRAWING

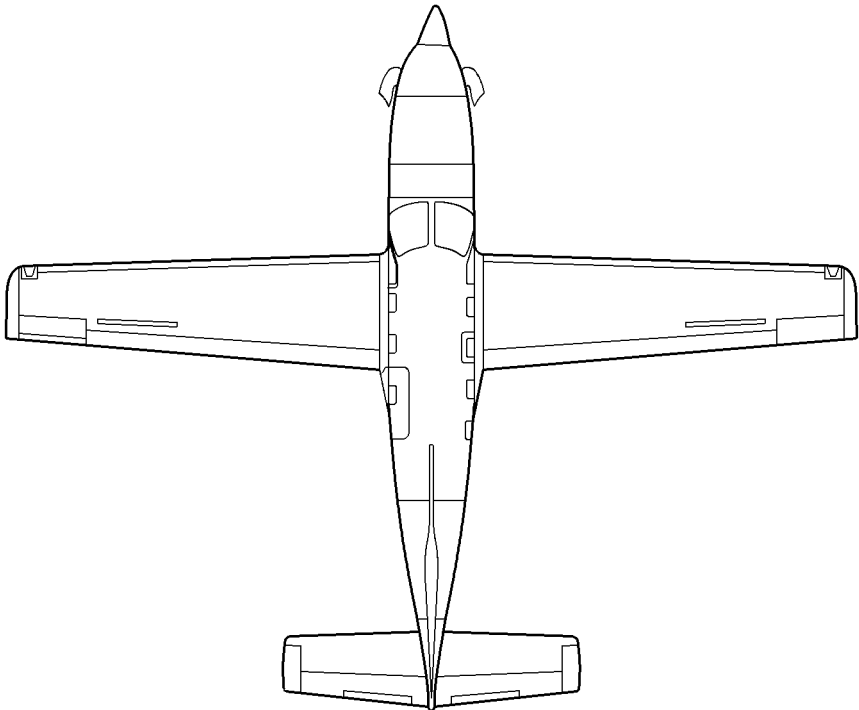

I4061000AAAFMA8101

Figure 1.2.1 (2/2) - THREE VIEW DRAWING

1.3 - DESCRIPTIVE DATA

ENGINE

Number of engines : 1

Engine manufacturer : PRATT & WHITNEY CANADA

Engine model number : PT6A - 66D

Engine type : Free turbine, reverse flow and 2 turbine sections

Compressor type : 4 axial stages
1 centrifugal stage

Combustion chamber type : Annular

Turbine type : 1 gas generator turbine stage
2 power turbines stages

Horsepower rating and propeller speed : 850 SHP at 2000 RPM

PROPELLER

Number of propellers : 1

Propeller manufacturer : HARTZELL

Propeller model number : HC-E4N-3 / E9083S (K)

Number of blades : 4

Propeller diameter :

Minimum : 90 inches (2.286 m)

Maximum : 91 inches (2.311 m)

Propeller type : Adjustable constant speed, with feathering and hydraulic control reverse

Propeller blade setting at 30 inches station

Low pitch : 21°

Feathering : 86°

Maximum reverse : - 11°

Propeller governor : 8210.007 WOODWARD

FUEL

Total capacity : 290.6 us gal (1100 Litres)
 Total capacity each tank : 145.3 us gal (550 Litres)
 Total usable : 281.6 us gal (1066 Litres)

CAUTION

THE USED FUEL MUST CONTAIN AN ANTI-ICE ADDITIVE, IN ACCORDANCE WITH SPECIFICATION MIL-I-27686 or MIL-I-85470. ADDITIVE CONCENTRATIONS (EGME or DIEGME) SHALL BE COMPRISED BETWEEN A MINIMUM OF 0.06 % AND A MAXIMUM OF 0.15 % BY VOLUME. REFER TO SECTION 8 "HANDLING, SERVICING AND MAINTENANCE" FOR ADDITIONAL INFORMATION.

CAUTION

THE USE OF AVIATION GASOLINE (AVGAS) MUST BE RESTRICTED TO EMERGENCY PURPOSES ONLY. AVGAS SHALL NOT BE USED FOR MORE THAN 150 CUMULATIVE HOURS DURING ANY PERIOD BETWEEN ENGINE OVERHAUL PERIODS

NOTE :

Use of AVGAS to be recorded in engine module logbook

US Specification (US)	French Specification (FR)	English Specification (UK)	NATO Code
ASTM-D1655 JET A ASTM-D1655 JET A1 ASTM-D1655 JET B	AIR 3405C Grade F35	DERD 2494 Issue 9	F35 without additive
MIL-DTL-5624 Grade JP-4	AIR 3407B	DERD 2454 Issue 4 Amdt 1	F40 with additive
MIL-DTL-5624 Grade JP-5	AIR 3404C Grade F44	DERD 2452 Issue 2 Amdt 1	F44 with additive when utilization
MIL-DTL-83133 Grade JP-8	AIR 3405C Grade F34	DERD 2453 Issue 4 Amdt 1	F34 with additive S748
	AIR 3404C Grade F43	DERD 2498 Issue 7	F43 without additive

Figure 1.3.1 - RECOMMENDED FUEL TYPES
 (Reference : Service Bulletin P & W C. No. 14004)

ENGINE OIL

System total capacity :

12.7 Quarts (12 Litres) (oil cooler included)

Usable capacity :

6 Quarts (5.7 Litres)

Maximum consumption in 10 hour period :

0.14 qt / hr (0.13 l / hr)

[0.3 lb / hr (136 cc / hr)]

Specification

Nominal Viscosity	Specification	NATO Code
5cSt	MIL-PRF-23699G	O.156 (STD) O.154 (HTS)

Figure 1.3.2 - RECOMMENDED ENGINE OIL TYPES

(Reference : Service Bulletin P & W - C. No. 14001 at the latest revision)

MAXIMUM CERTIFICATED WEIGHTS

Ramp : 7430 lbs (3370 kg)

Takeoff : 7394 lbs (3354 kg)

Landing : 7024 lbs (3186 kg)

Baggage weight (refer to Section 6 for cargo loading instructions) :

- in rear part of pressurized cabin : 220 lbs (100kg)

- In aft compartment : 77 lbs (35 kg)

STANDARD AIRPLANE WEIGHTS

Standard empty weight : 4762 lbs (2160 kg)

With "pilot" door : 4806 lbs (2180 kg)

Maximum useful load : 2632 lbs (1194 kg)

With "pilot" door : 2588 lbs (1174 kg)

CABIN AND ENTRY DIMENSIONS

Maximum cabin width : 3' 11.64" (1.21 m)

Maximum cabin length : 13' 3.45" (4.05 m)

Maximum cabin height : 4' (1.22 m)

Number of cabin entries : 1 (standard) + 1 "pilot" door (if installed)

Entry width (standard) : 3' 6.52" (1.08 m)

Entry height (standard) : 3' 10.85" (1.19 m)

"Pilot" entry mean width : 2' 3.6" (0.70 m)

"Pilot" entry mean height : 3' 2.16" (0.97 m)

SPECIFIC LOADINGS

Wing loading : 38.16 lbs / sq.ft (186.3 kg / m²)

Power loading : 8.7 lbs / SHP (3.95 kg / SHP)

1.4 - ABBREVIATIONS AND TERMINOLOGY

METEOROLOGICAL TERMINOLOGY

- ISA** : *International standard atmosphere*
- OAT** : *Outside air temperature* is the free air static temperature. It is expressed in either degrees Celsius or degrees Fahrenheit.
- SAT** : *Static air temperature*
- IOAT** : *Indicated outside air temperature*
- QFE** : Atmospheric pressure at the airport reference point.
- QNH** : QFE value corrected according to the airport altitude.

NOTE :

On the ground, the altimeter will indicate "zero" if it is set to QFE ; it will indicate airport altitude if it is set to QNH.

Standard Temperature :

Is 15°C (59°F) at sea level pressure altitude and decreases by 2°C (3.6°F) for each 1000 ft of altitude.

Pressure altitude :

Is the altitude read from an altimeter when the altimeter's barometric scale has been set to 29.92 inches of mercury (1013.2 hPa).

GENERAL AIRSPEED TERMINOLOGY AND SYMBOLS

- KCAS** : *Knots Calibrated Airspeed* is the indicated airspeed expressed in knots corrected for position and instrument error. Knots calibrated airspeed is equal to KTAS in standard atmosphere at sea level.
- IAS** : *Knots Indicated Airspeed* is the speed shown on the airspeed indicator and expressed in knots.
- KTAS** : *Knots True Airspeed* is the airspeed expressed in knots relative to undisturbed air which is KCAS corrected for altitude and temperature.

- V_A : **Maneuvering Speed** is the maximum speed at which full or abrupt control movements may be used.
- V_{FE} : **Maximum Flap Extended Speed** is the highest speed permissible with wing flaps in a prescribed extended position.
- V_{LE} : **Maximum Landing Gear Extended Speed** is the maximum speed at which an airplane can be safely flown with the landing gear extended.
- V_{LO} : **Maximum Landing Gear Operating Speed** is the maximum speed at which the landing gear can be safely extended or retracted.
- V_{MO} : **Maximum Operating Speed** is the speed limit that may not be deliberately exceeded in normal flight operations.
- V_R : **Rotation Speed** is the speed at which rotation is initiated during takeoff to achieve takeoff safety speed at screen height.
- V_{SO} : **Stalling Speed or the minimum steady flight speed** at which the airplane is controllable in the landing configuration.
- V_{S1} : **Stalling Speed or the minimum steady flight speed** obtained in a specific configuration.
- V_x : **Best Angle of Climb Speed** is the airspeed which delivers the greatest gain of altitude in the shortest possible horizontal distance.
- V_Y : **Best Rate of Climb Speed** is the airspeed which delivers the greatest gain in altitude in the shortest possible time.

POWER TERMINOLOGY**Recovery altitude :**

Maximum altitude at which it is possible, in standard temperature, to maintain a specified power.

Overheated start :

Engine start or attempt to start which causes the interturbine temperature to be higher than the maximum value permissible during start .

Flame out : Involuntary loss of the combustion chamber flame during operation.

GPU : *Ground power unit.*

Feathering : Action which reduces the drag of a failed engine through propeller feathering.

Maximum Cruise Power :

Power developed at the couple limit, interturbines temperature limit or gas generator RPM limit without time limitations, corresponding to cruise conditions.

Ng : Gas generator RPM.

Np : Propeller rotation speed.

Reverse : Drag produced when the propeller blade setting is negative.

RPM : Revolutions per minute is engine speed.

SHP : Standard Horsepower is the power developed by the engine.

TRQ : *Torque.*

AIRPLANE PERFORMANCE AND FLIGHT PLANNING TERMINOLOGY

Climb gradient :

Is the ratio of the change in height during a portion of climb, to the horizontal distance traversed in the same time interval.

Demonstrated crosswind velocity :

Is the velocity of the crosswind component for which adequate control of the airplane during takeoff and landing was actually demonstrated during certification tests. The value shown is not considered to be limiting.

g : Is acceleration due to gravity.

Usable fuel : Total fuel which can be effectively consumed by the engine.

WEIGHT AND BALANCE TERMINOLOGY

Reference datum :

Datum perpendicular to the longitudinal airplane centerline from which all distances are measured for balance purpose.

Arm : Is the distance from the reference datum to the center of gravity (C.G.) of an item.

Moment : Is the product of the weight of an item multiplied by its arm.

Center of gravity (C.G.) :

Airplane balance point. Its distance from the reference datum is found by dividing the total moment by the total weight of the airplane.

C.G. limits : *Center of Gravity Limits* are the extreme center of gravity locations within which the airplane must be operated at a given weight.

Standard empty weight :

Weight of a standard airplane including unusable fuel and full operating fluids (oil and hydraulic fluids).

Basic empty weight :

Standard empty weight plus optional equipment.

Useful load : Is the difference between maximum ramp weight and the basic empty weight.

Maximum ramp weight :

Is the maximum weight approved for ground maneuver. (It includes the weight of start, taxi and run up fuel).

Maximum takeoff weight :

Is the maximum weight approved at the beginning of the takeoff run.

Maximum landing weight :

Is the maximum weight approved for landing touchdown.

GENERAL ABBREVIATIONS

A	: Ampere or Amber
ADC	: Air Data Computer
AGL	: Above ground level
AIL TRIM	: Aileron trim
ALT. SEL.	: Altitude selector
ALTI	: Altimeter
AMP.	: Ampere
AP	: Autopilot
AUTO SEL	: Automatic selector
AUX BP	: Auxiliary boost pump
BAT	: Battery
BAT OVHT	: Battery overheat
BRT	: Brightness
CAB PRESS	: Cabin pressure
°C	: Celsius degree
CONT.	: Control
DIEGME	: Diethylene glycol monomethyl ether
DIM	: Dimmer
DISC	: Disconnect
DN	: Down
ECS	: Environmental control system
EGME	: Ethylene glycol monomethyl ether
EMER	: Emergency
ENCOD. ALTI	: Encoding altimeter
ESHP	: Estimated shaft horsepower
ESS. BUS TIE	: Essential BUS tie
ETM	: Engine Trend Monitoring
EXT. LIGHTS	: Exterior lightings
°F	: Fahrenheit degree
FCU	: Fuel control unit
FIRE EXTING	: Fire extinguisher
FL	: Flight level
ft	: Feet
ft/min	: Feet per minute
G	: Green
HI	: High
HP	: High pressure
hPa	: Hectopascal
hr	: Hour

HTR	: Heater
IGNIT	: Ignition
in	: Inch
INERT SEP	: Inertial separator
INDIC	: Indicator
in.Hg	: Inch of mercury
INT. LIGHTS	: Interior lightings
INSTR.	: Instrument
ITT	: Interturbine temperature
kg	: Kilogram
kt	: Knot (1 nautical mile/hr - 1852 m/hr)
kW	: Kilowatt
l	: Litre
L	: Left
l/h	: Litre / hour
lb or lbs	: Pound(s)
L / D	: Lift-to-drag
LDG	: Landing
LDG GR	: Landing gear
LRCR	: Long Range Cruise
LO	: Low
LP	: Low pressure
LRN	: Long range navigation
LTS TEST	: Lightings test
m	: Metre
m.a.c.	: Mean aerodynamic chord
MAIN GEN	: Main generation
MAN	: Manual
MAN OVRD	: Manual override
MAX RPM	: Maximum revolutions per minute
MIN	: Minimum
min	: Minute
MLW	: Maximum Landing Weight
mm	: Millimetre
MRW	: Maximum Ramp Weight
MTOW	: Maximum Takeoff Weight
MXCR	: Maximum cruise
MZFW	: Max. Zero Fuel Weight
NM	: Nautical mile
NOCR	: Normal cruise (recommended)

NORM	: Normal
PHF	: Plan Horizontal Fixe (Horizontal stabilizer)
PRESS	: Pressure
PROP	: Propeller
psi	: Pounds per square inch
qt	: Quart (¼ us gal)
QTY	: Quantity
R	: Red or Right
RUD	: Rudder
s or sec	: Second
SEL	: Selector
SHP	: Shaft horsepower
SIG	: Signalization
SL	: Sea level
S/N	: Serial number
SPKR	: Speaker
ST - BY	: Stand-by
STALL HTR	: Stall heater
Std	: Standard
STPD	: Standard Temperature Pressure Dry
T°	: Temperature
TEMP	: Temperature
TO	: Takeoff
TURN COORD	: Turn coordinator
us gal	: Gallon U.S
V	: Volt or Voltage
VACUUM LO	: Vacuum low
WARN	: Warning
W / S	: Windshield
WSR	: Weather surveillance radar
XPDR	: Transponder

RADIO - NAVIGATION ABBREVIATIONS

ADF	: Automatic Direction Finder System
ADI	: Attitude Director Indicator
ATC	: Air Traffic Control
CDI	: Course Deviation Indicator
COM	: Communications Transceivers
DME	: Distance Measuring Equipment
EGPWS	: Enhanced Ground Proximity Warning System
ELT	: Emergency Locator Transmitter
GPS	: Ground Positioning System
HF	: High Frequency
HSI	: Horizontal Situation Indicator
IFR	: Instrument Flight Rules
ILS	: Instrument Landing System
IMC	: Instrument Meteorological Conditions
MFD	: Multi-function Display
MKR	: Marker Radio Beacon
NAV	: Navigation Indicators or Receivers
RMI	: Radio Magnetic Indicator
TAS	: Traffic Advisory System
TAWS	: Terrain Awareness Warning System
VFR	: Visual Flight Rules
VHF	: Very High Frequency
VMC	: Visual Meteorological Conditions
VOR	: VHF Omnidirectional Range
VOR / LOC	: VHF Omnidirectional Range Localizer

EFIS ABBREVIATIONS

ATTITUDE FAIL: Attitude failure

CMPST : Composite
(EFIS composite mode)

CP : Control Panel

CRS : Course

DU : Display Unit

FD : Flight director

EADI : Electronic Attitude Deviation Indicator

EFIS : Electronic Flight Instrument System

EHSI : Electronic Horizontal Situation Indicator

ERMI : Electronic Radio Magnetic Indicator

HDG : Heading

RCP : Radar Control Panel

REF : Reference

SG : Symbol Generator

TST : Test

1.5 - CONVERSION FACTORS

IMPERIAL AND U.S UNITS TO METRIC UNITS			METRIC UNITS TO IMPERIAL AND U.S UNITS		
MULTIPLY	BY	TO OBTAIN	MULTIPLY	BY	TO OBTAIN
FEET	0.3048	METRE	METRE	3.2808	FEET
INCH	25.4	mm	mm	0.03937	INCH
Imp.Gal	4.546	Litre	Litre	0.220	Imp.Gal
us gal	3.785	Litre	Litre	0.264	us gal
lb	0.45359	kg	kg	2.2046	lb

Figure 1.5.1 - IMPERIAL AND U.S UNITS TO METRIC UNITS

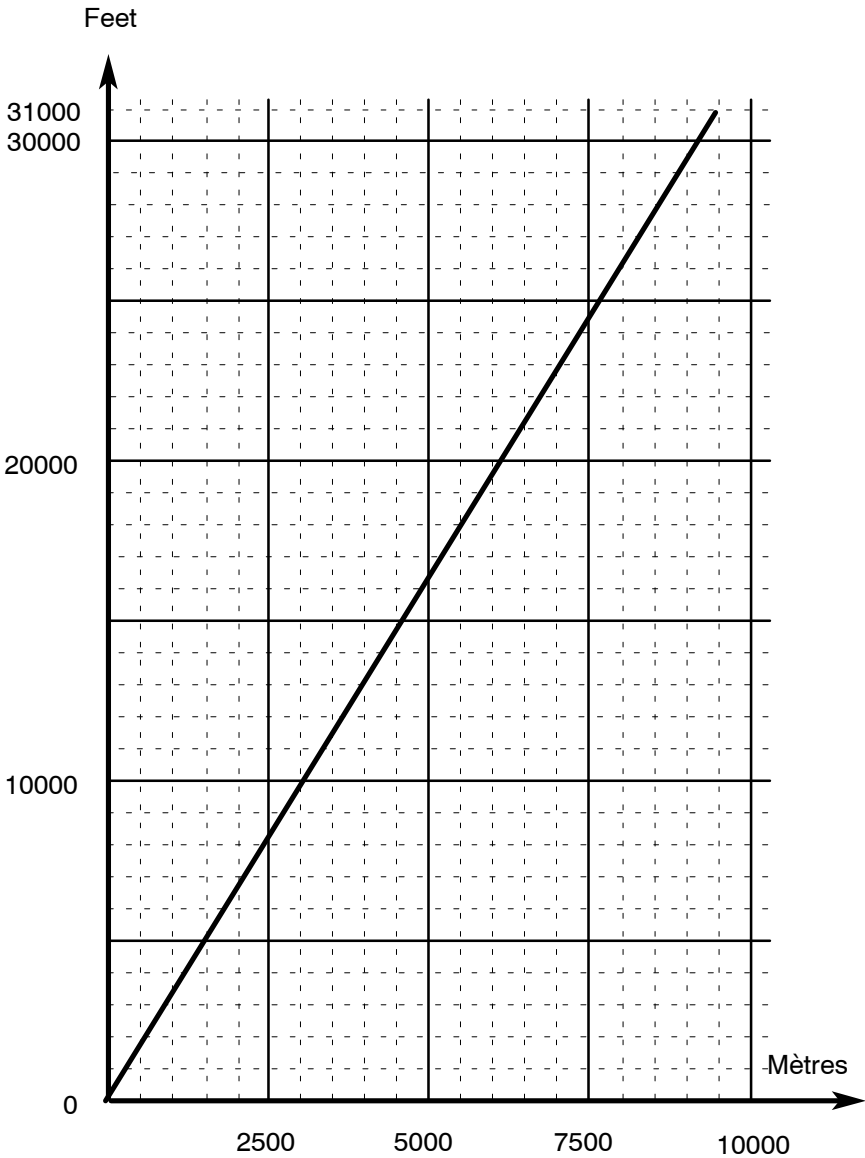


Figure 1.5.2 - FEET VERSUS METRES

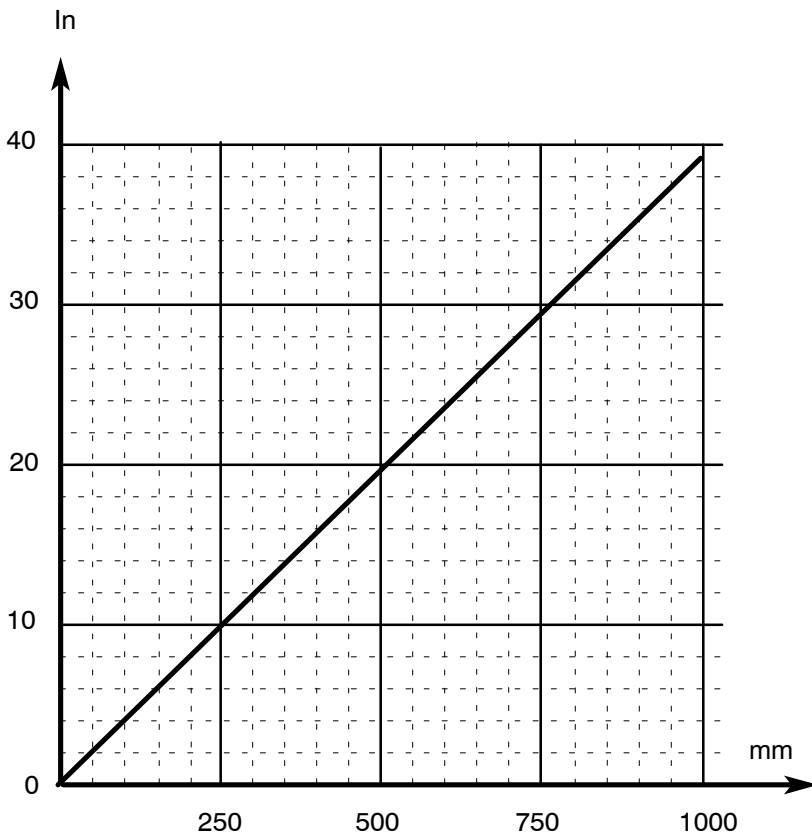


Figure 1.5.3 - INCHES VERSUS MILLIMETRES

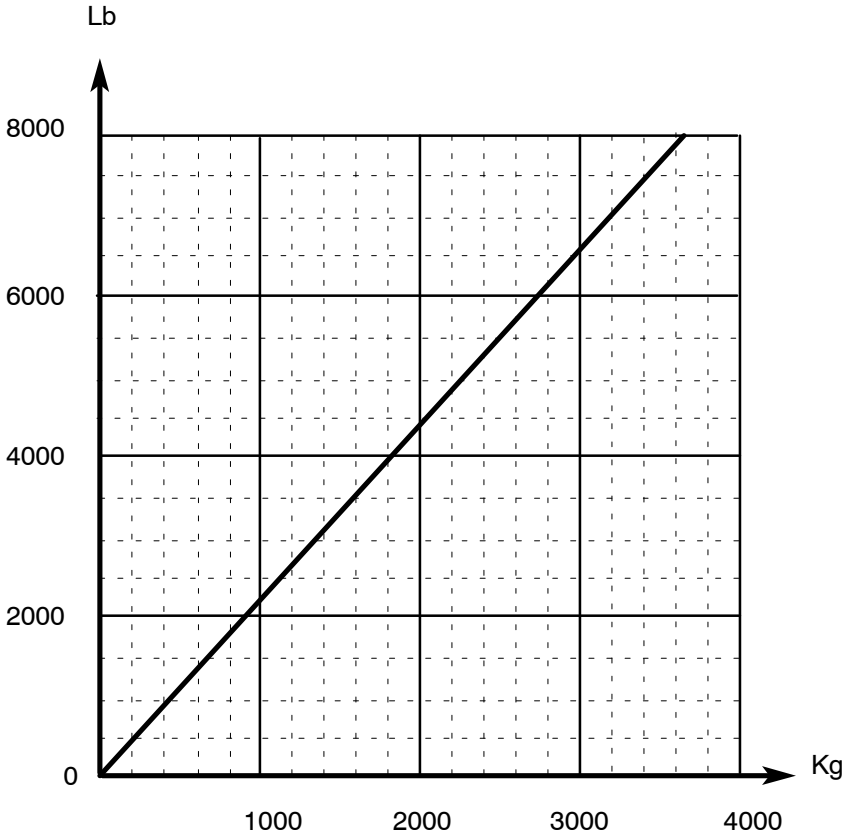


Figure 1.5.4 - POUNDS VERSUS KILOGRAMS

1.6 - PRESSURE AND STANDARD ATMOSPHERE

STANDARD ATMOSPHERE

Pressure altitude (ft)	Pressure (hPa)	°C	°F
0	1013.2	+ 15.0	+ 59.0
2000	942.1	+ 11.0	+ 51.8
4000	875.0	+ 7.0	+ 44.6
6000	811.9	+ 3.1	+ 37.6
8000	752.6	- 0.8	+ 30.5
10000	696.8	- 4.8	+ 23.4
12000	644.3	- 8.7	+ 16.2
14000	595.2	- 12.7	+ 9.2
16000	549.1	- 16.6	+ 2.2
18000	505.9	- 20.6	- 5.0
20000	465.6	- 24.6	- 12.4
22000	427.8	- 28.5	- 19.3
24000	392.6	- 32.5	- 26.5
26000	359.8	- 36.5	- 33.6
28000	329.3	- 40.4	- 40.7
30000	300.8	- 44.4	- 47.8
31000	287.4	- 46.4	- 51.6

Figure 1.6.1 - STANDARD ATMOSPHERE

PRESSURE CONVERSION TABLE

NOTE :

The standard pressure of 1013.2 hPa is equal to 29.92 inches of mercury.

950 28.05	951 28.08	952 28.11	953 28.14	954 28.17	955 28.20	956 28.23	957 28.26	958 28.29	959 28.32
960 28.35	961 28.38	962 28.41	963 28.44	964 28.47	965 28.50	966 28.53	967 28.56	968 28.58	969 28.61
970 28.64	971 28.67	972 28.70	973 28.73	974 28.76	975 28.79	976 28.82	977 28.85	978 28.88	979 28.91
980 28.94	981 28.97	982 29.00	983 29.03	984 29.06	985 29.09	986 29.12	987 29.15	988 29.18	989 29.20
990 29.23	991 29.26	992 29.29	993 29.32	994 29.35	995 29.38	996 29.41	997 29.44	998 29.47	999 29.50
1000 29.53	1001 29.56	1002 29.59	1003 29.62	1004 29.65	1005 29.68	1006 29.71	1007 29.74	1008 29.77	1009 29.80
1010 29.83	1011 29.85	1012 29.88	1013 29.91	1014 29.94	1015 29.97	1016 30.00	1017 30.03	1018 30.06	1019 30.09
1020 30.12	1021 30.15	1022 30.18	1023 30.21	1024 30.24	1025 30.27	1026 30.30	1027 30.33	1028 30.36	1029 30.39
1030 30.42	1031 30.45	1032 30.47	1033 30.50	1034 30.53	1035 30.56	1036 30.59	1037 30.62	1038 30.65	1039 30.68
1040 30.71	1041 30.74	1042 30.77	1043 30.80	1044 30.83	1045 30.86	1046 30.89	1047 30.92	1048 30.95	1049 30.98

Figure 1.6.2 - PRESSURE CONVERSION TABLE

SECTION 2

LIMITATIONS

TABLE OF CONTENTS

	Page
2.1 GENERAL	2.1.1
2.2 AIRSPEED LIMITATIONS	2.2.1
2.3 POWERPLANT LIMITATIONS	2.3.1
ENGINE	2.3.1
OIL	2.3.2
FUEL	2.3.2
PROPELLER	2.3.4
2.4 STARTER OPERATION LIMITS	2.4.1
2.5 WEIGHT AND C.G. LIMITS	2.5.1
WEIGHT LIMITS	2.5.1
C.G. LIMITS	2.5.1
2.6 OPERATION LIMITS	2.6.1
MANEUVER LIMITS	2.6.1
TEMPERATURE LIMITS	2.6.1
FLIGHT LOAD FACTOR LIMITS	2.6.1
SEVERE ICING CONDITIONS	2.6.2
FLAP OPERATING ENVELOPE	2.6.3
REVERSE UTILIZATION	2.6.3
EQUIPMENT REQUIRED DEPENDING ON TYPE OF OPERATION ...	2.6.3
ALTITUDE OPERATING LIMITS	2.6.7
IN-FLIGHT CIRCUIT BREAKER USE LIMITS	2.6.7
2.7 MISCELLANEOUS LIMITS	2.7.1
SEATING LIMITS C.G.	2.7.1
BAGGAGE LIMITS	2.7.1
MINIMUM CREW	2.7.1
MAXIMUM OCCUPANCY	2.7.1
USE OF DOORS	2.7.1
CHEMICAL TOILET CABINET (IF INSTALLED)	2.7.1

TABLE OF CONTENTS
(Continued)

	Page
2.8 MARKINGS	2.8.1
AIRSPEED INDICATOR	2.8.1
PRESSURIZATION	2.8.1
ENGINE INSTRUMENTS	2.8.2
SUCTION GAGE	2.8.2
2.9 PLACARDS	2.9.1

2.1 - GENERAL

"TBM 850" is the trade name of the TBM 700 "N version" airplane (TBM 700 type), which is certified in the Normal Category.

This airplane must be flown in compliance with the limits specified by placards or markings and with those given in this Section and throughout the Pilot's Operating Handbook.

This Section of the airplane Pilot's Operating Handbook presents the various operating limitations, the significance of such limitations, instrument markings, color coding, and basic placards necessary for the safe operation of the airplane, its powerplant and installed equipment.

The limitations included in this Section have been approved by the Federal Aviation Administration in accordance with 14 CFR Section 21.29.

The limitations for optional systems are given in Section 9, "Supplements" of the Pilot's Operating Handbook.

TBM 700 airplane is certified under EASA.A.010 and FAA N° A60EU Type Certificates.

INTENTIONALLY LEFT BLANK

2.1 - GENERAL

"TBM 850" is the trade name of the TBM 700 "N version" airplane (TBM 700 type), which is certified in the Normal Category.

This airplane must be flown in compliance with the limits specified by placards or markings and with those given in this Section and throughout the Pilot's Operating Handbook.

This Section of the airplane Pilot's Operating Handbook presents the various operating limitations, the significance of such limitations, instrument markings, color coding, and basic placards necessary for the safe operation of the airplane, its powerplant and installed equipment.

The limitations for optional systems are given in Section 9, "Supplements" of the Pilot's Operating Handbook.

TBM 700 airplane is certified under EASA.A.010 and ANAC No. 9307 Type Certificates.

INTENTIONALLY LEFT BLANK

2.2 - AIRSPEED LIMITATIONS

Airspeed limitations and their operational significance are shown in Figure 2.2.1.

	SPEED	KCAS	KIAS	REMARKS
V_{MO}	Maximum operating speed	271	266	Do not intentionally exceed this speed in normal flight category
V_A	Maneuvering speed	160	158	Do not make abrupt or full control movements above this speed
V_{FE}	Maximum flaps extended speed : landing configuration takeoff configuration	120 180	122 178	Do not exceed these speeds depending on flaps position
V_{LO}	Maximum landing gear operating speed : extension retraction	180 130	178 128	Do not extend or retract landing gear above this speed
V_{LE}	Maximum landing gear extended speed	180	178	Do not exceed this speed with landing gear extended
	Maximum inertial separator operating speed	205	200	No limitation when inertial separator is in fixed position

Figure 2.2.1 - AIRSPEED LIMITATIONS

INTENTIONALLY LEFT BLANK

2.3 - POWERPLANT LIMITATIONS**ENGINE**

Number of engines : 1

Engine manufacturer : PRATT & WHITNEY CANADA

Engine model number : PT6A - 66D

Maximum power :

Flaps set to UP, TO or LDG position	Flaps set to 850 position
<ul style="list-style-type: none"> - 100 % at Np = 2000 RPM - 110 % at Np = 1800 RPM 	<ul style="list-style-type: none"> - 121.4 % at Np = 2000 RPM

Ng limitation :

104.1 %

Np limitation :

2000 RPM

ITT limitations :

- Take off : 850°C
- Maximum climb/cruise : 840°C
- During start : ≤ 840°C (no duration limitation)
≤ 870°C for 20 seconds max.
≤ 1000°C for 5 seconds max.

CAUTION

**WHEN NORMALLY OPERATING, REFER TO CHAPTER 5.8
"ENGINE OPERATION" TABLES**

OIL

CAUTION

DO NOT MIX DIFFERENT VISCOSITIES OR SPECIFICATIONS OF OIL AS THEIR DIFFERENT CHEMICAL STRUCTURE CAN MAKE THEM INCOMPATIBLE.

Maximum oil temperature : 104 °C

Oil pressure :

Minimum : 60 psi

Maximum : 135 psi

Oil capacity :

System total capacity : 12.7 Quarts (12 Litres) (Oil cooler included)

Usable capacity : 6 Quarts (5.7 Litres)

FUEL

Fuel pressure :

Minimum : 10 psi

Maximum : 50 psi

Fuel limitations :

2 tanks : 145.3 us gal (550 Litres) each

Total fuel : 290.6 us gal (1100 Litres)

Usable fuel : 281.6 us gal (1066 Litres)

Unusable fuel : 9 us gal (34 Litres)

Maximum fuel unbalance : 15 us gal (57 Litres)

NOTE :

Usable fuel can be safely used during all normal airplane maneuvers.

CAUTION

THE FUEL USED MUST CONTAIN AN ANTI-ICE ADDITIVE, IN ACCORDANCE WITH SPECIFICATION MIL-I-27686 OR MIL-I-85470. ADDITIVE CONCENTRATIONS (EGME OR DIEGME) SHALL BE COMPRISED BETWEEN A MINIMUM OF 0.06 % AND A MAXIMUM OF 0.15 % BY VOLUME. REFER TO SECTION 8 "HANDLING, SERVICING AND MAINTENANCE" FOR ADDITIONAL INFORMATION.

THE USE OF AVIATION GASOLINE (AVGAS) MUST BE RESTRICTED TO EMERGENCY PURPOSES ONLY. AVGAS SHALL NOT BE USED FOR MORE THAN 150 CUMULATIVE HOURS DURING ANY PERIOD BETWEEN ENGINE OVERHAUL PERIODS

NOTE :

Use of AVGAS to be recorded in engine module logbook.

CAUTION

MAXIMUM SIDESLIP DURATION IS 30 SECONDS.

US Specification (US)	French Specification (FR)	English Specification (UK)	NATO Code
ASTM-D1655 JET A ASTM-D1655 JET A1 ASTM-D1655 JET B	AIR 3405C Grade F35	DERD 2494 Issue 9	F35 without additive
MIL-DTL-5624 Grade JP-4	AIR 3407B	DERD 2454 Issue 4 Amdt 1	F40 with additive
MIL-DTL-5624 Grade JP-5	AIR 3404C Grade F44	DERD 2452 Issue 2 Amdt 1	F44 with additive when utilization
MIL-DTL-83133 Grade JP-8	AIR 3405C Grade F34	DERD 2453 Issue 4 Amdt 1	F34 with additive S748
	AIR 3404C Grade F43	DERD 2498 Issue 7	F43 without additive

Figure 2.3.1 - RECOMMENDED FUEL TYPES
(Reference : Service Bulletin P & W C. No. 14004)

PROPELLER

Number of propellers : 1

Propeller manufacturer : HARTZELL

Propeller model number : HC-E4N-3 / E9083S (K)

Propeller diameter :

Minimum : 90 inches (2.286 m)

Maximum : 91 inches (2.311 m)

Propeller blade setting at 30 inches station :

Low pitch : 21°

Feathering : 86°

Maximum reverse : - 11°

2.4 - STARTER OPERATION LIMITS

Starter operation sequence is limited as follows :

if $N_g \leq 30\%$ 30 seconds

if $N_g > 30\%$ 60 seconds

Should several sequences be necessary, respect following spacing :

1st sequence

wait 1 minute

2nd sequence

wait 5 minutes

3rd sequence

wait 30 minutes

4th sequence

INTENTIONALLY LEFT BLANK

2.5 - WEIGHT AND C.G. LIMITS

WEIGHT LIMITS

- Maximum ramp weight (MRW) : 7430 lbs (3370 kg)
- Maximum takeoff weight (MTOW) : 7394 lbs (3354 kg)
- Maximum landing weight (MLW) : 7024 lbs (3186 kg)
- Maximum zero fuel weight (MZFW) : 6032 lbs (2736 kg)
- Maximum baggage weight :
 - in rear part of pressurized cabin : 220 lbs (100kg)
 - in non pressurized aft compartment : 77 lbs (35 kg)

C.G. LIMITS - see Figure 6.4.2

Center of gravity range with landing gear down and flaps up, attitude 0° :

Forward limits :

181.3 inches (4.604 m) aft of datum at 4409 lbs (2000 kg) or less (14 % of m.a.c)

183.6 inches (4.664 m) aft of datum at 6250 lbs (2835 kg) (18 % of m.a.c)

185.3 inches (4.707 m) aft of datum at 6579 lbs (2984 kg) (20.85 % of m.a.c)

187 inches (4.752 m) aft of datum at all weights above 7024 lbs (3186 kg) (23.8 % of m.a.c)

Aft limits :

194.9 inches (4.951 m) aft of datum at all weights below 6250 lbs (2835 kg) (37 % of m.a.c.)

194.3 inches (4.936 m) aft of datum at 6579 lbs (2984 kg) (36 % of m.a.c.)

193.65 inches (4.921 m) aft of datum at 7394 lbs (3354 kg) (35 % of m.a.c.)

Reference datum : 118.1 inches (3 m) in front of the firewall front face.

Straight line variation between points.

Leveling point : Cabin floor rails.

NOTE :

It is the responsibility of the pilot to insure that the airplane is properly loaded. See Section 6 "Weight and Balance" for proper loading instructions.

INTENTIONALLY LEFT BLANK

2.6 - OPERATION LIMITS

MANEUVER LIMITS

This airplane is certified in the normal category.

The normal category is applicable to airplanes intended for non-aerobatic operations.

- Non-aerobatic operations include any maneuvers incidental to normal flying, stalls (except whip stalls), lazy eights, chandelles, and steep turns in which the angle of bank is no more than 60°.
- **Aerobatic maneuvers, including spins, are not approved.**

TEMPERATURE LIMITS

Minimum temperature at start and takeoff : - 40°C (- 40°F)

Maximum temperature at start and takeoff :

ISA + 37°C (+ 67°F) from 0 to 8000 ft pressure altitude

Maximum temperature in flight :

ISA + 37°C (+ 67°F) from 0 to 8000 ft pressure altitude

ISA + 30°C (+ 54°F) at 31000 ft pressure altitude

Linear decrease between 8000 and 31000 ft

FLIGHT LOAD FACTOR LIMITS

Flaps up

Weight below 6579 lbs (2984 kg) :

- 1.5 ≤ n ≤ + 3.8 g

Weight above 6579 lbs (2984 kg) :

- 1.5 ≤ n ≤ + 3.5 g

Flaps down

- 0 ≤ n ≤ + 2.0 g

CAUTION

INTENTIONAL NEGATIVE LOAD FACTORS PROHIBITED

SEVERE ICING CONDITIONS

WARNING

SEVERE ICING MAY RESULT FROM ENVIRONMENTAL CONDITIONS OUTSIDE OF THOSE FOR WHICH THE AIRCRAFT IS CERTIFICATED. FLIGHT IN FREEZING RAIN, FREEZING DRIZZLE, OR MIXED ICING CONDITIONS (SUPERCOOLED LIQUID WATER AND ICE CRYSTALS) MAY RESULT IN ICE BUILD-UP ON PROTECTED SURFACES EXCEEDING THE CAPABILITY OF THE ICE PROTECTION SYSTEM, OR MAY RESULT IN ICE FORMING AFT OF THE PROTECTED SURFACES. THIS ICE MAY NOT BE SHED USING THE ICE PROTECTION SYSTEMS, AND MAY SERIOUSLY DEGRADE THE PERFORMANCE AND CONTROLLABILITY OF THE AIRCRAFT

During flight, severe icing conditions that exceed those for which the aircraft is certificated shall be determined by the following visual cues. If one or more of these visual cues exists, immediately request priority handling from Air Traffic Control to facilitate a route or an altitude change to exit the icing conditions.

- Unusually extensive ice accumulation on the airframe and windshield in areas not normally observed to collect ice.
- Accumulation of ice on the upper surface of the wing aft of the protected area.

Since the autopilot, when operating, may mask tactile cues that indicate adverse changes in handling characteristics, use of the autopilot is prohibited when any of the visual cues specified above exist, or when unusual lateral trim requirements or autopilot trim warnings are encountered while the aircraft is in icing conditions.

Refer to the list of "Equipment required depending on type of operation" in this same chapter.

In any case of icing conditions, first refer to particular procedures described in Chapter 4.5 (normal procedures) and in case of unforeseen icing conditions, refer in addition to the emergency procedure described in Chapter 3.13.

FLAP OPERATING ENVELOPE

The use of flaps is not authorized above 15 000 ft.

The use of flap control in "850" position is prohibited for takeoff and landing.

REVERSE UTILIZATION

The use of control reverse BETA (β) range is prohibited :

- during flight,
- on ground, if the engine is not running.

EQUIPMENT REQUIRED DEPENDING ON TYPE OF OPERATION

The airplane is approved for day & night VFR and day & night IFR operations when appropriate equipment is installed and operating correctly.

The type certification for each use requires the following equipment. The equipment must be installed and operate perfectly according to the indicated type of use.

CAUTION

IT IS THE PILOT'S RESPONSIBILITY TO CHECK THAT THE FOLLOWING EQUIPMENT LISTS ARE IN ACCORDANCE WITH THE SPECIFIC NATIONAL OPERATION RULES OF THE AIRPLANE REGISTRATION COUNTRY DEPENDING ON THE TYPE OF OPERATION.

NOTE :

Systems and equipment mentioned hereafter do not include specific flight and radio-navigation instruments required by decree concerning operation conditions for civil airplanes in general aviation or other foreign regulations (for example FAR PART 91 and 135).

Day VFR

1) Pilot instruments

- Airspeed indicator
- Sensitive and adjustable altimeter
- Magnetic compass with built-in compensator

2) Warning lights

- Oil pressure
- Low fuel pressure
- Fuel selector OFF
- Fuel auxiliary pump ON
- L.H. and R.H fuel tank low level
- Non functioning of fuel timer
- Battery overheat
- Battery stop
- Main generator OFF
- Low voltage
- Ground power unit connected
- Inertial separator
- Starter
- Ignition
- Flaps
- Landing gears and doors

3) Aural warning

- V_{MO} warning
- Landing gear warning
- Stall warning

4) Engine instruments

- Torquemeter
- Propeller tachometer
- Interturbine temperature indicator (ITT)
- Gas generator tachometer (Ng)
- Oil pressure indicator
- Oil temperature indicator

5) Various indicators

- Fuel gauge indicators (2)
- Fuel pressure indicator
- Voltmeter
- Ammeter
- Outside air temperature

6) Installations

- Fuel mechanical pump (main)
- Fuel electrical pump (auxiliary)
- Fuel shut-off valve
- Fuel timer
- Starter generator
- Inertial separator
- Stall warning
- Electrical aileron trim
- Electrical rudder trim
- Manual elevator pitch trim
- Engine ignition
- Landing gear electro-hydraulic unit
- Landing gear emergency hydraulic pump (manual)
- Flaps
- Overspeed regulator
- Manual feathering
- Battery

7) Miscellaneous

- Seats (each occupant)
- Belts (each occupant)
- Straps (each occupant)
- Pilot's operating handbook

Night VFR

- 1) All equipment required for day VFR
- 2) Attitude display indicator
- 3) Instrument lighting
- 4) Instrument panel lighting
- 5) Emergency lighting
- 6) Vertical speed indicator
- 7) Navigation lights (4)
- 8) Anticollision lights (2)
- 9) Landing light

IFR

- 1) All equipment required for day VFR
- 2) All equipment required for night VFR (if flight is performed during night)
- 3) Taxi light (if flight is performed during night)
- 4) Clock
- 5) 2nd altimeter
- 6) Emergency static source
- 7) Pitot static tube deicing

Pressurized flight

- Cabin altimeter
- Cabin vertical speed indication
- Cabin differential pressure indication
- Pressurization control valve
- Safety valve
- Pressurization control
- Maximum cabin altitude and pressure warning light

Flight into icing conditions

- All equipment required for IFR flight
- Propeller deicing
- L.H. windshield deicing
- Airframe, stabilizer and elevator horn deicing
- Wing leading edge inspection light (if night flight)
- Stall warning deicing
- Inertial separator

ALTITUDE OPERATING LIMITS

Maximum altitude : 31000 ft (9449 m)

Maximum differential pressure : 6.2 psi

Operation in RVSM area

Reduced Vertical Separation Minima (RVSM) are met pending airplane compliance with SB 70-120-34.

Airworthiness Approval alone does not authorize flight into airspace for which an RVSM Operational Approval is required by an ICAO Regional Navigation Agreement.

NOTE :

Only altimeters AM250 are compliant with TBM 850 operation in RVSM area.

IN-FLIGHT CIRCUIT BREAKER USE LIMITS

A tripped circuit breaker should not be reset in flight unless deemed necessary for continued safe flight and landing. Only one reset should be attempted.

INTENTIONALLY LEFT BLANK

2.7 - MISCELLANEOUS LIMITS

SEATING LIMITS C.G.

- 2 front seats at 178.5 in. (4.534 m)
- 2 intermediate seats at 222.7 in. (5.656 m)
- Rear bench (2 seats) at 267.1 in. (6.785 m)

BAGGAGE LIMITS

- Baggage in pressurized cabin at 303 inches (7.695 m)
- Rear baggage at 329.4 inches (8.366 m)

MINIMUM CREW

- One pilot

MAXIMUM OCCUPANCY

The number of persons on board is limited by approved seating configuration installed but must not exceed six, including the pilot.

USE OF DOORS

Flight with door open or ajar is prohibited.

CHEMICAL TOILET CABINET (if installed)

The cabinet must be stowed during take-off and landing. No baggage on the top of the cabinet for the whole flight.

INTENTIONALLY LEFT BLANK

2.8 - MARKINGS

AIRSPEED INDICATOR

Airspeed indicator markings and their color code significance are shown in Figure 2.8.1.

MARKING	KIAS (Value or range)	SIGNIFICANCE
White arc	65 - 122	Full Flap Operating Range Lower limit is maximum weight V_{SO} in landing configuration. Transition point between wide and narrow arcs is stall speed with flaps UP Upper limit is maximum speed permissible with flaps LDG
Wide	65 - 81	
Narrow	81 - 122	
Red line	266	Maximum speed for all operations

Figure 2.8.1 - AIRSPEED INDICATOR MARKINGS

PRESSURIZATION

MARKING	VALUE	SIGNIFICANCE
Red line	6.2 psi	Cabin ΔP limit

Figure 2.8.2 - PRESSURIZATION MARKING

ENGINE INSTRUMENTS

Engine instrument markings and their color code significance are shown in Figure 2.8.3.

INSTRUMENT	Red Line or arc ----- Minimum Limit	Yellow Line or Arc ----- Caution Range	Green Arc ----- Normal Operating	Red Line ----- Maximum Limit
Oil temperature	- 40 °C	- 40 to 0 °C 104 to 110 °C	0 to 104 °C	110 °C
Oil pressure	60 psi	60 to 100 psi	100 to 135 psi	135 psi
Fuel pressure	0 to 5 psi	---	10 to 50 psi	50 psi
Generator RPM (Ng)	---	---	51 to 104 %	104 %
Propeller RPM (Np)	---	450 to 1000 RPM	1600 to 2000 RPM	2000 RPM
ITT	---	840 to 1090 °C	400 to 840 °C	840 °C normal limit ----- 1090 °C (red triangle) absolute limit
Torque (TRQ)	---	121.4 %	0 to 121.4 % (arc ½ thick from 100 to 121.4 %)	121.4 %

Figure 2.8.3 - ENGINE INSTRUMENT MARKINGS

SUCTION GAGE

MARKING	CORRESPONDING VALUE
Green	Normal operating from 4.4 to 5.2 in.Hg
Red lines	at 4.4 and 5.2 in.Hg

Figure 2.8.4 - SUCTION GAGE MARKINGS

2.9 - PLACARDS

(1) Under L.H. front side window

I4113004AAAKM1B100

TBM 850

THIS AIRPLANE MUST BE OPERATED AS A NORMAL CATEGORY AIRPLANE IN COMPLIANCE WITH THE OPERATING LIMITATIONS STATED IN THE FORM OF PLACARDS, MARKINGS AND PILOT OPERATING HANDBOOK

ICING CONDITIONS ALLOWED

FLIGHT CONDITIONS : DAY AND NIGHT VFR AND IFR

<p>INVERTED FLIGHT _____ PROHIBITED</p> <p>ACROBATIC MANEUVERS _____ PROHIBITED</p> <p>INTENTIONAL SPINS _____ PROHIBITED</p> <p>MAXIMUM TAKEOFF WEIGHT _____ 3354 kg / 7394 lbs</p> <p>MAXIMUM LANDING WEIGHT _____ 3186 kg / 7024 lbs</p> <p>DESIGN LOAD FACTOR (MAXIMUM)</p> <p>FLAPS UP WEIGHT BELOW 2984 kg / 6579 lbs _____ 1.5 \leq n_k + 3.8 g</p> <p style="padding-left: 20px;">ABOVE 2984 kg / 6579 lbs _____ 1.5 \leq n_k + 3.5 g</p> <p>FLAPS DOWN _____ 0 \leq n_k + 2 g</p>	<p>MANEUVERING SPEED V_A _____ 168 KIAS</p> <p>MAXIMUM OPERATING SPEED V_{MO} _____ 266 KIAS</p> <p>FLAPS EXTENDED MAXIMUM SPEED V_{FE} _____</p> <p>TAKEOFF CONFIGURATION _____ 178 KIAS</p> <p>LANDING CONFIGURATION _____ 122 KIAS</p> <p>LANDING GEAR EXTENDED MAXIMUM SPEED V_{LE} _____ 178 KIAS</p> <p>LANDING GEAR OPERATING MAXIMUM SPEED V_{LO} _____</p> <p>UP _____ 128 KIAS</p> <p>DOWN _____ 178 KIAS</p>
--	--

(2) Calibration chart on compass and on windshield post

WARNING

TURN L AND R WINDSHIELD
DE-ICE OFF BEFORE
COMPASS READING

For	N	30	60	E	120	150
Steer						
For	S	210	240	W	300	330
Steer						

DATE :
RADIO ON

(3) On pressurized baggage compartment partition wall

I4112003AAABMA8200

100 kg - (220 lbs) MAXIMUM

 
 
 


IT IS THE PILOT'S RESPONSIBILITY TO CHECK THAT ALL THE BAGGAGES ARE PROPERLY SECURED.

FOR LOADING INSTRUCTIONS SEE "WEIGHT AND BALANCE DATA" IN PILOT'S OPERATING HANDBOOK AND GRAPH OPPOSITE.

CABIN COMPARTMENT

REAR COMPARTMENT


(4) Under radio rack, in front of pedestal

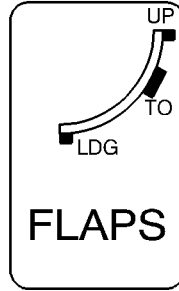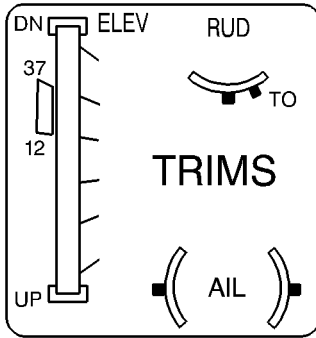

I4113006AAALMA8201

(5) On fuel selector


I4113006AAALMA8100

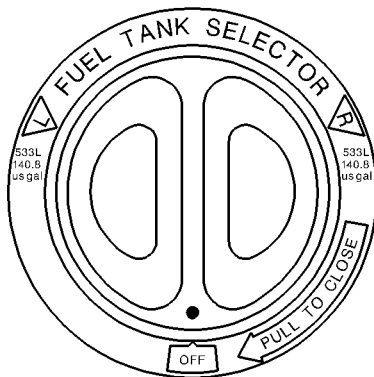


(6) Near fuel tank caps

JET-A-FUEL
TOTAL CAPACITY 145.3 us gal - 550 l
ANTI-ICE ADDITIVE REQUIRED.SEE PILOT'S
OPERATING HANDBOOK FOR OTHER APPROVED
FUELS QUANTITY AND TYPE OF ADDITIVE


I4112004AAAAMA8000

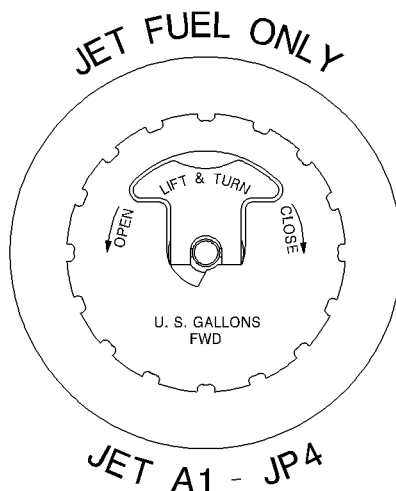

(7) On internal face of L.H. engine cowling

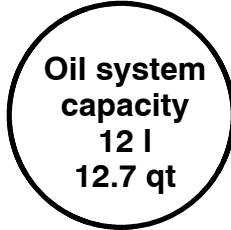


(8) On landing gear emergency control access door

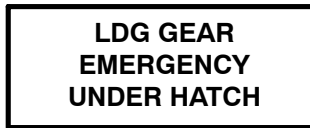

(9) On rear passenger's table casing




(10) Under R.H. control wheel

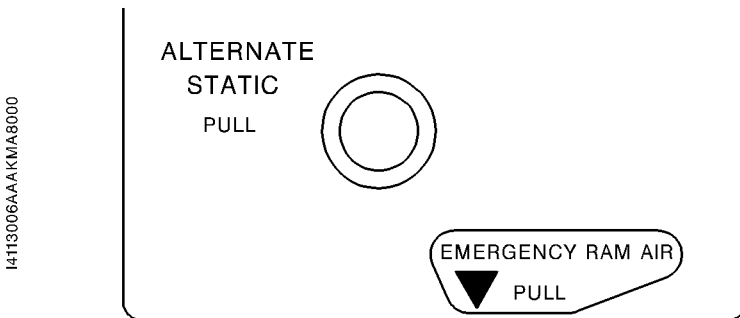

(11) On nose gear door

14112001AAACMA8000

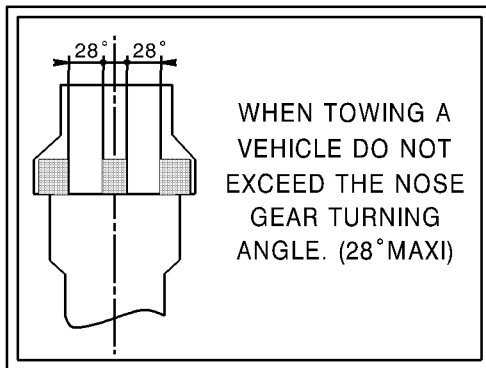

(12) On nose gear leg

NOSE LANDING GEAR
TIRE PRESSURE : 6,5 bar
94 psi


(13) On main gear leg

MAIN LANDING GEAR
TIRE PRESSURE : 8,96 bar
130 psi


(14) On engine cowling, in front of compartment door

EXTERNAL POWER
28 VOLTS D.C. NOMINAL
800 AMPS
STARTING CAPACITY MIN
DO NOT EXCEED 1400 AMPS

(15) On "pilot" door - External side (if installed)

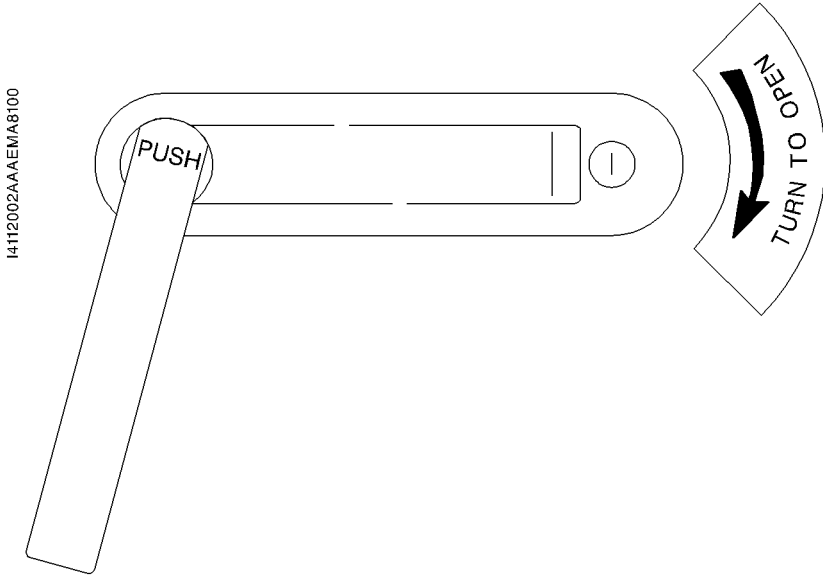


(16) On access door - External side

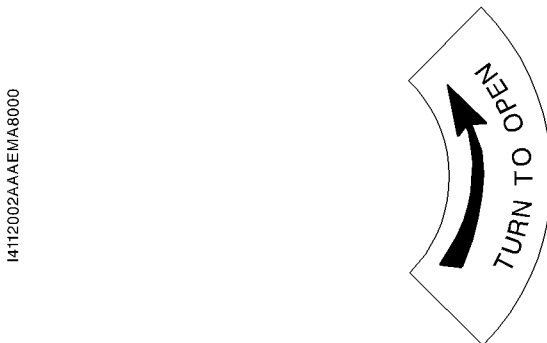

- (17) On outer fuselage skin aft of access door and in the cabin forward of access door

I4112002AAADMA8000

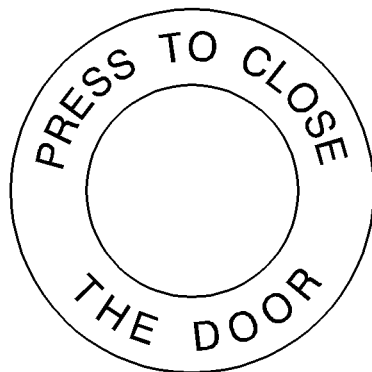

- (18) On access door - Internal side

I4112002AAADMA8201



CAUTION: UNLOCK BEFORE
OPERATING THE HANDLE

TURN HANDLE
TO OPEN



(19) On "pilot" door - Internal side (if installed)



I4112002AAAADMA8101




(20) On emergency exit handle

Marking on cover

Marking on handle

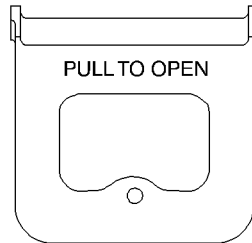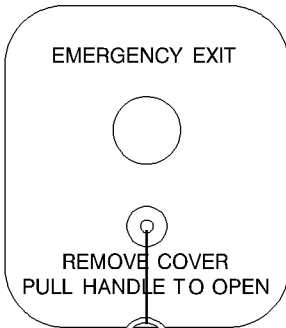

M4621000AAALMAFM00

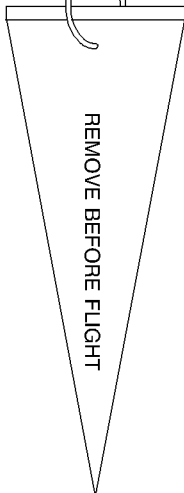

(21) On last step of stairs

STAIRS MAX LOAD : ONE PERSON

(22) On R.H. access door jamb

**DO NOT USE
HAND RAIL
TO RETRACT
OR STOW
STAIRS**

(23) On R.H. side at front seat level and on the first rear passengers masks container (R.H. side on the ceiling)

I4113400AAA BMA8000


WARNING
GREASY SUBSTANCES ARE CAPABLE
OF SPONTANEOUS COMBUSTION
ON CONTACT WITH OXYGEN
DO NOT SMOKE WHILE OXYGEN IS IN USE

(24) On rear passengers masks containers (on R.H. side on the ceiling)

I4113400AAA BMA8101

OXYGEN MASKS INSIDE
PULL MASKS FOR
OXYGEN SUPPLY ↓

(25) On internal face of the oxygen cylinder service door

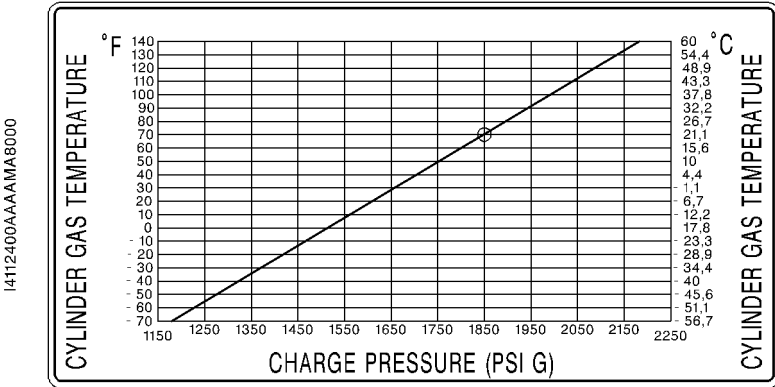


(26) On the oxygen service door

I4112400AAAAMA8100

OXYGEN SERVICE POINT
USE NO LUBRICANTS

- (27) On internal face of the door of the rear baggage compartment (non pressurized)

I4112003AAABMA8100

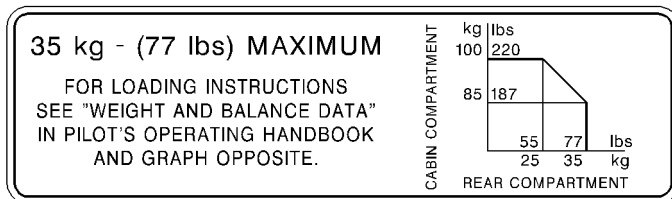

- (28) On emergency locator transmitter inspection door

I4112200AAAAAMA8000



- (29) On the potty seat curtain (if installed), on pilot's side

CURTAIN MUST BE STOWED FOR TAKE-OFF AND LANDING

Post-MOD70-0391-26D

(30) On R.H. side at front seat level

I4113207AAAAA8300

FIRE EXTINGUISHER
STORED IN LOWER DRAWER
OF THE CABINET BEHIND
THE RH STATION SEAT

(31) On the lower drawer of the R.H. cabinet

I4113207AAAAA8000

FIRE EXTINGUISHER INSIDE

2.9 - PLACARDS

(1) Under L.H. front side window

FLIGHT CONDITIONS
DAY AND NIGHT VFR AND IFR

TBM 850

THIS AIRPLANE MUST BE OPERATED AS A NORMAL CATEGORY AIRPLANE
IN COMPLIANCE WITH THE OPERATING LIMITATIONS STATED IN THE FORM
OF PLACARDS, MARKINGS AND PILOT OPERATING HANDBOOK

ICING CONDITIONS ALLOWED

INVERTED FLIGHT _____ PROHIBITED

ACROBATIC MANEUVERS _____ PROHIBITED

INTENTIONAL SPINS _____ PROHIBITED

MAXIMUM TAKEOFF WEIGHT _____ 3354 kg / 7384 lbs

MAXIMUM LANDING WEIGHT _____ 3186 kg / 7024 lbs

DESIGN LOAD FACTOR (MAXIMUM)

FLAPS UP WEIGHT BELOW 2984 kg / 6579 lbs _____ 1.5 n + 3.8 g

ABOVE 2984 kg / 6579 lbs _____ 1.5 n + 3.5 g

FLAPS DOWN _____ 0 n + 2 g

MANEUVERING SPEED V_A _____ 158 KIAS

MAXIMUM OPERATING SPEED V_{MO} _____ 266 KIAS

FLAPS EXTENDED MAXIMUM SPEED V_{FE} _____

TAKEOFF CONFIGURATION _____ 178 KIAS

LANDING CONFIGURATION _____ 122 KIAS

LANDING GEAR EXTENDED MAXIMUM SPEED V_{LE} _____ 178 KIAS

LANDING GEAR OPERATING MAXIMUM SPEED V_{LO} _____

UP _____ 128 KIAS

DOWN _____ 178 KIAS

I4113004AAAKMA1B100

(2) Calibration chart on compass and on windshield post

WARNING

**TURN L AND R WINDSHIELD
DE-ICE OFF BEFORE
COMPASS READING**

For	N	30	60	E	120	150
Steer						
For	S	210	240	W	300	330
Steer						

DATE :

RADIO ON

(3) On pressurized baggage compartment partition wall

100 kg MÁXIMO

É DE RESPONSABILIDADE DO PILOTO
CHECAR SE TODA BAGAGEM ESTÁ
ADEQUADAMENTE SEGURA.

 
 
 
 
 


PARA INSTRUÇÕES DE CARREGAMENTO
CONSULTAR A SEÇÃO DE PESO E
BALANCEAMENTO DO MANUAL DE VÔO
E O GRÁFICO AO LADO

COMPARTIMENTO DA CABINE

COMPARTIMENTO TRASEIRO

I4112003AABMA8400


(4) Under radio rack, in front of pedestal

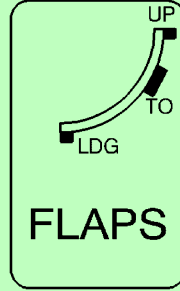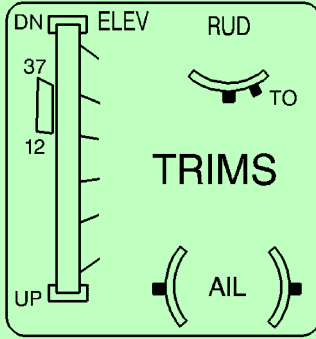

I4113006AAALMA8201

(5) On fuel selector


I4113006AAALMAB100

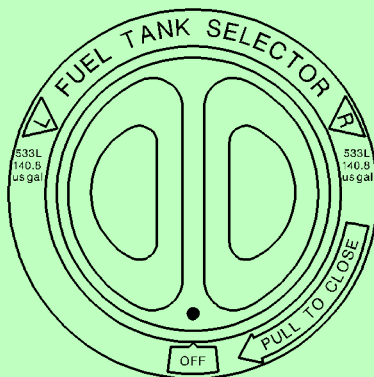


(6) Near fuel tank caps

QAV-1 JET A JET A-1
CAPACIDADE TOTAL 550 L - 145,3 us gal
ADITIVO ANTI CONGELANTE REQUERIDO,
VEJA MANUAL DE VÔO PARA
QUANTIDADE E TIPO DE ADITIVO


I4112004AAAAMA8100

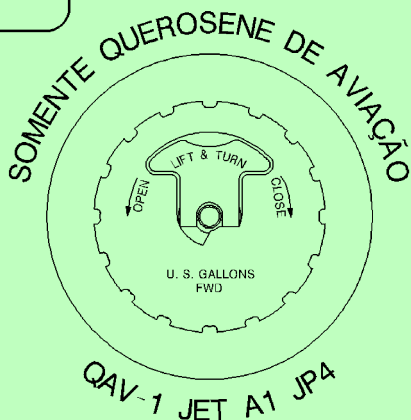

(7) On internal face of L.H. engine cowling

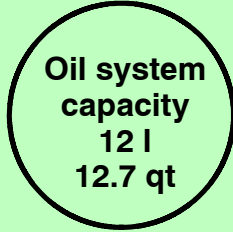

(8) On landing gear emergency control access door

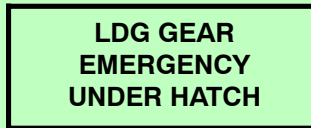


(9) On rear passenger's table casing

A MESA DEVERÁ ESTAR RECOLHIDA PARA DECOLAGEM E POUSO


(10) Under R.H. control wheel

14113006AAKMA8000

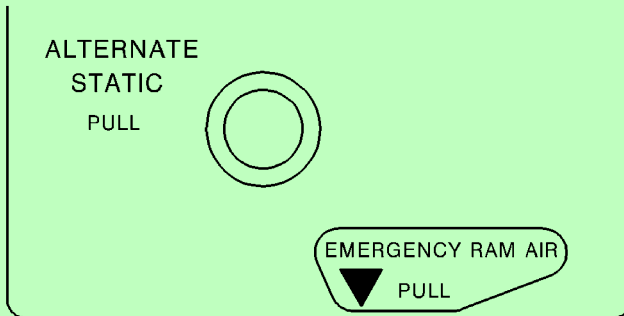

(11) On nose gear door

14112001AACMA8100

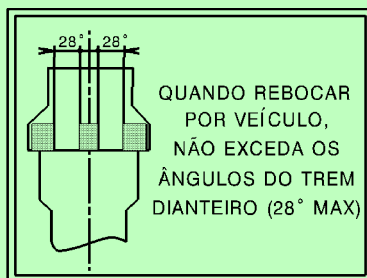

(12) On nose gear leg

NOSE LANDING GEAR
TIRE PRESSURE : 6,5 bar
94 psi

(13) On main gear leg


MAIN LANDING GEAR
TIRE PRESSURE : 8,96 bar
130 psi

(14) On engine cowling, in front of compartment door


14112001AACMA8200

- TOMADA EXTERNA
- 28 VOLTS D.C. NOMINAL
- 800 AMPS
CAPACIDADE MÍNIMA PARA PARTIDA
- NÃO EXCEDA 1400 AMPS

(15) On "pilot" door - External side (if installed)

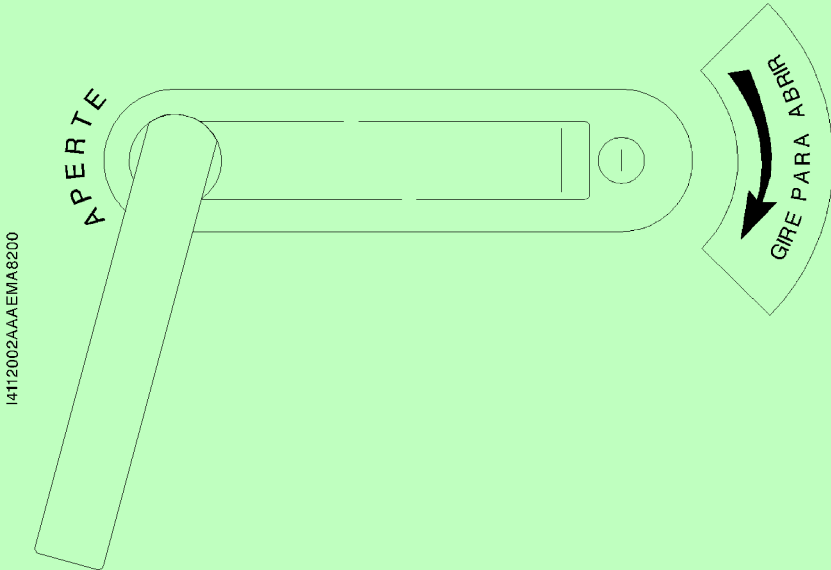


(16) On access door - External side

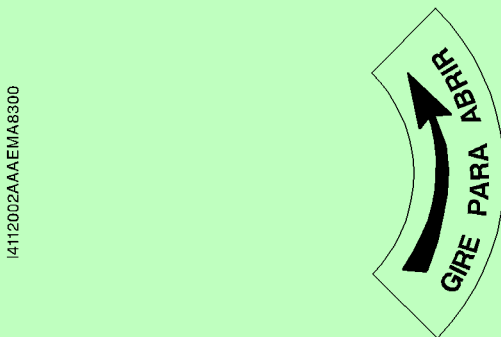

- (17) On outer fuselage skin aft of access door and in the cabin forward of access door

I4112002AAADMA8400

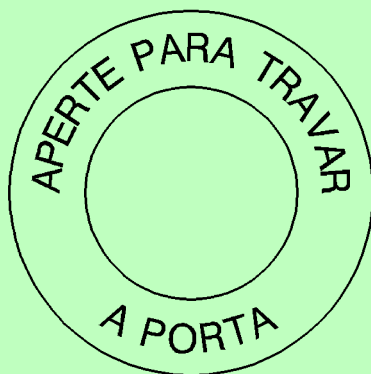


- (18) On access door - Internal side

I4112002AAADMA18000


 


ATENÇÃO: DESTRAVAR ANTES
DE OPERAR A MANOPLA

GIRE A MANOPLA
PARA ABRIR 

(19) On "pilot" door - Internal side (if installed)


I4112002AAA DMA18100

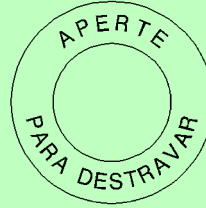

(20) On emergency exit handle

Marking on cover

Marking on handle

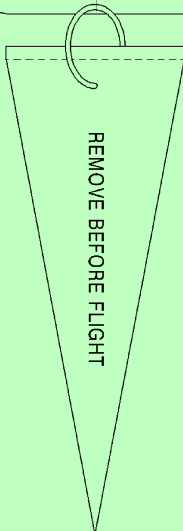

I4113300AAAAMA8000

(21) On last step of stairs

113400AAAAMA8000

MAX. UMA PESSOA NA ESCADA

(22) On R.H. access door jamb

14113400AAABMA8200

**NÃO USE O
CORRIMÃO
PARA RECOLHER
E PARA ALOJAR
A ESCADA**

(23) On R.H. side at front seat level and on the first rear passengers masks container (R.H. side on the ceiling)

14113400AAABMA8300


CUIDADO
PROIBIDO FUMAR DURANTE O USO DE OXIGÊNIO.
GRAXAS E SUBSTÂNCIAS OLEOSAS ESTÃO
SUJEITAS Á COMBUSTÃO ESPONTÂNEA QUANDO
EM CONTATO COM OXIGÊNIO

(24) On rear passengers masks containers (on R.H. side on the ceiling)

14113400AAABMA8400

MÁSCARAS DE OXIGÊNIO
PUXE A MÁSCARA PARA
ATIVAR O OXIGÊNIO ↓

(25) On internal face of the oxygen cylinder service door

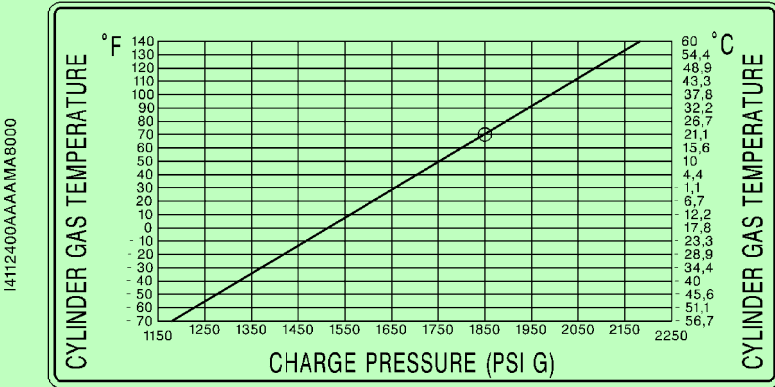

(26) On the oxygen service door

I4112400AAAAMA8200

ABASTECIMENTO DE OXIGÊNIO.
NÃO USE LUBRIFICANTES

- (27) On internal face of the door of the rear baggage compartment (non pressurized)

I4112003AAABMA18200

35 kg MÁXIMO

PARA INSTRUÇÕES DE CARREGAMENTO
CONSULTAR A SEÇÃO DE PESO E
BALANCEAMENTO DO MANUAL DE VÔO
E O GRÁFICO AO LADO

COMPARTIMENTO DA CABINE

100	220	lbs
85	187	lbs
25	55	kg
35	77	kg

COMPARTIMENTO TRASEIRO

- (28) On emergency locator transmitter inspection door

I4112200AAAAMJA8000



- (29) On the potty seat curtain (if installed), on pilot's side

CURTAIN MUST BE STOWED FOR TAKE-OFF AND LANDING

Post-MOD70-0391-26D

(30) On R.H. side at front seat level

I4113207AAAAA18000

EXTINTOR DE INCÊNDIO
NA GAVETA INFERIOR DO
ARMÁRIO ATRÁS DO ASSENTO
DIANTEIRO DIREITO

(31) On the lower drawer of the R.H. cabinet

I4113207AAAAA18200

EXTINTOR DE INCÊNDIO

SECTION 3

EMERGENCY PROCEDURES

TABLE OF CONTENTS

	Page	
3.1 GENERAL	3.1.1	
3.2 REJECTED TAKEOFF PROCEDURE	3.2.1	
3.3 ENGINE FAILURES	3.3.1	
ENGINE FAILURE AT TAKEOFF BEFORE ROTATION	3.3.1	
ENGINE FAILURE AFTER ROTATION	3.3.2	
ENGINE FAILURE DURING FLIGHT	3.3.4	
OIL PRESSURE DROP	3.3.5	
ENGINE REGULATION DISCREPANCY, POWER LOSS, POWER LEVER CONTROL LOSS	3.3.6	
GOVERNOR REGULATION CONTROL NOT OPERATING	3.3.8	
EXCESSIVE PROPELLER ROTATION SPEED	3.3.9	
RED WARNING LIGHT <table border="1" style="display: inline-table; vertical-align: middle;"><tr><td style="text-align: center;">ITT</td></tr></table> ON	ITT	3.3.10
ITT		
RED WARNING LIGHT <table border="1" style="display: inline-table; vertical-align: middle;"><tr><td style="text-align: center;">TRQ</td></tr></table> ON	TRQ	3.3.12
TRQ		
ENGINE DOES NOT STOP ON GROUND	3.3.13	
3.4 AIR START	3.4.1	
AIR START ENVELOPE	3.4.1	
AIR START WITH STARTER	3.4.2	
3.5 FIRE AND SMOKE	3.5.1	
ENGINE FIRE ON GROUND	3.5.1	
CABIN FIRE ON GROUND	3.5.1	
ENGINE FIRE IN FLIGHT	3.5.2	
CABIN ELECTRICAL FIRE OR SMOKE DURING FLIGHT	3.5.3	
SMOKE ELIMINATION	3.5.5	

TABLE OF CONTENTS
 (Continued)

		Page
3.6	EMERGENCY DESCENTS	3.6.1
	MAXIMUM RATE DESCENT	3.6.2
	MAXIMUM RANGE DESCENT	3.6.3
3.7	EMERGENCY LANDINGS	3.7.1
	FORCED LANDING (ENGINE CUT OFF)	3.7.1
	TIRE BLOWOUT DURING LANDING	3.7.3
	LANDING WITH UNLOCKED MAIN LANDING GEAR	3.7.4
	LANDING WITH DEFECTIVE NOSE LANDING GEAR (DOWN UNLOCKED OR NOT DOWN)	3.7.6
	LANDING WITH GEAR UP	3.7.7
	LANDING WITHOUT ELEVATOR CONTROL	3.7.8
	LANDING WITH FLAPS MALFUNCTION	3.7.9
	DITCHING	3.7.10
3.8	FUEL SYSTEM	3.8.1
	RED WARNING LIGHT FUEL PRESS ON	3.8.1
	AMBER WARNING LIGHT AUX BP ON ON	3.8.3
	AMBER WARNING LIGHT FUEL L. LO OR FUEL R. LO ON	3.8.4
	AMBER WARNING LIGHT AUTO SEL ON	3.8.4
3.9	ELECTRICAL SYSTEM	3.9.1
	AMBER WARNING LIGHT BAT OFF ON	3.9.1
	AMBER WARNING LIGHT MAIN GEN ON	3.9.2
	AMBER WARNING LIGHT LO VOLT ON	3.9.3
	normal functioning on "MAIN GEN"	3.9.3
	AMBER WARNING LIGHT LO VOLT ON	3.9.4
	functioning on "ST-BY GENERATOR" (after "MAIN GEN" failure)	3.9.4

TABLE OF CONTENTS (Continued)

		Page
	ELECTRICAL DISTRIBUTION OF BUS BARS	3.9.7
	"RADIO MASTER" SWITCH FAILURE	3.9.9
3.10	PRESSURIZATION AND AIR CONDITIONING	3.10.1
	RED WARNING LIGHT CAB PRESS ON	3.10.1
	CABIN NOT DEPRESSURIZED AFTER LANDING	3.10.1
	AMBER WARNING LIGHT BLEED OFF ON	3.10.2
	RED WARNING LIGHT BLEED TEMP ON	3.10.3
	RED WARNING LIGHT DOOR ON	3.10.4
	AMBER WARNING LIGHT VACUUM LO ON	3.10.5
	DEFOG MALFUNCTION	3.10.6
3.11	LANDING GEAR AND FLAPS	3.11.1
	LANDING GEAR RETRACTION DISCREPANCY	3.11.1
	LANDING GEAR EXTENSION DISCREPANCY	3.11.2
	EMERGENCY GEAR EXTENSION	3.11.3
	RED WARNING LIGHT FLAPS ON	3.11.5
	FLAPS MALFUNCTION	3.11.5
3.12	DEICING SYSTEM	3.12.1
	LEADING EDGES DEICING FAILURE	3.12.1
	PROPELLER DEICING FAILURE	3.12.1
	INERTIAL SEPARATOR FAILURE	3.12.2
	WINDSHIELD DEICING FAILURE	3.12.2
	WINDSHIELD MISTING OR INTERNAL ICING	3.12.3
	AMBER WARNING LIGHT PITOT 1 PITOT 2	
	OR STALL HTR ON	3.12.4

TABLE OF CONTENTS
(Continued)

	Page
3.13 MISCELLANEOUS	3.13.1
RUNAWAY OF ONE OF THE THREE ELECTRICAL TRIM TABS	3.13.1
CRACK IN COCKPIT WINDOW OR WINDOW PANEL	3.13.1
EMERGENCY EXIT USE	3.13.2
EMERGENCY BEACON USE (ELT)	3.13.2
TOTAL COMMUNICATION FAILURE	3.13.3
MAIN GYRO HEADING FAILURE	3.13.3
PARTICULAR TRANSPONDER USES	3.13.4
ACCIDENTAL SPINS	3.13.4
OXYGEN USE	3.13.5
AIRSPEED INDICATING SYSTEM FAILURE	3.13.7
FLIGHT INTO SEVERE ICING CONDITIONS	3.13.8

3.1 - GENERAL

The recommended procedures for different failures or emergency situations are provided in this Section.

Emergency procedures associated with optional or particular equipment that require pilot's operating handbook supplements are provided in Section 9 "Supplements".

Pilot must know procedures given in this section and be prepared to take appropriate action should an emergency arise.

Some emergency procedures are a part of pilot basic training. Although these emergencies are discussed here, this information is not intended to replace such training, but only to provide a source of reference and review.

It is important for the pilot to be familiar with standard emergency procedures.

Alarm system recall

Main failure or state modification of the different systems are provided by an advisory panel.

This panel includes **red** warning lights indicating a failure which requires an immediate action from the pilot, and **amber** warning lights indicating failures or discrepancies which require an action as soon as practical.

Red or amber failure warning are coupled with the lighting of

- a flashing red indicator



or - a flashing amber indicator



Both indicators are located on the upper part of the L.H. instrument panel. When either one lights up, press it once to reactivate, it will go out and is ready to signal in the event of another failure. On the warning light central panel, the corresponding failure warning light remains ON as long as the failed condition exists.

3.2 - REJECTED TAKEOFF PROCEDURE

Following an engine failure, refer to Chapter 3.3, Paragraph "ENGINE FAILURE AT TAKEOFF BEFORE ROTATION".

For any other reason :

- | | |
|-----------------------|--------------------|
| 1 - Power lever | IDLE |
| 2 - Reverse | AS REQUIRED |
| 3 - Braking | AS REQUIRED |

If the airplane cannot be stopped on the remaining runway :

- | | |
|---------------------------|------------------|
| 4 - Power lever | IDLE |
| 5 - Condition lever | CUT OFF |
| 6 - Tank selector | OFF |
| 7 - CRASH lever | PULL DOWN |

Evacuate if necessary, after the airplane has come to a stop.

INTENTIONALLY LEFT BLANK

3.3 - ENGINE FAILURES

ENGINE FAILURE AT TAKEOFF BEFORE ROTATION

- | | |
|---|--------------------|
| 1 - Power lever | IDLE |
| 2 - Braking | AS REQUIRED |
| <i>If the airplane cannot be stopped on the remaining runway :</i> | |
| 3 - Condition lever | CUT OFF |
| 4 - Tank selector | OFF |
| 5 - CRASH lever | PULL DOWN |

3.3 - ENGINE FAILURES

ENGINE FAILURE AFTER ROTATION (1/2)

- ***If altitude does not allow to choose a favourable runway or field :
 Land straight ahead keeping flaps at TO and without changing
 landing gear position.***

Before touch-down :

- 1 - Maintain :

Weight < 6579 lbs (2984 kg)	Weight ≥ 6579 lbs (2984 kg)
IAS > 80 KIAS	IAS > 85 KIAS

- 2 - Power lever **IDLE**
- 3 - Condition lever **CUT OFF**
- 4 - Tank selector **OFF**
- 5 - CRASH lever **PULL DOWN**

- ***If altitude allows to reach a favourable runway or ground :***

- 1 - LDG **DOWN**
- 2 - Flaps **AS REQUIRED**
- 3 - Maintain :

Weight < 6579 lbs (2984 kg)	Weight ≥ 6579 lbs (2984 kg)
IAS > 100 KIAS, Flaps UP	IAS > 105 KIAS, Flaps UP
IAS > 90 KIAS, Flaps TO	IAS > 95 KIAS, Flaps TO

- 4 - Power lever **IDLE**
- 5 - Propeller governor lever **FEATHER**



3.3 - ENGINE FAILURES

ENGINE FAILURE AFTER ROTATION (2/2)

Before touch-down :

- | | |
|---------------------------|------------------|
| 6 - Condition lever | CUT OFF |
| 7 - Tank selector | OFF |
| 8 - CRASH lever | PULL DOWN |

3.3 - ENGINE FAILURES

ENGINE FAILURE DURING FLIGHT

- 1 - If AP engaged :
"AP / TRIM DISC INT" push-button **PRESSED**
- 2 - Power lever **IDLE**
- 3 - Propeller governor lever **FEATHER**
- 4 - Condition lever **CUT OFF**
- 5 - Remaining fuel **CHECK**
- 6 - Tank selector **SWITCH TANKS**
- 7 - "AUX BP" switch
and fuel pressure **CHECK / CORRECT**
- 8 - Air start (Refer to Chapter 3.4)
- 9 - In case of high altitude (above 12000 ft), undertake an
EMERGENCY DESCENT (Refer to Chapter 3.6)
- 10 - If air start not successful, perform a FORCED LANDING (Refer to
Chapter 3.7)

3.3 - ENGINE FAILURES

OIL PRESSURE DROP

RED WARNING LIGHT **OIL PRESS** ON

- 1 - Oil pressure indicator **CHECK**
- 2 - If the indicated pressure is correct **SHORTEN THE FLIGHT / MONITOR**
- 3 - If indicated pressure is below the green arc **CONFIRMED FAILURE**

Due to the oil pressure drop, the propeller blade angle may go towards high pitch and therefore lead to a Np propeller rotation speed decrease.

CAUTION

PREPARE FOR AN ENGINE STOP, SHORTLY ; REDUCE POWER TO THE MINIMUM NECESSARY, LAND AS SOON AS PRACTICAL

If engine power drops itself :

- 4 - Power lever **IDLE**
- 5 - Propeller governor lever **FEATHER**
- 6 - Condition lever **CUT OFF**

Perform a **FORCED LANDING** (Refer to Chapter 3.7)

3.3 - ENGINE FAILURES

**ENGINE REGULATION DISCREPANCY,
POWER LOSS,
POWER LEVER CONTROL LOSS (1/2)**

- 1 - If circumstances allow :
Power lever **IDLE**
- 2 - Confirm engine still running
- 3 - Tank selector **SWITCH TANKS**
- 4 - Check that no parameter exceeds allowed values
- 5 - "MAN OVRD" control **ACTUATED**
progressively forward
(Adjust power necessary to continue flight)

If the available power is weak, extend the landing gear only on a glide path in final approach and extend full flaps only in short final. Do not perform a go-around.

CAUTION
IN "MANUAL OVERRIDE" ENGINE IS NEITHER PROTECTED AGAINST SLAM ACCELERATIONS, NOR AGAINST MAXIMUM SPEED OVERSHOOTING. AVOID RAPID CONTROL MOVEMENTS AND MANAGE ENGINE PARAMETERS

CAUTION
IN SOME CASES, WHEN "MANUAL OVERRIDE" CONTROL IS USED, THE AVAILABLE POWER MAY NOT BE SUFFICIENT TO ENSURE A GO-AROUND IN LANDING CONFIGURATION, IN PARTICULAR IF THE WEIGHT IS NEAR THE MAXIMUM WEIGHT

- 6 - Continue flight, SHORTEN if possible



3.3 - ENGINE FAILURES

ENGINE REGULATION DISCREPANCY, POWER LOSS, POWER LEVER CONTROL LOSS (2/2)

- 7 - Perform a normal landing WITHOUT REVERSE
- 8 - Braking **AS REQUIRED**
- If minimum power obtained is excessive :***
- 1 - Reduce airspeed by setting airplane in nose-up attitude at IAS < 178 KIAS
- 2 - "INERT SEP" switch **ON**
- 3 - If ITT > 840°C :
"INERT SEP" switch **OFF**
- 4 - Landing gear control **DN**
- 5 - Flaps **TO**
- 6 - Establish a long final or an ILS approach respecting IAS < 178 KIAS
- 7 - When runway is assured :
Condition lever **CUT OFF**
- 8 - Propeller governor lever **FEATHER**
if necessary to extend trajectory
- 9 - Flaps **LDG as required**
(at IAS < 122 KIAS)
- 10 - Land normally WITHOUT REVERSE
- 11 - Braking **AS REQUIRED**

3.3 - ENGINE FAILURES

GOVERNOR REGULATION CONTROL NOT OPERATING

May indicate a rupture of the linkage of the governor control.

- 1 - Continue the flight.
- 2 - If $N_p < 2000$ RPM, do not perform a go-around and do not use the reverse.

In that case, the go-around performance and the reverse efficiency might be lower than expected. The airplane repair is mandatory before any other flight.

3.3 - ENGINE FAILURES

EXCESSIVE PROPELLER ROTATION SPEED

Indicates :

- a propeller governor failure

In that case, the propeller overspeed limiter will limit initially the rotation speed to 2100 RPM approximately.

- or a propeller governor and overspeed limiter failure

In that case, only the torque limiter operates to limit the power. However, the pilot intervention is necessary to maintain $N_p \leq 2000$ RPM. The propeller reducer is designed for a max. N_p of 2200 RPM.

- 1 - Reduce the power and the aircraft speed to avoid propeller rotation speeds higher than 2000 RPM.
- 2 - Land as soon as possible.
- 3 - Do not perform a go-around.

A go-around would damage the engine reduction gearbox


The airplane repair is mandatory before any other flight.

3.3 - ENGINE FAILURES

RED WARNING LIGHT ITT **ON (1/2)**

Indicates that ITT exceeds 850°C

During an engine start

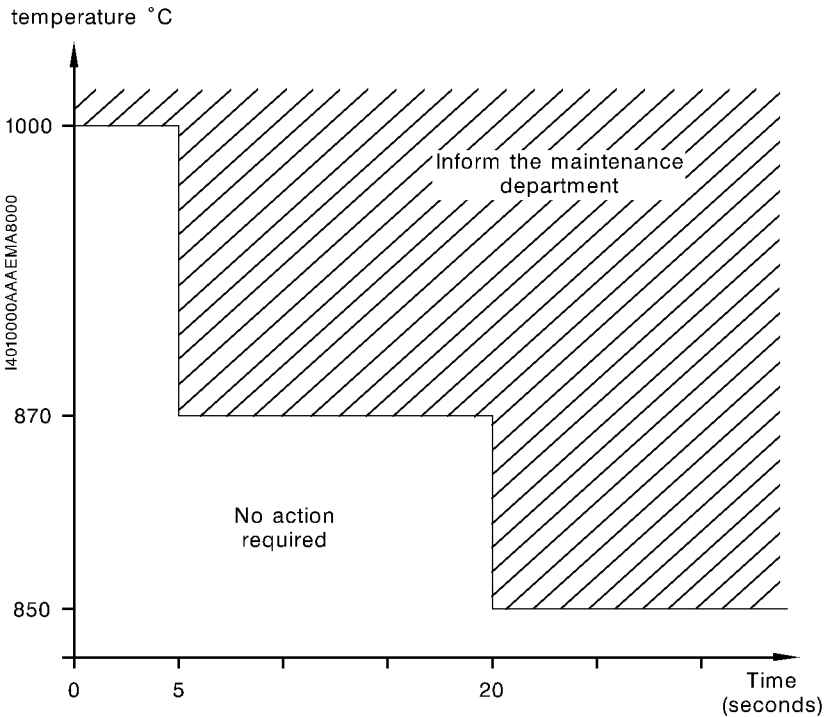

TEMPERATURE LIMITS DURING START

If the above diagram limits are exceeded :

- 1 - ITT indicator **CHECK**
- 2 - Stop the starting procedure.



3.3 - ENGINE FAILURES

RED WARNING LIGHT ITT ON (2/2)

- 3 - Record the engine parameters read as well as ground conditions.
- 4 - Inform maintenance department.


During flight

- 1 - ITT indicator **CHECK**
- 2 - Reduce power and correct display according to "Engine Operation" tables - Chapter 5.8

If ITT remains > 840°C :

- 3 - Reduce power to maintain ITT < 840°C.
- 4 - Shorten the flight.
- 5 - Record the airplane and engine parameters read in case of overtemperature.
- 6 - Inform maintenance department at the end of the flight.

3.3 - ENGINE FAILURES

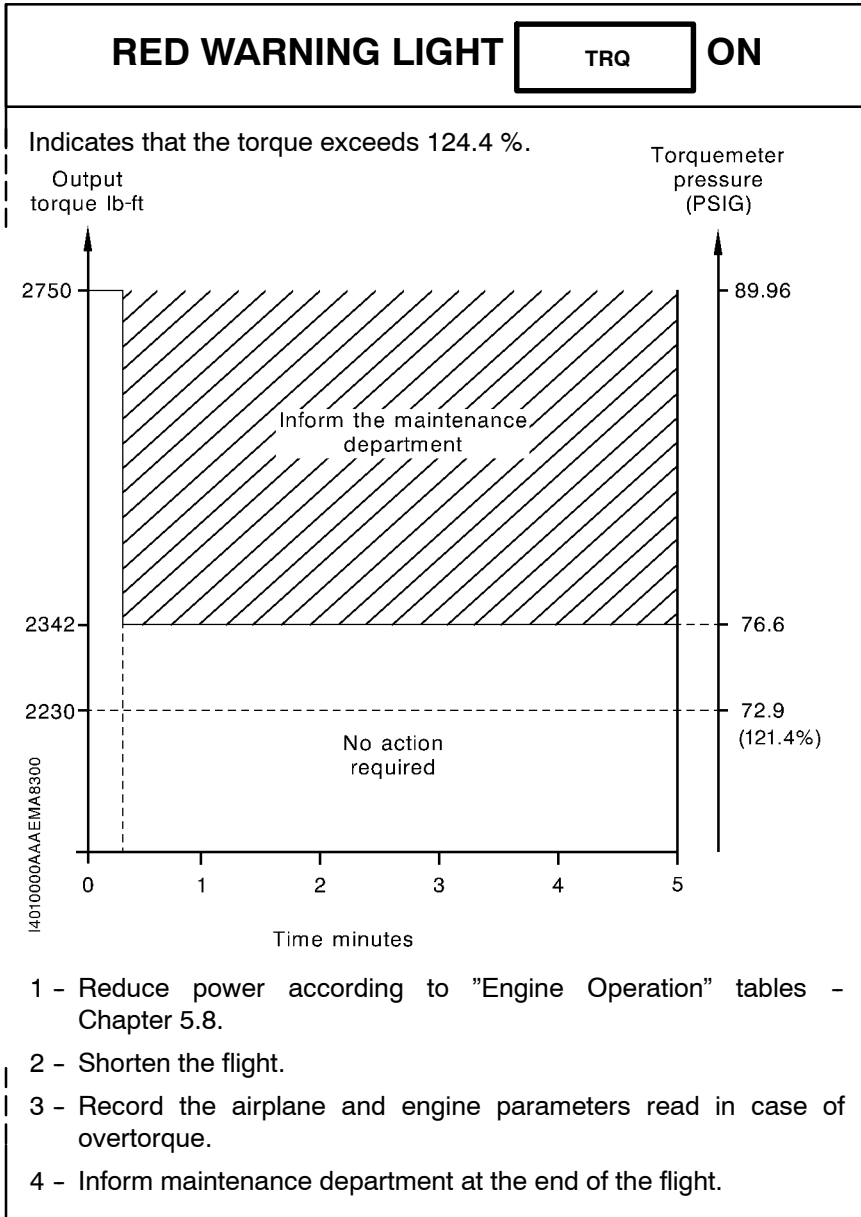

3.3 - ENGINE FAILURES


ENGINE DOES NOT STOP ON GROUND

If the engine does not stop when the condition lever is set to CUT OFF, proceed as follows :

- | | |
|---|------------------|
| 1 - "AP / TRIMS MASTER" switch | OFF |
| 2 - "RADIO MASTER" switch | OFF |
| 3 - "INT. LIGHTS" panel
All switches | OFF |
| 4 - "EXT. LIGHTS" panel
All switches | OFF |
| 5 - "ECS" panel
All switches | OFF |
| 6 - Tank selector | OFF |
| Wait for engine stop due to lack of fuel in the pipes | |
| 7 - "GENERATOR" selector | MAIN |
| 8 - "SOURCE" selector | OFF |
| 9 - CRASH lever | PULL DOWN |
| 10 - Inform the maintenance department | |

INTENTIONALLY LEFT BLANK

3.4 - AIR START

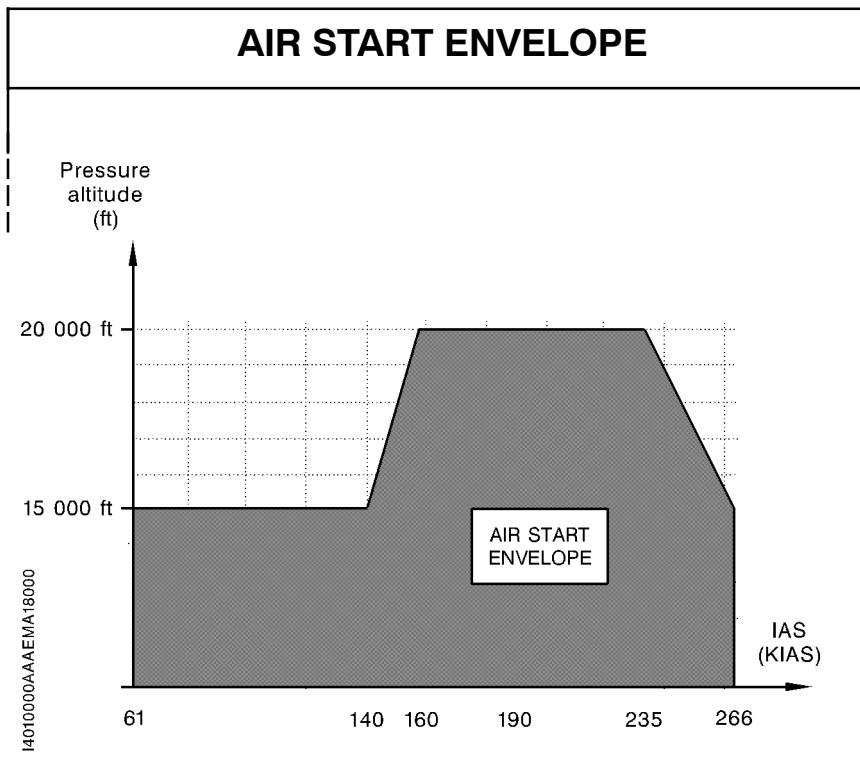

Air start may be attempted outside of the envelope. However, above 20000 ft or with $N_g < 13\%$, ITT tends to increase during start and prudence is recommended.

Figure 3.4.1 - AIR START ENVELOPE

3.4 - AIR START

AIR START WITH STARTER (1/2)

CAUTION

THE STARTER CANNOT OPERATE IF THE "GENERATOR" SELECTOR IS ON "ST-BY"

CAUTION

IGNITION IS NOT AVAILABLE IF THE "ESS BUS TIE" SWITCH IS KEPT "EMER"

1 - "BLEED" switch OFF

CAUTION

"BLEED" SWITCH SET TO "AUTO" OR "HI" MAY CAUSE OVERTEMPERATURE OR ABNORMAL ACCELERATION

2 - "AIR COND" switch OFF

3 - Air start envelope CHECKED

4 - Electric consumption REDUCE

5 - Power lever IDLE

6 - Propeller governor lever FEATHER

7 - Condition lever CUT OFF

8 - Tank selector CHECK

9 - "AUX BP" fuel switch ON

10 - "IGNITION" switch AUTO or ON

11 - "STARTER" switch ON



3.4 - AIR START

AIR START WITH STARTER (2/2)

- 12 - Condition lever **LO / IDLE**
when Ng ~ 13 %
- 13 - ITT and Ng **MONITOR**
- 14 - When Ng ~ 50 % steady **STARTER OFF**
IGNITION AUTO
- 15 - Condition lever **HI / IDLE**
- 16 - Propeller governor lever **MAX. RPM**
- 17 - Power lever **AS REQUIRED**
- 18 - Electrical equipment **AS REQUIRED**
- 19 - "AUX BP" fuel switch **AUTO**
- 20 - "BLEED" switch **AS REQUIRED**

CAUTION

**WITH THE EFS 40, DISPLAYS ARE MOMENTARILY LOST
DURING STARTER OPERATION**

CAUTION

**WITH ALTIMETERS AM250 (if installed), ALTITUDE
INFORMATION IS MOMENTARILY CUT OFF DURING
STARTER OPERATION**

INTENTIONALLY LEFT BLANK

3.5 - FIRE AND SMOKE**ENGINE FIRE ON GROUND**

Symptoms : ITT increasing, red warning light ITT on, smoke, ...

- 1 - Power lever **IDLE**
- 2 - Condition lever **CUT OFF**
- 3 - "BLEED" switch **OFF**
- 4 - "AIR COND" switch **OFF**
- 5 - Brakes **AS REQUIRED**
- 6 - Tank selector **OFF**
- 7 - Warn ground assistance, if necessary
- 8 - CRASH lever **PULL DOWN**
- 9 - EVACUATE as soon as possible

CABIN FIRE ON GROUND

- 1 - Power lever **IDLE**
- 2 - Condition lever **CUT OFF**
- 3 - Brakes **AS REQUIRED**
- 4 - Warn ground assistance, if necessary
- 5 - CRASH lever **PULL DOWN**
- 6 - Cabin extinguisher **AS REQUIRED**
- 7 - EVACUATE as soon as possible

3.5 - FIRE AND SMOKE

ENGINE FIRE IN FLIGHT	
Symptoms : ITT increasing, red warning light	ITT on,
smoke, ...	
1 - Power lever	IDLE
2 - Propeller governor lever	FEATHER
3 - Condition lever	CUT OFF
4 - "AUX BP" fuel switch	OFF
5 - Tank selector	OFF
6 - "BLEED" switch	OFF
7 - "AIR COND" switch	OFF
8 - In case of high altitude (above 12000 ft), undertake an EMERGENCY DESCENT (Refer to Chapter 3.6)	
9 - Perform a FORCED LANDING (ENGINE CUT OFF) (Refer to Chapter 3.7)	
<u>WARNING</u> AFTER ENGINE FIRE, DO NOT ATTEMPT AN AIR START	

3.5 - FIRE AND SMOKE

CABIN ELECTRICAL FIRE OR SMOKE DURING FLIGHT (1/2)

If the origin is known :

1 - Oxygen and goggles **USE AS REQUIRED**
(pilot and passengers)

2 - Defective equipment
Corresponding circuit breaker **PULL**

Descend quickly below 12000 ft

3 - Using the on board extinguisher, **EXTINGUISH** fire if necessary

4 - Smoke elimination
(if necessary) **UNDERTAKE PROCEDURE**
(Refer to this chapter)

5 - **LAND** as soon as possible

If the origin is unknown :

1 - Oxygen and goggles **USE AS REQUIRED**
(pilot and passengers)

2 - "AIR COND" switch **OFF**

3 - Non essential equipment **OFF**

4 - Smoke elimination
(if necessary) **UNDERTAKE PROCEDURE**
(Refer to this chapter)

If smoke or fire stops :

LAND as soon as possible.



3.5 - FIRE AND SMOKE

**CABIN ELECTRICAL FIRE OR
SMOKE DURING FLIGHT (2/2)**

If smoke or fire persists :

- 5 - "SOURCE" selector **OFF**
- 6 - "GENERATOR" selector **OFF**
- 7 - Fire **EXTINGUISH if necessary with the
on board extinguisher**
- 8 - All "pull-off" type circuit-breakers **PULL**
- 9 - All electrical equipment **CUT OFF**
- 10 - "SOURCE" selector **BAT**
- 11 - "GENERATOR" selector **MAIN**
- 12 - Necessary circuit-breakers **ENGAGE
one after the other checking for
possible fire or smoke**
- 13 - Necessary electrical equipment **ON
one after the other checking for
possible fire or smoke**
- 14 - Defective equipment
Corresponding circuit breaker **PULL**
- 15 - Not affected essential equipment **ON as required**
- 16 - LAND as soon as possible

3.5 - FIRE AND SMOKE

SMOKE ELIMINATION	
1 - Smoke origin	IDENTIFY
2 - Oxygen and goggles	USE AS REQUIRED (pilot and passengers)
3 - If smoke persists, undertake an EMERGENCY DESCENT (Refer to Chapter 3.6)	
4 - "BLEED" switch	OFF
5 - "AIR COND" switch	OFF
6 - "DUMP" control	ACTUATE
Wait until the differential pressure drops	
7 - "RAM AIR" control knob	PULL
If smoke increases	PUSH
8 - LAND as soon as possible	

INTENTIONALLY LEFT BLANK

3.6 - EMERGENCY DESCENTS

Two types of descent are considered :

1 - Engine running, maximum descent rate, if necessary

The factors to be considered are :

- Cabin altitude and oxygen duration
- Electrical power endurance
- Distance to appropriate landing area
- Flight conditions IMC, VMC, ICING
- Minimum safe altitude
- Fuel reserves

2 - Engine failure, aircraft flown for maximum range

The pilot is in charge of evaluating the situation and priorities.

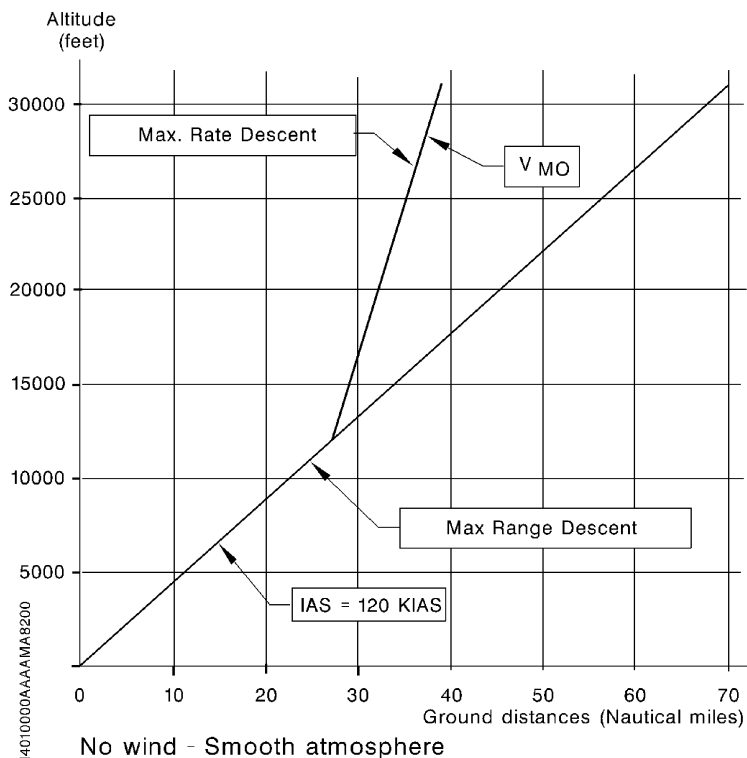


Figure 3.6.1 - EMERGENCY DESCENT PROFILES

3.6 - EMERGENCY DESCENTS

MAXIMUM RATE DESCENT	
1 - Power lever	IDLE
2 - Oxygen	If necessary
3 - Propeller governor lever	MAX. RPM
Procedure in smooth air :	
4 - Flaps	UP
5 - Landing gear	UP
6 - Speed	V_{MO} = 266 KIAS
Procedure in rough air or in case of structure problem :	
7 - Reduce speed	IAS ≤ 178 KIAS
8 - Landing gear	DN
9 - Flaps	UP
10 - Keep	IAS ≤ 178 KIAS

3.6 - EMERGENCY DESCENTS

MAXIMUM RANGE DESCENT (1/2)

1 - Power lever **IDLE**

2 - Propeller governor lever **FEATHER**

3 - Condition lever **CUT OFF**

4 - Flaps **UP**

5 - Landing gear **UP**

6 - Speed **IAS = 120 KIAS**

7 - Oxygen **If necessary**

Check oxygen duration before reaching 12000 ft and check flow to passengers

8 - "DUMP" switch **ACTUATED**

9 - "RAM AIR" control knob **PULLED**

If conditions allow : VMC and non icing conditions :

10 - "ESS BUS TIE" reverse switch **Cover up
EMER position**

11 - Prepare a forced landing **Refer to Chapter 3.7**

If flight conditions do not allow :

12 - "ESS BUS TIE" reverse switch **NORMAL**

13 - Manually disconnect systems as follows :

- "AIRFRAME DE ICE" switch **OFF**

- "ICE LIGHT" switch **OFF**

- "PROP DE ICE" switch **OFF**

- "R.WINDSHIELD" switch **OFF**

- "PITOT 2 & STALL HTR" switch **OFF**

- "L.LDG / TAXI / R.LDG / PULSE SYST" switches **OFF**

- "STROBE" switch **OFF**



3.6 - EMERGENCY DESCENTS

MAXIMUM RANGE DESCENT (2/2)

- "BLEED / AIR COND / FAN FLOW" switches **OFF**
- "AUX BP" switch **OFF**
- "FUEL SEL" switch **MAN**
- "AP/TRIMS MASTER" switch **OFF**
- "EHSI" breaker **PULLED**
- VHF 1 / NAV 1 / GPS 1 **OFF**
- MFD **OFF**
- ADF **OFF**
- Stormscope switch **OFF**
- "CD" player **OFF**
- "INSTR / CABIN / ACCESS" controls **OFF**
- "GYRO INST" panel, all switches **OFF**
- Transponder 2 **OFF**

If icing conditions :

- "PITOT 1 HTR" switch **Checked ON**
- "L.WINDSHIELD" switch **ON**
- Maintain minimum recommended speeds (Chapter 4.5 - "Flight into known icing conditions", Paragraph "Ice protection procedures", Point 3)

If time permits :

- "RADIO + FAN" breaker **PULLED**
- "28 VDC PLUGS" breaker **PULLED**
- "AIR COND" breaker **PULLED**

14 - Prepare a forced landing **Refer to Chapter 3.7**

3.7 - EMERGENCY LANDINGS

FORCED LANDING (ENGINE CUT OFF) (1/2)

- 1 - Power lever IDLE
- 2 - Propeller governor lever FEATHER
- 3 - Condition lever CUT OFF
- 4 - Tank selector OFF
- 5 - "AUX BP" fuel switch OFF
- 6 - "BLEED" switch OFF
- 7 - "AIR COND" switch OFF
- 8 - "DUMP" switch ACTUATED
- 9 - Glide speed 120 KIAS maintained until favourable ground approach

If ground allows it :

- 10 - "ESS BUS TIE" reverse switch NORMAL
in order to have GEAR and FLAPS available
- 11 - Landing gear DN

If night conditions :

- 12 - L.LDG / R.LDG ON

If ground does not allow it :

- 13 - Keep landing gear UP
- 14 - When chosen ground is assured FLAPS LDG
- 15 - CRASH lever PULL DOWN



3.7 - EMERGENCY LANDINGS

FORCED LANDING (ENGINE CUT OFF) (2/2)

16 - Final approach :

Weight < 6250 lbs (2835 kg)	Weight > 6250 lbs (2835 kg)
IAS = 80 KIAS	IAS = 85 KIAS

17 - Land flaring out

18 - EVACUATE after stop

3.7 - EMERGENCY LANDINGS

TIRE BLOWOUT DURING LANDING

- 1 - Control direction with brakes and nose wheel steering
- 2 - REVERSE **AS REQUIRED**
- 3 - Stop airplane to minimize damages
- 4 - Perform engine SHUT-DOWN procedure (Refer to Chapter 4.3)

3.7 - EMERGENCY LANDINGS

**LANDING WITH UNLOCKED MAIN
LANDING GEAR (1/2)**

- 1 - Ask control tower or another airplane to visually check landing gear position

CAUTION

**IF ONE MAIN LANDING GEAR IS NOT DOWN, IT IS
BETTER TO LAND WITH GEAR UP.**

If defective gear is down but unlocked :

- 2 - "BLEED" switch **OFF**
- 3 - "DUMP" switch **ACTUATED**
- 4 - Maintain tank selector on defective landing gear side to lighten corresponding wing [maximum fuel unbalance 15 us gal (57 litres)]
- 5 - Choose a runway with headwind or crosswind blowing from defective gear side
- 6 - Align the airplane to land on the runway edge opposite to the defective landing gear
- 7 - Land and set nose gear immediately on ground to assure lateral control
- 8 - Use full aileron during roll-out to lift the wing with the defective landing gear
- 9 - Preferably do not use reverse
- 10 - Complete taxiing with a slight turn toward defective landing gear



3.7 - EMERGENCY LANDINGS

LANDING WITH UNLOCKED MAIN LANDING GEAR (2/2)

- 11 - Condition lever **CUT OFF**
- 12 - Engine stop procedure **COMPLETE**
- 13 - EVACUATE

If landing gear drags during landing :

- 14 - Condition lever **CUT OFF**
- 15 - CRASH lever **PULL DOWN**
- 16 - Tank selector **OFF**
- 17 - EVACUATE after airplane comes to a stop

3.7 - EMERGENCY LANDINGS

LANDING WITH DEFECTIVE NOSE LANDING GEAR (DOWN UNLOCKED OR NOT DOWN)

- 1 - Transfer passengers to the rear, if necessary
- 2 - Approach **Flaps TO**

Weight < 6250 lbs (2835 kg)	Weight ≥ 6250 lbs (2835 kg)
IAS = 90 KIAS	IAS = 95 KIAS

- 3 - Land with nose-up attitude, keep nose high
- 4 - Condition lever **CUT OFF**
- 5 - Propeller governor lever **FEATHER**
- 6 - Touch-down slowly with nose wheel and keep elevator at nose-up stop
- 7 - Moderate braking
- 8 - CRASH lever **PULL DOWN**
- 9 - EVACUATE after airplane comes to a stop

3.7 - EMERGENCY LANDINGS

LANDING WITH GEAR UP					
1 - Final approach	Standard				
2 - Flaps	LDG				
<table border="1"><thead><tr><th>Weight < 6250 lbs (2835 kg)</th><th>Weight ≥ 6250 lbs (2835 kg)</th></tr></thead><tbody><tr><td>IAS = 80 KIAS</td><td>IAS = 85 KIAS</td></tr></tbody></table>		Weight < 6250 lbs (2835 kg)	Weight ≥ 6250 lbs (2835 kg)	IAS = 80 KIAS	IAS = 85 KIAS
Weight < 6250 lbs (2835 kg)	Weight ≥ 6250 lbs (2835 kg)				
IAS = 80 KIAS	IAS = 85 KIAS				
3 - "BLEED" switch	OFF				
4 - "DUMP" switch	ACTUATED				
<i>When runway is assured :</i>					
5 - Power lever	IDLE				
6 - Propeller governor lever	FEATHER				
7 - Condition lever	CUT OFF				
8 - Tank selector	OFF				
9 - Flare out					
10 - After touch-down, CRASH lever	PULL DOWN				
11 - EVACUATE after airplane comes to a stop					

3.7 - EMERGENCY LANDINGS

LANDING WITHOUT ELEVATOR CONTROL

- 1 - Configuration **LANDING GEAR DN - FLAPS LDG**
- 2 - Airspeed **Maintain IAS = 95 KIAS**
- 3 - Power as necessary to maintain airspeed according to an easy approach slope \simeq 300 ft / min
- 4 - Adjust elevator by using manual pitch trim wheel
- 5 - When ground approaches, decrease slope progressively
- 6 - Reduce power progressively

3.7 - EMERGENCY LANDINGS

LANDING WITH FLAPS MALFUNCTION**For flaps deflections from “UP” to “TO” position :**

Proceed as for a normal landing, maintaining approach airspeed :

Weight < 6250 lbs (2835 kg)	Weight \geq 6250 lbs (2835 kg)
IAS = 100 KIAS	IAS = 105 KIAS

Provide for a landing distance increased up to about 60 %

For flaps deflections greater than “TO” position :

Proceed as for a normal landing, maintaining approach airspeed :

Weight < 6250 lbs (2835 kg)	Weight \geq 6250 lbs (2835 kg)
IAS = 95 KIAS	IAS = 100 KIAS

Provide for a landing distance increased up to about 50 %

3.7 - EMERGENCY LANDINGS

DITCHING

1 - Landing gear **UP**
In heavy swell with light wind, land parallel to the swell (rollers).
In heavy wind, land facing wind.

2 - Flaps **LDG**

3 - Maintain a descent rate as low as possible when approaching the water

4 - Airspeed :

Weight < 6579 lbs (2984 kg)	Weight ≥ 6579 lbs (2984 kg)
IAS = 80 KIAS	IAS = 85 KIAS

5 - "BLEED" switch **OFF**

6 - "DUMP" switch **ACTUATED**

7 - CRASH lever **PULL DOWN**

8 - Maintain attitude without rounding off until touch-down

9 - EVACUATE through EMERGENCY EXIT

3.8 - FUEL SYSTEM

<p>RED WARNING LIGHT FUEL PRESS ON (1/2)</p>

Indicates a fuel pressure drop at "HP" engine pump inlet

- 1 - Remaining fuel **CHECK**
- 2 - Tank selector **SWITCH TANKS**
- 3 - Fuel pressure indication **CHECK**
- 4 - "AUX BP" fuel switch **AUTO
CHECK / CORRECT**

If alarm persists :

- 5 - "AUX BP" fuel switch **ON**

Warning light AUX BP ON on **CHECK**

- 6 - Fuel pressure **CHECK**

If pressure is normal again and warning light is off, mechanical pump has failed.

- 7 - Maintain "AUX BP" fuel switch **ON**

If pressure remains at 0 (or drops to 0 after "AUX BP" pump operation)

and if warning FUEL PRESS remains on :

- 8 - Tank switching **PERFORM**

If pressure is normal again, a supply problem may have occurred from the tank selected first (air vent, fuel icing, etc ...).



3.8 - FUEL SYSTEM

RED WARNING LIGHT **FUEL PRESS** **ON (2/2)**

*If pressure remains at 0 and if warning **FUEL PRESS** remains on :*

9 - Selection of the fullest tank **PERFORM**

10 - Avoid high power and rapid movements of the power lever.

11 - Descend to an altitude below 18000 ft.

12 - Land as soon as possible.

3.8 - FUEL SYSTEM

AMBER WARNING LIGHT	AUX BP ON	ON
<p>(Indication is normal if "AUX BP" fuel switch is in ON position)</p> <p><i>If "AUX BP" fuel switch is in AUTO position :</i></p> <p>1 - Reset to ON</p> <p>2 - Then to AUTO</p> <p><i>If AUX BP ON warning light goes out, continue flight normally</i></p> <p><i>If AUX BP ON warning light remains on, mechanical booster pump has failed</i></p> <p><i>In that case :</i></p> <p>3 - "AUX BP" fuel switch ON</p> <p>4 - Shorten flight</p>		

3.8 - FUEL SYSTEM

AMBER WARNING LIGHT FUEL L. LO OR FUEL R. LO ON
Indicates level drop in the corresponding tank
1 - Corresponding gage CHECK
2 - Check the other tank has been automatically selected <i>If not :</i>
3 - "FUEL SEL" switch MAN
4 - Select tanks manually as required

AMBER WARNING LIGHT AUTO SEL ON
Indicates that the mode control automatic timer is off or has failed
1 - "FUEL SEL" switch AUTO CHECK / CORRECT
2 - If it is on AUTO : confirmed failure
3 - "FUEL SEL" switch MAN
4 - Select tanks manually as required

3.9 - ELECTRICAL SYSTEM

AMBER WARNING LIGHT	BAT OFF	ON
Indicates that "SOURCE" selector has been positioned on OFF or GPU, or that the battery is disconnected from the mains		
1 - If necessary CORRECT		
2 - If warning persists SHORTEN FLIGHT		
3 - Monitor airplane mains voltage		

3.9 - ELECTRICAL SYSTEM

AMBER WARNING LIGHT MAIN GEN ON
Indicates that "GENERATOR" selector has been positioned to OFF or ST-BY, or main generator is cut off
1 - If necessary CORRECT
2 - If warning persists "MAIN GEN" switching confirmed
3 - "MAIN GENERATOR RESET" push-button PUSH
<i>In case of failure :</i>
4 - Keep the following systems connected : <ul style="list-style-type: none">- A/P system- Deicing systems except right windshield- STROBE and NAV lights- Cockpit emergency lights- VHF 1- NAV/GPS 1- BLEED- Landing lights on short final
This will allow keeping electrical consumption below maximum standby capacity.
All other not necessary equipment can be disconnected.
5 - "GENERATOR" selector ST- BY (RESET if necessary)

3.9 - ELECTRICAL SYSTEM

<div style="display: flex; justify-content: space-between; align-items: center;"> AMBER WARNING LIGHT <div style="border: 1px solid black; padding: 2px 10px; font-weight: bold;">LO VOLT</div> ON </div> <p style="text-align: center; font-weight: bold; margin-top: 5px;">normal functioning on "MAIN GEN"</p>
<p>1 - Voltmeter voltage CHECK</p> <p>2 - If voltage is < 26 Volts, monitor a possible drop or any indication of battery run-down</p> <p style="margin-left: 20px;"><i>In that case :</i></p> <p>3 - Keep the following systems connected :</p> <ul style="list-style-type: none"> - A/P system - Deicing systems except right windshield - STROBE and NAV lights - Cockpit emergency lights - VHF 1 - NAV/GPS 1 - BLEED - Landing lights on short final <p>This will allow keeping electrical consumption below maximum standby capacity.</p> <p>All other not necessary equipment can be disconnected.</p> <p>4 - "GENERATOR" selector ST-BY (RESET if necessary)</p> <p>5 - Voltage and battery charge MONITOR</p>

3.9 - ELECTRICAL SYSTEM

AMBER WARNING LIGHT LO VOLT ON
functioning on "ST-BY GENERATOR"
(after "MAIN GEN" failure) (1/3)

Amber warning lights MAIN GEN and LO VOLT ON
with "GENERATOR" selector on "ST-BY"

- 1 - "GENERATOR" selector **MAIN**
- 2 - "MAIN GENERATOR RESET" push-button **PRESS**

If successful :

- 3 - Disconnect non-essential electrical systems
- 4 - Monitor voltmeter and ammeter

Prepare to SHORTEN FLIGHT

If not successful :

- 5 - "GENERATOR" selector **ST-BY**
- 6 - "ST-BY GENERATOR RESET" push-button **PRESS**

If successful :

- 7 - Disconnect non-essential electrical systems
- 8 - Monitor voltmeter and ammeter

Prepare to SHORTEN FLIGHT

If not successful, both generators failure is confirmed. If possible, return to VMC conditions



3.9 - ELECTRICAL SYSTEM

AMBER WARNING LIGHT LO VOLT ON functioning on "ST-BY GENERATOR" (after "MAIN GEN" failure) (2/3)

9 - "GENERATOR" selector OFF

If conditions allow : VMC and non icing conditions

10 - If altitude \geq 12000 ft : "OXYGEN" switch ON

11 - "ESS BUS TIE" reverse switch **Cover up
EMER position**

In this configuration, only both "ESS BUS" bars and "BUS BAT" bar are directly supplied by the battery

■ Available systems - see Figure 3.9.1

12 - LAND as soon as possible

■ *If use of other systems than essential ones is required :*

- "ESS BUS TIE" reverse switch **NORMAL**

If flight conditions do not allow :

■ 13 - Manually disconnect systems as follows :

- "AIRFRAME DE ICE" switch OFF
- "ICE LIGHT" switch OFF
- "PROP DE ICE" switch OFF
- "R.WINDSHIELD" switch OFF
- "PITOT 2 & STALL HTR" switch OFF
- "L.LDG / TAXI / R.LDG / PULSE SYST" switches OFF
- "STROBE" switch OFF
- "BLEED / AIR COND / FAN FLOW" switches OFF
- "AUX BP" switch OFF
- "FUEL SEL" switch **MAN**
- "AP/TRIMS MASTER" switch OFF
- "EHSI" breaker **PULLED**

3.9 - ELECTRICAL SYSTEM

AMBER WARNING LIGHT LO VOLT **ON**
functioning on "ST-BY GENERATOR"
(after "MAIN GEN" failure) (3/3)

- VHF 1 / NAV 1 / GPS 1 OFF
- MFD OFF
- ADF OFF
- Stormscope switch OFF
- "CD" player OFF
- "INSTR / CABIN / ACCESS" controls OFF
- "GYRO INST" panel, all switches OFF
- Transponder 2 OFF


If icing conditions :

- "PITOT 1 HTR" switch **Checked ON**
- "L.WINDSHIELD" switch **ON**
- Maintain minimum recommended speeds (Chapter 4.5 - "Flight into known icing conditions", Paragraph "Ice protection procedures", Point 3)

If time permits :


- "RADIO + FAN" breaker **PULLED**
- "28 VDC PLUGS" breaker **PULLED**
- "AIR COND" breaker **PULLED**

14 - LAND as soon as possible

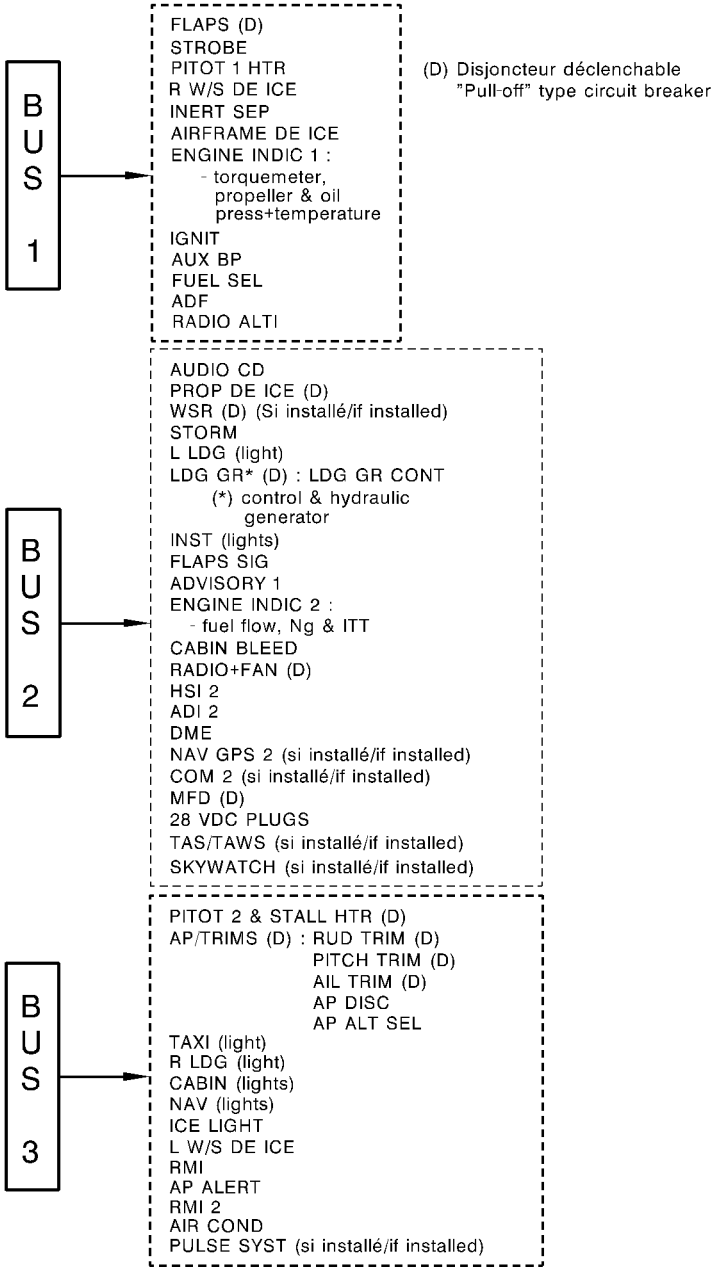

I4246000AAACMA8200

Figure 3.9.1 (1/2) - ELECTRICAL DISTRIBUTION OF BUS BARS

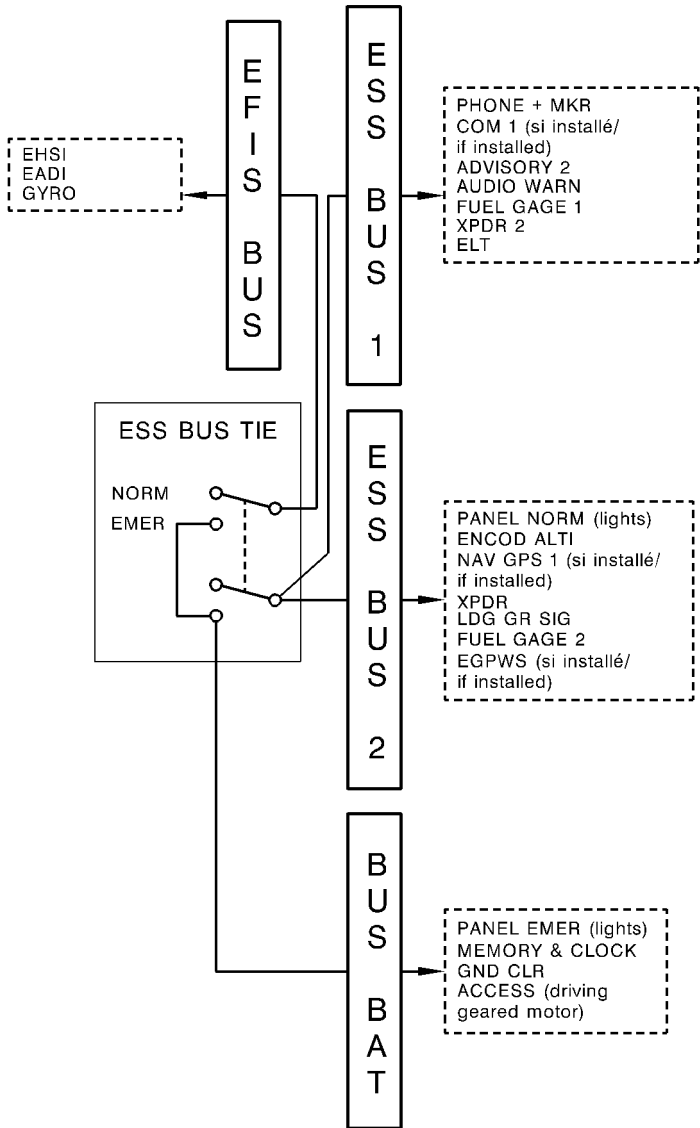

14246000AACMA8300

Figure 3.9.1 (2/2) - ELECTRICAL DISTRIBUTION OF BUS BARS

3.9 - ELECTRICAL SYSTEM

"RADIO MASTER" SWITCH FAILURE

In case of "RADIO MASTER" switch malfunction, leading to the impossibility of energizing the radionavigation equipment :

- 1 - "RADIO FAN" circuit breaker **PULL**
[Circuit breaker panel L.H. (or R.H., if "pilot" door installed) lower corner]

The radionavigation equipment are supplied again and the flight can continue.

However the equipment forced ventilation is no longer available. An excessive use of VHF COM transmitters may reduce their power, so that transmission range will be limited.

INTENTIONALLY LEFT BLANK

3.10 - PRESSURIZATION AND AIR CONDITIONING

RED WARNING LIGHT		CAB PRESS	ON
1 - Pressurization indicator			CHECK
<i>If $\Delta P > 6.2$ psi :</i>			
2 - "BLEED" switch			OFF
3 - EMERGENCY DESCENT (Refer to Chapter 3.6)			
<i>If cabin altitude > 10000 ft :</i>			
4 - Oxygen	Refer to Chapter 3.13		
5 - "BLEED" switch	CHECK AUTO		
6 - "DUMP" switch	CHECK UNDER GUARD		
7 - "RAM AIR" control knob	CHECK PUSHED		
8 - Limit flight altitude to maintain cabin altitude < 12000 ft			
9 - If necessary EMERGENCY DESCENT (Refer to Chapter 3.6)			

CABIN NOT DEPRESSURIZED AFTER LANDING	
ΔP cabin > 0	
1 - "DUMP" switch	ACTUATED
2 - "BLEED" switch	OFF
3 - "RAM AIR" control knob	PULLED if necessary
4 - Wait for complete cabin depressurization before opening the door	

3.10 - PRESSURIZATION AND AIR CONDITIONING

AMBER WARNING LIGHT BLEED OFF ON
<p>Indicates an overpressure at air conditioning pack inlet or a malfunction of the pressure stop and regulating valve (Normal signal if "BLEED" switch is OFF)</p> <p>1 - If necessary CORRECT</p> <p>2 - If possible, reduce power</p> <p>3 - "BLEED" switch OFF</p> <p>4 - "BLEED" switch AUTO</p> <p>5 - If BLEED OFF ON, and if necessary EMERGENCY DESCENT (refer to Chapter 3.6) or continue flight at an altitude < 12000 ft)</p> <p>6 - Continue flight</p>

3.10 - PRESSURIZATION AND AIR CONDITIONING

RED WARNING LIGHT **BLEED TEMP ON**

Indicates overheat of air conditioning pack. Normally this leads to BLEED cutoff and to **BLEED OFF** amber warning light illumination.

Should automatic cutoff occur or not :

- 1 - If possible, reduce power
- 2 - "AIR FLOW" distributor **CABIN**
- 3 - "CABIN TEMP/°C" selector **15°C**
- 4 - "BLEED" switch **OFF**
- 5 - As soon as **BLEED TEMP** OFF, "BLEED" switch **AUTO**

If **BLEED TEMP** and **BLEED OFF** still ON :

- 6 - If necessary EMERGENCY DESCENT - refer to Chapter 3.6 or continue flight at an altitude < 12000 ft
- 7 - Continue flight

3.10 - PRESSURIZATION AND AIR CONDITIONING

RED WARNING LIGHT DOOR ON
<p>Indicates that one of the door latches of the access door and (if installed) of the "pilot" door has not been correctly locked</p> <p><i>On ground, check the correct locking, as well as the latches position of the access door and (if installed) of the "pilot" door</i></p> <p>During flight :</p> <ul style="list-style-type: none">1 - Start a slow descent2 - Decrease cabin ΔP by selecting a higher cabin altitude and maximum cabin rate <p><i>If real failure of one of the doors is noted :</i></p> <ul style="list-style-type: none">3 - "BLEED" switch OFF4 - "DUMP" switch ACTUATED5 - If necessary, undertake an EMERGENCY DESCENT of "IN ROUGH ATMOSPHERE" type (Refer to Chapter 3.6)

3.10 - PRESSURIZATION AND AIR CONDITIONING

AMBER WARNING LIGHT	
VACUUM LO	ON
Suction gage indicator	CHECK
Low vacuum may lead to malfunctioning of leading edge deicing, pressurization and gyroscopic vacuum-operated instruments	MONITOR
If necessary, fly to an altitude \leq 12000 ft and if possible return to VMC conditions	
"BLEED" switch	OFF

3.10 - PRESSURIZATION AND AIR CONDITIONING

DEFOG MALFUNCTION

If moisture starts to quickly cover the inside of the windshield with the distributor already positioned on "DEFOG" :

- 1 - "AIR FLOW" distributor **Set to around a 10 o'clock position**

If moisture continues :

- 2 - "AIR FLOW" distributor **HOT**
- 3 - "L. WINDSHIELD" switch **ON**
- 4 - "R. WINDSHIELD" switch **ON**

If there is no improvement and if the flight safety is engaged :

- 5 - Altitude **≤12000 ft**
- 6 - "BLEED" switch **OFF**

NOTE :

If in flight, the cabin will quickly be depressurized. Therefore, the cabin vertical speed indicator and altimeter indications will rapidly meet those of respectively the aircraft VSI and altimeter.

3.11 - LANDING GEAR AND FLAPS

LANDING GEAR RETRACTION DISCREPANCY

NOTE :

Symptoms have to be considered at the end of the sequence.

A - Symptoms :

Steady red warning light ON **and** 0 to 3 green light(s) ON.

- Actions :

Refer to "EMERGENCY GEAR EXTENSION".

B - Symptoms :

Red warning light flashing **and** 3 green lights OFF.

- Actions :

1 - "LDG GR" circuit breaker **PULL**

If the red warning light goes off :

The flight may be continued without any restriction. Before extending the landing gear, refer to "EMERGENCY GEAR EXTENSION".

If the red warning light becomes steady ON :

"LDG GR" circuit breaker **PUSH**

Refer to "EMERGENCY GEAR EXTENSION".

3.11 - LANDING GEAR AND FLAPS

LANDING GEAR EXTENSION DISCREPANCY

NOTE :

Symptoms have to be considered at the end of the sequence.

- Symptoms

Steady red warning light ON **and** 0 to 3 green light(s) OFF.

or

Red warning light flashing **and** 0 to 3 green light(s) OFF.

- Actions

Refer to "EMERGENCY GEAR EXTENSION".

3.11 - LANDING GEAR AND FLAPS

EMERGENCY GEAR EXTENSION (1/2)

NOTE :

This procedure has to be followed in case of any discrepancy or doubt about the gear extension or retraction.

Maintain IAS ≤ 128 KIAS

- 1 - Landing gear control **DN**
- 2 - "LDG GR" circuit breaker **PULL**
- 3 - Floor hatch **OPEN**
- 4 - By-pass selector **FULLY PULL / LOCKED**

CAUTION

THE ENTIRE EXTENSION OF THE LANDING GEAR MAY TAKE UP TO 110 CYCLES. IT IS MANDATORY TO HAVE A CLEAR HARDENING OF THE MANUAL CONTROL AT THE END OF THE MANEUVER

- 5 - Hand pump **ACTUATE with maximum amplitude**

If landing gear is down and locked (red light not illuminated, three green lights illuminated) :

Continue flight if necessary at a speed **BELOW 178 KIAS**, exit and/or remain outside icing conditions.

Land.

CAUTION

DO NOT ENTER ICING CONDITIONS (THIS COULD ADVERSELY INCREASE DRAG AND WEIGHT DUE TO ICE ACCUMULATION, AND LOCK WHEELS AND STRUTS).

CLIMB PERFORMANCE WILL BE DEGRADED BY 50 %.

INDICATED CRUISE AIRSPEED WILL BE REDUCED COMPARED TO A CLEAN AIRCRAFT, BECAUSE OF THE DRAG.

THIS SHOULD BE TAKEN INTO ACCOUNT WHEN CALCULATING THE AIRCRAFT RANGE.



3.11 - LANDING GEAR AND FLAPS

EMERGENCY GEAR EXTENSION (2/2)

If landing gear does not lock (other than 3 green indicator lights illuminated) :

- 6 - "LDG GR" circuit breaker **PUSH**
- 7 - "CHECK DN" switch **ACTUATE**

If the hardening of the manual lever is marked and if the normal indicating shows 3 green indicator lights or the "CHECK DN" indicating shows 3 green indicator lights :

- 8 - LAND.

If manual extension bar remains soft or if one (or more) green indicator light(s) does(do) not illuminate and upon pressing "CHECK DN", then a gear unlock condition is confirmed. Recycle the landing gear as follows :

- 9 - By-pass selector **UNLOCK / PUSH**
- 10 - Wait a minute.
- 11 - Landing gear control (IAS ≤ 128 KIAS) **UP**

Perform landing gear extension attempts in the NORMAL mode while applying positive load factors during the maneuver as well as skidding.

In case of failure, refer to Chapter 3.7 "EMERGENCY LANDINGS", Paragraph "LANDING WITH UNLOCKED MAIN LANDING GEAR" or Paragraph "LANDING WITH DEFECTIVE NOSE LANDING GEAR".

Indication :

If one main landing gear leg is not in the down position, it is preferable to land with landing gear up (Refer to Chapter 3.7, Paragraph "LANDING WITH GEAR UP").

3.11 - LANDING GEAR AND FLAPS

<div style="display: flex; justify-content: space-between; align-items: center;"> RED WARNING LIGHT <div style="border: 2px solid black; padding: 5px; text-align: center; font-weight: bold;">FLAPS</div> ON </div>
<p>Indicates a dissymmetry of flap deflection. This immediately stops the flap motor and prevents further operation of the flaps</p>
<ol style="list-style-type: none"> 1 - "FLAPS" circuit breaker PULL 2 - Flap control lever UP 3 - SHORTEN flight maintaining airspeeds : <ul style="list-style-type: none"> - $IAS \leq 178$ KIAS for deflections between "UP" and "TO" positions - $IAS \leq 122$ KIAS for deflections greater than "TO" position 4 - For landing, refer to Chapter 3.7, Paragraph "LANDING WITH FLAPS MALFUNCTION".

<h3 style="margin: 0;">FLAPS MALFUNCTION</h3>
<p>In case of blockage of flaps or inoperant flap control lever between "UP" and "LDG" positions, with no flaps warning light illumination:</p>
<ol style="list-style-type: none"> 1 - "FLAPS" circuit breaker PULL 2 - Flap control lever UP 3 - SHORTEN flight maintaining airspeeds : <ul style="list-style-type: none"> - $IAS \leq 178$ KIAS for deflections between "UP" and "TO" positions - $IAS \leq 122$ KIAS for deflections greater than "TO" position 4 - For landing, refer to Chapter 3.7, Paragraph "LANDING WITH FLAPS MALFUNCTION".

INTENTIONALLY LEFT BLANK

3.12 - DEICING SYSTEM

LEADING EDGES DEICING FAILURE

Symptoms : Failure on one of the two pneumatic deicing pulses :

- Ice on wing outboard sections
- Or ice on wing inboard sections and stabilizers
- One of the two cycling green lights is not lit

1 - LEAVE icing conditions as soon as possible

2 - "AIRFRAME DE ICE" switch **OFF**

PROPELLER DEICING FAILURE

Symptoms : - Propeller deicing green light is not lit
- Propeller vibrations

1 - REDUCE power

2 - ACTUATE propeller governor lever to vary RPM within operating range

3 - LEAVE icing conditions as soon as possible

3.12 - DEICING SYSTEM

INERTIAL SEPARATOR FAILURE

- Symptoms : - Warning light is not lit within 30 seconds following "INERT SEP" switch setting ON
- Neither torque drop, nor increase of ITT observed during maneuver

LEAVE icing conditions as soon as possible

WINDSHIELD DEICING FAILURE

- Symptoms : - Windshield being covered uniformly by ice
- No perception of heat when touching deiced section
 - Windshield deicing green light is not lit

Symptoms may result from overheat. In that case :

- 1 - "L.WINDSHIELD" switch **OFF / ON**
when necessary
- 2 - "R.WINDSHIELD" switch **OFF / ON**
when necessary

In case of total failure :

- 1 - "CABIN TEMP/°C" selector **Maxi warm**
- 2 - "AIR FLOW" distributor **HOT**

Before landing wait for a sufficient visibility

3.12 - DEICING SYSTEM

WINDSHIELD MISTING OR INTERNAL ICING

Symptoms : - Mist or ice on windshield internal face

- 1 - "CABIN TEMP/°C" selector **Set to 21°C (12 o'clock position)**
- 2 - "AIR FLOW" distributor **Set to 10 o'clock position**
- 3 - "L. WINDSHIELD" switch **ON**
- 4 - "R. WINDSHIELD" switch **ON**

If not successful, to gain sufficient visibility :

- 5 - "AIR FLOW" distributor **HOT**
- 6 - Manually clean a sufficient visibility area
- 7 - If necessary, clean L.H. side window and conduct a sideslip approach (rudder pedals to the right) in order to get sufficient landing visual references
- 8 - For landing with flaps LDG, maintain :

Weight < 6250 lbs (2835 kg)	Weight > 6250 lbs (2835 kg)
IAS ≥ 90 KIAS	IAS ≥ 95 KIAS

CAUTION

IN CASE OF SIDESLIP APPROACH WITH PEDAL ON THE RIGHT DURING A LONG PERIOD, SELECT R.H. FUEL TANK

3.12 - DEICING SYSTEM

AMBER WARNING LIGHT PITOT 1 PITOT 2 OR STALL HTR ON
<p>Indicates a heating failure of the corresponding probe</p> <p>PITOT 1 Icing conditions may alter airspeed indications on the airspeed indicator</p> <p>1 - AVOID icing conditions</p> <p><i>If it is not possible :</i></p> <p>2 - Perform moderate descent or climb attitudes</p> <p><i>V_{MO} overshooting and stall warning lights are always operating</i></p> <p>PITOT 2 V_{MO} overshoot warning may be altered by icing conditions</p> <p><i>Monitor maximum airspeed ≤ 266 KIAS</i></p> <p>STALL HTR Correct operation of the aural stall warning may be altered by severe or prolonged icing</p> <p><i>MONITOR and MAINTAIN minimum airspeed according to airplane configuration and icing conditions</i></p>

3.13 - MISCELLANEOUS**RUNAWAY OF ONE OF THE THREE ELECTRICAL TRIM TABS**

- 1 - "AP / DISC TRM INT" push button **PRESSED AND HOLD**

The three trim tabs are disconnected and runaway stops

- 2 - "AP / TRIMS MASTER" switch **OFF**

- 3 - "AP / DISC TRM INT" push button **RELEASED**

- 4 - Pitch trim may be used manually

- 5 - Reduce airspeed if necessary to reduce control forces

If pitch trim runaway

- 6 - "AP / TRIMS MASTER" switch **AP OFF**

The pitch trim may be used manually, the two other trim tabs may be used again electrically

If rudder or aileron trim runaway

- 7 - PULL circuit breaker corresponding to the defective trim tab

- 8 - "AP / TRIMS MASTER" switch **ON**

Two other trim tabs may be used again electrically

CRACK IN COCKPIT WINDOW OR WINDOW PANEL

- 1 - Descend slowly

- 2 - Reduce cabin ΔP by selecting a higher cabin altitude and the maximum cabin rate

3.13 - MISCELLANEOUS

EMERGENCY EXIT USE
1 - Check that the anti-theft safety pin has been removed
2 - Lift up the opening handle
3 - Pull emergency exit assembly toward oneself to release it from its recess
4 - Put the emergency exit door inside fuselage or throw it away from the fuselage through the opening
5 - EVACUATE airplane

EMERGENCY BEACON USE (ELT)
<i>Before a forced landing :</i>
1 - On COM VHF 121.5 MHZ or on a known air traffic control frequency, transmit the "MAY DAY" signal if possible
<i>After landing :</i>
2 - "ELT" remote control switch ON (maintain it ON until aid arrives)

3.13 - MISCELLANEOUS

TOTAL COMMUNICATION FAILURE

- 1 - Refer to PARTICULAR TRANSPONDER USES procedures
- 2 - Apply air traffic control procedures in case of communications failure :
 - code 7700 during 1 minute, then
 - code 7600
- 3 - Try to restore communications by using all possible combinations of the headset, micro and loudspeaker

MAIN GYRO HEADING FAILURE

Use standby compass

CAUTION

"L. WINDSHIELD" AND "R. WINDSHIELD" SWITCHES, AS WELL AS AIR CONDITIONING SYSTEM MUST BE SET TO "OFF" BEFORE COMPASS READING

3.13 - MISCELLANEOUS

PARTICULAR TRANSPONDER USES	
1 - Check transponder mode selector	ON or ALT
2 - Codes selector :	7700 EMERGENCY DISTRESS
	7600 COMMUNICATIONS FAILURE
	7500 HIJACKING

ACCIDENTAL SPINS	
<i>(Voluntary spins are prohibited)</i>	
<i>In case of accidental spins</i>	
1 - Control wheel	NEUTRAL : PITCH AND ROLL
2 - Rudder	FULLY OPPOSED TO THE SPIN
3 - Power lever	IDLE
4 - Flaps	UP when rotation is stopped
5 - Level the wings and ease out of the dive	

3.13 - MISCELLANEOUS

OXYGEN USE

WARNING

**SMOKING IS STRICTLY PROHIBITED WHEN THE OXYGEN SYSTEM IS IN USE.
BEFORE USING OXYGEN, REMOVE ANY TRACE OF OIL, GREASE, SOAP AND OTHER FATTY SUBSTANCES (INCLUDING LIPSTICK, MAKE UP, ETC...)**

For front seats

- 1 - Take a mask above the opposite seat (pilot : right side mask ; front passenger : left side mask).
 - Pull the mask out of the stowage cup and fully uncoil the tube.
 - Press the red side vanes together to inflate the harness.
 - Put the mask onto the face and release the red side vanes.

Airplane equipped with MRA005 oxygen masks (Pre-MOD70-0714-35)

- 2 - No smoke in cabin :

Mask regulator control knob **NORMAL**
(100 % as required)

- 3 - Smoke in cabin :

Mask regulator control knob **EMERGENCY**
Smoke goggles **Don and fit to the mask**



3.13 - MISCELLANEOUS

OXYGEN USE (Cont'd)

Airplane equipped with MC10 Smart Mike oxygen masks
(Post-MOD70-0714-35)

4 - No smoke in cabin :

Mask regulator control tab **N (Normal)**
(100 % as required)

Vent valve **Closed**

5 - Smoke in cabin :

Mask regulator control tab **100 %**

"EMERGENCY" control knob **EMERGENCY**

Smoke goggles **Don and fit to the mask**

Vent valve **Open**

All

6 - Oxygen flow indicator on mask hose **Check**

7 - "NORM/MASK" microphone switch **MASK**

8 - Audio selector selection mode **PILOT or ISO**

9 - "PASSENGERS OXYGEN" switch **ON**

10 - Perform an emergency descent to the minimum enroute altitude
and, if possible, below 10000 ft.

For intermediate and rear seats

1 - Take a mask.

2 - Fully uncoil the tube.

3 - Pull on the lanyard cord to pull out the lanyard pin and flow the
oxygen.

4 - Put the mask onto the face.

5 - Check that the green bag inflates.

3.13 - MISCELLANEOUS

AIRSPEED INDICATING SYSTEM FAILURE

Symptoms : erroneous indication in flight

- 1 - "PITOT 1 HTR" switch **CHECK ON**
- 2 - "PITOT 2 & STALL HTR" switch **CHECK ON**

If symptoms persist :

- 3 - "ALTERNATE STATIC" selector **PULL THOROUGHLY**
- 4 - Only use the instruments on the left side of the instrument panel.

If symptoms persist, as well as on the airspeed indicator of the R.H instrument panel, carry out a precautionary approach maintaining an adequate speed.

3.13 - MISCELLANEOUS

FLIGHT INTO SEVERE ICING CONDITIONS

Severe icing conditions, particularly freezing rain and freezing drizzle, can be identified by :

- unusually extensive ice accumulation on the airframe and windshield in areas not normally observed to collect ice,
- accumulation of ice on the upper surface of the wing aft of the protected area.

Procedures for exiting freezing rain or freezing drizzle conditions :

- 1 - Inform Air Traffic Control to exit severe icing conditions by changing the route or the altitude.
- 2 - Avoid any sudden maneuver on flight controls.
- 3 - Do not engage the autopilot.
- 4 - If the autopilot is engaged, hold the control wheel firmly and disengage the autopilot.
- 5 - If an unusual roll response or uncommanded roll control movement is observed, reduce the angle-of-attack.
- 6 - Do not extend flaps when holding in icing conditions. Operation with flaps extended can result in a reduced wing angle-of-attack, with the possibility of ice forming on the upper surface further aft on the wing than normal, possibly aft of the protected area.
- 7 - If the flaps are extended, do not retract them until the airframe is clear of ice.

SECTION 4

NORMAL PROCEDURES

TABLE OF CONTENTS

	Page
4.1 GENERAL	4.1.1
4.2 AIRSPEEDS FOR NORMAL OPERATION	4.2.1
4.3 CHECK-LIST PROCEDURES	4.3.1
PREFLIGHT INSPECTION	4.3.1
BEFORE STARTING ENGINE	4.3.13
STARTING ENGINE USING AIRPLANE POWER	4.3.16
STARTING ENGINE USING EXTERNAL POWER (GPU)	4.3.21
MOTORING	4.3.26
MOTORING FOLLOWED BY AN ENGINE START	4.3.28
AFTER STARTING ENGINE	4.3.30
IN-FLIGHT AVAILABLE OXYGEN QUANTITY	4.3.32
TAXIING	4.3.33
BEFORE TAKEOFF	4.3.34
TAKEOFF	4.3.36
CLIMB	4.3.38
CRUISE	4.3.39
FLAP CONTROL TRANSITION FROM "UP" TO "850"	4.3.40
FLAP CONTROL TRANSITION FROM "850" TO "UP"	4.3.40
DESCENT	4.3.41
BEFORE LANDING	4.3.42
LANDING	4.3.43
GO-AROUND	4.3.44
TOUCH AND GO	4.3.45
AFTER LANDING	4.3.45
SHUT-DOWN	4.3.47
4.4 AMPLIFIED PROCEDURES	4.4.1
PREFLIGHT INSPECTION	4.4.1
BEFORE STARTING ENGINE	4.4.16
STARTING ENGINE USING AIRPLANE POWER	4.4.21
STARTING ENGINE USING EXTERNAL POWER (GPU)	4.4.27
MOTORING	4.4.34

TABLE OF CONTENTS
(Continued)

	Page
MOTORED FOLLOWED BY AN ENGINE START	4.4.37
AFTER STARTING ENGINE	4.4.40
IN-FLIGHT AVAILABLE OXYGEN QUANTITY	4.4.44
TAXIING	4.4.45
BEFORE TAKEOFF	4.4.47
TAKEOFF	4.4.50
CLIMB	4.4.54
CRUISE	4.4.56
FLAP CONTROL TRANSITION FROM "UP" TO "850"	4.4.58
FLAP CONTROL TRANSITION FROM "850" TO "UP"	4.4.59
DESCENT	4.4.60
BEFORE LANDING	4.4.62
LANDING	4.4.64
GO-AROUND	4.4.65
TOUCH AND GO	4.4.67
AFTER LANDING	4.4.68
SHUT-DOWN	4.4.69
4.5 PARTICULAR PROCEDURES	4.5.1
FLIGHT INTO KNOWN ICING CONDITIONS	4.5.1
FLIGHT INTO SEVERE ICING CONDITIONS	4.5.6
FLIGHT UNDER HEAVY PRECIPITATIONS	4.5.8
UTILIZATION ON RUNWAYS COVERED WITH WATER	4.5.8
UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT TAMPED SNOW	4.5.9
UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS	4.5.11
UTILIZATION BY COLD WEATHER (- 0°C to - 25°C) AND VERY COLD WEATHER (- 25°C to - 40°C)	4.5.13
ENVELOPE 1	4.5.14
ENVELOPE 2	4.5.16
ENVELOPE 3	4.5.21
LANDING PROCEDURE WITH STRONG HEADWIND OR CROSSWIND	4.5.23
UTILIZATION ON GRASS RUNWAY	4.5.25
OPERATION IN RVSM CONDITIONS	4.5.26

4.1 - GENERAL

This Section provides procedures for the conduct of normal operation of TBM 850 airplane.

The first part of this Section lists the normal procedures required as a check list.

The amplified procedures are developed in the second part of the Section.

The normal procedures for optional systems are given in Section 9, "Supplements" of the Pilot's Operating Handbook.

INTENTIONALLY LEFT BLANK

4.2 - AIRSPEEDS FOR NORMAL OPERATION

CONDITIONS :		
- Takeoff weight :	6579 lbs (2984 kg)	7394 lbs (3354 kg)
- Landing weight :	6250 lbs (2835 kg)	7024 lbs (3186 kg)
1 Rotation airspeed (V_R)	Depending on weight	
- Flaps TO	(See "Takeoff distances" Chapter 5.9)	
2 Best rate of climb speed (V_Y)		
- Landing gear UP, flaps UP	123 KIAS	124 KIAS
3 Best angle of climb speed (V_X)	95 KIAS	100 KIAS
4 Maximum speed :		
- Flaps TO	178 KIAS	178 KIAS
- Flaps LDG	122 KIAS	122 KIAS
5 Maximum speed with landing gear down	178 KIAS	178 KIAS
6 Maximum landing gear operating speed		
- Extension	178 KIAS	178 KIAS
- Retraction	128 KIAS	128 KIAS
7 Approach speed		
- Flaps LDG	80 KIAS	85 KIAS
8 Maximum operating speed (V_{MO})	266 KIAS	266 KIAS
9 Glide speed (maximum L / D ratio)		
- Landing gear UP, flaps UP	120 KIAS	120 KIAS
10 Maximum inertial separator operating speed	200 KIAS	200 KIAS

INTENTIONALLY LEFT BLANK

4.3 - CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION

(See Figure 4.3.1)

IMPORTANT

- * During outside inspection, visually check inspection doors and airplane general condition.
- * In cold weather, remove even small accumulations of frost, ice or snow from wing, tail and control surfaces.
- * In case of night flight, check good operation of all navigation lights, landing lights, strobe lights and make sure that an emergency lamp is on board.
- * If icing conditions are foreseen, particularly check good functioning of all electrical and pneumatic ice protection systems
- * Check that type and quantity of fuel used for refueling are correct.
- * Remove covers on :
 - pitots (2)
 - static ports (3)
 - engine air inlet and propeller locking (1).
- * Remove tie-downs.
- * Refer to Section 8 for quantities, products and specifications of products and materials currently used.



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

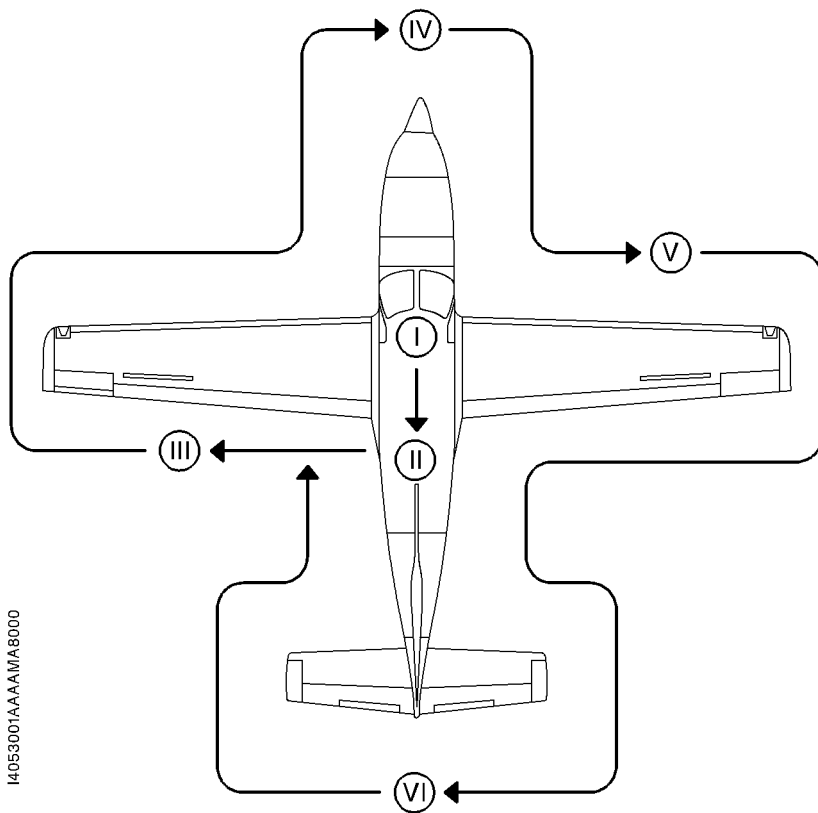


Figure 4.3.1 - PREFLIGHT INSPECTION



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

A - INSIDE INSPECTIONS**Cockpit** (1)

- CRASH lever **UP**
- 1 - ELECTRIC POWER panel
 "SOURCE" selector **OFF**
 "GENERATOR" selector **MAIN**
- 2 - ENGINE START panel
 "IGNITION" switch **AUTO or OFF**
 "STARTER" switch **OFF**
- 3 - EXT LIGHTS panel
 All switches **OFF**
- 4 - GYRO INST panel
 All switches **OFF**
- 5 - Breakers panel
 All breakers **ENGAGED**
- 6 - DE ICE SYSTEM panel
 All switches **OFF**
- 7 - Landing gear control **DN**
- 8 - Landing gear emergency control
 Lever **PULLED DOWN**
 By-pass selector **PUSHED**
 Door **IN PLACE**
- 9 - "AP / TRIMS MASTER" switch **OFF**
- 10 - "RADIO MASTER" switch **OFF**



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 11 - ECS panel
 - "BLEED" switch **OFF**
 - "AIR COND" switch **OFF**
 - "DUMP" switch **GUARDED**
- 12 - "RAM AIR" control knob **PUSHED**
- 13 - Fuel
 - "FUEL SEL" selector **MAN**
 - "AUX BP" switch **OFF**
 - Tank selector **L or R**
- 14 - ELT **ARM**
- 15 - Flight control lock **REMOVED / STOWED**
- 16 - Flight controls **Deflections checked**
- 17 - Parking brake **SET**
- 18 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION
WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX. RPM**
- Condition lever **CUT OFF**
- 19 - Flaps control **UP**



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 20 - BAT BUS power supply
 - Stop watch **CHECKED**
 - Access lighting **CHECKED**
 - Emergency lighting **CHECKED**

CAUTION**BEFORE SELECTING SOURCE, CHECK :**

- 21 - "IGNITION" switch AUTO or OFF**
- 22 - "STARTER" switch OFF**
- 23 - Landing gear control DN**

- 24 - "SOURCE" selector **BAT or GPU**
- 25 - Voltage **CHECK**
 - BAT **> 25 Volts**
 - GPU **≈ 28 Volts**
- 26 - EXT LIGHTS panel
 - "LTS TEST" push button **PRESS**
(3 green lamps "L.LDG / TAXI / R.LDG" ON)
 - "L.LDG / TAXI / R.LDG" switches **ON**
(3 green lamps ON)
 - "L.LDG / TAXI / R.LDG" switches **OFF**
- 27 - Fuel gages
 - Operation / quantity **CHECK**
- 28 - ADVISORY PANEL
 - Test 1 **ALL WARNING LIGHTS ON**
 - Test 2 **ALL WARNING LIGHTS ON**



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 29 - Oxygen emergency
 system **WARNING LIGHT** OXYGEN **OFF**
- 30 - INT LIGHTS panel **CHECK**
- 31 - ECS panel
 - "LT TEST" push button **PRESS**
(amber indicator light ON)
- 32 - Flaps **LDG**
- 33 - Landing gear panel **Warning lights : 3 GREEN ON**
Test 1, then 2 : RED ON + 3 GREEN ON
- 34 - "PITOT 1 HTR" switch **ON**
WARNING LIGHT PITOT 1 **OFF**
- 35 - "PITOT 2 & STALL HTR" switch **ON**
WARNING LIGHTS PITOT 2 **OFF**
STALL HTR
- "PITOT 1 HTR" switch **OFF**
- "PITOT 2 & STALL HTR" switch **OFF**
- 36 - DE ICE SYSTEM panel
 - "LTS TEST" push button **PRESS**
(All green lights ON)

WARNING

**DO NOT TOUCH PITOTS NOR STALL WARNING VANE.
 THEY COULD BE HOT ENOUGH TO BURN SKIN**



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 37 - EXT LIGHTS panel
 - "STROBE" **ON**
 - "NAV" **ON**
 - "ICE LIGHT" **ON**

From outside the airplane, check operation of all lights and the stall warning horn

- 38 - Reentering the airplane
 - EXT LIGHTS panel **ALL SWITCHES OFF**
 - DE ICE SYSTEM panel **ALL SWITCHES OFF**
- 39 - "SOURCE" selector **OFF**

Cabin (II)

- 1 - Cabin fire extinguisher **CHECK**
(Pressure / Attachment)
- 2 - Seats / belts **CHECK**
- 3 - Windows **CHECK**
(General condition / No crack)
- 4 - Emergency exit **CLOSED / LOCKED**
Anti-theft safety **REMOVE / STOW**
- 5 - Baggage compartment **STRAPS IN PLACE**
- 6 - Partition net **IN PLACE**
- 7 - Doors operation **CHECK**
- 8 - Stairs condition **CHECK**
(Condition / Play)



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

B - AIRPLANE OUTSIDE

L.H. wing (III)

- 1 - Flap **CHECK**
(Condition / Play)
- 2 - Aileron and trim / Spoiler **CHECK**
(Condition / Free movement / Deflection)
- 3 - Trailing edge static discharger **CHECK**
(Condition / Attachment)
- 4 - Wing tip / nav. lights /
Strobe / landing light **Condition - CHECK**
- 5 - OAT probe **Condition - CHECK**
- 6 - Fuel tank **CAP CLOSED / LOCKED**
- 7 - Fuel tank air vent **Unobstructed - CHECK**
- 8 - External pitot (IAS) **Condition - CHECK**
- 9 - Internal pitot (V_{MO}) **Condition - CHECK**
- 10 - Wing lower surface **CHECK**
(No leak)
- 11 - Wing deicer boots **CHECK**
(Condition / Attachment)
- 12 - Fuel tank drain (two on each wing) **DRAIN**
(Fuel free of water and contamination)



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 13 - L.H. main landing gear
 - Shock absorber / doors / tire / wheel well **CHECK**

Fuselage forward section (IV)

- 1 - Forward compartment
 - Inside **CONTROLLED**
 - Door **CLOSED / LOCKED**
- 2 - GPU door **CLOSED (If not used)**
- 3 - Fuel circuit drain **DRAIN (Fuel free of water and contamination)**
 - Filter contamination indicator **CHECK**
- 4 - L.H. exhaust stub **CHECK (Condition / No crack)**
- 5 - Upper engine cowls **OPEN**
 For the first flight of the day :
 - Oil cap **CLOSED / LOCKED**
 - Engine oil level **CHECK**
 - Fuel pipes **CHECK (No leak, deterioration, wear)**
- 6 - Engine cowls **Condition - CHECK CLOSED / LOCKED**
- 7 - Air inlets
 - Main **No crack - UNOBSTRUCTED**
 - Lateral / upper **UNOBSTRUCTED**



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 8 - Propeller and spinner **CHECK**
(No nicks, cracks or oil leaks / Attachment)
- 9 - Nose gear
 - Landing light / shock absorber / doors /
tire / wheel well **CHECK**
- 10 - R.H. exhaust stub **CHECK**
(Condition / No cracks)

R.H. wing (V)

- 1 - Fuel tank drain (two on each wing) **DRAIN**
(Fuel free of water and contamination)
- 2 - Main landing gear
 - Shock absorber / doors /
tire / wheel well **CHECK**
- 3 - Wing deicer boots **CHECK**
(Condition / Attachment)
- 4 - Stall warning **CHECK**
(Condition / Deflection)
- 5 - Wing lower surface **CHECK**
(No leaks)
- 6 - Fuel tank **CAP CLOSED / LOCKED**
- 7 - Fuel tank air vent **Unobstructed - CHECK**
- 8 - Wing tip / nav. light /
strobe / landing light **Condition - CHECK**
- 9 - Trailing edge static discharger **CHECK**
(Condition / Number / Attachment)



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 10 - Aileron / spoiler **CHECK**
(Condition / Free movement / Deflection)
- 11 - Flap **CHECK**
(Condition / Play)
- 12 - Rear R.H. karman **Oxygen cylinder open**
- 13 - Oxygen pressure **CHECK**

Fuselage rear section / Empennages (VI)

- 1 - ELT **OFF**
- 2 - Static pressure ports **CLEAN - CHECK**
- 3 - Ventral fins **CHECK**
(Attachment condition)
- 4 - Inspection door under fuselage **CLOSED - CHECK**
(Attachments)
- 5 - Horizontal stabilizer
deicer boots (R.H. side) **CHECK**
(Condition / Attachments)
- 6 - Elevator and trim **CHECK**
(Condition / Deflection free movement / Trim position)
- 7 - Static dischargers **CHECK**
(Condition)
- 8 - Vertical stabilizer deicer boots **CHECK**
(Condition / Attachments)
- 9 - Rudder and trim **CHECK**
(Condition / Trim position)



CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 10 - Static dischargers **CHECK (Condition)**
- 11 - Tail cone **Condition - CHECK**
- 12 - Static pressure ports **Clean - CHECK**
- 13 - Rear baggage compartment
 - Inside **CONTROLLED**
 - Door **CLOSED / LOCKED**

CHECK-LIST PROCEDURES

BEFORE STARTING ENGINE (1/3)

CAUTION

"BLEED" SWITCH "AUTO" MAY CAUSE OVERTEMPERATURE OR ABNORMAL ACCELERATION AT START

CAUTION

MAKE SURE THAT "MAN OVRD" CONTROL IS "OFF" TO AVOID OVERTEMPERATURE RISKS AT START

- 1 - Preflight inspection **COMPLETED**
- 2 - Cabin access door **CLOSED / LOCKED**
- 3 - "Pilot" door (if installed) **CLOSED / LOCKED**
- 4 - Baggage **STOWED**
- 5 - Parking brake **SET**
- 6 - Weight and balance **COMPUTED / CHECKED**
- 7 - Pilot seat and R.H. front seat (if occupied)
 - Height adjustment **Maximum UP**
 - Fore and aft adjustment ... **ADJUST and CHECK LOCKING**
 - Height adjustment **ADJUST**
- 8 - R.H and L.H. pedals **ADJUSTED**
- 9 - Belts and harnesses (Pilot and passengers) **FASTENED**
- 10 - Crash lever **UP**
- 11 - Oxygen supply **Available for the planned flight**
 (see tables of paragraph "IN-FLIGHT AVAILABLE OXYGEN QUANTITY" and Chapter 7.10 for a FAR 135 type operation)



CHECK-LIST PROCEDURES

BEFORE STARTING ENGINE (2/3)

- 12 - "OXYGEN" switch ON
- 13 - "PASSENGERS OXYGEN" switch OFF
- 14 - Copilot and pilot masks **Press push-button**
"PRESS TO TEST" : the blinker shall turn red momentarily, then turns transparent
- 15 - "NORMAL/MASK" micro inverter **NORMAL**
- 16 - "IGNITION" switch **AUTO or OFF**
- 17 - "STARTER" switch **OFF**
- 18 - Landing gear control **DN**
- 19 - "RADIO MASTER" switch **ON**
- 20 - RADIO VHF1 **ON - ADJUSTED**
- 21 - Authorization for engine starting **ASKED**
- 22 - Fuel flow totalizer/computer **CHECKED - ADJUSTED**
- 23 - "SOURCE" selector **BAT (or GPU)**
- 24 - Passengers briefing **AS REQUIRED**
- 25 - Access door and
(if installed) "pilot" door **WARNING LIGHT**

DOOR

OFF
- 26 - Fuel
 - Gages **CHECKED**
 - Tank selector **L or R - CHECKED**



CHECK-LIST PROCEDURES

BEFORE STARTING ENGINE (3/3)

- 27 - Fuel flowmeter totalizer **CHECKED - ADJUSTED**
- 28 - Engine instruments **CHECK**
- 29 - ITT TEST **CARRY OUT**
- 30 - EXT LIGHTS panel
 - "STROBE" **AS REQUIRED**
- 31 - In case of night flight
 - INT LIGHTS panel : "INSTR" + "PANEL" **ADJUSTED**
 - Navigation lights **ON**
 - Flashlight (if necessary) **IN PLACE**

CHECK-LIST PROCEDURES

**STARTING ENGINE USING AIRPLANE POWER
(1/5)**

CAUTION

BEFORE SELECTING SOURCE, CHECK :

- 1 - "IGNITION" switch AUTO or OFF**
- 2 - "STARTER" switch OFF**
- 3 - "INERT SEP" switch OFF**
- 4 - Landing gear control DN**

5 - ELECTRIC POWER panel

- "SOURCE" selector **BAT**
- Voltage **CHECKED**
> 25 Volts

6 - Engine controls

- "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX RPM**
- Condition lever **CUT OFF**



CHECK-LIST PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (2/5)**

- 7 - FUEL panel
 - "AUX BP" switch **ON**
 - WARNING LIGHT AUX BP ON **ON**
 - WARNING LIGHT FUEL PRESS **OFF**
 - Fuel pressure indicator **Green sector**

8 - Propeller **AREA CLEAR**

- 9 - ENGINE START panel
 - "IGNITION" switch **AUTO**
 - "STARTER" switch **ON**
 - WARNING LIGHTS STARTER **FLASHING**
 - IGNITION **ON**

NOTE :
The utilization of the starter is bound by limitations mentioned in Chapter 2.4 "STARTER OPERATION LIMITS".

- Ng \simeq 13 %
 - Condition lever **LO / IDLE**

Monitor increase of :
- ITT **(max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.)**

- Ng
- Oil pressure WARNING LIGHT OIL PRESS **OFF**

- 10 - "STARTER" switch **OFF**
Check Ng > 52 %



CHECK-LIST PROCEDURES

**STARTING ENGINE USING
 AIRPLANE POWER (3/5)**

- 11 - Condition lever HI / IDLE
 - 12 - Engine instruments **CHECK : Ng \simeq 69 % (\pm 2 %)**
 (Oil pressure / Oil temperature / ITT = green sector)
 - 13 - FUEL panel
 - "AUX BP" switch **AUTO**
- | | | | |
|------------------------------------|---------------|-----------|-----|
| | WARNING LIGHT | AUX BP ON | OFF |
| 14 - Generator WARNING LIGHT | | MAIN GEN | OFF |
- Battery ammeter **RESET if necessary**
CHARGE CHECKED
 - Battery voltage **CHECKED**
(V \simeq 28 Volts)

CAUTION

IF 10 SECONDS AFTER HAVING POSITIONED CONDITION LEVER TO "LO / IDLE" THERE IS NO IGNITION OR IF DURING IGNITION SEQUENCE, OVERTEMPERATURE INDICATION APPEARS (MAX. ITT : 870°C FOR MORE THAN 20 SECONDS - 1000°C FOR MORE THAN 5 SECONDS),

INTERRUPT STARTING PROCEDURE :

Condition lever **CUT OFF**

"IGNITION" switch **OFF (or AUTO)**

Wait ITT < 850°C, then :

"STARTER" switch **OFF**

BEFORE ANY RESTARTING ATTEMPT, CARRY OUT A MOTORING (Refer to paragraph "MOTORING")



CHECK-LIST PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (4/5)**

CAUTION

**IF ENGINE STAGNATES,
INTERRUPT STARTING PROCEDURE :**

- Condition lever CUT OFF
- "IGNITION" switch OFF (or AUTO)
- "STARTER" switch OFF

WAIT FOR 1 MINUTE (Refer to Chapter 2.4 "STARTER OPERATION LIMITS"), THEN TRY TO RESTART

ENGINE START panel

- "IGNITION" switch **AUTO**
- "STARTER" switch **ON**

WARNING LIGHTS



FLASHING

WARNING LIGHTS



ON

Ng ≈ 13 %

- Condition lever **HI / IDLE**

Monitor increase of :

- ITT (max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.)
- Ng

- Oil pressure WARNING LIGHT



OFF




CHECK-LIST PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (5/5)**

Ng \simeq 50 %

- "STARTER" switch OFF

WARNING LIGHTS

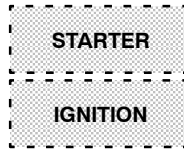

OFF

Engine instruments **CHECK Ng increasing to 69 % (\pm 2 %)**
(Oil pressure / ITT = green sector)

NOTE :

This behaviour should only be observed with outside low temperature (IOAT < 0 °C), cold engine.

This procedure may be used for the first starting of the day.

CHECK-LIST PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (1/5)**

1 - GPU **CONNECTED**

CAUTION

BEFORE SELECTING SOURCE, CHECK :

- 2 - "IGNITION" switch **AUTO or OFF**
- 3 - "STARTER" switch **OFF**
- 4 - "INERT SEP" switch **OFF**
- 5 - Landing gear control **DN**

6 - "SOURCE" selector **GPU**

WARNING LIGHT

GPU

ON

WARNING LIGHT

BAT OFF

ON

- Voltmeter **VOLTAGE CHECKED**
(V ≈ 28 Volts)

7 - Engine controls

- "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX RPM**
- Condition lever **CUT OFF**



CHECK-LIST PROCEDURES

**STARTING ENGINE USING
 EXTERNAL POWER (GPU) (2/5)**

- 8 - FUEL panel
 - "AUX BP" switch ON

WARNING LIGHTS	AUX BP ON	ON
	FUEL PRESS	OFF

- Fuel pressure indicator CHECK

- 9 - Propeller AREA CLEAR

- 10 - ENGINE START panel
 - "IGNITION" switch AUTO
 - "STARTER" switch ON

WARNING LIGHTS	STARTER	FLASHING
	IGNITION	ON

NOTE :
 The utilization of the starter is bound by limitations mentioned in Chapter 2.4 "STARTER OPERATION LIMITS".

- Ng \approx 13 %
 - Condition lever LO / IDLE

Monitor increase of :
 - ITT (max. ITT : 870°C for 20 seconds max.
 1000°C for 5 seconds max.)

- Ng
- Oil pressure WARNING LIGHT

WARNING LIGHT	OIL PRESS	OFF
---------------	-----------	-----



CHECK-LIST PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (3/5)**

11 - "SOURCE" selector **BAT**

WARNING LIGHT **BAT OFF** OFF

12 - Propeller governor lever **FEATHER**

13 - GPU **HAVE IT DISCONNECTED**

WARNING LIGHT **GPU** OFF

14 - Condition lever **HI / IDLE**

15 - Propeller governor lever **MAX. RPM**

16 - Engine instruments **CHECK : Ng ≈ 69 % (± 2 %)**
(Oil pressure / Oil temperature / ITT = green sector)

17 - FUEL panel
- "AUX BP" switch **AUTO**

WARNING LIGHT **AUX BP ON** OFF

18 - Generator WARNING LIGHT **MAIN GEN** OFF

- Battery ammeter **RESET if necessary**
CHARGE CHECKED
- Battery voltage **CHECKED**
(V ≈ 28 Volts)



CHECK-LIST PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (4/5)**

CAUTION

IF 10 SECONDS AFTER HAVING POSITIONED CONDITION LEVER TO "LO / IDLE" THERE IS NO IGNITION OR IF DURING IGNITION SEQUENCE, OVERTEMPERATURE INDICATION APPEARS (MAX. ITT : 870°C FOR MORE THAN 20 SECONDS - 1000°C FOR MORE THAN 5 SECONDS),

INTERRUPT STARTING PROCEDURE :

Condition lever CUT OFF

"IGNITION" switch OFF (or AUTO)

Wait ITT < 850°C, then :

"STARTER" switch OFF

BEFORE ANY RESTARTING ATTEMPT, CARRY OUT A MOTORING (Refer to paragraph "MOTORING")

CAUTION

IF ENGINE STAGNATES,

INTERRUPT STARTING PROCEDURE :

Condition lever CUT OFF

"IGNITION" switch OFF (or AUTO)

"STARTER" switch OFF

WAIT FOR 1 MINUTE (Refer to Chapter 2.4 "STARTER OPERATION LIMITS"), THEN TRY TO RESTART



CHECK-LIST PROCEDURES

STARTING ENGINE USING EXTERNAL POWER (GPU) (5/5)

ENGINE START panel

- "IGNITION" switch **AUTO**
- "STARTER" switch **ON**

WARNING LIGHTS

STARTER

FLASHING

IGNITION

ON

Ng \simeq 13 %

- Condition lever **HI / IDLE**

Monitor increase of :

- ITT (max. ITT : 870°C for 20 seconds max.
 1000°C for 5 seconds max.)
- Ng

- Oil pressure WARNING LIGHT

OIL PRESS

OFF

Ng \simeq 50 %

- "STARTER" switch **OFF**

WARNING LIGHTS

STARTER

OFF

IGNITION

Engine instruments **CHECK Ng increasing to 69 % (\pm 2 %)**
(Oil pressure / ITT = green sector)

NOTE :

This behaviour should only be observed with outside low temperature (IOAT < 0 °C), cold engine.

This procedure may be used for the first starting of the day.

CHECK-LIST PROCEDURES

MOTORING (1/2)

CAUTION

AFTER ANY STARTING INTERRUPT PROCEDURE :

- WAIT FOR ENGINE TOTAL SHUT-DOWN
- WAIT AT LEAST 30 SECONDS BEFORE INITIATING A MOTORING

- 1 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
 MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
 POSITION**

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX. RPM**
- Condition lever **CUT OFF**
- 2 - Fuel
 - Tank selector **L or R**
 - "AUX BP" switch **ON**

WARNING LIGHTS	AUX BP ON	ON
	FUEL PRESS	OFF



CHECK-LIST PROCEDURES

MOTORING (2/2)

3 - "IGNITION" switch OFF
 WARNING LIGHT IGNITION OFF

To clear fuel and vapor internally trapped :

4 - "STARTER" switch ON
 during 15 sec maxi
 WARNING LIGHT STARTER FLASHING

To cool engine following shut-down in high temperature environment :

4 - "STARTER" switch ON
 during 30 sec
 WARNING LIGHT STARTER FLASHING

5 - "STARTER" switch OFF
 WARNING LIGHT STARTER OFF

6 - FUEL panel
 - "AUX BP" switch OFF
 WARNING LIGHTS AUX BP ON OFF
FUEL PRESS ON

CHECK-LIST PROCEDURES

**MOTORING FOLLOWED BY AN ENGINE START
(1/2)**

Within starter operating limits (continuous max. 1 minute), it is possible to initiate a starting procedure from a motoring procedure.

- 1 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION
**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE
(Flight idle stop)**
- Propeller governor lever **MAX. RPM**
- Condition lever **CUT OFF**
- 2 - Fuel
 - Tank selector **L or R**
 - "AUX BP" switch **ON**

WARNING LIGHTS	AUX BP ON	ON
	FUEL PRESS	OFF

- 3 - "IGNITION" switch **OFF**
- 4 - "STARTER" switch **ON during 15 sec**
- 5 - After 15 seconds :
 - "IGNITION" switch **AUTO**
 - Ng **Check at 13 % minimum**
 - Condition lever **LO / IDLE**



CHECK-LIST PROCEDURES

MOTING FOLLOWED BY AN ENGINE START (2/2)

- 6 - Monitor increase of :
 - ITT (max. ITT : 870°C for 20 seconds max.
 1000°C for 5 seconds max.)

- Ng
- Oil pressure WARNING LIGHT OIL PRESS OFF

- Ng \simeq 50 % stable
- "STARTER" switch OFF

	WARNING LIGHTS	STARTER	OFF
		IGNITION	

- 7 - Engine instruments CHECK : Ng > 52 %
 (Oil pressure / ITT = green sector)

- 8 - Condition lever HI / IDLE

- 9 - Engine instruments CHECK : Ng \simeq 69 % (\pm 2 %)
 (Oil pressure / Oil temperature / ITT = green sector)

- 10 - FUEL panel
 - "AUX BP" switch AUTO

	WARNING LIGHT	AUX BP ON	OFF
--	---------------	--	-----

- 11 - Generator WARNING LIGHT MAIN GEN OFF

	RESET if necessary
- Battery ammeter	CHARGE CHECKED
- Battery voltage	CHECKED
	(V \simeq 28 Volts)

CHECK-LIST PROCEDURES

AFTER STARTING ENGINE (1/3)

1 - GYRO INST panel
 - All switches **ON**
 Pull on the caging knobs when starting the ADI(s).

2 - Gyroscopic suction gage indicator **GREEN SECTOR**
WARNING LIGHT VACUUM LO **OFF**

3 - GYRO SLAVING selector **SLAVE**

4 - DE ICE SYSTEM panel
 - "PROP DE ICE" switch **ON**
Check illumination of the green light located above the switch
 - "PROP DE ICE" switch **OFF**
 - "L.WINDSHIELD" switch **ON**
 - "R.WINDSHIELD" switch **ON**

Check illumination of the green light located above the switch (except if hot conditions)

- "L.WINDSHIELD" switch **OFF**
 - "R.WINDSHIELD" switch **OFF**

Increase power so as to get Ng ≥ 80% to check AIRFRAME DE ICE

- "AIRFRAME DE ICE" switch **ON**
Visually check functioning of deicer boots during 1 total cycle and illumination of the two green lights located above the switch
 - "AIRFRAME DE ICE" switch **OFF**
 - "INERT SEP" switch **ON**

WARNING LIGHT INERT SEP **ON**
 after 30 seconds



CHECK-LIST PROCEDURES

AFTER STARTING ENGINE (2/3)

- 5 - "GENERATOR" selector
 - On "MAIN" **Voltage and current checked**
when current ≤ 50 amps :
 - on "ST-BY" **Voltage and current checked**
(reset if necessary)
 - then again on "MAIN"
- 6 - "FUEL SEL" switch **AUTO**
- 7 - "SHIFT" push-button **PRESS**
Verify rotation of FUEL TANK SELECTOR
- 8 - Flaps **UP**

WARNING

**IT IS PROHIBITED TO SET FLAPS CONTROL LEVER TO
"850" POSITION ON GROUND AND FOR TAKEOFF**

- 9 - ECS panel
 - "BLEED" switch **AUTO**
 - "FAN FLOW" switch **As required**
 - "AIR COND" switch **ON**
 - "CABIN TEMP/°C" selector **ADJUST**
 - "AIR FLOW" distributor **AS REQUIRED**
 - Cabin altitude selector **Airfield altitude - 500 feet**
 - Cabin rate selector **ARROW UPWARDS**
(at the halfway post)
- 10 - "RADIO MASTER" switch **ON**
 - VHF/VOR/GPS/TAS/
EGPWS/WX means (if installed) **ADJUSTED - TESTED**
- 11 - "EFIS MASTER" switch **ON**
 - "TEST / CMPST" button **PRESS**
 - "TST / REF" button **PRESS at least 3 seconds**



CHECK-LIST PROCEDURES

AFTER STARTING ENGINE (3/3)

- 12 - "AP / TRIMS MASTER" switch **ON**
- Preflight test button **PRESS**
- "AP / TRIMS MASTER" operation **CHECK**
- Pitch trim **UP / DN, then ADJUSTED**
- Yaw trim **L / R, then ADJUSTED**
- Roll trim **L / R, then ADJUSTED**

CHECK-LIST PROCEDURES

IN-FLIGHT AVAILABLE OXYGEN QUANTITY
 (Crew oxygen masks in NORMAL mode)

Oxygen pressure **Read**

Outside air temperature (IOAT) **Read**

1 - Determine the usable oxygen percent using the chart Figure 4.3.2.

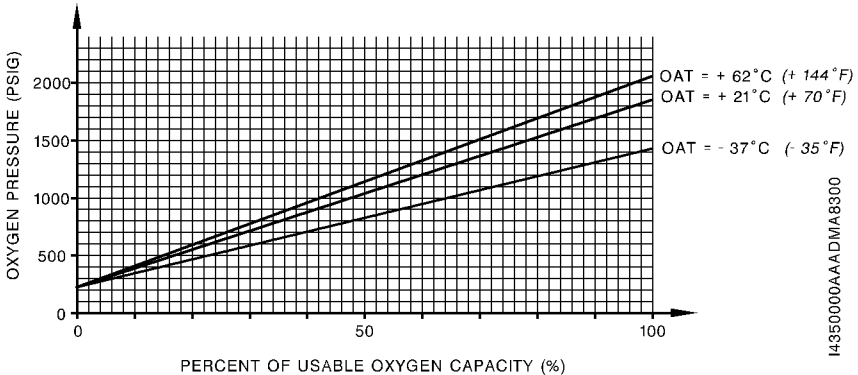


Figure 4.3.2

2 - Determine the oxygen duration in minutes by multiplying the values read on table Figure 4.3.3 by the percent obtained with the chart Figure 4.3.2.

Number of passengers	Duration : Passengers, plus 1 pilot	Duration : Passengers, plus 2 pilots
0	226	113
1	162	94
2	127	81
3	104	71
4	88	65

Figure 4.3.3

CHECK-LIST PROCEDURES

TAXIING			
1 - "TAXI" light			ON
2 - "INERT SEP" switch			CHECKED ON
	CHECK WARNING LIGHT	INERT SEP	ON
3 - Passenger briefing			AS REQUIRED
4 - Parking brake			RELEASED
	WARNING LIGHT	PARK BRAKE	OFF
5 - L.H. and R.H. seats brakes			CHECKED
6 - Nose wheel steering			CHECKED
7 - Power lever			AS REQUIRED
CAUTION AVOID USING REVERSE DURING TAXIING			
8 - Flight instruments			CHECK
9 - Advisory panel			CHECK

CHECK-LIST PROCEDURES

BEFORE TAKEOFF (1/2)

1 - Parking brake SET

WARNING LIGHT

PARK BRAKE

ON

2 - Condition lever HI / IDLE

[Ng : 68 % (± 2 %)]

3 - Propeller governor lever FEATHER twice,
then MAX. RPM

4 - Fuel

- Gages CHECK
(Quantity / Symmetry)

- "FUEL SEL" CHECK AUTO

- "AUX BP" CHECK AUTO

5 - Flaps TO

6 - DE ICE SYSTEM panel

- "AIRFRAME DE ICE" switch As required

- "PROP DE ICE" switch As required

If runway is in good condition, without icing conditions :

- "INERT SEP" switch OFF

WARNING LIGHT

INERT SEP

OFF

If there is standing water or other contamination on the runway :

- "INERT SEP" switch Leave ON

WARNING LIGHT

INERT SEP

ON

- "L.WINDSHIELD" switch As required

- "R.WINDSHIELD" switch As required



CHECK-LIST PROCEDURES

BEFORE TAKEOFF (2/2)

- "PITOT 1 HTR" switch ON
- "PITOT 2 & STALL HTR" switch ON
- 7 - Advisory panel CHECK
 All warning lights OFF,
 except

PARK BRAKE

 ON
- and, if used

INERT SEP

 ON
- 8 - Electronic equipment /
 Flight instruments / Radar (if installed) CHECK / ADJUST
- 9 - Engine instruments CHECK
- 10 - Pilot's / Passengers' belts CHECK
- 11 - Flight controls DEFLECTIONS CHECKED
- 12 - Trims
 - Pitch ADJUSTED
 - Yaw ADJUSTED
 - Roll ADJUSTED
- 13 - Parking brake RELEASED
 WARNING LIGHT

PARK BRAKE

 OFF
- 14 - "STROBE" switch ON

CAUTION
DO NOT TAKE OFF IF BATTERY CHARGE > 50 Amperes

CHECK-LIST PROCEDURES

TAKEOFF (1/2)

WHEN LINED UP

CAUTION

- IF HEAVY PRECIPITATION, TURN IGNITION AND INERT SEP ON.
- IF ICING CONDITIONS ARE FORESEEN, REFER TO CHAPTER 4.5, PARAGRAPH "FLIGHT INTO KNOWN ICING CONDITIONS"

- 1 - Heading - HSI - Stand-by compass **CHECK**
 - Altimeter setting **CHECK**
- 2 - Horizon **Attitude + 2° - CHECK**
- 3 - Lights
 - "L.LDG / TAXI / R.LDG" **ON**
- 4 - Engine instruments **CHECK**
(ITT = green sector)
- 5 - Advisory panel **CHECK**
All warning lights OFF,
 - except** INERT SEP **if used**
 - except** IGNITION **if used**
- 6 - Radar switch (if installed) **As required**
- 7 - PROP O' SPEED GOVERNOR TEST
 - Increase power until propeller RPM reaches 1900 RPM
 - PROP O' SPEED **TEST : Maintain engaged**
 - Observe that propeller RPM decreases by 50 to 250 RPM
 - PROP O' SPEED **TEST : Release**
 - Check that propeller RPM increases by a minimum of 50 RPM when compared to minimum value during PROP O'SPEED test.



CHECK-LIST PROCEDURES

TAKEOFF (2/2)

- 8 - Brakes **RELEASED**
- 9 - Power lever **TRQ = 100 %**
- 10 - Takeoff **ROTATION : See "Takeoff distances" Chapter 5.9**
 - Normal takeoff **ATTITUDE : 7.5°**
 - Short takeoff
 - . Weight < 6579 lbs (2984 kg) **ATTITUDE : 15°**
 - . Weight > 6579 lbs (2984 kg) **ATTITUDE : 12.5°**
- 11 - Vertical speed indicator **POSITIVE**
- 12 - Brakes **APPLY (Briefly)**
- 13 - Landing gear control (IAS < 128 KIAS) **UP**
At sequence end, check : All warning lights OFF
- 14 - Initial climb speed Weight < 6579 lbs (2984 kg): **110KIAS**
Weight ≥ 6579 lbs (2984 kg): **115KIAS**
- 15 - Flaps **UP**
- 16 - Flap control **Only when flaps are confirmed UP**
850
- 17 - Power lever **TRQ =121.4 %**
- 18 - Climb speed (recommended) **130 KIAS**
- 19 - "YAW DAMPER" push-button **ON**
- 20 - Lights
 - "TAXI" **OFF**
 - "L.LDG / R.LDG" **AS REQUIRED**

CHECK-LIST PROCEDURES

CLIMB

- 1 - Power lever **ADJUST according to engine operation tables - Chapter 5.8**

CAUTION

**OBSERVE TRQ / Ng / Np / ITT / T°
AND OIL PRESSURE LIMITATIONS
AND / OR REFER TO TABLES IN CHAPTER 5.8**

- 2 - Climb speed **AS REQUIRED**
- 3 - ECS panel
 - Cabin altitude selector **Cruise altitude + 1000 feet**
 - Cabin rate selector **ADJUST**
 - Pressurization **CHECK**
 - "CABIN TEMP/° C" selector **ADJUST**
- 4 - Fuel tank gages **CHECK / CORRECT (Quantity / Symmetry)**
- 5 - DE ICE SYSTEM **As required Refer to Chapter 4.5 "PARTICULAR PROCEDURES"**

CAUTION

IF HEAVY PRECIPITATION, TURN IGNITION AND INERT SEP ON

CHECK-LIST PROCEDURES

CRUISE

- 1 - Power lever **ADJUST according to engine operation tables - Chapter 5.8**

CAUTION
OBSERVE TRQ / Ng / Np / ITT / T°
AND OIL PRESSURE LIMITATIONS
AND / OR REFER TO TABLES IN CHAPTER 5.8

- 2 - Pressurization **CHECK**

- 3 - Fuel

- Gages **CHECK**

REGULARLY CHECK :

- **consumption**

Pre-MOD70-0402-28

- **tank automatic change (every 10 minutes)**

Post-MOD70-0402-28

- **tank automatic change (every 5 minutes)**

All

- **symmetry [max. dissymmetry 15 us gal (57 Litres)]**

- 4 - Cruise parameters / engine data **CHECK/RECORD**

- 5 - DE ICE SYSTEM **As required**

Refer to Chapter 4.5

"PARTICULAR PROCEDURES"

CAUTION
IF HEAVY PRECIPITATION, TURN IGNITION
AND INERT SEP ON

CHECK-LIST PROCEDURES

**FLAP CONTROL TRANSITION
FROM "UP" TO "850"**

- | | |
|------------------------------|--|
| 1 - Flaps | CHECKED UP |
| 2 - Propeller RPM | 2000 |
| 3 - Power lever | TRQ ≤ 100 % |
| 4 - Flap control lever | From UP to 850 |
| 5 - Power lever | As required
TRQ less than 121.4 % |

**FLAP CONTROL TRANSITION
FROM "850" TO "UP"**

- | | |
|------------------------------|---|
| 1 - Altitude | At or above 1500 ft AGL |
| 2 - Propeller RPM | 2000 |
| 3 - Power lever | TRQ ≤ 100 % |
| 4 - Flap control lever | From 850 to UP |
| 5 - Power lever | As required
TRQ less than 100 %
(2000 RPM) |

CHECK-LIST PROCEDURES

DESCENT

- 1 - Altimeter settings **COMPLETE**
- 2 - ECS panel
 - Cabin altitude selector **Airfield altitude + 500 feet**
 - Cabin rate selector **Adjusted**
- 3 - DE ICE SYSTEM **As required**
Refer to Chapter 4.5
"PARTICULAR PROCEDURES"

CAUTION
IF HEAVY PRECIPITATION, TURN IGNITION
AND INERT SEP ON

- 4 - Windshield misting protection system **As required**
- 5 - Fuel
 - Gages **CHECK**
(Quantity / Symmetry)
 - Fullest tank **SELECT**
- 6 - Passengers briefing **As required**
- 7 - Seats, belts and harnesses **LOCKED**

CHECK-LIST PROCEDURES

BEFORE LANDING**Long final**

- | | |
|---|------------------------------|
| 1 - Altimeters | CHECK |
| 2 - Fuel | |
| - Gages | CHECK |
| | (Quantity / Symmetry) |
| - Fullest tank | SELECT |
| 3 - "INERT SEP" switch (IAS ≤ 200 KIAS) | ON |
| 4 - Propeller lever | MAX RPM |
| 5 - Landing gear control (IAS ≤ 178 KIAS) | DN |
| - Green indicator lights | ON |
| 6 - Flaps (IAS ≤ 178 KIAS) | TO |
| 7 - Lights | |
| - "L.LDG / TAXI / R.LDG" | ON |
| 8 - Autopilot | OFF |
| 9 - Radar switch (if installed) | SBY |

Short final

- | | |
|---|--|
| 10 - Flaps (IAS ≤ 122 KIAS) | LDG |
| 11 - Approach speed | |
| (Flaps LDG) | Weight < 6250 lbs (2835 kg) : 80 KIAS |
| | Weight ≥ 6250 lbs (2835 kg) : 85 KIAS |
| 12 - "YAW DAMPER" push-button | OFF |

CHECK-LIST PROCEDURES

LANDING	
1 - Power lever	IDLE
<i>After wheel touch</i>	
2 - Reverse	As required
(Reverse may be applied as soon as the wheels touch the ground.) To avoid ingestion of foreign objects, come out the reverse as speed reduces and use the brakes if necessary for further deceleration.	
CAUTION	
USE OF CONTROL REVERSE BETA (β) RANGE (BEHIND THE FLIGHT IDLE POSITION) IS PROHIBITED DURING FLIGHT	
CAUTION	
ON SNOWY OR DIRTY RUNWAY, IT IS BETTER NOT TO USE REVERSE	
3 - Brakes	As required

CHECK-LIST PROCEDURES

GO-AROUND	
1 - Simultaneously	
- Power lever	TRQ = 100 %
- Attitude	7.5°
2 - Flaps	TO
<u>Weight below 6579 lbs (2984 kg)</u>	
<i>If the vertical speed is positive and if IAS is at or above 85 KIAS :</i>	
3 - Landing gear control	UP
	All warning lights OFF
<i>If IAS is at or above 110 KIAS :</i>	
4 - Flaps	UP
5 - Climb speed	AS REQUIRED
<u>Weight above 6579 lbs (2984 kg)</u>	
<i>If the vertical speed is positive and if IAS is at or above 90 KIAS :</i>	
6 - Landing gear control	UP
	All warning lights OFF
<i>If IAS is at or above 115 KIAS :</i>	
7 - Flaps	UP
8 - Climb speed	AS REQUIRED
9 - Power	AS REQUIRED

CHECK-LIST PROCEDURES

TOUCH AND GO	
<i>After wheel touch</i>	
1 - Flaps	TO
2 - Elevator trim	Green sector
3 - Power lever	Display TRQ = 100 %
4 - Takeoff	ROTATION : See "Takeoff distances" Chapter 5.9
- Normal takeoff	ATTITUDE : 7.5°
- Short takeoff	
. Weight < 6579 lbs (2984 kg)	ATTITUDE : 15°
. Weight ≥ 6579 lbs (2984 kg)	ATTITUDE : 12.5°

AFTER LANDING (1/2)	
RUNWAY CLEAR - AIRPLANE STOPPED	
1 - DE ICE SYSTEM panel	
- "AIRFRAME DE ICE" switch	OFF
- "PROP DE ICE" switch	OFF
- "INERT SEP" switch	CHECKED ON
- "L.WINDSHIELD" switch	As required
- "R.WINDSHIELD" switch	As required
- "PITOT 1 HTR" switch	OFF
- "PITOT 2 & STALL HTR" switch	OFF
2 - Radar switch (if installed)	CHECKED SBY
3 - Transponder	SBY
4 - Flaps	UP



CHECK-LIST PROCEDURES

AFTER LANDING (2/2)

5 - Lights	
- "L.LDG / R.LDG"	OFF
- "TAXI"	ON
6 - "STROBE" switch	OFF
7 - "OXYGEN" switch	OFF

CHECK-LIST PROCEDURES

SHUT-DOWN (1/2)	
1 - Parking brake	SET
WARNING LIGHT	PARK BRAKE
	ON
2 - "TAXI" light	OFF
3 - Pressurization	
- "BLEED" switch	OFF
- Check for cabin depressurization	
4 - "FAN FLOW" switch	As required
5 - "AIR COND" switch	OFF
6 - Condition lever	HI /IDLE
7 - Power lever	IDLE for 2 minutes
8 - GYRO INST panel	
- All switches	OFF
9 - "EFIS MASTER" switch	OFF
10 - "AP / TRIMS MASTER" switch	OFF
11 - "RADIO MASTER" switch	OFF
12 - Propeller governor lever	FEATHER for 15 seconds
13 - Condition lever	CUT OFF

CAUTION

IN CASE OF SHUT-DOWN ON A CONTAMINATED AREA:

- **Condition lever** **CUT OFF**

- **Propeller governor lever** **FEATHER**



CHECK-LIST PROCEDURES

SHUT-DOWN (2/2)

- 14 - Fuel
 - "AUX BP" switch **OFF**
 - "FUEL SEL" switch **MAN**
 - Tank selector **OFF**
- 15 - "INERT SEP" switch **OFF**
- 16 - INT LIGHTS panel
 - All switches **OFF**
- 17 - EXT LIGHTS panel
 - All switches **OFF**
- 18 - "GENERATOR" selector **OFF**
- 19 - "SOURCE" selector **OFF**

CAUTION

IN CASE OF HIGH OAT [ABOVE 35° C (95° F)], MOTORING FOR UP TO 30 SECONDS IS REQUIRED AFTER ENGINE SHUT-DOWN TO PREVENT OIL COKING AND COOL THE ENGINE BEARINGS. REFER TO PROCEDURE "MOTORING".

- 20 - Oxygen cylinder (right wing fairing) **Close**
- 21 - Install air inlet and static port plugs, and exhaust and pitot covers.

NOTE :
Be careful of exhaust stubs temperature before installing covers.

NOTE :
Within 10 minutes following the engine shutdown, check engine oil level. Refer to Chapter 8.7 "Oil level check".

INTENTIONALLY LEFT BLANK

4.4 - AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION

A - INSIDE INSPECTIONS

Cockpit (1)

- CRASH lever **UP**

- 1 - ELECTRIC POWER panel
 - "SOURCE" selector **OFF**
 - "GENERATOR" selector **MAIN**

- 2 - ENGINE START panel
 - "IGNITION" switch **AUTO or OFF**
 The "IGNITION" switch is normally selected to AUTO. This ensures ignition, whenever the "STARTER" switch is set to ON.
 - "STARTER" switch **OFF**
 If not, starter is going to operate as soon as "SOURCE" selector is moved to BAT or GPU (if connected).

- 3 - EXT LIGHTS panel
 - All switches **OFF**

- 4 - GYRO INST panel
 - All switches **OFF**

- 5 - Breakers panel
 - All breakers **ENGAGED**

- 6 - DE ICE SYSTEM panel
 - All switches **OFF**

- 7 - Landing gear control **DN**



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 8 - Landing gear emergency control
Open door of emergency landing gear compartment.
 - Lever **PULLED DOWN**
 - By-pass selector **PUSHED**
 - Door **IN PLACE**
By-pass selector must be pushed at its maximum stop, so as to have the door in place.

- 9 - "AP / TRIMS MASTER" switch **OFF**

- 10 - "RADIO MASTER" switch **OFF**

- 11 - ECS panel
 - "BLEED" switch **OFF**
 - "AIR COND" switch **OFF**
 - "DUMP" switch **GUARDED**

- 12 - RAM AIR control **PUSHED**

- 13 - Fuel
 - "FUEL SEL" selector **MAN**
 - "AUX BP" switch **OFF**
 - Tank selector **L or R**

- 14 - ELT **ARM**

- 15 - Flight control lock **REMOVED / STOWED**
The flight control lock is normally stowed in the front cargo compartment with the towing bar and the blanking covers.

- 16 - Flight controls **Deflections checked**

- 17 - Parking brake **SET**

- 18 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

When engine is shut-off, a lack of hydraulic pressure prevents movement into reverse range. Trying to force the mechanism will cause damage.

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX. RPM**
- Condition lever **CUT OFF**
- 19 - Flaps control **UP**
- 20 - BAT BUS power supply
 - Stop watch **CHECKED**
 - Access lighting **CHECKED**
 - Emergency lighting **CHECKED**

This check allows to ensure that the fuse of the "BAT BUS" operates correctly.

CAUTION

BEFORE SELECTING SOURCE, CHECK :

21 - "IGNITION" switch AUTO or OFF

22 - "STARTER" switch OFF

23 - Landing gear control DN

- 24 - "SOURCE" selector **BAT or GPU**



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 25 - Voltage **CHECK**
 - BAT **> 25 Volts**
If not, use a GPU or charge battery. This minimum voltage is not an absolute guarantee for a correctly charged battery. It is recommended to use a GPU in cold weather, when airplane has been stopped more than 3 hours at a temperature below - 10°C (+14°F).
 - GPU **≈ 28 Volts**
If using a GPU, ensure that it provides a 28-volt regulated voltage, with negative on earth, as well as it supplies 800 amperes minimum and 1400 amperes maximum. See placard located near ground power receptacle door.

- 26 - EXT LIGHTS panel
 - "LTS TEST" push button **PRESS**
(3 green lamps "L.LDG / TAXI / R.LDG" ON)
 - "L.LDG / TAXI / R.LDG" switches **ON**
(3 green lamps ON)
An outside inspection is not necessary ; the illuminated three green lamps located on switches prove the correct operation of the three landing lights.
 - "L.LDG / TAXI / R.LDG" switches **OFF**

- 27 - Fuel gages
 - Operation / quantity **CHECK**

- 28 - ADVISORY PANEL
 - Test 1 **ALL WARNING LIGHTS ON**
 - Test 2 **ALL WARNING LIGHTS ON**
"Test 1" and "2" correspond to BUS bars 1 or 2, which feed them respectively.



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

29 - Oxygen emergency

system	WARNING LIGHT		OFF
------------------	----------------------	---	------------

If not, open isolation valve of the oxygen cylinder in R.H. karman. Oxygen emergency system in good operation condition must be imperatively taken on board during all flights, even at low altitude in order to be used in case of smoke in the cabin.

30 - INT LIGHTS panel **CHECK**


31 - ECS panel

- "LT TEST" push button **PRESS**
(amber indicator light ON)

32 - Flaps **LDG**

33 - Landing gear panel **Warning lights : 3 GREEN ON**
Test 1, then 2 : RED ON + 3 GREEN ON

"Test 1" and "2" correspond to BUS bars 1 or 2, which feed them respectively.

34 - "PITOT 1 HTR" switch		ON
	WARNING LIGHT	
		OFF

Correct operation of pitot (PITOT 1 and 2) tube heating elements and of stall aural warning system (STALL HTR) is indicated by extinction of corresponding lights on the advisory panel, when control switches are ON.



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 35 - "PITOT 2 & STALL HTR" switch **ON**
- | | | |
|-----------------------|-----------|-----|
| WARNING LIGHTS | PITOT 2 | OFF |
| | STALL HTR | |
- "PITOT 1 HTR" switch **OFF**
- "PITOT 2 & STALL HTR" switch **OFF**
- 36 - DE ICE SYSTEM panel
- "LTS TEST" push button **PRESS**
 (All green lights ON)

WARNING

**DO NOT TOUCH PITOTS NOR STALL WARNING VANE.
 THEY COULD BE HOT ENOUGH TO BURN SKIN**

- 37 - EXT LIGHTS panel
- "STROBE" **ON**
 - "NAV" **ON**
 - "ICE LIGHT" **ON**

From outside the airplane, check operation of all lights and the stall warning horn

- 38 - Reentering the airplane
- EXT LIGHTS panel **ALL SWITCHES OFF**
 - DE ICE SYSTEM panel **ALL SWITCHES OFF**
- 39 - "SOURCE" selector **OFF**



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

Cabin (II)

- 1 - Cabin fire extinguisher **CHECK**
(Pressure / Attachment)
The fire extinguisher is provided with a pressure gage.
- 2 - Seats / belts **CHECK**
- 3 - Windows **CHECK**
(General condition / No cracks)
- 4 - Emergency exit **CLOSED / LOCKED**
 - Anti-theft safety **REMOVE / STOW**
- 5 - Baggage compartment **STRAPS IN PLACE**
- 6 - Partition net **IN PLACE**
- 7 - Doors operation **CHECK**
- 8 - Stairs condition **CHECK**
(Condition / Play)



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

B - AIRPLANE OUTSIDE

The preflight inspection described in Figure 4.3.1 is recommended before each flight.

NOTE :

If a preflight inspection is performed, just after the engine shut-off, be careful because the leading edge of engine air inlet, as well as exhaust stubs may be very hot.

If the airplane was in long term storage or if it has undergone major maintenance or if it has been used from emergency airfields, a thorough outside inspection is recommended.

When the airplane is stored outside, the use of the flight control lock and blanking covers is recommended. Propeller should be tied down to prevent rotation without oil pressure.

When the airplane is stored for extended periods of time, a thorough preflight inspection is recommended. Particular attention should be paid to possible blockages in airspeed sensing lines, foreign objects in engine intake and exhaust stubs and water contamination of the fuel system.

L.H. wing (III)

- 1 - Flap **CHECK (Condition / Play)**

Also inspect the lower surface, as well as flap fairing, where pebbles (and even ice in case of slush on the runway) may have accumulated.

- 2 - Aileron and trim / Spoiler **CHECK (Condition / Free movement / Deflection)**

Ensure there are no foreign objects in the spoiler recess. When ailerons are in the neutral position, it is normal that spoilers are lightly extended at upper surface.



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 3 - Trailing edge static discharger **CHECK**
(Condition / Attachment)
- 4 - Wing tip / nav. lights /
Strobe / landing light **Condition - CHECK**
- 5 - OAT probe **Condition - CHECK**
- 6 - Fuel tank **CAP CLOSED / LOCKED**
Fuel tank caps must be tight (which is characterized by a consequent exertion to lock and unlock them) to avoid water infiltration in case of rain on ground, and to avoid fuel loss in flight.
- 7 - Fuel tank air vent **UNOBSTRUCTED - CHECK**
Air vent is not likely to be obstructed by ice or water, as it is located in a wing lower surface recess.
- 8 - External pitot (IAS) **Condition - CHECK**
- 9 - Internal pitot (V_{MO}) **Condition - CHECK**
- 10 - Wing lower surface **CHECK**
 - Check fuel tank access doors for leaks
 - Check for surface damage.
- 11 - Wing deicer boots **CHECK**
(Condition / Attachment)
Care must be taken when refuelling the airplane to avoid damaging the wing deicer boots. A protective apron should be used if possible.



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

12 - Fuel tank drain (two on each wing) **DRAIN**
(Fuel free of water and contamination)

In case of water in fuel system, drain it carefully using the four drain valves of tank sumps, and the fuel filter drain valve, till every trace of water or deposit has disappeared.

A long term storage of the airplane causes water accumulation in fuel, which absorbs additive. This phenomenon occurs when an excessive quantity of water accumulates in fuel tank sumps. Refer to Section 8 for servicing operations relative to fuel additives.

13 - L.H. main landing gear
- Shock absorber / doors /
tire / wheel well **CHECK**

If airplane has been used from muddy airfields or in snow, check wheel wells to make sure they are clean and not obstructed.

Check frequently all landing gear retraction mechanism components, shock-absorbers, tires and brakes. This is particularly important for airplanes used from hilly fields.

Improperly serviced or worn shock-absorbers may result in excessive loads being transmitted to the airplane structure during ground operations. Without passengers and baggages on board, the unpainted surface of the main gear shock absorber tube must be visible about :

- 55 mm (2.17 in.) of minimum height with half tank,
- 40 mm (1.57 in.) of minimum height with full tanks.



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

Fuselage forward section (IV)

- 1 - Forward compartment
 - Inside **CONTROLLED**
 - Door **CLOSED / LOCKED**
- 2 - GPU door **CLOSED**
(If not used)
- 3 - Fuel circuit drain **DRAIN**
(Fuel free of water and contamination)
 - Filter contamination indicator **CHECK**

**Open the inspection door located on
L.H. side under front baggage compartment**
- 4 - L.H. exhaust stub **CHECK**
(Condition / No crack)
Inspect if possible pressure port located inside exhaust stub. A missing port or a cracked port may hinder correct operation of continuous heating of air inlet lip.
- 5 - Upper engine cowls **OPEN**
For the first flight of the day :
 - Oil cap **CLOSED / LOCKED**
 - Engine oil level **CHECK**
 - Fuel pipes **CHECK**

(No leak, deterioration, wear)
- 6 - Engine cowls **Condition - CHECK**
CLOSED / LOCKED



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 7 - Air inlets
 - Main **No crack - UNOBSTRUCTED**
Check for no cracks, which are sometimes put in evidence by traces of soot resulting from exhaust gases.
 - Lateral / upper **UNOBSTRUCTED**
Lateral air inlets, which supply air conditioning system and oil cooler, are provided with blanking covers. It is not the case for upper air inlets of RAM AIR system (circular grille located in front of R.H. windshield) and of vapor cycle cooling system (two rectangular grilles located forward of the circular grille).

- 8 - Propeller and spinner **CHECK**
(No nicks, cracks or oil leaks / Attachment)
In case of operation from contaminated runways, it is necessary to carefully examine propeller blades, where traces of abrasion may be found. Propeller damage may reduce blade life time and degrade performance. Any propeller damage should be referred to maintenance personnel.

- 9 - Nose gear
 - Landing light / shock absorber / doors /
tire / wheel well **CHECK**
Without passengers and baggages on board, the unpainted surface of the nose gear shock absorber tube must be visible about :
 - 57 mm (2.22 in) of minimum height with full tanks,
 - 63 mm (2.46 in) of minimum height with half tank.

NOTE :
Crush or relieve the shock absorber one time or twice before the inspection to remove possible sticking.

In case of doubt, request a check of the shock absorber pressure.

- 10 - R.H. exhaust stub **CHECK**
(Condition / No cracks)



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

R.H. wing (V)

Additional remarks are identical to those of L.H. wing.

- 1 - Fuel tank drain (two on each wing) **DRAIN**
(Fuel free of water and contamination)
- 2 - Main landing gear
- Shock absorber / doors /
tire / wheel well **CHECK**
- 3 - Wing deicer boots **CHECK**
(Condition / Attachment)
- 4 - Stall warning **CHECK**
(Condition / Deflection)
- 5 - Wing lower surface **CHECK**
(No leaks)
- 6 - Fuel tank **CAP CLOSED / LOCKED**
- 7 - Fuel tank air vent **Unobstructed - CHECK**
- 8 - Wing tip / nav. light /
strobe / landing light **Condition - CHECK**
- 9 - Trailing edge static discharger **CHECK**
(Condition / Number / Attachment)
- 10 - Aileron / spoiler **CHECK**
(Condition / Free movement / Deflection)
- 11 - Flap **CHECK**
(Condition / Play)
- 12 - Rear R.H. karman **Oxygen cylinder open**
- 13 - Oxygen pressure **CHECK**



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

Fuselage rear section / Empennages (VI)

Check that outside handle of emergency exit is flush with door skin.

- 1 - ELT **OFF**
Access to ELT is possible through an inspection door located on R.H. side of fuselage rear section.

- 2 - Static pressure ports **Clean - CHECK**

- 3 - Ventral fins **CHECK**
(Attachment condition)
Ventral fins are made of two parts (one fixed part and one removable part with rear lower inspection door). Check that these two parts are connected by the locking roller.

- 4 - Inspection door under fuselage **CLOSED - CHECK**
(Attachments)

- 5 - Horizontal stabilizer
deicer boots (R.H. side) **CHECK**
(Condition / Attachments)

- 6 - Elevator and trim **CHECK**
(Condition / Deflection free movement / Trim position)
To check the deflection, hold the two half-elevators near fuselage, inside both elevator trims to avoid stresses.

- 7 - Static dischargers **CHECK**
(Condition)

- 8 - Vertical stabilizer deicer boots **CHECK**
(Condition / Attachments)

- 9 - Rudder and trim **CHECK**
(Condition / Trim position)



AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

- 10 - Static dischargers **CHECK (Condition)**
- 11 - Tail cone **Condition - CHECK**
- 12 - Static pressure ports **Clean - CHECK**
- 13 - Rear baggage compartment
 - Inside **CONTROLLED**
 - Door **CLOSED / LOCKED**

AMPLIFIED PROCEDURES

BEFORE STARTING ENGINE (1/4)

Check that the weight and balance are within the correct limits. Brief passengers about use of seat belts and the emergency oxygen system, as well as opening the access door and the emergency exit.

CAUTION

**"BLEED" SWITCH ON "AUTO" MAY CAUSE
OVERTEMPERATURE OR ABNORMAL ACCELERATION AT
START**

CAUTION

**MAKE SURE THAT "MAN OVRD" CONTROL IS "OFF" TO AVOID
OVERTEMPERATURE RISKS AT START**

- 1 - Preflight inspection **COMPLETED**
- 2 - Cabin access door **CLOSED / LOCKED**
- 3 - "Pilot" door (if installed) **CLOSED / LOCKED**
- 4 - Baggage **STOWED**
- 5 - Parking brake **SET**
"PARK BRAKE" warning light located on advisory panel does not indicate that parking brake is set. For that, press on brake pedals before turning parking brake selector to the right.
- 6 - Weight and balance **COMPUTED / CHECKED**



AMPLIFIED PROCEDURES

BEFORE STARTING ENGINE (2/4)

- 7 - Pilot seat and R.H. front seat (if occupied)
 - Height adjustment **Maximum UP**
 - Fore and aft adjustment **ADJUST and CHECK LOCKING**
 - Height adjustment **ADJUST**

CAUTION

IT IS MANDATORY TO SET THE SEAT TO THE HIGHEST POSITION BEFORE ADJUSTING THE FRONT SEATS FORE OR AFT. OTHERWISE, MOVING THE SEAT MAY DAMAGE THE UPHOLSTERY ON THE SIDE PANELS.

Adjust pilot's and R.H. front station seats and harnesses, so as to permit access to all flight controls. The pilot at L.H. station must be able to easily reach ECS panel.

- 8 - R.H and L.H. pedals **ADJUSTED**
- 9 - Belts and harnesses (Pilot and passengers) **FASTENED**
Check belt buckles for correct locking, as well as automatic locking of shoulder harness by exerting a rapid pull on the latter.
- 10 - Crash lever **UP**
- 11 - Oxygen supply **Available for the planned flight**
(see tables of paragraph "IN-FLIGHT AVAILABLE OXYGEN QUANTITY" and Chapter 7.10 for a FAR 135 type operation)
- 12 - "OXYGEN" switch **ON**
- 13 - "PASSENGERS OXYGEN" switch **OFF**
- 14 - Copilot and pilot masks **Press push-button "PRESS TO TEST" : the blinker shall turn red momentarily, then turns transparent**
- 15 - "NORMAL/MASK" micro inverter **NORMAL**



AMPLIFIED PROCEDURES

BEFORE STARTING ENGINE (3/4)

- 16 - "IGNITION" switch **AUTO or OFF**
The "IGNITION" switch is normally selected to AUTO. This ensures ignition, whenever the starter is activated.
- 17 - "STARTER" switch **OFF**
If not, starter is going to operate as soon as "SOURCE" selector is positioned on BAT or GPU in case of supplying by GPU.
- 18 - Landing gear control **DN**
- 19 - "RADIO MASTER" switch **ON**
- 20 - RADIO VHF1 **ON / ADJUSTED**
An electric relay automatically cuts off radio equipment during starter operation.
The function "GND CLR" (ground clearance) enables, when "RADIO MASTER" switch is ON, to obtain VHF1 supply without having selected battery contact.
- 21 - Authorization for engine starting **ASKED**
- 22 - Fuel flow totalizer/computer **CHECKED - ADJUSTED**
- 23 - "SOURCE" selector **BAT (or GPU)**
- 24 - Passengers briefing **AS REQUIRED**
- 25 - Access door and

(if installed) "pilot" door **WARNING LIGHT** DOOR **OFF**

If the "DOOR" warning light is ON, open and reclose the access door and (if installed) the "pilot" door. Check that the locking pins are in place (green band is visible). Do not take off with the "DOOR" warning light ON.



AMPLIFIED PROCEDURES

BEFORE STARTING ENGINE (4/4)

- 26 - Fuel
 - Gages **CHECKED**
 - Tank selector **L or R - CHECKED**
- 27 - Fuel flowmeter totalizer **CHECKED - ADJUSTED**
Total fuel quantity on board may be set on flowmeter totalizer - see Section 7 or refer to manufacturer technical data.
- 28 - Engine instruments **CHECK**
- 29 - ITT TEST **CARRY OUT**
Check for "1888" on the ITT digital display, and "ITT" red warning light ON on the advisory panel.
- 30 - EXT LIGHTS panel
 - "STROBE" **AS REQUIRED**
Strobe lights can cause inconvenience to ground personnel and other pilots at night.
- 31 - In case of night flight
 - INT LIGHTS panel : "INSTR" + "PANEL" **ADJUSTED**
 - Navigation lights **ON**
 - Flashlight (if necessary) **IN PLACE**

When "GND CLR" (ground clearance) is installed, VHF1 can be operated by setting "SOURCE" selector to OFF and "RADIO MASTER" switch to ON. Correct operation is indicated by the "GND CLR" green light illuminating above the "RADIO MASTER" switch. If battery voltage is low (near 25 volts), turn off all unessential electrical equipment before selecting the starter ON. At night, two spot lights are available above the front seats to illuminate the cockpit, documents and instrument panel.

INTENTIONALLY LEFT BLANK

AMPLIFIED PROCEDURES

**STARTING ENGINE USING AIRPLANE POWER
(1/6)**

CAUTION

BEFORE SELECTING SOURCE, CHECK :

- 1 - "IGNITION" switch **AUTO or OFF**
- 2 - "STARTER" switch **OFF**
- 3 - "INERT SEP" switch **OFF**
- 4 - Landing gear control **DN**

- 5 - ELECTRIC POWER panel
 - "SOURCE" selector **BAT**
 - Mains voltage **CHECKED**
> 25 Volts
- 6 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX. RPM**
- Condition lever **CUT OFF**
- 7 - FUEL panel
 - "AUX BP" switch **ON**

WARNING LIGHT

AUX BP ON

ON

WARNING LIGHT

FUEL PRESS

OFF

- Fuel pressure indicator **Green sector**



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (2/6)**

- 8 - Propeller **AREA CLEAR**
- 9 - ENGINE START panel
 - "IGNITION" switch **AUTO**
 - "STARTER" switch **ON**



NOTE :
The utilization of the starter is bound by limitations mentioned in Chapter 2.4 "STARTER OPERATION LIMITS".

- Ng \simeq 13 %
- Condition lever **LO / IDLE**
 When condition lever is positioned on LO / IDLE before having obtained 13 % of Ng, there is a risk of overtemperature further to an excessive accumulation of fuel inside the combustion chamber before ignition.

Monitor increase of :

- ITT **(max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.)**

The absolute limit read on the indicator is 1090°C during the starting sequence (red triangle). However, the ITT limits during the starting sequence are :

- . 870°C for 20 seconds max.
- . 1000°C for 5 seconds max.

In case of starting with hot engine, an ITT decrease comprised between 150°C and 170°C (within starter operation limits), before opening of the condition lever, may allow to stay within above mentioned ITT limits.



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (3/6)**

In case of higher temperature and longer time, stop immediately the starting procedure as indicated in the following caution and inform the maintenance department.

If starting engine procedure is aborted further to overtemperature indications (max. ITT : 870°C for more than 20 seconds - 1000°C for more than 5 seconds), maintaining during few seconds "STARTER" switch ON (within starter operating limits) may reduce max. ITT obtained by ventilating combustion chamber.

NOTE :

No action is required for the following conditions :

ITT : from 850 °C to 870 °C limited to 20 seconds,

from 870 °C to 1000 °C limited to 5 seconds.

CAUTION

IF 10 SECONDS AFTER HAVING POSITIONED CONDITION LEVER TO "LO / IDLE" THERE IS NO IGNITION OR IF DURING IGNITION SEQUENCE, OVERTEMPERATURE INDICATION APPEARS (MAX. ITT : 870°C FOR MORE THAN 20 SECONDS - 1000°C FOR MORE THAN 5 SECONDS),

INTERRUPT STARTING PROCEDURE :

Condition lever CUT OFF

"IGNITION" switch OFF (or AUTO)



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (4/6)**

Wait ITT < 850°C, then :

"STARTER" switch OFF

**BEFORE ANY RESTARTING ATTEMPT, CARRY OUT A
MOTORING**

(Refer to paragraph "MOTORING")

CONTINUE WITH NORMAL PROCEDURE HEREAFTER

- Ng

The start sequence must be timed to ensure starter limits are not exceeded. Lengthy operation of the starter results in excessive temperature of the engine :

- If Ng does not reach 30 % within 30 seconds, after the starter is selected ON, abort the start.

- If Ng does not reach 50 % within 1 minute, abort the start.

- Before starting a new test, respect delays indicated in Chapter 2.4 "STARTER OPERATION LIMITS".

- Oil pressure WARNING LIGHT



OFF

CAUTION

IF ENGINE STAGNATES,

INTERRUPT STARTING PROCEDURE :

Condition lever CUT OFF

"IGNITION" switch OFF (or AUTO)

"STARTER" switch OFF

**WAIT FOR 1 MINUTE (Refer to Chapter 2.4 "STARTER
OPERATION LIMITS"), THEN TRY TO RESTART**



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
AIRPLANE POWER (5/6)**

ENGINE START panel

- "IGNITION" switch **AUTO**
- "STARTER" switch **ON**

WARNING LIGHTS



FLASHING



ON

Ng ≈ 13 %

- Condition lever **HI / IDLE**

Monitor increase of :

- ITT (max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.)

- Ng

- Oil pressure **WARNING LIGHT**



OFF

Ng ≈ 50 %

- "STARTER" switch **OFF**

WARNING LIGHTS



OFF



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
 AIRPLANE POWER (6/6)**

Engine instruments **CHECK Ng increasing to 69 % (± 2 %)**
 (Oil pressure / ITT = green sector)

NOTE :

This behaviour should only be observed with outside low temperature (IOAT < 0 °C), cold engine.

This procedure may be used for the first starting of the day.

CONTINUE WITH NORMAL PROCEDURE HEREAFTER

10 - "STARTER" switch **OFF**
 Check Ng > 52 %

11 - Condition lever **HI / IDLE**

12 - Engine instruments **CHECK : Ng ≈ 69 % (± 2 %)**
 (Oil pressure / Oil temperature / ITT = green sector)

13 - FUEL panel
 - "AUX BP" switch **AUTO**
 At this time, observing a drop in the fuel pressure is normal.

	WARNING LIGHT	AUX BP ON	OFF
--	----------------------	------------------	------------

14 - Generator	WARNING LIGHT	MAIN GEN	OFF
--------------------------	----------------------	-----------------	------------

RESET if necessary

"MAIN GEN" warning light normally goes out, as soon as "STARTER" warning light goes out.

If not, increase Ng over 70 % to start main generator.

- Battery ammeter **CHARGE CHECKED**
- Battery voltage **CHECKED**
 (V ≈ 28 Volts)

AMPLIFIED PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (1/7)**

Before connecting GPU, check that its indicated voltage is correct.

1 - GPU **CONNECTED**

CAUTION

BEFORE SELECTING SOURCE, CHECK :

- 2 - "IGNITION" switch **AUTO or OFF**
- 3 - "STARTER" switch **OFF**
- 4 - "INERT SEP" switch **OFF**
- 5 - Landing gear control **DN**

6 - "SOURCE" selector **GPU**

WARNING LIGHT

GPU

ON

WARNING LIGHT

BAT OFF

ON

- Voltmeter **VOLTAGE CHECKED**
(V ≈ 28 Volts)

If voltage is ≥ 30 volts, immediately turn "SOURCE" selector to OFF. Radio navigation equipment may be damaged before main fuse failure.

7 - Engine controls

- "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE**
(Flight idle stop)

- Propeller governor lever **MAX RPM**


- Condition lever **CUT OFF**



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
 EXTERNAL POWER (GPU) (2/7)**


- 8 - FUEL panel
 - "AUX BP" switch **ON**

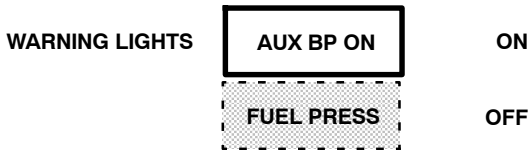

- Fuel pressure indicator **CHECK**

- 9 - Propeller **AREA CLEAR**

- 10 - ENGINE START panel
 - "IGNITION" switch **AUTO**
 - "STARTER" switch **ON**

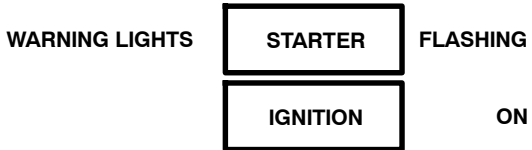

NOTE :
 The use of the starter is limited. Refer to Chapter 2.4 "STARTER OPERATION LIMITS".

- Ng \simeq 13 %
 - Condition lever **LO / IDLE**

When condition lever is positioned on LO / IDLE before having obtained 13 % of Ng, there is a risk of overtemperature further to an excessive accumulation of fuel inside the combustion chamber before ignition.

Avoid staying at or above 13 %, Ng is usually stabilized after leaving starter ON during 10 seconds.



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (3/7)**

Monitor increase of :

- ITT (**max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.**)

The absolute limit read on the indicator is 1090°C during the starting sequence (red triangle). However, the ITT limits during the starting sequence are :

- . 870°C for 20 seconds max.
- . 1000°C for 5 seconds max.

In case of starting with hot engine, an ITT decrease comprised between 150°C and 170°C (within starter operation limits), before opening of the condition lever, may allow to stay within above mentioned ITT limits.

In case of higher temperature and longer time, stop immediately the starting procedure as indicated in the following caution and inform the maintenance department.

This starting engine procedure must be also applied in case of drop in voltage supplied by GPU. This drop will be shown by a low or zero Ng acceleration.

If starting engine procedure is aborted further to overtemperature indications (max. ITT : 870°C for more than 20 seconds - 1000°C for more than 5 seconds), maintaining during few seconds "STARTER" switch ON (within starter operating limits) may reduce max. ITT obtained by ventilating combustion chamber.

NOTE :

No action is required for the following conditions :

- ITT from 850 °C to 870 °C limited to 20 seconds,
- ITT from 870 °C to 1000 °C limited to 5 seconds.



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (4/7)**

CAUTION

IF 10 SECONDS AFTER HAVING POSITIONED CONDITION LEVER TO "LO / IDLE" THERE IS NO IGNITION OR IF DURING IGNITION SEQUENCE, OVERTEMPERATURE INDICATION APPEARS (MAX. ITT : 870°C FOR MORE THAN 20 SECONDS - 1000°C FOR MORE THAN 5 SECONDS),

INTERRUPT STARTING PROCEDURE :

Condition lever **CUT OFF**

"IGNITION" switch **OFF (or AUTO)**

Wait ITT < 850°C, then :

"STARTER" switch **OFF**

**BEFORE ANY RESTARTING ATTEMPT, CARRY OUT A
MOTORING
(Refer to paragraph "MOTORING")**

CONTINUE WITH NORMAL PROCEDURE HEREAFTER

- Ng
The start sequence must be timed to ensure starter limits are not exceeded. Lengthy operation of the starter results in excessive temperature of the engine :
 - If Ng does not reach 30 % within 30 seconds, after the starter is selected ON, abort the start.
 - If Ng does not reach 50 % within 1 minute, abort the start.
 - Before starting a new test, respect delays indicated in Chapter 2.4 "STARTER OPERATION LIMITS".

- Oil pressure **WARNING LIGHT** OIL PRESS **OFF**



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (5/7)**

CAUTION

IF ENGINE STAGNATES.

INTERRUPT STARTING PROCEDURE :

Condition lever CUT OFF

"IGNITION" switch OFF (or AUTO)

"STARTER" switch OFF

WAIT FOR 1 MINUTE (Refer to Chapter 2.4 "STARTER OPERATION LIMITS"), THEN TRY TO RESTART

ENGINE START panel

- "IGNITION" switch **AUTO**

- "STARTER" switch **ON**

WARNING LIGHTS

STARTER

FLASHING

IGNITION

ON

Ng ≈ 13 %

- Condition lever HI / IDLE

Monitor increase of :

- ITT (max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.)

- Ng

- Oil pressure WARNING LIGHT

OIL PRESS

OFF



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
 EXTERNAL POWER (GPU) (6/7)**

Ng ≈ 50 %
 - "STARTER" switch OFF

WARNING LIGHTS	STARTER	OFF
	IGNITION	

Engine instruments **CHECK Ng increasing to 69 % (± 2 %)**
 (Oil pressure / ITT = green sector)

NOTE :
 This behaviour should only be observed with outside low temperature
 (IOAT < 0 °C), cold engine.
 This procedure may be used for the first starting of the day.

CONTINUE WITH NORMAL PROCEDURE HEREAFTER

11 - "SOURCE" selector **BAT**

WARNING LIGHT	BAT OFF	OFF
---------------	---------	-----

12 - Propeller governor lever **FEATHER**
 This reduces propeller blast on the person disconnecting the GPU.

13 - GPU **HAVE IT DISCONNECTED**

WARNING LIGHT	GPU	OFF
---------------	-----	-----

This means that ground power receptacle door has been correctly locked.

14 - Condition lever **HI / IDLE**

15 - Propeller governor lever **MAX. RPM**



AMPLIFIED PROCEDURES

**STARTING ENGINE USING
EXTERNAL POWER (GPU) (7/7)**

16 - Engine instruments **CHECK : Ng \approx 69 % (\pm 2 %)**
(Oil pressure / Oil temperature / ITT = green sector)

17 - FUEL panel
- "AUX BP" switch **AUTO**
At this time, observing a drop in the fuel pressure is normal.

WARNING LIGHT **AUX BP ON** **OFF**

18 - Generator **WARNING LIGHT** **MAIN GEN** **OFF**

RESET if necessary

"MAIN GEN" warning light normally goes out, as soon as
"STARTER" warning light goes out.

If not, increase Ng over 70 % to start main generator.

- Battery ammeter **CHARGE CHECKED**
- Battery voltage **CHECKED**
(V \approx 28 Volts)

AMPLIFIED PROCEDURES

MOTORING (1/3)

To drain fuel accumulated inside the combustion chamber, a motoring procedure is required following an aborted start.

A 15-second dry motoring run is sufficient to clear any fuel pooled in the engine. The fuel is removed in liquid or vapor form, through an airflow intended to dry combustion chamber, turbines and exhaust nozzles.

To improve cooling of the bearing cavities and prevent oil coking after shut-down in high OAT [above 35°C (95°F)] environment, it is recommended to perform a 30-second dry motoring run.

It is possible that no trace of drainage be observed under engine, due to the drainage collector intended to prevent parking area from contamination.

CAUTION

AFTER ANY STARTING INTERRUPT PROCEDURE :

- **WAIT FOR ENGINE TOTAL SHUT-DOWN**
- **WAIT AT LEAST 30 SECONDS BEFORE INITIATING A MOTORING**

- 1 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE
(Flight idle stop)**
- Propeller governor lever **MAX RPM**
- Condition lever **CUT OFF**



AMPLIFIED PROCEDURES

MOTURING (2/3)

- 2 - FUEL panel
 - Tank selector **L or R**
 - "AUX BP" switch **ON**

WARNING LIGHTS	AUX BP ON	ON
	FUEL PRESS	OFF

Fuel pressure is necessary for lubrication of HP pump.

- 3 - "IGNITION" switch **OFF**

WARNING LIGHT	IGNITION	OFF
---------------	----------	-----

To clear fuel and vapor internally trapped :

- 4 - "STARTER" switch **ON**
for 15 sec maxi

WARNING LIGHT	STARTER	FLASHING
---------------	---------	----------

To cool engine following shut-down in high temperature environment :

- 4 - "STARTER" switch **ON**
during 30 sec

WARNING LIGHT	STARTER	FLASHING
---------------	---------	----------

If ignition symptoms occur (ITT increasing), check that "IGNITION" switch is OFF, that condition lever is on CUT OFF and continue motoring.

- 5 - "STARTER" switch **OFF**

WARNING LIGHT	STARTER	OFF
---------------	---------	-----




AMPLIFIED PROCEDURES

MOTORING (3/3)

6 - FUEL panel

- "AUX BP" switch **OFF**

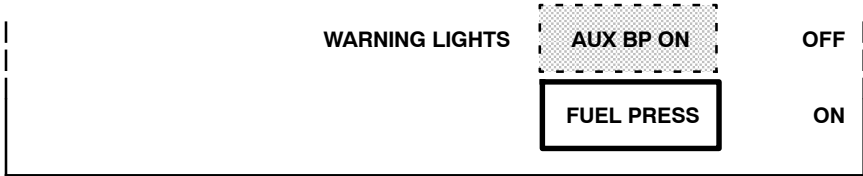

AMPLIFIED PROCEDURES

**MOTORING FOLLOWED BY
AN ENGINE START (1/3)**

Amplified procedures stated in starting engine sequences using airplane power or with GPU are also to be applied to hereunder procedure.

Within starter operating limits (continuous max. 1 minute), it is possible to initiate a starting procedure from a motoring procedure.

This procedure will conserve the battery by taking advantage of first Ng acceleration.

- 1 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION

**WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER
MUST NOT BE MOVED BEHIND THE FLIGHT IDLE
POSITION**

- Power lever **IDLE**
(Flight idle stop)
- Propeller governor lever **MAX. RPM**
- Condition lever **CUT OFF**

- 2 - Fuel
 - Tank selector **L or R**
 - "AUX BP" switch **ON**

WARNING LIGHTS

AUX BP ON

ON

FUEL PRESS

OFF

- 3 - "IGNITION" switch **OFF**
- 4 - "STARTER" switch **ON during 15 sec**



AMPLIFIED PROCEDURES

**MOTORING FOLLOWED BY
AN ENGINE START (2/3)**

- 5 - After 15 seconds :
- "IGNITION" switch **AUTO**
 - Ng **Check at 13 % minimum**
 - Condition lever **LO / IDLE**

- 6 - Monitor increase of :
- ITT **(max. ITT : 870°C for 20 seconds max.
1000°C for 5 seconds max.)**
 - Ng
 - oil pressure **WARNING LIGHT**

OIL PRESS

OFF

NOTE :
No action is required for the following conditions :

- ITT from 850°C to 870°C limited to 20 seconds,
- ITT from 870°C to 1000°C limited to 5 seconds.

- Ng \simeq 50 % stable
- "STARTER" switch **OFF**
- WARNING LIGHTS**

STARTER
IGNITION

OFF

- 7 - Engine instruments **CHECK : Ng > 52 %
(Oil pressure / ITT = green sector)**
- 8 - Condition lever **HI / IDLE**
- 9 - Engine instruments **CHECK : Ng \simeq 69 % (\pm 2 %)
(Oil pressure / Oil temperature / ITT = green sector)**



AMPLIFIED PROCEDURES

**MOTORING FOLLOWED BY
AN ENGINE START (3/3)**

10 - FUEL panel
- "AUX BP" switch **AUTO**

WARNING LIGHT

AUX BP ON

OFF

11 - Generator WARNING LIGHT

MAIN GEN

OFF

RESET if necessary

- Battery ammeter **CHARGE CHECKED**

- Battery voltage **CHECKED**

(V ≈ 28 Volts)

AMPLIFIED PROCEDURES

AFTER STARTING ENGINE (1/4)

1 - GYRO INST panel
- All switches **ON**
Pull on the caging knobs when starting the ADI(s).

2 - Gyroscopic suction gage indicator **GREEN SECTOR**
WARNING LIGHT **VACUUM LO** **OFF**

3 - GYRO SLAVING selector **SLAVE**

4 - DE ICE SYSTEM panel
Flight into known icing conditions is authorized only when all ice protection equipment are operating correctly. This equipment may be activated before takeoff, even during taxiing, in case of icing conditions on ground. Refer to Chapter 4.5 "PARTICULAR PROCEDURES" of this Section.

- "PROP DE ICE" switch **ON**
Check illumination of the green light located above the switch

Illumination of the green light shows that power supplied to blade root electric resistors is between 8 and 10 amperes. It is advised to wait at least a whole half cycle (90 seconds) to check that both blade pairs are correctly deiced.

- "PROP DE ICE" switch **OFF**
- "L.WINDSHIELD" switch **ON**



AMPLIFIED PROCEDURES

AFTER STARTING ENGINE (2/4)

- "R.WINDSHIELD" switch **ON**
Check illumination of the green light located above the switch (except if hot conditions)

This light may remain OFF, if cabin temperature is very high, for example after a prolonged parking in hot conditions (see Chapter 7.13 for operational principle).

- "L.WINDSHIELD" switch **OFF**
- "R.WINDSHIELD" switch **OFF**

Increase power so as to get Ng ≥ 80% to check AIRFRAME DE ICE

Theoretically, necessary air bleed to inflate wing and empennage leading edges, as well as depression necessary to their deflation are sufficient when power lever is positioned on IDLE. However, it is advised for check to choose a Ng power ≥ 80 % in order to obtain operation design pressure, which enables illuminating surely the two green lights and avoiding "VACUUM LO" untimely alarms.

- "AIRFRAME DE ICE" switch **ON**
Visually check functioning of deicer boot during 1 total cycle and illumination of the two green lights located above the switch

The cycle lasts 67 seconds. Check both inflation impulses, and illumination of each corresponding green light :

- the first impulse inflates the external and middle wing boots,
- the second impulse inflates the leading edge boots of empennages and inner wing.
- "AIRFRAME DE ICE" switch **OFF**
- "INERT SEP" switch **ON**

WARNING LIGHT INERT SEP ON

full deflection takes about 30 seconds

"INERT SEP" switch is kept on while taxiing in order to avoid ingestion of particles by the engine.



AMPLIFIED PROCEDURES

AFTER STARTING ENGINE (3/4)

- 5 - "GENERATOR" selector

For these tests, "BLEED" switch must be left OFF, to unload the generator circuit.

- On "MAIN" **Voltage and current checked**

when current \leq 50 amps :

- on "ST-BY" **Voltage and current checked
(reset if necessary)**

If the indicated voltage on the "ST BY" generator is low (close to 27 volts), reset the "ST BY" generator and recheck the voltage. The indicated voltage should be in the green range.

- then again on "MAIN"

- 6 - "FUEL SEL" switch **AUTO**

- 7 - "SHIFT" push-button **PRESS**
Verify rotation of FUEL TANK SELECTOR

- 8 - Flaps **UP**

WARNING
**IT IS PROHIBITED TO SET FLAPS CONTROL LEVER TO
"850" POSITION ON GROUND AND FOR TAKEOFF**

- 9 - ECS panel

- "BLEED" switch **AUTO**
- "FAN FLOW" switch **As required**
- "AIR COND" switch **ON**

Cabin temperature will only be properly regulated when the "AIR COND" switch is set to ON.

If desired, set the "AIR COND" switch to FAN ONLY before starting the engine for passengers and crew comfort, provided that the voltage is > 25 volts.



AMPLIFIED PROCEDURES

AFTER STARTING ENGINE (4/4)

- "CABIN TEMP/° C" selector **ADJUST**
- "AIR FLOW" distributor **AS REQUIRED**
Select CABIN under normal conditions. If the windshield requires defogging select DEFOG or HOT.
- Cabin altitude selector **Airfield altitude - 500 feet**
- Cabin rate selector **ARROW UPWARDS**
(at the halfway post)

This selection will limit cabin rate to about ± 500 ft/min. Turning the rate selector to the right will increase cabin rate limits.

- 10 - "RADIO MASTER" switch **ON**
 - VHF/VOR/GPS/TAS/
EGPWS/WX means (if installed) **ADJUSTED - TESTED**

- 11 - "EFIS MASTER" switch **ON**
 - "TEST / CMPST" button **PRESS**
 - "TST / REF" button **PRESS at least 3 seconds**

Detailed control procedures of EFIS system are described in Section 9 "Supplements".

- 12 - "AP / TRIMS MASTER" switch **ON**
 - Preflight test button **PRESS**
 - "AP / TRIMS MASTER" operation **CHECK**

Detailed control procedures of autopilot and electrical pitch trim are described in Section 9 "Supplements".

 - Pitch trim **UP / DN, then ADJUSTED**
Adjust the indicator in green range (graduated from 12 to 37 % of center of gravity) facing corresponding center of gravity.
 - Yaw trim **L / R, then ADJUSTED**
Adjust the indicator in green range TO (TAKEOFF).
 - Roll trim **L / R, then ADJUSTED**
Adjust the indicator first at neutral position (horizontal marker).

AMPLIFIED PROCEDURES

IN-FLIGHT AVAILABLE OXYGEN QUANTITY
 (Crew oxygen masks in NORMAL mode)

Oxygen pressure **Read**

Outside air temperature (IOAT) **Read**

1 - Determine the usable oxygen percent using the chart Figure 4.4.1.

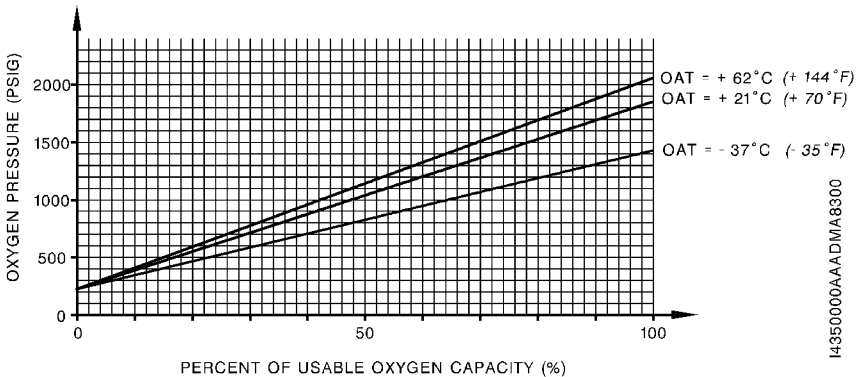


Figure 4.4.1

2 - Determine the oxygen duration in minutes by multiplying the values read on table Figure 4.4.2 by the percent obtained with the chart Figure 4.4.1.

Number of passengers	Duration : Passengers, plus 1 pilot	Duration : Passengers, plus 2 pilots
0	226	113
1	162	94
2	127	81
3	104	71
4	88	65

Figure 4.4.2

AMPLIFIED PROCEDURES

TAXIING (1/2)

1 - "TAXI" light **ON**

2 - "INERT SEP" switch **CHECKED ON**

CHECK WARNING LIGHT **INERT SEP** **ON**

It is recommended that the inertial separator be used during all ground operations.

3 - Passenger briefing **AS REQUIRED**

4 - Parking brake **RELEASED**

Make sure that chocks are removed (if used).

WARNING LIGHT **PARK BRAKE** **OFF**

5 - L.H. and R.H. seat brakes **CHECKED**

6 - Nose wheel steering **CHECKED**

The control wheel will move (roll) in the same direction as the rudder pedals due to the rudder / aileron interconnect.

7 - Power lever **AS REQUIRED**

After initial acceleration, power lever may be in the "TAXI RANGE" sector, avoiding excessive movements in order to keep a constant ground speed.

The condition lever must be in the HI / IDLE position to keep the propeller RPM (Np) out of the caution (yellow) range while taxiing.



AMPLIFIED PROCEDURES

TAXIING (2/2)

CAUTION
AVOID USING REVERSE DURING TAXIING

Operation in the Beta (β) range / reverse is not restricted during ground operations. However, foreign particles (dust, sand, grass, gravel, etc...) may be blown into the air, ingested by the engine (above all if "INERT SEP" switch is turned OFF) and cause damage to the propeller.

- 8 - Flight instruments **CHECK**
Check navigation and communication systems before or during taxiing, check gyroscopic instruments during ground turns.
- 9 - Advisory panel **CHECK**

AMPLIFIED PROCEDURES

BEFORE TAKEOFF (1/3)

1 - Parking brake **SET**

WARNING LIGHT

PARK BRAKE

ON

2 - Condition lever **HI / IDLE**

[Ng : 68 % (± 2 %)]

3 - Propeller governor lever **FEATHER twice,
then MAX. RPM**

During this test, the power lever must be at flight idle. Keep the time spent with the propeller RPM in the caution (yellow) range at a minimum.

4 - Fuel

- Gages **CHECK**

(Quantity / Symmetry)

- "FUEL SEL" switch **CHECKED AUTO**

- "AUX BP" switch **CHECKED AUTO**

5 - Flaps **TO**

6 - DE ICE SYSTEM panel

- "AIRFRAME DE ICE" switch **As required**

- "PROP DE ICE" switch **As required**

If runway is in good condition, without icing conditions :

- "INERT SEP" switch **OFF**

WARNING LIGHT

INERT SEP

OFF

Warning light goes out immediately, but it takes 30 seconds to retract the separator.



AMPLIFIED PROCEDURES

BEFORE TAKEOFF (2/3)

If there is standing water or other contamination on the runway :

- "INERT SEP" switch **Left ON**

WARNING LIGHT

INERT SEP

ON

- "L.WINDSHIELD" switch **As required**
- "R.WINDSHIELD" switch **As required**
- "PITOT 1 HTR" switch **ON**
- "PITOT 2 & STALL HTR" switch **ON**

- 7 - Advisory panel **CHECK**

All warning lights OFF,

except

PARK BRAKE

ON

and, if used

INERT SEP

ON

- 8 - Electronic equipment /
Flight instruments / radar (if installed) **CHECK / ADJUST**
On ground, maintain radar (if installed) on SBY in order not to
generate radiations prejudicial to outside persons.

- 9 - Engine instruments **CHECK**
All engine parameters must be in green range, except propeller
RPM, which will be about 1000 RPM or more with power lever at
IDLE.

- 10 - Pilot's / Passengers' belts **CHECK**

- 11 - Flight controls **DEFLECTIONS CHECKED**



AMPLIFIED PROCEDURES

BEFORE TAKEOFF (3/3)

- 12 - Trims
 - Pitch **ADJUSTED**
 - Yaw **ADJUSTED**
 - Roll **ADJUSTED**
 - 13 - Parking brake **RELEASED**
- | | | | |
|--|----------------------|-------------------|------------|
| | WARNING LIGHT | PARK BRAKE | |
| | | | OFF |
- 14 - "STROBE" switch **ON**

CAUTION

DO NOT TAKE OFF IF BATTERY CHARGE > 50 Amperes

After starting engine with airplane power, a battery charge above 50 amperes is normal. If this indication remains steady at a high value, it may be then a battery or generation system failure. Do not take off in these conditions.

AMPLIFIED PROCEDURES

TAKEOFF (1/4)

WHEN LINED UP

CAUTION

- IF HEAVY PRECIPITATION, TURN IGNITION AND INERT SEP ON.
- IF ICING CONDITIONS ARE FORESEEN, REFER TO CHAPTER 4.5, PARAGRAPH "FLIGHT INTO KNOWN ICING CONDITIONS"

- 1 - Heading - HSI - Stand-by compass **CHECK**
The indication of the stand-by compass is disturbed when windshield(s) deice system(s) is (are) activated.
 - Altimeter setting **CHECK**
- 2 - Horizon **Attitude + 2° - CHECK**
Horizon has been set so as to indicate a 2° nose up attitude, when airplane center of gravity is at a middle average.
- 3 - Lights
 - "L.LDG / TAXI / R.LDG" **ON**
- 4 - Engine instruments **CHECK**
(ITT = green sector)
- 5 - Advisory panel **CHECK**

All warning lights OFF,

except	INERT SEP	if used
except	IGNITION	if used



AMPLIFIED PROCEDURES

TAKEOFF (2/4)

- 6 - Radar switch (if installed) **As required**
- 7 - PROP O' SPEED GOVERNOR TEST
 - Increase power until propeller RPM reaches 1900 RPM
 - PROP O' SPEED **TEST : Maintain engaged**
 - Observe that propeller RPM decreases by 50 to 250 RPM
 - PROP O' SPEED **TEST : Release**
 - Check that propeller RPM increases by a minimum of 50 RPM when compared to minimum value during PROP O'SPEED test.
- 8 - Brakes **RELEASED**
It is not necessary to reduce power at the end of "OVERSPEED" test ; torque will be about 40 % before brake release. For a normal takeoff, maximum torque (100 %) will be applied after brake release. On short runway, maximum torque will be applied before brake release.
- 9 - Power lever **TRQ = 100 %**
- 10 - Takeoff **ROTATION : See "Takeoff distances" Chapter 5.9**
 - Normal takeoff **ATTITUDE : 7.5°**
 - Short takeoff
 - . Weight < 6579 lbs (2984 kg) **ATTITUDE : 15°**
 - . Weight ≥ 6579 lbs (2984 kg) **ATTITUDE : 12.5°**

Rotation speed at takeoff, according to airplane weight, is also given in Chapter 5.9.
- 11 - Vertical speed indicator **POSITIVE**
- 12 - Brakes **APPLY (Briefly)**
- 13 - Landing gear control (IAS < 128 KIAS) **UP**



AMPLIFIED PROCEDURES

TAKEOFF (3/4)

During the sequence :

- The red warning light flashes ; it indicates that the landing gear motor is electrically supplied. It goes off when the 3 landing gears are locked. If the red warning light is fixed ON, there is a discrepancy (refer to EMERGENCY PROCEDURES).
- It is possible that the 3 landing gear position green indicator lights flash uncertainly then go off at the end of the sequence.

At sequence end, check : All warning lights OFF

In practice, if preconized attitude is kept, there is no difficulty to maintain a speed < 128 KIAS until landing gear retraction is completed.

- 14 - Initial climb speed Weight < 6579 lbs (2984 kg) : **110 KIAS**
Weight ≥ 6579 lbs (2984 kg) : **115 KIAS**

In case of initial climb at Vx, it is recommended not to retract flaps to UP before 500 ft AGL

- Weight < 6579 lbs (2984 kg) : **95 KIAS**
Weight ≥ 6579 lbs (2984 kg) : **100 KIAS**

- 15 - Flaps **UP**

- 16 - Flap control **Only when flaps are confirmed UP by the flaps index : 850**

In case of air leak between the solenoïd valve and the torque limiter, the available torque might be below 100 %. Consequently, it is strongly recommended not to select "850" position :

- for a new approach or visual circuit
- for staying below 1500 ft AGL

- 17 - Power lever **TRQ =121.4 %**

- 18 - Climb speed (recommended) **130 KIAS**



AMPLIFIED PROCEDURES

TAKEOFF (4/4)

19 - "YAW DAMPER" push-button	ON
20 - Lights	
- "TAXI"	OFF
- "L.LDG / R.LDG"	AS REQUIRED

AMPLIFIED PROCEDURES

CLIMB (1/2)

- 1 - Power lever **ADJUST according to engine operation tables - Chapter 5.8**

CAUTION
OBSERVE TRQ / Ng / Np / ITT / T°
AND OIL PRESSURE LIMITATIONS.
USE OPTIMUM TORQUE
AND / OR REFER TO TABLES IN CHAPTER 5.8

Torque setting during climb must be adjusted according to engine operation tables in Chapter 5.8. These tables give the max. climb power torque setting (MXCL). For each engine, when torque is reduced below 121.4 % at high altitude according to the tables, during the final climb, reaching the maximum permitted Ng (104 %) is possible and the ITT will be approximately constant, giving a particular value of ITT.

For a simplified engine operation during climb, power may be set first of all by torque, using 121.4 %, then, when the ITT typical value for climb is reached, by indicated ITT, using this particular value. The margin between this indicated ITT and 790°C (recommended ITT limit during continuous operation) will gradually reduce as flight time is performed.

- 2 - Climb speed **AS REQUIRED**
- If weight is below 6579 lbs (2984 kg), best climb speed is 123 KIAS.
 - If weight is above 6579 lbs (2984 kg), best climb speed is 124 KIAS.

Performance tables concerning climb at 130 and 160 KIAS are given in Chapter 5.10.



AMPLIFIED PROCEDURES

CLIMB (2/2)

- 3 - ECS panel
 - Cabin altitude selector **Cruise altitude + 1000 feet**
 - Cabin rate selector **ADJUST so as to obtain a cabin climb rate of about 500 ft/min**

It concerns the control on triple indicator of cabin rate, as well as increasing of differential pressure and cabin altitude.

 - Pressurization **CHECK**
 - "CABIN TEMP/°C" selector **ADJUST**
- 4 - Fuel tank gages **CHECK / CORRECT (Quantity / Symmetry)**

Pre-MOD70-0402-28

In spite of fuel selector automatic operation, a non-negligible dissymmetry may be observed at the end of climb, for example when 10 minutes of climb have been performed on the same fuel tank. Consequently, it is recommended to select the fullest tank by pushing the "SHIFT" push-button, at the beginning of the climb. Tolerated maximum dissymmetry is 15 us gal (57 Litres).

- 5 - DE ICE SYSTEM **As required**
Refer to Chapter 4.5
"PARTICULAR PROCEDURES"

CAUTION

IF HEAVY PRECIPITATION, TURN IGNITION AND INERT SEP ON

AMPLIFIED PROCEDURES

CRUISE (1/2)

- 1 - Power lever **ADJUST according to engine operation tables - Chapter 5.8**

As indicated in lower part of these tables, reduce propeller RPM is possible (without touching power lever), in order to improve sound comfort without significant performance change (speed, consumption).

FLAPS set to UP position (Active torque limiter)

However, at the time of this setting, limit permitted by torque limiter may be reached. This limit is 110 % at sea level and drops to about 100 % at 31000 ft. Therefore, any propeller RPM reducing performed in altitude from a torque close to 100 % (if ITT limit permits it) will be followed by a non-negligible power (and performance) decrease owing to torque limiter.

FLAPS set to 850 position (Not active torque limiter)

Propeller RPM reducing is possible, until 121.4 % maximum torque is reached (red line on indicator).

CAUTION

**OBSERVE TRQ / Ng / Np / ITT / T°
AND OIL PRESSURE LIMITATIONS.
USE OPTIMUM TORQUE
AND / OR REFER TO TABLES IN CHAPTER 5.8**

Engine operation tables (Chapter 5.8) give torque to be applied according to IOAT, in order not to exceed authorized maximum power.

When "INERT SEP" switch is OFF, a more accurate setting of power must then be performed according to cruise performance tables presented in Chapter 5.11.



AMPLIFIED PROCEDURES

CRUISE (2/2)

2 - Pressurization **CHECK**

3 - Fuel

- Gages **CHECK**

REGULARLY CHECK :

- **consumption**

Pre-MOD70-0402-28

- **tank automatic change (every 10 minutes)**

Post-MOD70-0402-28

- **tank automatic change (every 5 minutes)**

All

- **symmetry [max. dissymmetry 15 us gal (57 Litres)]**

When the cruise parameters are stabilized (after 4 min minimum)

4 - Cruise parameters / engine data **CHECK/RECORD**

5 - DE ICE SYSTEM **As required**

Refer to Chapter 4.5

"PARTICULAR PROCEDURES"

CAUTION

**IF HEAVY PRECIPITATION, TURN IGNITION
AND INERT SEP ON**

AMPLIFIED PROCEDURES

**FLAP CONTROL TRANSITION
 FROM "UP" TO "850"**

- 1 - Flaps **CHECKED UP**
- 2 - Propeller RPM **2000**
- 3 - Power lever **TRQ less than 100 %**
- 4 - Flap control lever **From UP to 850**

The torque limiter is deactivated.

CAUTION
OBSERVE TRQ / Ng / Np / ITT / T°
AND OIL PRESSURE LIMITATIONS
(Refer to tables in Chapter 5.8)

Engine operation tables (Chapter 5.8) give torque to be applied according to IOAT, in order not to exceed authorized maximum power.

When "INERT SEP" switch is OFF, a more accurate setting of power must then be performed according to cruise performance tables presented in Chapter 5.11.

- 5 - Power lever **As required**
TRQ less than 121.4 %

AMPLIFIED PROCEDURES

**FLAP CONTROL TRANSITION
FROM "850" TO "UP"**

1 - Altitude **At or above 1500 ft AGL**

In case of air leak between the solenoïd valve and the torque limiter, the available torque might be below 100 %. Consequently, it is strongly recommended not to operate the flap control from "850" to "UP" below 1500 ft AGL.

2 - Propeller RPM **2000**

3 - Power lever **TRQ less than 100 %**

4 - Flap control lever **From 850 to UP**

The torque limiter is activated and limits torque to 110 %.

5 - Power lever **As required**
TRQ less than 100 %
(2000 RPM)

AMPLIFIED PROCEDURES

DESCENT (1/2)	
1 - Altimeter settings	COMPLETE
2 - ECS panel	
- Cabin altitude selector	Airfield altitude + 500 feet
- Cabin rate selector	Adjusted
Set first arrow upwards. This will limit cabin rate at about - 500 ft/min.	
3 - DE ICE SYSTEM	As required
Refer to Chapter 4.5	
"PARTICULAR PROCEDURES"	

CAUTION
IF HEAVY PRECIPITATION, TURN IGNITION AND INERT SEP ON

The maximum speed for changing the position of the inertial separator is 200 KIAS. Prior to descending into or through known or suspected icing conditions, select "INERT SEP" switch "ON" prior to accelerating beyond 200 KIAS. There are no special speed limitations with the inertial separator secured in either position.

CAUTION
USE OF CONTROL REVERSE BETA (β) RANGE (BEHIND THE FLIGHT IDLE POSITION) IS PROHIBITED DURING FLIGHT



AMPLIFIED PROCEDURES

DESCENT (2/2)

- 4 - Windshield misting protection system **As required**
 Prior to descent in moist conditions, turn "AIR FLOW" distributor in DEFOG section and set WINDSHIELD switches to "ON" to avoid canopy misting.
 If misting continues, set "AIR FLOW" distributor to "HOT" or refer to Chapter 3.12 Paragraph "WINDSHIELD MISTING OR INTERNAL ICING".
- 5 - Fuel
 - Gages **CHECK**
(Quantity / Symmetry)
 - Fullest tank **SELECT**
- 6 - Passengers briefing **As required**
- 7 - Seats, belts and harnesses **LOCKED**

AMPLIFIED PROCEDURES

BEFORE LANDING (1/2)

Long final

- 1 - Altimeters **CHECK**
- 2 - Fuel
 - Gages **CHECK**
(Quantity / Symmetry)
 - Fullest tank **SELECT**
Maximum tolerated dissymmetry is 15 us gal (57 Litres).
- 3 - "INERT SEP" switch (IAS ≤ 200 KIAS) **ON**
- 4 - Propeller lever **MAX RPM**
- 5 - Landing gear control (IAS ≤ 178 KIAS) **DN**

During the sequence :

- The red warning light flashes ; it indicates that the landing gear motor is electrically supplied. It goes off when the 3 landing gears are locked. If the red warning light is fixed ON, there is a discrepancy (refer to EMERGENCY PROCEDURES).
- It is possible that the 3 landing gear position green indicator lights flash uncertainly then come on at the end of the sequence, indicating that the landing gears are locked in down position.
- Green indicator lights **ON**
- 6 - Flaps (IAS ≤ 178 KIAS) **TO**
- 7 - Lights
 - "L.LDG / TAXI / R.LDG" **ON**



AMPLIFIED PROCEDURES

BEFORE LANDING (2/2)

8 - Autopilot **OFF**
Autopilot must be disconnected at the latest at 200 ft above the ground or at decision height or before go-around, whichever is the highest.

9 - Radar switch (if installed) **SBY**

Short final

10 - Flaps (IAS \leq 122 KIAS) **LDG**
However, when autopilot is engaged, in APR mode, with coupled GS, flaps must be extended in landing position before crossing the OUTER MARKER.

11 - Approach speed
(Flaps LDG) Weight < 6250 lbs (2835 kg) : **80 KIAS**
Weight \geq 6250 lbs (2835 kg) : **85 KIAS**

To ensure positive and rapid engine response to throttle movement, it is recommended that a minimum of 10 % torque be maintained on final approach until landing is assured.

12 - "YAW DAMPER" push-button **OFF**
The pilot effort required to use the rudder pedals is reduced if the yaw damper is turned off. This is particularly significant when landing in a crosswind.

AMPLIFIED PROCEDURES

LANDING

- 1 - Power lever **IDLE**
Avoid three-point landings. Adopt a positive flight attitude in order to touch runway first with main landing gear.

After wheels touch

- 2 - Reverse **As required**
(Reverse may be applied as soon as the wheels touch the ground.)
To avoid ingestion of foreign objects, come out the reverse as speed reduces and use the brakes if necessary for further deceleration.
High power reverse at low speed can throw loose material into the air, and can cause control problems and decrease the comfort of crew and passengers. If permitted by the runway length, it is better to adopt a moderate reverse.

CAUTION

ON SNOWY OR DIRTY RUNWAY, IT IS BETTER NOT TO USE REVERSE

- 3 - Brakes **As required**
It is advised not to brake energetically, as long as speed has not reached 40 KIAS, as otherwise wheels may be locked.

AMPLIFIED PROCEDURES

GO-AROUND (1/2)

- 1 - Simultaneously
 - Power lever **TRQ = 100 %**
 - Attitude **7.5°**

The airplane will tend to yaw to the left when power is applied. Right rudder pressure will be required to maintain coordinated straight flight until the rudder trim can be adjusted.

- 2 - Flaps **TO**

Weight below 6579 lbs (2984 kg)

If speed has been maintained at 80 KIAS or more and TRQ 100 %, select TO flaps as soon as the 7.5° attitude has been attained.

If the vertical speed is positive and if IAS is at or above 85 KIAS :

- 3 - Landing gear control **UP**
All warning lights OFF

If IAS is at or above 110 KIAS :

- 4 - Flaps **UP**

- 5 - Climb speed **AS REQUIRED**

Weight above 6579 lbs (2984 kg)

If speed has been maintained at 85 KIAS or more and TRQ 100 %, select TO flaps as soon as the 7.5° attitude has been attained.

If the vertical speed is positive and if IAS is at or above 90 KIAS :

- 6 - Landing gear control **UP**
All warning lights OFF



AMPLIFIED PROCEDURES

GO-AROUND (2/2)

If IAS is at or above 115 KIAS :

7 - Flaps **UP**

In case of air leak between the solenoïd valve and the torque limiter, the available torque might be below 100 %. Consequently, it is strongly recommended not to select "850" :

- for a new approach or visual circuit
- for staying below 1500 ft AGL

8 - Climb speed **AS REQUIRED**

AMPLIFIED PROCEDURES

TOUCH AND GO	
<i>After wheels touch</i>	
1 - Flaps	TO Check that flaps have well reached the TO position before increasing power. Do not increase power with full flaps, as airplane may lift off prematurely at low speed.
2 - Elevator trim	Green sector To use elevator trim manual control is faster than to use electric control. Ensure that runway length is sufficient to complete this sequence.
3 - Power lever	Display TRQ = 100 %
4 - Takeoff	ROTATION : See "Takeoff distances" Chapter 5.9
- Normal takeoff	ATTITUDE : 7.5°
- Short takeoff	. Weight < 6579 lbs (2984 kg)
	ATTITUDE : 15°
	. Weight ≥ 6579 lbs (2984 kg)
	ATTITUDE : 12.5°
Rotation speed at takeoff, according to airplane weight, is also given in Chapter 5.9.	
However, the pilot's operating handbook does not supply distances concerning touch and go. These distances are let to pilot's initiative.	
In case of air leak between the solenoïd valve and the torque limiter, the available torque might be below 100 %. Consequently, it is strongly recommended not to select "850" position of the flap control lever :	
- for a new approach or visual circuit	
- for staying below 1500 ft AGL	

AMPLIFIED PROCEDURES

AFTER LANDING	
RUNWAY CLEAR - AIRPLANE STOPPED	
1 - DE ICE SYSTEM panel	
- "AIRFRAME DE ICE" switch	OFF
- "PROP DE ICE" switch	OFF
- "INERT SEP" switch	CHECKED ON
It is highly recommended to use inertial separator during all ground operations.	
- "L.WINDSHIELD" switch	As required
- "R.WINDSHIELD" switch	As required
- "PITOT 1 HTR" switch	OFF
- "PITOT 2 & STALL HTR" switch	OFF
2 - Radar switch (if installed)	CHECKED SBY
Maintain radar (if installed) on SBY in order not to generate radiations prejudicial to outside persons.	
3 - Transponder	SBY
4 - Flaps	UP
5 - Lights	
- "L.LDG / R.LDG"	OFF
- "TAXI"	ON
6 - "STROBE" switch	OFF
7 - "OXYGEN" switch	OFF

AMPLIFIED PROCEDURES

SHUT-DOWN (1/3)

- | | |
|---|-------------------------------|
| 1 - Parking brake | SET |
| | ON |
| | OFF |
| 2 - "TAXI" light | OFF |
| 3 - Pressurization | |
| - "BLEED" switch | OFF |
| - Check for cabin depressurization | |
| 4 - "FAN FLOW" switch | As required |
| 5 - "AIR COND" switch | OFF |
| 6 - Condition lever | HI /IDLE |
| 7 - Power lever | IDLE for 2 minutes |
| This allows the engine to stabilize at minimum obtainable ITT in order to minimize the likelihood of oil coking in the #3 bearing area. | |
| 8 - GYRO INST panel | |
| - All switches | OFF |
| 9 - "EFIS MASTER" switch | OFF |
| 10 - "AP / TRIMS MASTER" switch | OFF |
| 11 - "RADIO MASTER" switch | OFF |
| 12 - Propeller governor lever | FEATHER for 15 seconds |
| Keep propeller governor lever on FEATHER position for 15 seconds minimum before shutting down engine. | |



AMPLIFIED PROCEDURES

SHUT-DOWN (2/3)

13 - Condition lever **CUT OFF**

<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">IN CASE OF SHUT-DOWN ON A CONTAMINATED AREA :</p> <p>- Condition lever CUT OFF</p> <p>- Propeller governor lever FEATHER</p>
--

14 - Fuel
When fuel pressure is below 10 psi ± 2 psi, check "AUX BP" pump is operating.

- "AUX BP" switch **OFF**
- "FUEL SEL" switch **MAN**
- Tank selector **OFF**

15 - "INERT SEP" switch **OFF**

16 - INT LIGHTS panel
- All switches **OFF**

17 - EXT LIGHTS panel
- All switches **OFF**

18 - "GENERATOR" selector **OFF**

19 - "SOURCE" selector **OFF**

<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">IN CASE OF HIGH OAT [ABOVE 35°C (95° F)], MOTORING FOR UP TO 30 SECONDS IS REQUIRED AFTER ENGINE SHUT-DOWN TO PREVENT OIL COKING AND COOL THE ENGINE BEARINGS. REFER TO PROCEDURE "MOTORING".</p>



AMPLIFIED PROCEDURES

SHUT-DOWN (3/3)

- 20 - Oxygen cylinder (right wing fairing) **Close**
- 21 - Install air inlet and static port plugs, and exhaust and pitot covers.

NOTE :

Be careful of exhaust stubs temperature before installing covers.

NOTE :

Within 10 minutes following the engine shutdown, check engine oil level. Refer to Chapter 8.7 "Oil level check".

INTENTIONALLY LEFT BLANK

4.5 - PARTICULAR PROCEDURES

REMARK :

The procedures and procedure elements given in this Chapter "PARTICULAR PROCEDURES" supplement the normal procedures or complete certain elements of the normal procedures described in Chapter(s) 4.3 and/or 4.4.

■ FLIGHT INTO KNOWN ICING CONDITIONS (1/5)

General

- 1 - Icing conditions exist when the IOAT on the ground or in flight is + 13°C or below, and visible moisture in any form is present (clouds, fog with visibility of one mile (1.6 km) or less, rain, snow, sleet or ice crystals).
- 2 - Icing conditions also exist when the IOAT on the ground is + 13°C or below and when operating on ramps, taxiways or runways where surface snow, ice, standing water or slush may be ingested by the engine or freeze on engine or cowlings.

NOTE :

Refer to Figure 5.5.1 to convert IOAT to SAT in flight.

$SAT = IOAT - 2^{\circ}C$ on the ground.

- 3 - Flight into known icing conditions is authorized when all airplane equipment provided for ice protection is operating correctly. This includes :
 - Pneumatic deice system for inboard and outboard wing, for stabilizers and for elevator horns.
 - Propeller electrical deice system.
 - Electrical heating system for both pitots and for the stall warning incidence sensor.
 - Windshield electrical deice system.
 - Inertial separator.

Description of deice systems is presented in Chapter 7.13.

Ice accumulation thickness is monitored by the pilot on the L.H. wing leading edge.

At night, a leading edge icing inspection light located on the fuselage L.H. side, activated by the "ICE LIGHT" switch, is provided.

PARTICULAR PROCEDURES

FLIGHT INTO KNOWN ICING CONDITIONS (2/5)

Boots are automatically cycling at the optimum time to assure proper ice removal. Correct operation of the system can be checked observing the corresponding green advisory light illumination at each boot inflation impulse. If correct operation cannot be confirmed, do not enter or leave as soon as possible icing conditions.

Apply "LEADING EDGES DEICING FAILURE" emergency procedure.

Ice protection procedures

1 - Prior to entering IMC, as a preventive :

If IOAT ≤ 13° C :

- "INERT SEP" switch **ON**
- "IGNITION" switch **ON**
- "PROP DE ICE" switch **ON**
- "AIRFRAME DE ICE" switch **ON**
- "WINDSHIELD DE ICE" switch **ON**

2 - When operating under IMC :

- "INERT SEP" switch **ON**
- "IGNITION" switch **ON**
- "PROP DE ICE" switch **ON**
- "AIRFRAME DE ICE" switch **ON**
- "WINDSHIELD DE ICE" switch **ON**

NOTE :

When IOAT is below - 25° C, avoid operations of the "AIRFRAME DEICE SYSTEM" for a too long period because the boots could be damaged. The "INERT SEP" switch must be left ON while the airplane remains in icing conditions.

PARTICULAR PROCEDURES

■ **FLIGHT INTO KNOWN ICING CONDITIONS (3/5)****CAUTION**

SHOULD CONDITIONS REQUIRE IT, APPLY THESE DIRECTIVES FROM BEGINNING OF TAXI ONWARDS

CAUTION

DO NOT OPERATE THE INERTIAL SEPARATOR IF THE AIRSPEED EXCEEDS 200 KIAS. THERE IS NO SPEED LIMITATION WHEN THE INERTIAL SEPARATOR IS IN FIXED POSITION

If a high speed descent (> 200 KIAS) is anticipated into known icing conditions, position "INERT SEP" switch to ON before accelerating. This will avoid reducing speed below 200 KIAS during descent to set the inertial separator.

IF AIRPLANE LEAVES ICING CONDITIONS, MAINTAIN "INERT SEP" ON AS LONG AS ICE THICKNESS ON NON-DEICED VISIBLE PARTS EXCEEDS 15 mm (OR ½ INCH)

This will avoid ice fragments coming from propeller spinner and being ingested by engine.

INERTIAL SEPARATOR POSITION AFFECTS ENGINE PARAMETERS (PARTICULARLY TRQ AND ITT). CARE MUST BE EXERCISED WHEN OPERATING THE INERTIAL SEPARATOR OR WHEN INCREASING POWER WITH THE INERTIAL SEPARATOR ON, TO AVOID EXCEEDING ENGINE LIMITATIONS

NOTE :

"IGNITION" switch may be left ON for a long period.

Standby compass indications are altered when windshield deicing system(s) operate(s).

PARTICULAR PROCEDURES

FLIGHT INTO KNOWN ICING CONDITIONS (4/5)

- 3 - Procedures for holding, approach and landing in icing conditions :
 - Minimum recommended speeds are :

	Weight	
	< 6579 lbs (2984 kg)	≥ 6579 lbs (2984 kg)
Flaps UP	130 KIAS	135 KIAS
Flaps TO	110 KIAS	110 KIAS
Flaps LDG	90 KIAS	95 KIAS

- If there is ice on the unprotected surfaces of the airplane, during flight end phase, conduct holding with the flaps up. Use flaps as required for final approach and landing at minimum speeds noted above.

Ice accumulation effects

When ice has accumulated on the unprotected surfaces of the airplane, aerodynamic characteristics may be changed.

Particularly stall speeds may increase by up to :

- Flaps UP 20 KIAS
- Flaps TO 15 KIAS
- Flaps LDG 10 KIAS

Correct operation of the aural stall warning may be altered by severe or prolonged icing.

Indeed, in case of severe or prolonged icing, an ice concretion due to refreezing around the heated stall warning may appear. Above-recommended speeds take into account, on one side, the stall speed increase due to profile shape deterioration and, on the other side, the weight increase of the iced-up airplane (taking as a basis the airplane maximum weight when not iced-up).

PARTICULAR PROCEDURES

FLIGHT INTO KNOWN ICING CONDITIONS (5/5)

Rate of climb values with ice accumulation on the unprotected surfaces are to be decreased by 10 %.

Cruise speeds may be decreased by 10 %, if cruise power is not changed, or more, if cruise power setting should be decreased due to the additional inertial separator limitations (ITT limitation).

Because of the higher landing speed, landing distances will be increased. In the landing configuration, using 90 KIAS approach speed increases landing distance by 20 % - refer to Chapter 5.14 "LANDING DISTANCES".

PARTICULAR PROCEDURES

■ FLIGHT INTO SEVERE ICING CONDITIONS (1/2)

THE FOLLOWING WEATHER CONDITIONS MAY BE CONDUCTIVE TO SEVERE IN-FLIGHT ICING :

- Visible rain at temperatures below 0°C ambient air temperature,
- Droplets that splash or splatter on impact at temperatures below 0°C ambient air temperature.

Procedures for exiting the severe icing environment

REMARK :

These procedures are applicable to all flight phases from takeoff to landing.

Monitor the ambient air temperature. While severe icing may form at temperatures as cold as - 18°C, increased vigilance is warranted at temperatures around freezing with visible moisture present. If the visual cues specified in Section 2 "Limitations" for identifying severe icing conditions are observed, accomplish the following :

- 1 - Immediately request priority handling from Air Traffic Control to facilitate a route or an altitude change to exit the severe icing conditions in order to avoid extended exposure to flight conditions more severe than those for which the aircraft has been certificated.
- 2 - Avoid abrupt and excessive maneuvering that may exacerbate control difficulties.
- 3 - Do not engage the autopilot.
- 4 - If the autopilot is engaged, hold the control wheel firmly and disengage the autopilot.
- 5 - If an unusual roll response or uncommanded roll control movement is observed, reduce the angle-of-attack.

PARTICULAR PROCEDURES

FLIGHT INTO SEVERE ICING CONDITIONS (2/2)

- 6 - Do not extend flaps when holding in icing conditions. Operation with flaps extended can result in a reduced wing angle-of-attack, with the possibility of ice forming on the upper surface further aft on the wing than normal, possibly aft of the protected area.
- 7 - If the flaps are extended, do not retract them until the airframe is clear of ice.
- 8 - Report these weather conditions to Air Traffic Control.

PARTICULAR PROCEDURES

FLIGHT UNDER HEAVY PRECIPITATIONS

- 1 - "IGNITION" switch **ON**
This action is intended, in highly improbable case of an engine flame-out further to an important ingestion, to ensure immediate restarting without action of the pilot.
- 2 - "INERT SEP" switch **ON**

UTILIZATION ON RUNWAYS COVERED WITH WATER

If takeoff or landing must be performed on a runway covered with water :

- 1 - "IGNITION" switch **ON**
- 2 - "INERT SEP" switch **ON**

PARTICULAR PROCEDURES

UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT TAMPED SNOW (1/2)

Refer if required to paragraph "UTILIZATION BY COLD WEATHER AND VERY COLD WEATHER".

Preflight inspection

- 1 - Remove any snow or ice from the wings, stabilizers and movable surfaces, landing gear wells and gear doors, as well as flap tracks, actuators and their fairings.
- 2 - Spray anti-icing fluid on the wings, stabilizers and movable surfaces (upper and lower surfaces) and in the landing gear wells, shortly before takeoff.

Taxiing

- 1 - "INERT SEP" switch **ON**
- 2 - Taxi at very slow speed (max. 5 KIAS), flaps up, brake occasionally to maintain the brake pads warm (this will prevent any subsequent locking due to freezing after takeoff).

Before takeoff

- 1 - If the runway is long enough, takeoff should be performed with the flaps in the up position. In that case, rotation speed must be increased by 5 KIAS.

NOTE :

Takeoff distances must be increased to take into account the flap position (+ 15 % compared to the takeoff position) and the runway condition.

The ground roll may be multiplied by 3 in some melting or not tamped snow cases.

- 2 - "IGNITION" switch **ON**
- 3 - "INERT SEP" switch **ON**

PARTICULAR PROCEDURES

**UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT
TAMPED SNOW (2/2)**

Takeoff

- 1 - Lightly lift up nose wheel during takeoff run in order to reduce the forward resistance due to snow accumulation against the wheel.
- 2 - After takeoff, normally retract the landing gear, then perform a complete cycle (extension / retraction) at IAS \leq 128 KIAS.

Before landing

- 1 - "IGNITION" switch **ON**
- 2 - "INERT SEP" switch **ON**

Touch and Go

Prohibited

On the ramp, after landing or taxiing :

- 1 - Do not use the parking brake to prevent brake lock.
- 2 - Use chocks and / or tie-down the airplane.

PARTICULAR PROCEDURES

UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS (1/2)

Refer if required to paragraph "UTILIZATION BY COLD WEATHER AND VERY COLD WEATHER".

Preflight inspection

- 1 - Remove any snow or ice from the wings, stabilizers and movable surfaces, landing gear wells and gear doors, as well as flap tracks, actuators and their fairings.
- 2 - Spray anti-icing fluid on the wings, stabilizers and movable surfaces (upper and lower surfaces), shortly before takeoff.

Taxiing

- 1 - "INERT SEP" switch ON
- 2 - Taxi at very slow speed (max. 5 KIAS).
Use β area of power lever to adjust speed.
Apply very smooth variations using power lever.
- 3 - Steer the airplane using the rudder.
Make turns at a very low speed, engine torque tends to make the airplane turn to the left.
- 4 - Use brakes only at very low speed and progressively.

Before takeoff

- 1 - "IGNITION" switch ON
- 2 - "INERT SEP" switch ON

Takeoff

- 1 - After takeoff, normally retract the landing gear, then perform a complete cycle (extension / retraction) at IAS \leq 128 KIAS.

Before landing

- 1 - "IGNITION" switch ON
- 2 - "INERT SEP" switch ON

PARTICULAR PROCEDURES

UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS (2/2)

Landing

After wheel touch

- 1 - Use reverse only if necessary and very progressively by monitoring the airplane behaviour.
The engine torque tends to make the airplane turn to the left.
- 2 - Taxi at very slow speed (max. 5 KIAS).
Use β area of power lever to adjust speed.
Apply very smooth variations using power lever.
- 3 - Steer the airplane using the rudder.
Make turns at a very low speed, engine torque tends to make the airplane turn to the left.
- 4 - Use brakes only at very low speed and progressively.

On the ramp, after landing or taxiing :

- 1 - Do not use the parking brake to prevent brake lock.
- 2 - Use chocks and / or tie-down the airplane.

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (1/10)

REMARK :

The procedures hereafter supplement the normal procedures for the airplane use when operating under temperatures between 0° C and - 40° C on ground.

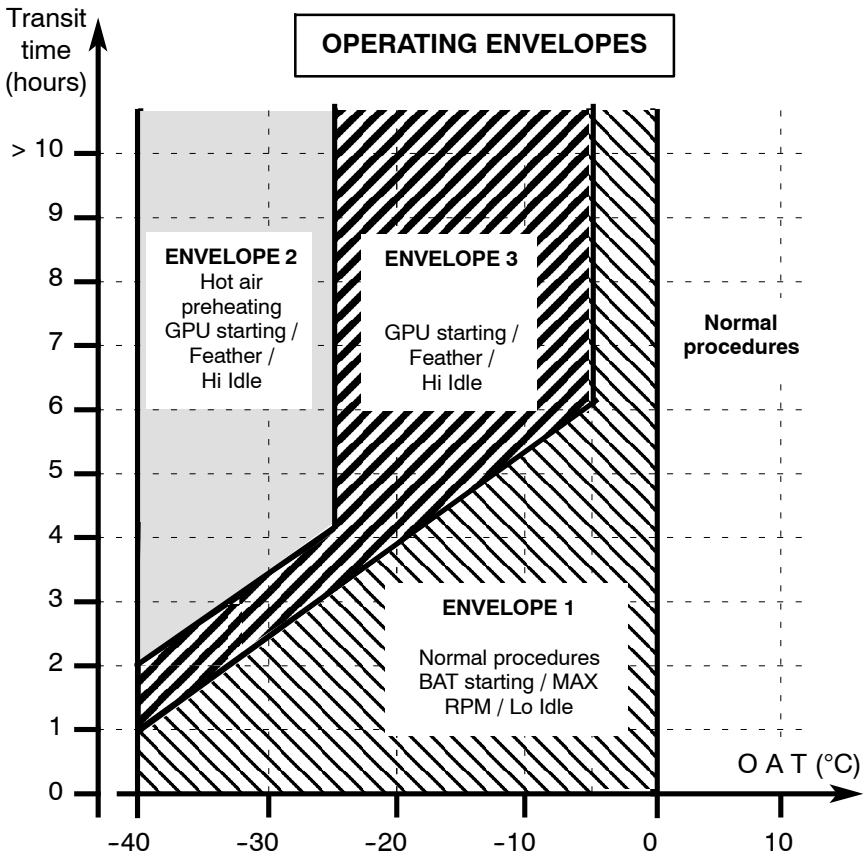


Figure 4.5.1 - OPERATING ENVELOPES BY COLD WEATHER (- 0° C to - 25° C) AND VERY COLD WEATHER (- 25° C to - 40° C)

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (2/10)

ENVELOPE 1

The procedures hereafter supplement the normal procedures for the airplane use when operating in the "envelope 1" defined in Figure 4.5.1.

Preflight inspection

- 1 - Remove any snow or ice from the wings, stabilizers and movable surfaces.

Apply, according to the condition of runways and taxiways, the procedures "UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT TAMPED SNOW" or the procedures "UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS".

- 2 - Carry out a complete rotation of the propeller to check its free rotation.
- 3 - Do not perform a fuel draining. If the airplane is operating permanently under negative temperatures, drainings will have to be performed once a week after having parked the airplane in a heated hangar.
- 4 - Remove chocks and / or release ties from the airplane.
- 5 - Check the free deflection of the flight controls and of the elevator trim.
- 6 - Check the free deflection of the power lever and of the propeller governor lever.

Before starting the engine / Starting the engine / After starting the engine

Apply normal procedures defined in Chapter(s) 4.3 and / or 4.4.

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (3/10)

Taxiing / Before takeoff / Takeoff

- 1 - On "DE-ICE SYSTEM" panel :
 - "INERT SEP" switch **ON**
 - WARNING LIGHT** INERT SEP **ON**
 - "PITOT 1 HTR" switch **ON**
 - "PITOT 2 & STALL HTR" switch **ON**
 - "PROP DE-ICE" switch **ON**
- 2 - Apply normal procedures
- 3 - Apply, according to the condition of runways and taxiways, the procedures "UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT TAMPED SNOW" or the procedures "UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS".

Landing / After landing

- 1 - Apply normal procedures defined in Chapter(s) 4.3 and / or 4.4.
- 2 - Apply, according to the condition of runways and taxiways, the procedures "UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT TAMPED SNOW" or the procedures "UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS".

Shut down

- 1 - Parking brake **RELEASED**
- WARNING LIGHT** PARK BRAKE **OFF**

It is recommended not to use the parking brake by cold or very cold weather, so that the brakes do not stick when cooling.

- 2 - Apply normal procedures defined in Chapter(s) 4.3 and / or 4.4.
- 3 - Use chocks and / or tie-down the airplane using anchor points on ground.
- 4 - Install air inlet and static port plugs, and exhaust and pitot covers.

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (4/10)

ENVELOPE 2

The procedures hereafter supplement or replace the normal procedures for the airplane use when operating in the "envelope 2" defined in Figure 4.5.1.

Preflight inspection

- 1 - Preheat the engine and the cabin.

Preheating the engine and the cabin during at least 30 minutes is necessary using a heater (70°C mini). Hot air pipes must be installed :

- in the air inlet,
- on engine rear table by opening the upper cowling,
- in the cabin by half-opening the door,
- in the R.H. front compartment for the EFIS versions during 10 minutes at the end of the engine preheating.

- 2 - Remove any snow or ice from the wings, stabilizers and movable surfaces.

Apply, according to the condition of runways and taxiways, the procedures "UTILIZATION ON RUNWAYS COVERED WITH MELTING OR NOT TAMPED SNOW" or the procedures "UTILIZATION ON ICY OR COVERED WITH TAMPED SNOW RUNWAYS".

Spray anti-icing fluid on the wings, stabilizers and movable surfaces (upper and lower surfaces), shortly before takeoff.

- 3 - Carry out a complete rotation of the propeller to check its free rotation.
- 4 - Do not perform a fuel draining. If the airplane is operating permanently under negative temperatures, drainings will have to be performed once a week after having parked the airplane in a heated hangar.

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (5/10)

- 5 - Remove chocks and / or release ties from the airplane.
- 6 - Check the free deflection of the flight controls and of the elevator trim.
- 7 - Check the free deflection of the power lever and of the propeller governor lever.



This enables to preheat spark igniters before starting the engine.

Before starting the engine

Apply normal procedures defined in Chapter(s) 4.3 and / or 4.4.

Starting the engine

The starting must be mandatorily performed using an external power source (GPU).

- 1 - Ground power unit
 - 2 - "SOURCE" selector
- | | | | |
|--|---------------|--|----|
| | | CONNECTED | |
| | WARNING LIGHT | <div style="border: 2px solid black; padding: 5px; display: inline-block;">GPU</div> | ON |
| | WARNING LIGHT | <div style="border: 2px solid black; padding: 5px; display: inline-block;">BAT OFF</div> | ON |
- Voltmeter
- VOLTAGE CHECKED**
(V = 28 Volts)

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (6/10)

- 3 - Engine controls
 - "MAN OVRD" control **OFF (Notched)**

CAUTION

WHEN THE ENGINE IS SHUTDOWN, THE POWER LEVER MUST NOT BE MOVED BEHIND THE FLIGHT IDLE POSITION

- Power lever **IDLE**
- Propeller governor lever **Feather**
- Condition lever **CUT OFF**

- 4 - Fuel panel
 - "AUX BP" switch **ON**
 - WARNING LIGHT AUX BP ON **ON**
 - WARNING LIGHT FUEL PRESS **OFF**
 - Fuel pressure indicator **Check**

- 5 - Propeller **AREA CLEAR**

- 6 - "ENGINE START" panel
 - "IGNITION" switch **ON**
 - WARNING LIGHT IGNITION **ON**
 - "STARTER" switch **ON**
 - WARNING LIGHT STARTER **FLASHING**

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (7/10)

Ng ≈ 13 %

- Condition lever **HI / IDLE**

Move directly condition lever to HI / IDLE

NOTE :

The more the temperature is low, the more the selector is hard to move.

Starter limits and checks of starting sequence are unchanged.

7 - Engine instruments **Check NG = 69 % (± 2 %)**
(Oil pressure / ITT = green sector)

8 - "SOURCE" selector **BAT**
WARNING LIGHT **BAT OFF** OFF

9 - "IGNITION" switch **AUTO**
WARNING LIGHT **IGNITION** OFF

10 - Ground power unit **HAVE IT DISCONNECTED**
WARNING LIGHT **GPU** OFF

11 - "FUEL" panel
- "AUX BP" switch **AUTO**
WARNING LIGHT **AUX BP ON** OFF

12 - Generator **WARNING LIGHT** **MAIN GEN** OFF
RESET if necessary

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (8/10)

After starting the engine

- 1 - On "ECS" panel

As soon as the current flow is lower than 100 A :

- "BLEED" switch **HI**
- "CABIN TEMP/°C" selector **FULL HOT**

- 2 - Propeller governor lever

As soon as the oil temperature is greater than 0°C :

- Propeller governor lever **MAX. RPM**
- Perform 2 propeller regulations

- 3 - Apply normal procedures defined in Chapter(s) 4.3 and / or 4.4.

Taxiing / Before takeoff / Takeoff

Apply procedures defined for Envelope 1.

Landing / After landing / Shut down

Apply procedures defined for Envelope 1.

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (9/10)**ENVELOPE 3**

The procedures defined for the "envelope 2" are also applicable for the "envelope 3". However it is possible to start the engine using GPU **without preheating of the engine and the cabin** with a heater. In that case the procedure "After starting the engine" is modified as follows :

Preflight inspection / Before starting the engine / Starting the engine

Apply the procedures defined for the Envelope 2.

After starting the engine

- 1 - "ECS" panel

As soon as the current flow is lower than 100 A :

- "BLEED" switch **HI**
- "CABIN TEMP/°C" selector **FULL HOT**

Preheat the cabin respecting time defined in Figure 4.5.2 before switching on the navigation and monitoring systems. This allows to respect minimum temperatures necessary for the equipment operation.

- 2 - Propeller governor lever

As soon as the oil temperature is greater than 0°C :

- Propeller governor lever **MAX. RPM**
- Perform 2 propeller regulations

- 3 - Apply normal procedures defined in Chapter(s) 4.3 and / or 4.4.

PARTICULAR PROCEDURES

UTILIZATION BY COLD WEATHER (- 0° C TO - 25° C) AND VERY COLD WEATHER (- 25° C TO - 40° C) (10/10)

Taxiing / Before takeoff / Takeoff

Apply procedures defined for Envelope 1.

Landing / After landing / Shut down

Apply procedures defined for Envelope 1.

Complement

If landing is foreseen by cold or very cold weather, or in case of prolonged operation of the airplane in such conditions, it is recommended to prepare the airplane as specified in Chapter 8.9.

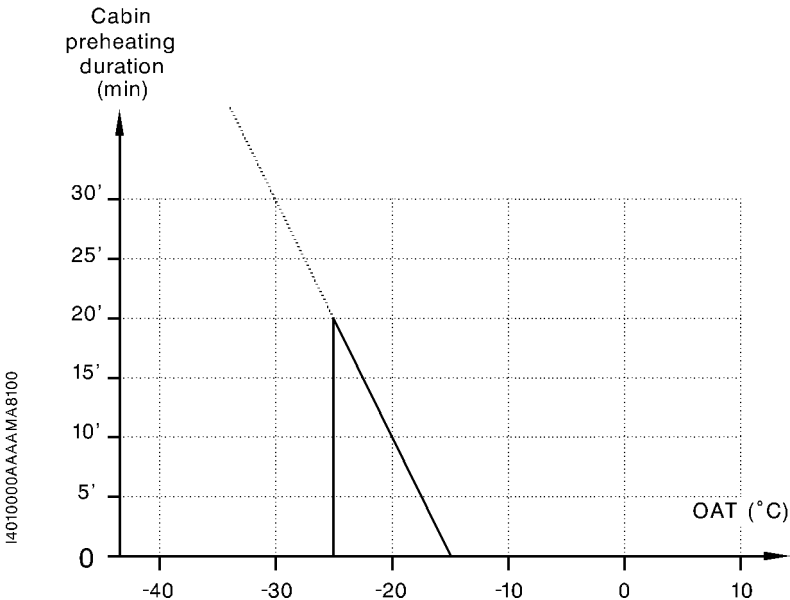


Figure 4.5.2 - PREHEATING DURATION

PARTICULAR PROCEDURES

LANDING PROCEDURE WITH STRONG HEADWIND OR CROSSWIND (1/2)

If landing must be performed with strong headwind or crosswind, increase approach speed by the greatest of these 2 following values :

$$- \Delta V = \frac{(\text{HEADWIND} - 10)}{2} \quad (\text{Ex. HEADWIND} = 30 \text{ kt i.e. } \Delta V = 10 \text{ kt})$$

- Gust amplitude

Use flaps LDG.

It is not desirable to adopt configuration with flaps TO. Lateral control is not improved, and flare phase is lengthened in time and in distance, with increase of piloting difficulties and landing performance.

During approach with crosswind, maintain airplane in drift correction at the latest until the beginning of flare.

CAUTION**MAXIMUM SIDESLIP DURATION IS 30 SECONDS.**

In short final, on a short runway, it is necessary to use normal approach speed (80 KIAS) with flaps LDG, in order to avoid an excessive speed. Indeed, in this case, landing distance indicated in Chapter 5.14, would not be respected.

Before touch-down, generate a slideslip with the rudder in order to align fuselage with the runway (ie left crosswind, left wing low).

Do not use or select the fuel tank on the low wing side during prolonged sideslips with a fuel low warning or gage indicating low.

Retract flaps immediately after landing.

Flap travel is slow and will not have an appreciable effect on landing performance.

PARTICULAR PROCEDURES

LANDING PROCEDURE WITH STRONG HEADWIND OR CROSSWIND (2/2)

Do not try to stabilize the airplane by pushing down the elevator control just after the touch ; this operation may provide pitch oscillations while increasing the yaw movement to the wind.

Do not deflect ailerons into wind while taxiing. This will raise spoilers and have a detrimental effect. A good solution is to maintain ailerons to neutral position during second taxi phase after landing and during first taxi phase before takeoff.

Maximum demonstrated crosswind for landing is 20 kt.

The most restrictive situation is as follows :

- takeoff with wind coming from the left,
- wet runway,
- aft C.G.

PARTICULAR PROCEDURES

UTILIZATION ON GRASS RUNWAY

CAUTION

**THE SMALL WHEELS OF THE AIRPLANE AND ITS WEIGHT MAY
LEAD IT TO SINK IN SOPPY OR LOOSE GROUND**

Before planning the landing, ensure that the field is hard, smooth and dry enough. Landing and, a fortiori, takeoff shall not be envisaged if any doubt exists about the condition of such a runway.

Particular directives

TAXI / TAKEOFF

- 1 - "INERT SEP" switch **ON**
- 2 - Reverse **Do not use**
In fact, on a flat runway with grass, it is necessary to adopt a power greater than the one obtained when the power lever is set to IDLE, so the pilot will not be tempted to use the reverse.

LANDING

- 1 - "INERT SEP" switch **ON**

After wheel touch down :

- 2 - Reverse **Only if necessary**

Do not maintain reverse at speeds below 40 KIAS to avoid ingestion of foreign matter.

Indeed, under this speed, using the reverse makes a cloud of solid particles (dusts, sand, gravels, trocken grass, and so on ...) appear around the front face of the airplane. This will damage the propeller and, after ingestion, the engine internal components (compressor and turbine blades).

PARTICULAR PROCEDURES

OPERATION IN RVSM CONDITIONS

After altitude capture, in altitude hold mode of the autopilot, discrepancy between desired altitude and held altitude must be adjusted using the vertical trim control in order not to exceed ± 20 ft.

In RVSM area, the transponder # 1 must be used first.

SECTION 5

PERFORMANCE

TABLE OF CONTENTS

	Page
5.1 GENERAL	5.1.1
5.2 NOISE LEVEL	5.2.1
5.3 AIRSPEED CALIBRATION	5.3.1
5.4 CABIN PRESSURIZATION ENVELOPE	5.4.1
5.5 SAT - IOAT CONVERSIONS	5.5.1
5.6 STALL SPEEDS	5.6.1
5.7 WIND COMPONENTS	5.7.1
5.8 ENGINE OPERATION	5.8.1
Maximum climb power (FL ≤ 200)	5.8.2
Maximum climb power (FL ≥ 200)	5.8.3
Climb at 700 SHP power (FL ≤ 200)	5.8.4
Climb at 700 SHP power (FL ≥ 200)	5.8.5
Maximum cruise power (FL ≤ 200)	5.8.6
Maximum cruise power (FL ≥ 200)	5.8.7
Normal (recommended) cruise power (FL ≤ 200)	5.8.8
Normal (recommended) cruise power (FL ≥ 200)	5.8.9
5.9 TAKEOFF DISTANCES	5.9.1
Weight : 5512 lbs (2500 kg)	5.9.1
Weight : 6579 lbs (2984 kg)	5.9.2
Weight : 7394 lbs (3354 kg)	5.9.3
5.10 CLIMB PERFORMANCE	5.10.1
MXCL - SPEEDS (IAS = 130 KIAS)	5.10.1
MXCL - SPEEDS (IAS = 160 KIAS)	5.10.2
700 SHP - CLIMB SPEEDS (IAS = 130 KIAS)	5.10.3
700 SHP - CLIMB SPEEDS (IAS = 160 KIAS)	5.10.4

TABLE OF CONTENTS

(Continued)

	Page
MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)	5.10.5
MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)	5.10.8
700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)	5.10.11
700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)	5.10.14
CLIMB PERFORMANCE AFTER GO-AROUND	5.10.17
CLIMB PERFORMANCE - FLAPS TO	5.10.18
5.11 CRUISE PERFORMANCE	5.11.1
Maximum cruise	5.11.1
Normal (recommended) cruise	5.11.9
Long Range cruise (5500 lbs - 2495 kg) (Altitude ≤ 24000 ft) ..	5.11.17
Long Range cruise (5500 lbs - 2495 kg) (Altitude ≥ 24000 ft) ..	5.11.18
Long Range cruise (6300 lbs - 2858 kg) (Altitude ≤ 24000 ft) ..	5.11.19
Long Range cruise (6300 lbs - 2858 kg) (Altitude ≥ 24000 ft) ..	5.11.20
Long Range cruise (7100 lbs - 3220 kg) (Altitude ≤ 24000 ft) ..	5.11.21
Long Range cruise (7100 lbs - 3220 kg) (Altitude ≥ 24000 ft) ..	5.11.22
5.12 TIME, CONSUMPTION AND DESCENT DISTANCE	5.12.1
5.13 HOLDING TIME	5.13.1
5.14 LANDING DISTANCES	5.14.1
Weight : 7024 lbs (3186 kg)	5.14.1
Weight : 6250 lbs (2835 kg)	5.14.2
Weight : 5071 lbs (2300 kg)	5.14.3

5.1 - GENERAL

This Section provides all of the required and additional performance data for airplane operations.

The Section 9, "Supplements" of the Pilot's Operating Handbook, provides specific airplane performance associated with optional equipment and systems.

INTENTIONALLY LEFT BLANK

5.2 - NOISE LEVEL

	Maximum noise level permissible	Demonstrated noise level
FAR PART 36, Appendix G - Amdt 25	88 dB(A)	79.6 dB(A)
ICAO, Annex 16, Vol. 1, 3rd edition, Amdt 8 Chapter 10, Appendix 6	85 dB(A)	79.2 dB(A)

Approved noise levels for TBM 850 are stated in EASA.A.010 Type Certificate Data Sheet.

NOTE :

No determination has been made by the Federal Aviation Administration that the noise levels of this airplane are or should be acceptable or unacceptable for operation at, into or out of any airport.

INTENTIONALLY LEFT BLANK

5.2 - NOISE LEVEL

	Maximum noise level permissible	Demonstrated noise level
FAR PART 36, Appendix G - Amdt 25	88 dB(A)	79.6 dB(A)
ICAO, Annex 16, Vol. 1, 3rd edition, Amdt 8 Chapter 10, Appendix 6	85 dB(A)	79.2 dB(A)

Approved noise levels for TBM 850 are stated in EASA.A.010 Type Certificate Data Sheet.

INTENTIONALLY LEFT BLANK

5.3 - AIRSPEED CALIBRATION

NOTE :

Indicated airspeeds (IAS) : instrument error supposed to be null (power configuration for cruise condition flight).

FLAPS UP LDG GR UP		FLAPS TO LDG GR DN		FLAPS LDG LDG GR DN	
KIAS	KCAS	KIAS	KCAS	KIAS	KCAS
125	127	70	69	60	58
150	152	80	80	70	68
175	177	90	90	80	78
200	205	100	101	90	88
225	228	120	121	100	98
250	253	140	141	110	108
266	271	160	162	120	118
MPH IAS	MPH CAS	MPH IAS	MPH CAS	MPH IAS	MPH CAS
144	146	81	79	69	67
173	175	92	92	81	78
201	204	104	104	92	90
230	233	115	116	104	101
259	262	138	139	115	113
288	292	161	162	127	124
307	311	184	187	138	136

Figure 5.3.1 - NORMAL STATIC SOURCE

FLAPS UP LDG GR UP		FLAPS TO LDG GR DN		FLAPS LDG LDG GR DN	
KIAS	KCAS	KIAS	KCAS	KIAS	KCAS
125	124	70	70	60	59
150	149	80	80	70	69
175	174	90	90	80	79
200	199	100	100	90	90
225	224	120	120	100	100
250	249	140	139	110	110
271	270	160	159	120	120
MPH IAS	MPH CAS	MPH IAS	MPH CAS	MPH IAS	MPH CAS
144	142	81	81	69	68
173	171	92	92	81	79
201	200	104	104	92	91
230	229	115	115	104	104
259	258	138	138	115	115
288	287	161	160	127	127
312	311	184	183	138	138

Figure 5.3.2 - ALTERNATE STATIC SOURCE (BLEED AUTO)

5.4 - CABIN PRESSURIZATION ENVELOPE

NOTE :

The cabin pressurization envelope below characterizes the cabin altitude that could be sustained by the fuselage at different flight levels. The curve shows the minimum cabin altitude as a function of flight level, corresponding to the maximum differential pressure. The maximum differential pressure is limited by the pressurization system protection function.

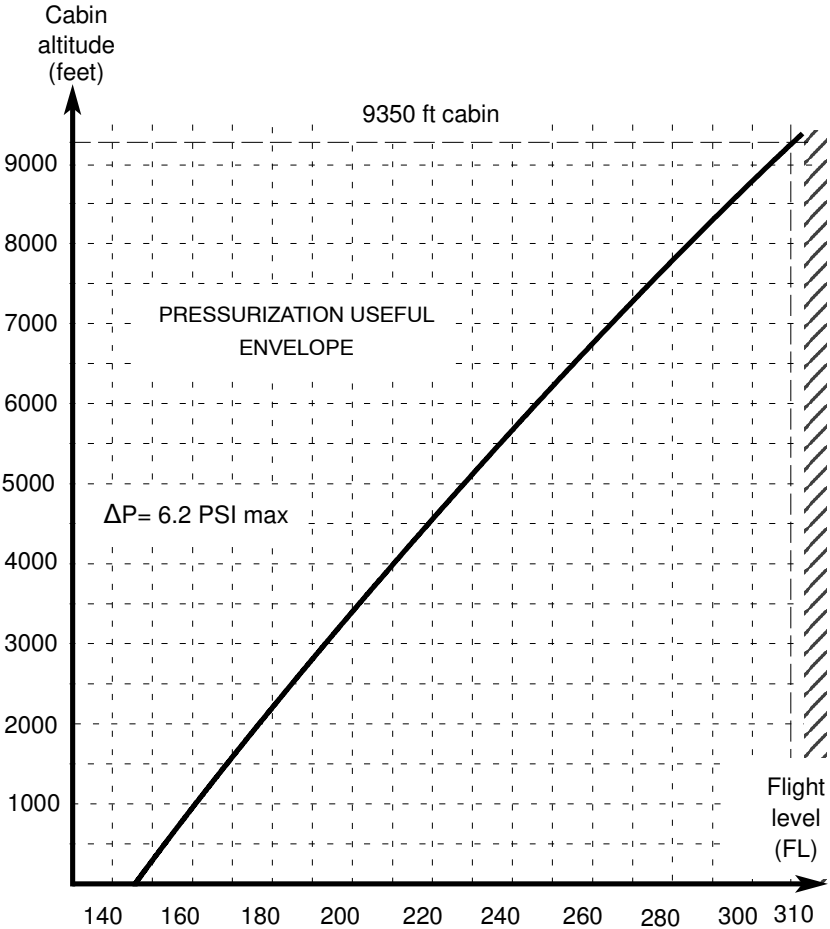


Figure 5.4.1 - CABIN PRESSURIZATION ENVELOPE

INTENTIONALLY LEFT BLANK

5.5 - SAT - IOAT CONVERSIONS

NOTE :

These indicated temperatures are available for stabilized cruise at normal operating power.

Pressure altitude (feet)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
	SAT	IOAT	SAT	IOAT	SAT	IOAT	SAT	IOAT	SAT	IOAT
SL	- 05	02	05	12	15	22	25	32	35	42
2000	- 09	- 02	01	08	11	18	21	28	31	38
4000	- 13	- 06	- 03	04	07	14	17	25	27	35
6000	- 17	- 10	- 07	00	03	11	13	21	23	31
8000	- 21	- 13	- 11	- 03	- 01	07	09	17	19	27
10000	- 25	- 17	- 15	- 07	- 05	03	05	13	15	23
12000	- 29	- 21	- 19	- 11	- 09	- 01	01	10	11	20
14000	- 33	- 25	- 23	- 14	- 13	- 04	- 03	06	07	16
16000	- 37	- 28	- 27	- 18	- 17	- 08	- 07	02	03	12
18000	- 41	- 32	- 31	- 22	- 21	- 12	- 11	- 01	- 01	08
20000	- 45	- 36	- 35	- 26	- 25	- 15	- 15	- 05	- 05	04
22000	- 48	- 39	- 38	- 29	- 28	- 19	- 18	- 09	- 08	00
24000	- 52	- 43	- 42	- 33	- 32	- 23	- 22	- 13	- 12	- 04
26000	- 56	- 47	- 46	- 36	- 36	- 27	- 26	- 17	- 16	- 08
28000	- 60	- 50	- 50	- 40	- 40	- 31	- 30	- 21	- 20	- 12
30000	- 64	- 54	- 54	- 45	- 44	- 35	- 34	- 26	- 24	- 16
31000	- 66	- 58	- 56	- 49	- 46	- 39	- 36	- 30	- 26	- 20

Figure 5.5.1 - SAT - IOAT CONVERSIONS

INTENTIONALLY LEFT BLANK

5.6 - STALL SPEEDS


AIR- PLANE WEIGHT	CONFIG.		BANK											
	FLIGHT IDLE		0°			30°			45°			60°		
	LDG GR	Flaps	KIAS	KCAS	MPH IAS	KIAS	KCAS	MPH IAS	KIAS	KCAS	MPH IAS	KIAS	KCAS	MPH IAS
4850 lbs (2200 kg)	UP	UP	65	66	75	70	71	81	78	79	90	91	93	105
	DN	TO	62	63	71	67	68	77	73	75	84	87	89	100
	DN	LDG	53	53	61	57	57	66	63	63	73	75	75	86
5512 lbs (2500 kg)	UP	UP	70	71	81	75	76	86	82	84	94	98	100	113
	DN	TO	66	67	76	71	72	82	78	80	90	93	95	107
	DN	LDG	57	57	66	61	61	70	68	68	78	81	81	93
6579 lbs (2984 kg)	UP	UP	75	76	86	80	82	92	88	90	101	105	107	121
	DN	TO	71	72	82	75	77	86	84	86	97	100	102	115
	DN	LDG	61	61	70	66	66	76	73	73	84	86	86	99
7394 lbs (3354 kg)	UP	UP	81	83	93	88	89	101	97	99	112	119	117	137
	DN	TO	77	77	89	81	83	93	91	92	105	108	109	124
	DN	LDG	65	65	75	69	70	79	76	77	88	92	92	106

Figure 5.6.1 - STALL SPEEDS

INTENTIONALLY LEFT BLANK

5.7 - WIND COMPONENTS

EXAMPLE : Angle between wind direction and flight path : 50°
Headwind : 8 kts
Crosswind : 10 kts
Wind speed : 13 kts

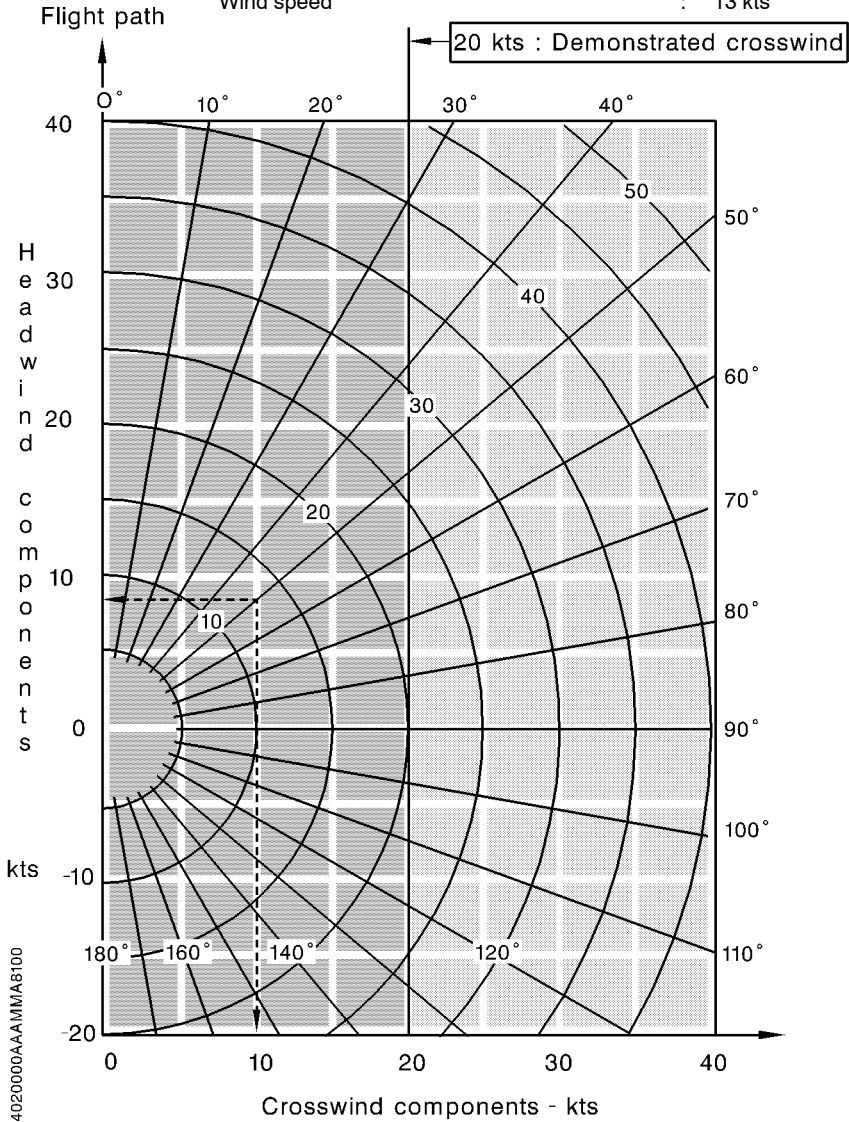

I4020000AAAAM/AB100

Figure 5.7.1 - WIND COMPONENTS

INTENTIONALLY LEFT BLANK

5.8 - ENGINE OPERATION

The following tables must be used during normal operation of the airplane.

The following conditions are given :

- $N_p = 2000$ RPM,
- BLEED AUTO.

The torque must be set at or below the value corresponding to the local conditions of flight level and temperature.

Example : for FL = 260 and IOAT = - 17°C, the following tables give the maximum torque to be set.

- Maximum climb power : TRQ = 92 % for IAS = 130 KIAS
(Add 1 % of TRQ for each additional 10 KIAS on climb airspeed)
(cf. tables Figures 5.8.1 and 5.8.1A)
- Climb at 700 SHP power : TRQ = 92 % for IAS = 130 KIAS
(Add 1 % of TRQ for each additional 10 KIAS on climb airspeed)
(cf. tables Figures 5.8.2 and 5.8.2A)
- Maximum cruise power : TRQ = 109 %
(cf. tables Figures 5.8.3 and 5.8.3A)
- Recommended cruise power : TRQ = 104 %
(cf. tables Figures 5.8.4 and 5.8.4A)

CAUTION

**THE TRQ SETTING MUST NEVER EXCEED 121.4 % FOR
NP = 2000 RPM.**

- **WHEN SETTING TRQ, NG MUST NEVER EXCEED 104 %**

REMARK :

The engine ITT limit at 840°C during continuous operation may be used in case of operational need.

ENGINE OPERATION

Conditions : **Maximum climb power (FL ≤ 200)** ISA

Landing gear and flaps UP

IAS = 130 KIAS - Np = 2000 RPM - BLEED AUTO

NOTE :

Add 1 % of TRQ for each additional 10 KCAS on climb airspeed

T° (°C)		FLIGHT LEVEL (FL)										
SAT	IOAT	100	110	120	130	140	150	160	170	180	190	200
-25	-19											
-23	-17											121
-21	-15											120
-19	-13											118
-17	-11										121	117
-15	-09										120	115
-13	-07										118	114
-11	-05									121	117	112
-09	-03									120	115	109
-07	-01									118	113	108
-05	+01								121	116	111	106
-03	+03								119	114	109	104
-01	+05							121	117	112	106	101
+01	+07							120	115	109	103	97
+03	+09							118	112	106	100	95
+05	+11						121	115	109	103	97	92
+07	+13					121	117	112	106	100	95	89
+09	+15					120	114	108	103	97	92	87
+11	+17				121	117	111	106	100	94	89	84
+13	+19				119	114	108	102	97	91	86	
+15	+21			121	116	111	105	99	94	88		
+17	+23			119	113	107	102	96	91			
+19	+25		121	115	109	104	98	93				
+21	+27	121	117	111	106	100	95					
+23	+29	119	114	108	103	97						
+25	+31	116	110	105	99							
+27	+33	112	107	101								
+29	+35	109	103									
+31	+37	105										

CAUTION

THE TRQ SETTING MUST NEVER EXCEED 121.4 % FOR Np = 2000 RPM

Figure 5.8.1 – ENGINE OPERATION
[Maximum climb power (FL ≤ 200)]

ENGINE OPERATION

Conditions : **Maximum climb power (FL ≥ 200)** ISA

Landing gear and flaps UP

IAS = 130 KIAS - Np = 2000 RPM - BLEED AUTO

NOTE :

Add 1 % of TRQ for each additional 10 KCAS on climb airspeed

T° (°C)		FLIGHT LEVEL (FL)											
SAT	IOAT	200	210	220	230	240	250	260	270	280	290	300	310
-67	-60								116	110	105	100	95
-65	-58							121	114	109	104	99	94
-63	-56							119	113	108	103	98	93
-61	-54							118	112	107	102	97	92
-59	-52							116	111	106	100	96	91
-57	-50							121	115	109	104	99	94
-55	-48							120	114	108	103	98	93
-53	-46							118	113	107	102	97	92
-51	-44							117	111	106	101	96	91
-49	-42					121	115	110	104	100	95	90	86
-47	-40					119	114	108	103	99	94	89	85
-45	-38					118	112	107	102	97	93	88	84
-43	-36				121	116	111	106	101	96	92	87	83
-41	-34				120	115	110	105	100	95	90	86	82
-39	-32				118	113	108	103	98	94	89	85	80
-37	-30		121	117	112	107	102	97	92	88	83	79	
-35	-28		120	115	110	106	101	96	91	87	82	78	
-33	-26		119	114	109	104	99	95	90	86	81	77	
-31	-25	121	117	112	107	103	98	93	89	84	80	76	
-29	-23	120	115	111	106	102	97	92	87	83	79	75	
-27	-21	119	114	109	105	100	95	91	86	82	77	73	
-25	-19	118	113	108	103	99	94	89	85	80	76	72	
-23	-17	121	116	111	107	102	98	92	88	83	79	74	70
-21	-15	120	115	110	105	101	96	91	87	82	77	72	68
-19	-13	118	113	109	104	99	95	89	85	80	75	71	66
-17	-11	117	112	107	102	98	93	88	83	78	73	69	64
-15	-09	115	110	105	100	96	91	86	81	76	71	67	62
-13	-07	114	108	103	98	94	89	84	79	74	69	64	
-11	-05	112	106	101	97	92	87	82	77	72	67	62	
-09	-03	109	104	100	95	90	85	79	74	69	65		
-07	-01	108	103	98	92	87	82	77	72	67			
-05	+01	106	101	95	90	85	79	74	70	65			
-03	+03	104	98	92	87	82	77	72	68				
-01	+05	101	95	89	84	79	75	70					
+01	+07	97	92	87	82	77	72						
+03	+09	95	89	85	80	75							
+05	+11	92	87	82	77								
+07	+13	89	84	79									
+09	+15	87	81										
+11	+17	84											

CAUTION

THE TRQ SETTING MUST NEVER EXCEED 121.4 % FOR Np = 2000 RPM

Figure 5.8.1A - ENGINE OPERATION
[Maximum climb power (FL ≥ 200)]

ENGINE OPERATION

Conditions : **Climb at 700 SHP power (FL ≤ 200)** ISA

Landing gear and flaps UP

IAS = 130 KIAS - Np = 2000 RPM - BLEED AUTO

NOTE :

Add 1 % of TRQ for each additional 10 KCAS on climb airspeed

T° (°C)		FLIGHT LEVEL (FL)										
SAT	IOAT	100	110	120	130	140	150	160	170	180	190	200
- 25	- 19											
- 23	- 17											
- 21	- 15											
- 19	- 13											
- 17	- 11											
- 15	- 09											
- 13	- 07											
- 11	- 05											
- 09	- 03											
- 07	- 01											
- 05	+ 01											
- 03	+ 03											
- 01	+ 05											100
+ 01	+ 07											97
+ 03	+ 09										100	95
+ 05	+ 11										97	92
+ 07	+ 13									100	95	89
+ 09	+ 15									97	92	87
+ 11	+ 17								100	94	89	84
+ 13	+ 19							100	97	91	86	
+ 15	+ 21							99	94	88		
+ 17	+ 23						100	96	91			
+ 19	+ 25						98	93				
+ 21	+ 27					100	95					
+ 23	+ 29				100	97						
+ 25	+ 31				99							
+ 27	+ 33			100								
+ 29	+ 35		100									
+ 31	+ 37	100										

Figure 5.8.2 - ENGINE OPERATION
[Climb at 700 SHP power (FL ≤ 200)]

ENGINE OPERATION

Conditions : **Climb at 700 SHP power (FL ≥ 200)** ISA

Landing gear and flaps UP

IAS = 130 KIAS - Np = 2000 RPM - BLEED AUTO

NOTE :

Add 1 % of TRQ for each additional 10 KCAS on climb airspeed

T° (°C)		FLIGHT LEVEL (FL)													
		SAT	IOAT	200	210	220	230	240	250	260	270	280	290	300	310
-67	-60												100	95	
-65	-58												99	94	
-63	-56												98	93	
-61	-54												97	92	
-59	-52											100	96	91	
-57	-50											99	94	90	
-55	-48											98	93	89	
-53	-46											97	92	88	
-51	-44											96	91	87	
-49	-42										100	95	90	86	
-47	-40										99	94	89	85	
-45	-38										97	93	88	84	
-43	-36										96	92	87	83	
-41	-34									100	95	90	86	82	
-39	-32									98	94	89	85	80	
-37	-30									97	92	88	83	79	
-35	-28								100	96	91	87	82	78	
-33	-26								99	95	90	86	81	77	
-31	-25								98	93	89	84	80	76	
-29	-23								97	92	87	83	79	75	
-27	-21								100	95	91	86	82	77	73
-25	-19								99	94	89	85	80	76	72
-23	-17								98	92	88	83	79	74	70
-21	-15							100	96	91	87	82	77	72	68
-19	-13							99	95	89	85	80	75	71	66
-17	-11							98	93	88	83	78	73	69	64
-15	-09					100	96	91	86	81	76	71	67	62	
-13	-07					98	94	89	84	79	74	69	64		
-11	-05					97	92	87	82	77	72	67	62		
-09	-03				100	95	90	85	79	74	69	65			
-07	-01				98	92	87	82	77	72	67				
-05	+01		100	95	90	85	79	74	70	65					
-03	+03		98	92	87	82	77	72	68						
-01	+05	100	95	89	84	79	75	70							
+01	+07	97	92	87	82	77	72								
+03	+09	95	89	85	80	75									
+05	+11	92	87	82	77										
+07	+13	89	84	79											
+09	+15	87	81												
+11	+17	84													

Figure 5.8.2A - ENGINE OPERATION
[Climb at 700 SHP power (FL ≥ 200)]

ENGINE OPERATION

Conditions : **Maximum cruise power (FL ≤ 200)** ISA
 Landing gear and flaps UP
 Np = 2000 RPM - BLEED AUTO

NOTE :
 Use preferably recommended cruise power

T° (°C)		FLIGHT LEVEL (FL)											
SAT	IOAT	100	110	120	130	140	150	160	170	180	190	200	
- 25	- 15												
- 23	- 13												
- 21	- 11												
- 19	- 09												
- 17	- 07												
- 15	- 05												
- 13	- 03												
- 11	- 02												
- 09	00												
- 07	+ 02												
- 05	+ 04												
- 03	+ 06											121	
- 01	+ 08											120	
+ 01	+ 10										121	117	
+ 03	+ 12										120	114	
+ 05	+ 14									121	117	111	
+ 07	+ 16									120	114	107	
+ 09	+ 18								121	117	110	104	
+ 11	+ 20								119	113	107	101	
+ 13	+ 22							121	115	110	104	97	
+ 15	+ 24							118	112	106	100		
+ 17	+ 26						121	115	108	103			
+ 19	+ 28					121	118	111	105				
+ 21	+ 29					120	114	108					
+ 23	+ 31				121	117	111						
+ 25	+ 33				119	113							
+ 27	+ 35			121	115								
+ 29	+ 37		121	117									
+ 31	+ 39	121	120										

CAUTION

**THE TRQ SETTING MUST NEVER EXCEED 121.4 % FOR Np = 2000 RPM.
 WHEN SETTING TRQ, NG MUST NEVER EXCEED 104 %**

Figure 5.8.3 - ENGINE OPERATION
 [Maximum cruise power (FL ≤ 200)]

ENGINE OPERATION

Conditions : **Maximum cruise power (FL ≥ 200)** ISA

Landing gear and flaps UP

Np = 2000 RPM - BLEED AUTO

NOTE :

Use preferably recommended cruise power

T° (°C)		FLIGHT LEVEL (FL)											
SAT	IOAT	200	210	220	230	240	250	260	270	280	290	300	310
-67	-56									121	116	111	106
-65	-54									120	115	110	105
-63	-52									119	114	109	104
-61	-50									118	113	108	103
-59	-48								121	117	112	107	102
-57	-46								120	116	111	106	101
-55	-44								119	115	110	105	100
-53	-42								118	114	109	103	99
-51	-40								117	113	107	102	98
-49	-38							121	116	111	106	101	97
-47	-36							120	115	110	105	100	96
-45	-34							119	114	109	104	99	95
-43	-32							118	113	108	103	98	94
-41	-30						121	117	112	107	102	97	93
-39	-28						120	116	111	106	100	96	92
-37	-26						119	115	109	104	99	95	91
-35	-24						118	113	108	103	98	94	90
-33	-22						117	112	107	102	97	93	89
-31	-20					121	116	111	106	101	96	92	88
-29	-19					120	115	110	105	100	95	91	87
-27	-17					119	114	109	104	99	94	90	86
-25	-15					118	113	108	103	98	93	89	84
-23	-13				121	117	111	106	101	96	92	88	83
-21	-11				120	115	110	105	100	95	91	86	81
-19	-09				118	113	108	104	99	94	89	84	79
-17	-07			121	117	112	107	102	98	93	88	82	77
-15	-05			120	115	110	106	101	96	91	85	79	61
-13	-03			119	114	109	104	100	94	88	82	77	58
-11	-02			118	113	108	103	98	91	85	80	61	56
-09	00		121	117	111	107	101	95	89	83	77	58	53
-07	+02		120	115	110	104	98	92	86	80	75	56	
-05	+04		119	113	107	101	95	89	84	78	59		
-03	+06	121	117	110	104	98	92	87	81	75			
-01	+08	120	113	107	101	95	90	84	78				
+01	+10	117	110	104	99	93	87	81					
+03	+12	114	108	101	95	90	84						
+05	+14	111	104	98	92	87							
+07	+16	107	101	95	89								
+09	+18	104	98	92									
+11	+20	101	95										

CAUTION

**THE TRQ SETTING MUST NEVER EXCEED 121.4 % FOR Np = 2000 RPM
WHEN SETTING TRQ, NG MUST NEVER EXCEED 104 %**

Figure 5.8.3A - ENGINE OPERATION [Maximum cruise power (FL ≥ 200)]

ENGINE OPERATION

Conditions : **Normal (recommended) cruise power (FL ≤ 200)** ISA

Landing gear and flaps UP
Np = 2000 RPM - BLEED AUTO

T° (°C)		FLIGHT LEVEL (FL)											
SAT	IOAT	100	110	120	130	140	150	160	170	180	190	200	
- 25	- 15												
- 23	- 13												
- 21	- 11												
- 19	- 09												
- 17	- 07												
- 15	- 05												
- 13	- 03												
- 11	- 02												
- 09	00											121	
- 07	+ 02											120	
- 05	+ 04										121	117	
- 03	+ 06										120	114	
- 01	+ 08										117	111	
+ 01	+ 10									121	114	108	
+ 03	+ 12								121	118	111	105	
+ 05	+ 14								120	114	108	101	
+ 07	+ 16								121	117	110	104	
+ 09	+ 18								120	113	107	101	
+ 11	+ 20							121	116	110	104	98	
+ 13	+ 22							119	113	106	100	95	
+ 15	+ 24					121	115	109	103	97	91		
+ 17	+ 26				121	118	112	106	99	94			
+ 19	+ 28				120	114	108	102	96				
+ 21	+ 29			121	117	111	105	99					
+ 23	+ 31			119	113	107	101						
+ 25	+ 33		121	115	109	104							
+ 27	+ 35	121	118	112	106								
+ 29	+ 37	120	114	108									
+ 31	+ 39	116	110										

CAUTION

THE TRQ MUST NEVER EXCEED 121.4 % FOR Np = 2000 RPM

Figure 5.8.4 - ENGINE OPERATION
[Normal (recommended) cruise power (FL ≤ 200)]

ENGINE OPERATION

Conditions : **Normal (recommended) cruise power (FL ≥ 200)** ISA

Landing gear and flaps UP

Np = 2000 RPM - BLEED AUTO

T° (°C)		FLIGHT LEVEL (FL)											
SAT	IOAT	200	210	220	230	240	250	260	270	280	290	300	310
-67	-56									117	112	107	102
-65	-54								121	116	111	106	101
-63	-52								120	115	110	105	100
-61	-50								119	114	109	104	99
-59	-48							121	118	113	108	103	98
-57	-46							120	116	112	107	102	97
-55	-44							119	114	111	106	101	96
-53	-42							118	113	110	105	99	95
-51	-41							117	112	109	103	98	94
-49	-39							116	111	107	102	97	93
-47	-37						121	115	110	106	101	96	92
-45	-35						120	114	109	105	100	95	91
-43	-33						118	113	108	103	99	94	90
-41	-31						116	112	107	102	98	93	89
-39	-29						115	111	106	101	96	92	88
-37	-27						114	110	104	99	95	91	87
-35	-25						113	108	103	98	94	90	86
-33	-23					121	112	107	102	97	93	89	85
-31	-21					120	111	106	101	96	92	88	84
-29	-19					116	110	105	100	95	91	87	83
-27	-17					114	109	104	99	94	90	86	81
-25	-15				121	113	108	103	98	93	89	84	80
-23	-13				117	112	107	101	96	92	87	83	78
-21	-12				115	110	105	100	95	91	86	81	76
-19	-10			121	113	108	103	99	94	89	84	78	60
-17	-08			117	112	107	102	98	93	87	81	76	57
-15	-06			116	111	106	101	96	90	84	78	61	55
-13	-04		121	114	110	105	99	93	87	81	76	58	52
-11	-02		120	113	108	102	96	90	84	79	73	55	50
-09	00	121	117	111	105	99	93	87	82	77	58	52	47
-07	+02	120	114	108	102	96	91	85	79	74	55		
-05	+04	117	111	105	99	93	88	82	77	71			
-03	+06	114	108	102	96	91	85	79	74	55			
-01	+08	111	105	99	93	88	82	76	71				
+01	+10	107	102	96	90	85	79	74					
+03	+12	105	99	93	87	82	76						
+05	+14	101	95	90	84	79							
+07	+16	98	92	87	82								
+09	+18	95	90	84									
+11	+20	92	87										

CAUTION

THE TRQ MUST NEVER EXCEED 121.4 % FOR Np = 2000 RPM


Figure 5.8.4A - ENGINE OPERATION
[Normal (recommended) cruise power (FL ≥ 200)]

INTENTIONALLY LEFT BLANK

5.9 - TAKEOFF DISTANCES

WEIGHT : 5512 lbs (2500 kg)

- Associated conditions :
- Landing gear DN and flaps TO
 - 15° of attitude - TRQ = 100 %
 - Np = 2000 RPM - BLEED AUTO
 - Hard, dry and level runway
 - GR = Ground roll (in ft)
 - D50 = Takeoff distance (clear to 50 ft) (in ft)
 - Rotation speed choice (VR)

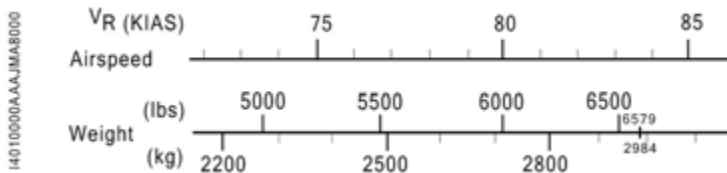

WEIGHT : 5512 lbs (2500 kg) At 50 ft = 91 KIAS - 105 MPH IAS								
PRESSURE ALTITUDE ft	ISA - 35°C		ISA - 20°C		ISA - 10°C		ISA	
	GR	D50	GR	D50	GR	D50	GR	D50
0	787	1280	886	1411	951	1493	1017	1591
2000	886	1411	984	1558	1066	1657	1132	1772
4000	984	1558	1099	1722	1181	1837	1280	1968
6000	1099	1722	1230	1903	1329	2051	1444	2215
8000	1230	1903	1394	2149	1526	2329	1657	2510
PRESSURE ALTITUDE ft	ISA + 10°C		ISA + 20°C		ISA + 30°C		ISA + 37°C	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1083	1690	1148	1788	1214	1903	1247	1969
2000	1214	1870	1296	1985	1378	2133	1444	2231
4000	1363	2100	1476	2247	1575	2411	1640	2526
6000	1575	2379	1690	2559	1837	2756	1919	2887
8000	1804	2707	1968	2920	2100	3133	2198	3281

Figure 5.9.1 - TAKEOFF DISTANCES - 5512 lbs (2500 kg)

- Corrections :
- . Reduce total distances of 10 % every 10 kts of headwind
 - . Increase total distances of 30 % every 10 kts of tail-wind
 - . Increase by :

7 %	on hard sod	25 %	on high grass
10 %	on short grass	30 %	on slippery runway
15 %	on wet runway		


NOTE :

Between ISA + 30°C and ISA + 37°C, it may be necessary to set the BLEED switch to OFF in order to get 100 % TRQ during takeoff within the engine ITT limitations. After takeoff, reduce power before setting the BLEED switch to AUTO.

TAKEOFF DISTANCES

WEIGHT : 6579 lbs (2984 kg)

- Associated conditions :
- Landing gear DN and flaps TO
 - 15° of attitude - TRQ = 100 %
 - Np = 2000 RPM - BLEED AUTO
 - Hard, dry and level runway
 - GR = Ground roll (in ft)
 - D₅₀ = Takeoff distance (clear to 50 ft) (in ft)
 - Rotation speed choice (V_R)

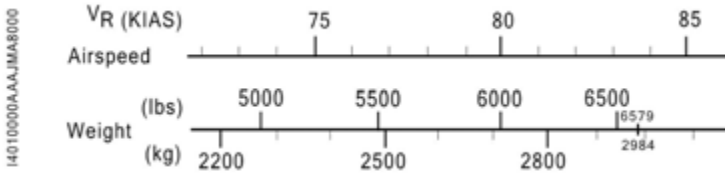

WEIGHT : 6579 lbs (2984 kg) At 50 ft = 94 KIAS - 108 MPH IAS								
PRESSURE ALTITUDE ft	ISA - 35°C		ISA - 20°C		ISA - 10°C		ISA	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1083	1673	1214	1870	1280	2001	1378	2133
2000	1214	1870	1345	2067	1444	2198	1542	2362
4000	1345	2067	1509	2297	1640	2461	1739	2625
6000	1509	2297	1706	2559	1837	2723	1968	2920
8000	1706	2559	1903	2854	2067	3051	2231	3281
PRESSURE ALTITUDE ft	ISA + 10°C		ISA + 20°C		ISA + 30°C		ISA + 37°C	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1476	2264	1575	2395	1690	2559	1755	2657
2000	1673	2493	1772	2657	1903	2854	1969	2953
4000	1870	2789	2001	2953	2149	3182	2231	3314
6000	2100	3117	2297	3346	2461	3609	2543	3740
8000	2428	3543	2657	3839	2854	4134	2969	4298

Figure 5.9.2 – TAKEOFF DISTANCES – 6579 lbs (2984 kg)

- Corrections :
- . Reduce total distances of 10 % every 10 kts of headwind
 - . Increase total distances of 30 % every 10 kts of tail-wind
 - . Increase by :

7 %	on hard sod	25 %	on high grass
10 %	on short grass	30 %	on slippery runway
15 %	on wet runway		


NOTE :

Between ISA + 30°C and ISA + 37°C, it may be necessary to set the BLEED switch to OFF in order to get 100 % TRQ during takeoff within the engine ITT limitations. After takeoff, reduce power before setting the BLEED switch to AUTO.

TAKEOFF DISTANCES

WEIGHT : 7394 lbs (3354 kg)

- Associated conditions :
- Landing gear DN and flaps TO
 - 12.5° of attitude - TRQ = 100 %
 - Np = 2000 RPM - BLEED AUTO
 - Hard, dry and level runway
 - GR = Ground roll (in ft)
 - D₅₀ = Takeoff distance (clear to 50 ft) (in ft)
 - Rotation speed choice (V_R)

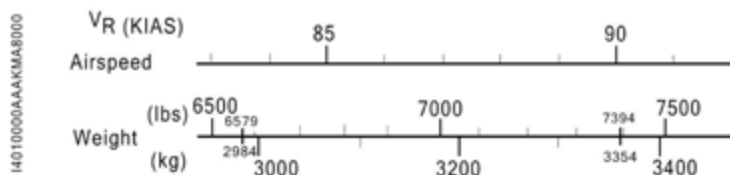

WEIGHT : 7394 lbs (3354 kg) At 50 ft = 99 KIAS - 114 MPH IAS									
PRESSURE ALTITUDE ft	ISA - 35°C		ISA - 20°C		ISA - 10°C		ISA		
	GR	D50	GR	D50	GR	D50	GR	D50	
0	1575	2250	1755	2495	1905	2675	2035	2840	
2000	1755	2495	1970	2755	2120	2955	2280	3150	
4000	1970	2755	2200	3055	2380	3285	2545	3510	
6000	2185	3035	2480	3415	2675	3675	2890	3955	
8000	2460	3380	2790	3825	3055	4135	3315	4445	
PRESSURE ALTITUDE ft	ISA + 10°C		ISA + 20°C		ISA + 30°C		ISA + 37°C		
	GR	D50	GR	D50	GR	D50	GR	D50	
0	2165	3020	2315	3200	2480	3415	2560	3530	
2000	2445	3365	2595	3580	2780	3805	2920	3990	
4000	2740	3760	2955	4035	3185	4300	3330	4480	
6000	3135	4235	3380	4530	3625	4825	3805	5055	
8000	3560	4760	3855	5105	4170	5450	4380	5710	

Figure 5.9.3 – TAKEOFF DISTANCES – 7394 lbs (3354 kg)

- Corrections :
- . Reduce total distances of 10 % every 10 kts of headwind
 - . Increase total distances of 30 % every 10 kts of tail-wind
 - . Increase by :
 - 7 % on hard sod 25 % on high grass
 - 10 % on short grass 30 % on slippery runway
 - 15 % on wet runway

NOTE :

Between ISA + 30°C and ISA + 37°C, it may be necessary to set the BLEED switch to OFF in order to get 100 % TRQ during takeoff within the engine ITT limitations. After takeoff, reduce power before setting the BLEED switch to AUTO.

INTENTIONALLY LEFT BLANK

5.10 - CLIMB PERFORMANCE

MXCL - SPEEDS (IAS = 130 KIAS)

Conditions : Maximum climb power (850 SHP)
Landing gear and flaps UP
IAS = 130 KIAS - BLEED AUTO or HI

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)					
		ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
5794 lbs (2628 kg)	SL	3050	2915	2800	2685	2580	2480
	2000	3025	2890	2765	2655	2545	2445
	4000	2995	2860	2735	2615	2505	2405
	6000	2960	2820	2695	2575	2465	2360
	8000	2930	2790	2655	2535	2425	2320
6594 lbs (2991 kg)	SL	2585	2470	2365	2270	2175	2090
	2000	2560	2445	2335	2240	2145	2055
	4000	2530	2415	2305	2205	2110	2020
	6000	2500	2380	2265	2165	2070	1980
	8000	2465	2345	2230	2125	2035	1945
7394 lbs (3354 kg)	SL	2195	2095	2005	1920	1840	1765
	2000	2170	2070	1975	1890	1810	1730
	4000	2140	2035	1945	1855	1770	1695
	6000	2110	2005	1905	1820	1735	1660
	8000	2075	1970	1870	1780	1700	1620

Figure 5.10.1 - MXCL - SPEEDS (IAS = 130 KIAS)

CLIMB PERFORMANCE

MXCL - SPEEDS (IAS = 160 KIAS)

Conditions : Maximum climb power (850 SHP)
Landing gear and flaps UP
IAS = 160 KIAS up to 20000 ft, then - 2 KIAS/1000 ft
BLEED AUTO or HI

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)					
		ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
5794 lbs (2628 kg)	SL	2850	2720	2600	2490	2385	2285
	2000	2815	2680	2560	2445	2335	2235
	4000	2770	2635	2510	2395	2285	2180
	6000	2725	2590	2460	2340	2230	2130
	8000	2680	2540	2405	2290	2180	2080
6594 lbs (2991 kg)	SL	2430	2320	2215	2115	2025	1940
	2000	2395	2280	2175	2075	1985	1895
	4000	2355	2240	2130	2030	1935	1845
	6000	2315	2195	2085	1980	1885	1800
	8000	2270	2150	2035	1935	1840	1755
7394 lbs (3354 kg)	SL	2080	1980	1890	1805	1725	1650
	2000	2045	1945	1855	1765	1685	1610
	4000	2010	1910	1810	1725	1640	1560
	6000	1970	1865	1770	1675	1595	1520
	8000	1930	1820	1720	1635	1550	1475

Figure 5.10.2 - MXCL - SPEEDS (IAS = 160 KIAS)

CLIMB PERFORMANCE

700 SHP - CLIMB SPEEDS (IAS = 130 KIAS)

Conditions : 700 SHP climb power

Landing gear and flaps UP

IAS = 130 KIAS - BLEED AUTO or HI

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)					
		ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
5794 lbs (2628 kg)	SL	2445	2335	2235	2145	2060	1980
	2000	2420	2310	2210	2115	2030	1945
	4000	2390	2280	2175	2085	1995	1910
	6000	2360	2245	2145	2050	1960	1875
	8000	2330	2215	2110	2015	1925	1845
6594 lbs (2991 kg)	SL	2050	1955	1875	1795	1720	1640
	2000	2025	1925	1840	1765	1690	1620
	4000	1995	1900	1815	1735	1660	1585
	6000	1970	1870	1780	1700	1625	1555
	8000	1935	1840	1745	1665	1590	1520
7394 lbs (3354 kg)	SL	1725	1645	1570	1500	1435	1380
	2000	1700	1615	1540	1470	1405	1345
	4000	1670	1590	1510	1440	1375	1315
	6000	1640	1555	1480	1410	1340	1280
	8000	1610	1525	1445	1375	1310	1250

Figure 5.10.3 - 700 SHP - CLIMB SPEEDS (IAS = 130 KIAS)

CLIMB PERFORMANCE

700 SHP - CLIMB SPEEDS (IAS = 160 KIAS)

Conditions : 700 SHP climb power
 Landing gear and flaps UP
 IAS = 160 KIAS up to 20000 ft, then - 2 KIAS/1000 ft
 BLEED AUTO or HI

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)					
		ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
5794 lbs (2628 kg)	SL	2160	2055	1955	1865	1785	1705
	2000	2120	2010	1915	1825	1740	1665
	4000	2075	1970	1875	1780	1695	1620
	6000	2035	1925	1830	1735	1650	1570
	8000	1995	1880	1785	1690	1605	1515
6594 lbs (2991 kg)	SL	1820	1730	1650	1570	1490	1415
	2000	1780	1690	1600	1530	1460	1380
	4000	1740	1650	1560	1490	1410	1345
	6000	1700	1610	1520	1450	1370	1305
	8000	1660	1570	1480	1400	1330	1255
7394 lbs (3354 kg)	SL	1540	1460	1390	1320	1255	1200
	2000	1510	1430	1355	1285	1225	1165
	4000	1470	1390	1315	1245	1185	1125
	6000	1430	1350	1275	1205	1140	1080
	8000	1395	1315	1240	1170	1105	1035

Figure 5.10.4 - 700 SHP - CLIMB SPEEDS (IAS = 160 KIAS)

CLIMB PERFORMANCE

MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)

Conditions : **ISA - 20°C**

Maximum climb power (850 SHP)

Landing gear and flaps UP

IAS = 130 KIAS - 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft

- If BLEED HI selected,
fuel consumptions increased by 2 %

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	4	3	0.9	1	00.45	4	3	1.1	2	01.00	5	4	1.3	2
4000	01.15	7	6	1.9	3	01.45	8	7	2.2	3	01.45	10	8	2.6	4
6000	02.00	10	8	2.8	4	02.30	12	10	3.3	5	02.45	15	11	3.9	6
8000	02.45	14	11	3.6	6	03.15	16	13	4.3	7	03.45	19	15	5.1	8
10000	03.15	17	13	4.5	7	04.00	20	16	5.3	9	04.45	24	19	6.3	10
12000	04.00	20	16	5.4	9	04.45	24	19	6.4	11	05.45	29	22	7.5	13
14000	04.45	24	19	6.2	11	05.45	28	22	7.4	13	06.45	33	26	8.8	15
16000	05.30	27	21	7.1	13	06.30	32	25	8.4	15	07.45	38	30	10.0	18
18000	06.15	30	24	8.0	15	07.15	36	28	9.4	17	08.45	42	33	11.2	21
20000	07.00	33	26	8.8	17	08.15	40	31	10.5	20	09.45	47	37	12.5	24
22000	07.45	37	29	9.7	19	09.15	44	34	11.5	22	11.00	52	41	13.7	27
24000	08.30	40	31	10.5	21	10.00	48	37	12.6	25	12.00	57	45	15.0	30
26000	09.15	43	34	11.4	23	11.00	52	40	13.6	28	13.15	62	48	16.3	34
28000	10.00	47	37	12.3	26	12.00	56	44	14.7	31	14.30	67	52	17.6	38
30000	11.00	50	39	13.3	29	13.15	60	47	15.9	35	15.45	72	57	19.1	42
31000	11.30	52	41	13.8	31	13.45	62	49	16.5	37	16.45	75	59	19.9	45

Figure 5.10.5 - MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS) / ISA - 20°C

CLIMB PERFORMANCE

MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)

Conditions : **ISA**

- Maximum climb power (850 SHP)
- Landing gear and flaps UP
- IAS = 130 KIAS - 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected, fuel consumptions increased by 4 %
time to climb increased up to 5 % above FL 260

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	4	3	1.0	2	00.45	5	4	1.2	2	01.00	6	4	1.5	2
4000	01.30	8	6	2.1	3	01.45	9	7	2.5	4	02.00	11	9	2.9	4
6000	02.15	12	9	3.1	5	02.30	14	11	3.7	6	03.00	16	13	4.3	7
8000	03.00	15	12	4.1	7	03.30	18	14	4.8	8	04.00	22	17	5.7	9
10000	03.45	19	15	5.1	8	04.30	23	18	6.0	10	05.15	27	21	7.1	12
12000	04.30	23	18	6.0	10	05.15	27	21	7.2	12	06.15	32	25	8.5	15
14000	05.15	26	21	7.0	12	06.15	31	25	8.3	15	07.30	37	29	9.9	18
16000	06.00	30	24	8.0	15	07.15	36	28	9.5	17	08.30	43	34	11.3	21
18000	06.45	34	27	8.9	17	08.15	40	32	10.7	20	09.45	48	38	12.7	24
20000	07.45	38	29	9.9	19	09.15	45	35	11.8	23	11.00	53	42	14.1	28
22000	08.30	41	32	10.9	22	10.15	49	39	13.0	26	12.00	59	46	15.6	31
24000	09.30	45	35	11.9	24	11.15	54	42	14.2	29	13.30	65	51	17.1	35
26000	10.15	49	38	12.9	27	12.30	59	46	15.5	33	15.00	70	55	18.6	40
28000	11.30	53	42	14.0	31	13.45	64	50	16.8	38	16.45	77	60	20.3	46
30000	12.45	57	45	15.2	35	15.15	69	54	18.3	43	18.45	84	66	22.2	53
31000	13.30	60	47	15.8	38	16.15	72	57	19.1	46	20.00	88	69	23.3	57

Figure 5.10.6 - MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS) / ISA

CLIMB PERFORMANCE

MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)

Conditions : **ISA + 20°C**

Maximum climb power (850 SHP)

Landing gear and flaps UP

IAS = 130 KIAS - 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected, fuel consumptions increased by :
 - . 2 % below FL 150
 - . up to 6 % from FL 150 to FL 250
 - . up to 14 % above FL 250
- time to climb increased by 4 % to 21 % from FL 200 to FL 310

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	4	3	1.2	2	01.00	5	4	1.4	2	01.00	6	5	1.6	2
4000	01.30	9	7	2.3	4	02.00	10	8	2.7	4	02.15	12	10	3.2	5
6000	02.30	13	10	3.4	5	02.45	15	12	4.1	7	03.15	18	14	4.8	8
8000	03.15	17	13	4.5	7	03.45	20	16	5.4	9	04.30	24	19	6.4	11
10000	04.00	21	17	5.6	10	04.45	25	20	6.7	11	05.45	30	24	8.0	14
12000	04.45	25	20	6.7	12	05.45	30	24	8.0	14	07.00	36	28	9.5	17
14000	05.45	30	23	7.8	14	06.45	35	28	9.3	17	08.15	42	33	11.1	20
16000	06.30	34	26	8.9	17	08.00	40	32	10.6	20	09.30	48	38	12.7	24
18000	07.30	38	30	10.0	19	09.00	45	36	12.0	23	10.45	54	43	14.3	28
20000	08.30	42	33	11.1	22	10.15	50	40	13.3	27	12.15	60	47	16.0	32
22000	09.30	47	37	12.3	25	11.30	56	44	14.7	31	13.45	67	53	17.7	37
24000	10.45	51	40	13.5	29	13.00	61	48	16.2	35	15.45	74	58	19.6	43
26000	12.15	56	44	14.8	34	14.45	68	53	17.9	41	17.45	82	64	21.7	50
28000	13.45	61	48	16.2	39	16.45	74	58	19.6	48	20.30	91	71	24.1	59
30000	15.30	67	53	17.7	46	19.00	82	64	21.6	57	23.45	102	80	26.9	72
31000	16.30	70	55	18.5	50	20.30	86	68	22.8	62	26.00	108	85	28.5	79

Figure 5.10.7 - MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS) / ISA + 20°C

CLIMB PERFORMANCE

MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)

Conditions : **ISA - 20°C**

Maximum climb power (850 SHP)

Landing gear and flaps UP

IAS = 160 KIAS up to FL 200 ; - 2 KIAS / 1000 ft then

2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected,
fuel consumptions increased by 2 %

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	4	3	1.0	2	00.45	4	4	1.2	2	01.00	5	4	1.4	3
4000	01.30	8	6	2.0	4	01.45	9	7	2.3	4	02.00	10	8	2.7	5
6000	02.15	11	9	3.0	6	02.30	13	10	3.5	7	03.00	15	12	4.1	8
8000	03.00	15	12	3.9	8	03.30	17	14	4.6	9	04.00	20	16	5.4	11
10000	03.45	18	15	4.9	10	04.15	22	17	5.7	12	05.00	26	20	6.7	14
12000	04.30	22	17	5.8	12	05.15	26	20	6.9	14	06.00	31	24	8.1	17
14000	05.15	26	20	6.8	15	06.15	30	24	8.0	17	07.15	36	28	9.4	20
16000	06.00	29	23	7.7	17	07.00	35	27	9.1	20	08.15	41	32	10.7	24
18000	06.45	33	26	8.7	20	08.00	39	30	10.3	23	09.30	46	36	12.1	28
20000	07.45	37	29	9.7	23	09.00	43	34	11.4	27	10.45	51	40	13.5	32
22000	08.30	40	32	10.6	25	10.00	47	37	12.5	30	11.45	56	44	14.8	36
24000	09.15	44	34	11.5	28	11.00	52	41	13.7	34	13.00	61	48	16.2	40
26000	10.15	47	37	12.5	31	12.00	56	44	14.8	37	14.15	66	52	17.5	44
28000	11.00	51	40	13.4	34	13.00	60	47	15.9	41	15.30	72	56	18.9	49
30000	12.00	55	43	14.4	38	14.15	65	51	17.1	45	17.00	77	61	20.4	54
31000	12.30	56	44	14.9	40	14.45	67	53	17.8	47	17.45	80	63	21.2	57

Figure 5.10.8 - MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS) / ISA - 20°C

CLIMB PERFORMANCE

MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)

Conditions : **ISA**

Maximum climb power (850 SHP)

Landing gear and flaps UP

IAS = 160 KIAS up to FL 200 ; - 2 KIAS / 1000 ft then

2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected,
fuel consumptions increased by 5 %
time to climb increased up to 6 % above FL 260

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	4	3	1.1	2	00.45	5	4	1.3	2	01.00	6	5	1.6	3
4000	01.45	8	7	2.2	4	01.45	10	8	2.6	5	02.15	12	9	3.1	6
6000	02.30	13	10	3.3	7	02.45	15	12	3.9	8	03.15	17	14	4.6	9
8000	03.15	17	13	4.4	9	03.45	20	16	5.2	11	04.30	23	18	6.1	12
10000	04.00	21	16	5.5	11	04.45	25	19	6.5	14	05.45	29	23	7.6	16
12000	05.00	25	20	6.6	14	05.45	29	23	7.8	17	06.45	35	27	9.2	20
14000	05.45	29	23	7.7	17	06.45	34	27	9.1	20	08.00	40	32	10.7	24
16000	06.45	33	26	8.8	20	07.45	39	31	10.4	24	09.15	46	36	12.2	28
18000	07.30	37	29	9.9	23	09.00	44	35	11.7	27	10.45	52	41	13.8	32
20000	08.30	42	33	11.0	26	10.15	49	39	13.0	31	12.00	58	46	15.4	37
22000	09.30	46	36	12.1	30	11.15	54	43	14.3	35	13.15	64	50	17.0	42
24000	10.30	50	39	13.2	33	12.15	59	46	15.6	40	14.45	70	55	18.6	47
26000	11.30	54	42	14.3	37	13.45	64	51	17.0	44	16.15	77	60	20.3	53
28000	12.45	59	46	15.5	41	15.15	70	55	18.4	50	18.15	84	66	22.1	60
30000	14.00	63	50	16.7	46	16.45	76	59	20.0	56	20.15	91	72	24.1	68
31000	14.45	66	52	17.3	49	17.45	79	62	20.8	59	21.30	95	75	25.2	72

Figure 5.10.9 - MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS) / ISA

CLIMB PERFORMANCE

MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)

Conditions : **ISA + 20°C**

Maximum climb power (850 SHP)

Landing gear and flaps UP

IAS = 160 KIAS up to 20000 ft ; - 2 KIAS / 1000 ft then

2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected, fuel consumptions increased by :
 - . 2 % below FL 200
 - . up to 9 % from FL 200 to FL 250
 - . up to 21 % above FL 250
- time to climb increased by 5 % to 31 % from FL 200 to FL 310

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	5	4	1.3	2	01.00	6	4	1.5	3	01.15	7	5	1.7	3
4000	01.45	9	7	2.5	5	02.00	11	9	3.0	6	02.30	13	10	3.5	7
6000	02.45	14	11	3.7	7	03.00	17	13	4.4	9	03.45	20	15	5.2	10
8000	03.30	19	15	5.0	10	04.00	22	17	5.9	12	05.00	26	21	6.9	14
10000	04.30	23	18	6.2	13	05.15	28	22	7.3	15	06.15	33	26	8.6	18
12000	05.30	28	22	7.4	16	06.15	33	26	8.7	19	07.30	39	31	10.3	23
14000	06.15	33	26	8.6	19	07.30	39	30	10.2	23	09.00	46	36	12.1	27
16000	07.15	37	29	9.9	23	08.45	44	35	11.7	27	10.15	52	41	13.9	32
18000	08.15	42	33	11.1	26	10.00	50	39	13.2	31	11.45	59	47	15.7	37
20000	09.30	47	37	12.4	31	11.15	56	44	14.8	36	13.30	67	52	17.6	44
22000	10.45	52	41	13.8	35	12.45	62	49	16.5	42	15.15	74	58	19.6	51
24000	12.15	58	45	15.2	41	14.30	69	54	18.2	49	17.30	83	65	21.8	59
26000	13.45	63	50	16.7	47	16.30	76	60	20.1	56	20.00	92	72	24.2	68
28000	15.30	69	54	18.3	53	18.45	84	66	22.1	65	23.00	102	80	27.0	80
30000	17.30	76	60	20.0	61	21.30	92	73	24.4	76	26.45	114	90	30.1	95
31000	18.45	79	62	21.0	66	23.15	97	76	25.7	82	29.15	121	95	32.0	104

Figure 5.10.10 - MXCL - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS) / ISA + 20°C

CLIMB PERFORMANCE

700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)

Conditions : **ISA - 20°C**

700 SHP climb power

Landing gear and flaps UP

IAS = 130 KIAS - 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected, fuel consumptions increased by 2 %

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	00.45	4	3	1.1	2	01.00	5	4	1.3	2	01.15	6	4	1.5	2
4000	01.30	8	6	2.1	3	02.00	9	7	2.5	4	02.15	11	9	3.0	5
6000	02.30	12	9	3.1	5	03.00	14	11	3.7	6	03.30	17	13	4.4	8
8000	03.15	15	12	4.1	7	04.00	18	14	4.9	9	04.45	22	17	5.8	10
10000	04.15	19	15	5.0	9	05.00	23	18	6.0	11	06.00	27	21	7.2	13
12000	05.15	23	18	6.0	11	06.00	27	21	7.2	14	07.15	33	26	8.6	17
14000	06.00	26	21	6.9	14	07.15	31	25	8.3	16	08.45	38	30	10.0	20
16000	06.45	30	23	7.9	16	08.15	36	28	9.5	19	10.00	43	34	11.4	23
18000	07.45	33	26	8.8	18	09.30	40	31	10.6	22	11.15	48	38	12.8	27
20000	08.45	37	29	9.7	21	10.30	44	35	11.7	25	12.45	54	42	14.2	31
22000	09.45	40	32	10.7	24	11.45	49	38	12.9	29	14.00	59	46	15.6	35
24000	10.45	44	35	11.6	26	13.00	53	42	14.0	32	15.30	64	50	17.0	39
26000	11.45	48	37	12.5	30	14.00	57	45	15.2	36	17.00	70	55	18.4	44
28000	12.45	51	40	13.5	33	15.15	62	49	16.3	40	18.45	75	59	19.9	49
30000	13.45	55	43	14.5	36	16.30	66	52	17.5	44	20.15	81	64	21.4	54
31000	14.15	57	44	15.0	38	17.15	69	54	18.2	46	21.15	84	66	22.2	57

Figure 5.10.11 - 700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS) / ISA - 20°C

CLIMB PERFORMANCE

700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)

Conditions : **ISA**

700 SHP climb power

Landing gear and flaps UP

IAS = 130 KIAS - 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected,
fuel consumptions increased by 4 %

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	01.00	4	4	1.2	2	01.00	5	4	1.4	2	01.15	6	5	1.7	3
4000	01.45	9	7	2.3	4	02.15	11	8	2.8	5	02.30	13	10	3.4	6
6000	02.45	13	10	3.5	6	03.15	16	12	4.1	7	04.00	19	15	5.0	9
8000	03.45	17	14	4.6	8	04.30	21	16	5.5	10	05.20	25	20	6.6	12
10000	04.45	21	17	5.7	11	05.30	26	20	6.8	13	06.40	31	24	8.2	15
12000	05.45	25	20	6.7	13	06.45	31	24	8.1	16	08.00	37	29	9.7	19
14000	06.30	30	23	7.8	16	08.00	36	28	9.4	19	09.30	43	34	11.3	23
16000	07.30	34	26	8.9	18	09.00	40	32	10.7	22	11.00	49	38	12.9	27
18000	08.30	38	30	9.9	21	10.30	45	36	12.0	26	12.30	55	43	14.5	31
20000	09.45	42	33	11.0	24	11.45	50	39	13.3	29	14.00	61	48	16.1	36
22000	10.45	46	36	12.1	27	13.00	55	43	14.6	33	15.45	67	53	17.8	41
24000	11.45	50	39	13.1	31	14.15	60	47	15.9	37	17.30	74	58	19.4	46
26000	13.00	54	42	14.2	34	15.45	65	51	17.3	42	19.15	80	63	21.1	51
28000	14.00	58	46	15.3	38	17.15	71	55	18.7	47	21.00	87	68	22.9	58
30000	15.15	62	49	16.5	42	18.45	76	60	20.1	52	23.00	94	74	24.8	65
31000	16.00	65	51	17.1	45	19.45	79	62	20.9	55	24.15	98	77	25.8	69

Figure 5.10.12 - 700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS) / ISA

CLIMB PERFORMANCE

700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS)

Conditions : **ISA + 20°C**

700 SHP climb power

Landing gear and flaps UP

IAS = 130 KIAS - 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected,
fuel consumptions increased by :
 . 3 % below FL 250
 . up to 12 % above FL 250
 time to climb increased by 4 % to 17 % from FL 260 to FL 310

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	01.00	5	4	1.3	2	01.15	6	5	1.6	3	01.30	7	6	1.9	3
4000	02.00	10	8	2.6	4	02.15	12	9	3.1	5	02.45	14	11	3.8	7
6000	03.00	15	11	3.9	7	03.30	18	14	4.6	8	04.15	21	17	5.6	10
8000	04.00	19	15	5.1	9	04.45	23	18	6.1	11	05.45	28	22	7.4	14
10000	05.00	24	19	6.3	12	06.00	29	23	7.6	15	07.15	35	27	9.2	18
12000	06.00	28	22	7.5	15	07.30	34	27	9.1	18	09.00	42	33	11.0	22
14000	07.15	33	26	8.7	18	08.45	40	31	10.5	21	10.30	48	38	12.8	26
16000	08.15	38	30	9.9	21	10.00	45	36	12.0	25	12.00	55	43	14.6	31
18000	09.30	42	33	11.1	24	11.30	51	40	13.5	29	13.45	62	49	16.4	36
20000	10.30	47	37	12.4	28	12.45	57	45	15.0	34	15.45	69	54	18.3	41
22000	11.45	51	40	13.6	31	14.15	62	49	16.5	38	17.30	76	60	20.2	47
24000	13.00	56	44	14.8	35	15.45	68	53	18.0	43	19.30	84	66	22.1	53
26000	14.15	61	48	16.1	40	17.30	74	58	19.6	48	21.30	91	72	24.1	60
28000	15.45	66	52	17.5	45	19.15	81	63	21.3	55	24.00	100	78	26.3	69
30000	17.45	72	56	19.0	52	21.45	88	69	23.3	64	27.15	110	87	29.1	81
31000	18.45	75	59	19.8	56	23.00	92	73	24.4	69	29.30	116	91	30.8	88

Figure 5.10.13 - 700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 130 KIAS) / ISA + 20°C

CLIMB PERFORMANCE

700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)

Conditions : **ISA - 20°C**

- 700 SHP climb power
- Landing gear and flaps UP
- IAS = 160 KIAS up to 20000 ft ; - 2 KIAS / 1000 ft then
- 2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected, fuel consumptions increased by 2 %

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	01.00	5	4	1.2	2	01.00	5	4	1.4	3	01.15	6	5	1.7	3
4000	02.00	9	7	2.4	5	02.15	11	8	2.8	6	02.30	13	10	3.3	7
6000	02.45	13	11	3.5	8	03.30	16	12	4.2	9	04.00	19	15	5.0	11
8000	03.45	18	14	4.7	10	04.30	21	17	5.6	12	05.20	25	20	6.6	15
10000	04.45	22	17	5.8	13	05.45	26	21	6.9	16	07.00	31	24	8.2	19
12000	06.00	26	21	6.9	16	07.00	31	25	8.3	20	08.30	37	29	9.9	23
14000	07.00	31	24	8.1	20	08.15	36	29	9.6	24	10.00	43	34	11.5	28
16000	08.00	35	27	9.2	23	09.30	42	33	11.0	28	11.30	50	39	13.1	33
18000	09.00	39	31	10.3	27	11.00	47	37	12.4	32	13.05	56	44	14.8	39
20000	10.15	44	34	11.5	31	12.30	52	41	13.8	37	14.45	63	49	16.5	45
22000	11.30	48	37	12.6	35	13.45	57	45	15.1	42	16.30	69	54	18.2	50
24000	12.30	52	41	13.7	39	15.15	62	49	16.5	47	18.15	75	59	19.9	56
26000	13.45	56	44	14.8	43	16.30	67	53	17.8	51	20.00	81	64	21.5	62
28000	14.45	60	47	15.8	46	17.45	72	57	19.0	56	21.45	87	69	23.1	68
30000	16.00	64	50	16.8	50	19.15	77	60	20.3	61	23.30	93	73	24.7	75
31000	16.30	66	52	17.3	52	20.00	79	62	21.0	64	24.15	96	76	25.5	78

Figure 5.10.14 - 700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS) / ISA - 20°C

CLIMB PERFORMANCE

700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)

Conditions : **ISA**

700 SHP climb power

Landing gear and flaps UP

IAS = 160 KIAS up to 20000 ft ; - 2 KIAS / 1000 ft then

2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected,
fuel consumptions increased by 4 %

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	01.00	5	4	1.4	3	01.15	6	5	1.6	3	01.30	7	6	1.9	4
4000	02.00	10	8	2.7	6	02.30	12	10	3.2	7	03.00	14	11	3.8	8
6000	03.15	15	12	4.0	9	03.45	18	14	4.8	10	04.30	22	17	5.7	12
8000	04.15	20	16	5.3	12	05.00	24	19	6.3	14	06.00	29	22	7.6	17
10000	05.30	25	20	6.6	15	06.30	30	23	7.9	18	07.45	36	28	9.4	22
12000	06.30	30	23	7.9	19	08.00	36	28	9.4	23	09.30	43	34	11.3	27
14000	07.45	35	27	9.2	23	09.15	42	33	11.0	27	11.00	50	39	13.2	33
16000	09.00	40	31	10.5	27	10.45	48	37	12.6	32	13.00	57	45	15.1	39
18000	10.15	45	35	11.8	31	12.30	54	42	14.2	38	14.45	65	51	17.1	46
20000	11.30	50	39	13.2	36	14.00	60	47	15.9	43	16.45	73	57	19.2	53
22000	13.00	55	43	14.5	41	15.30	66	52	17.5	49	18.45	80	63	21.2	60
24000	14.15	60	47	15.8	45	17.15	72	57	19.0	55	20.45	87	69	23.1	67
26000	15.30	64	50	17.0	50	18.45	78	61	20.5	61	22.45	95	74	25.0	74
28000	16.45	69	54	18.2	55	20.15	84	66	22.1	66	24.45	102	80	26.9	82
30000	18.00	74	58	19.4	60	22.00	89	70	23.6	72	27.00	109	86	28.9	90
31000	18.45	76	60	20.1	63	23.00	92	73	24.4	75	28.15	114	89	30.0	94

Figure 5.10.15 - 700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS) / ISA

CLIMB PERFORMANCE

700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS)

Conditions : **ISA + 20°C**

700 SHP climb power

Landing gear and flaps UP

IAS = 160 KIAS up to 20000 ft ; - 2 KIAS / 1000 ft then

2000 RPM - BLEED AUTO

NOTE :

- Time, consumption and distance from the 50 ft
- If BLEED HI selected, fuel consumptions increased by :
 - . 4 % below FL 250
 - . up to 16 % above FL 250
 - time to climb increased by 7 % to 22 % from FL 260 to FL 310

Pressure altitude (feet)	WEIGHT 5794 lbs (2628 kg)					WEIGHT 6579 lbs (2984 kg)					WEIGHT 7394 lbs (3354 kg)				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0
2000	01.00	6	5	1.5	3	01.15	7	5	1.8	4	01.30	8	6	2.2	4
4000	02.15	11	9	3.0	6	02.45	14	11	3.6	8	03.15	16	13	4.3	9
6000	03.30	17	13	4.5	10	04.15	20	16	5.4	12	05.00	24	19	6.4	14
8000	04.45	23	18	6.0	14	05.30	27	21	7.2	16	06.45	32	25	8.6	20
10000	06.00	28	22	7.4	18	07.15	34	27	8.9	21	08.30	41	32	10.7	25
12000	07.15	34	27	8.9	22	08.45	40	32	10.7	26	10.30	49	38	12.9	32
14000	08.30	39	31	10.4	26	10.15	47	37	12.5	32	12.30	57	45	15.1	38
16000	10.00	45	35	11.9	31	12.00	54	43	14.4	38	14.30	66	52	17.4	45
18000	11.30	51	40	13.5	36	13.45	61	48	16.2	44	16.45	75	58	19.7	53
20000	13.00	57	45	15.0	42	15.45	69	54	18.2	51	19.00	84	66	22.1	62
22000	14.30	63	49	16.5	47	17.30	76	60	20.0	58	21.15	92	73	24.4	71
24000	15.45	68	54	18.0	53	19.15	83	65	21.9	65	23.30	101	79	26.7	79
26000	17.30	74	58	19.5	59	21.15	90	71	23.7	72	26.00	110	87	29.1	89
28000	19.15	80	63	21.1	66	23.30	98	77	25.8	81	29.15	120	95	31.8	100
30000	21.15	86	68	22.8	74	26.15	106	83	28.0	91	33.00	132	104	34.9	115
31000	22.30	90	70	23.7	78	27.45	111	87	29.3	98	35.15	139	109	36.8	124

Figure 5.10.16 - 700 SHP - TIME, CONSUMPTION AND CLIMB DISTANCE (IAS = 160 KIAS) / ISA + 20°C

CLIMB PERFORMANCE

CLIMB PERFORMANCE AFTER GO-AROUND

Conditions : 700 SHP climb power
Landing gear DN and flaps LDG
IAS = 90 KIAS

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)						
		ISA - 35°C	ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
6594 lbs (2991 kg)	SL	1410	1300	1230	1165	1105	1045	985
	2000	1380	1265	1195	1130	1065	1010	955
	4000	1345	1230	1155	1090	1025	970	915
	6000	1310	1190	1115	1050	985	925	870
	8000	1270	1145	1070	1000	940	880	825

Conditions : 700 SHP climb power
Landing gear DN and flaps LDG
IAS = 95 KIAS

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)						
		ISA - 35°C	ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
7394 lbs (3354 kg)	SL	1120	1025	960	905	850	805	760
	2000	1085	985	920	865	810	765	715
	4000	1045	945	880	825	770	720	675
	6000	1010	905	840	780	730	680	630
	8000	965	860	795	740	685	630	580

Figure 5.10.17 - CLIMB PERFORMANCE AFTER GO-AROUND

CLIMB PERFORMANCE

CLIMB PERFORMANCE - FLAPS TO

Conditions : 700 SHP climb power
Landing gear UP and flaps TO
IAS = 110 KIAS

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)						
		ISA - 35°C	ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
6594 lbs (2991 kg)	SL	2140	2000	1910	1830	1750	1680	1600
	2000	2120	1975	1880	1800	1720	1650	1585
	4000	2100	1950	1860	1775	1700	1620	1555
	6000	2075	1925	1830	1750	1670	1595	1525
	8000	2050	1895	1805	1720	1640	1565	1495

Conditions : 700 SHP climb power
Landing gear UP and flaps TO
IAS = 115 KIAS

Airplane weight	Pressure altitude (feet)	RATE OF CLIMB (ft/min)						
		ISA - 35°C	ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
7394 lbs (3354 kg)	SL	1825	1695	1615	1545	1475	1415	1355
	2000	1800	1670	1590	1515	1450	1390	1325
	4000	1775	1640	1560	1490	1420	1360	1300
	6000	1750	1620	1540	1465	1395	1330	1270
	8000	1720	1585	1505	1430	1360	1295	1230

Figure 5.10.18 - CLIMB PERFORMANCE - FLAPS TO

5.11 - CRUISE PERFORMANCE

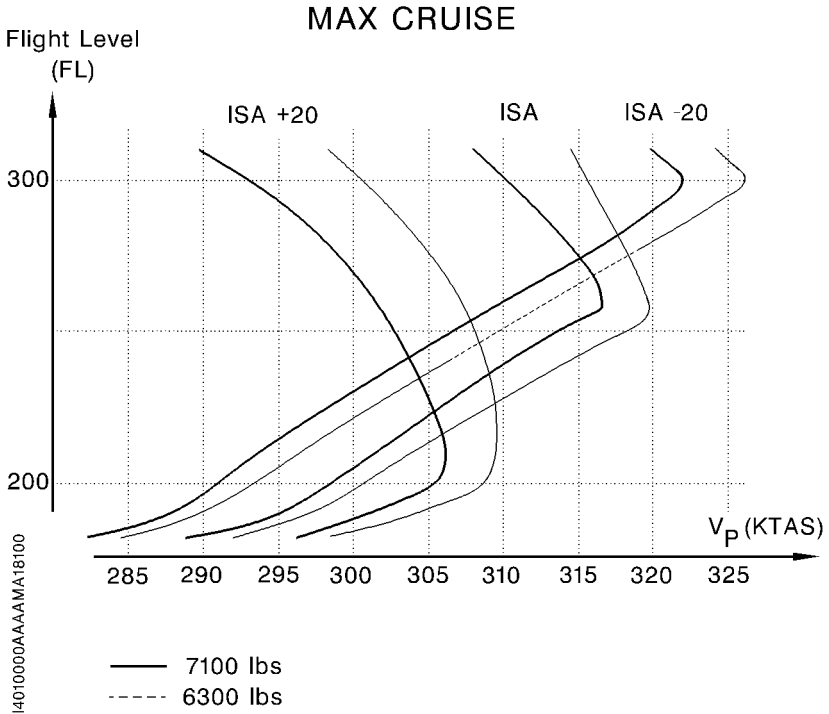


Figure 5.11.1 - CRUISE PERFORMANCE (Maximum cruise)

CRUISE PERFORMANCE
Maximum cruise

Conditions : **ISA - 20°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced by 5 % above FL 290
airspeeds reduced by 3 KIAS above FL 290
fuel flow increased by 2 % below FL 290

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 2	121	329	258	86.9	246	241	245	240	244	238
5000	- 8	121	303	238	80.0	241	253	240	252	239	250
10000	- 17	121	282	221	74.5	236	265	234	264	233	262
15000	- 26	121	270	212	71.4	230	280	229	278	227	276
18000	- 32	121	262	205	69.1	227	289	226	287	224	285
20000	- 36	121	256	201	67.7	225	295	224	293	222	291
21000	- 37	121	254	200	67.2	224	298	222	296	221	294
22000	- 39	121	252	198	66.7	223	302	221	299	219	297
23000	- 41	121	251	197	66.2	222	305	220	303	218	300
24000	- 43	121	249	196	65.9	221	308	219	306	217	303
25000	- 45	121	248	195	65.6	220	312	218	309	216	307
26000	- 46	121	247	194	65.3	219	315	217	313	215	310
27000	- 48	121	247	194	65.2	218	319	216	316	213	313
28000	- 50	118	247	194	65.2	216	322	214	320	212	317
29000	- 52	114	247	194	65.3	215	326	213	323	211	320
30000	- 54	110	247	194	65.3	214	329	211	326	209	322
31000	- 56	106	238	187	62.9	209	328	207	324	204	320

Figure 5.11.2 - CRUISE PERFORMANCE -
Maximum cruise / ISA - 20°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Maximum cruise

Conditions : **ISA - 10°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced up to 6 % above FL 270
above FL 270, airspeeds reduced by 2 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 270

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 12	121	332	261	87.8	245	244	244	242	242	241
5000	+ 2	121	306	240	80.8	240	256	238	255	237	253
10000	- 7	121	285	223	75.2	234	269	232	267	231	265
15000	- 16	121	273	214	72.1	229	283	227	281	225	279
18000	- 22	121	264	207	69.8	225	292	224	290	222	288
20000	- 25	121	259	203	68.4	223	299	221	297	219	294
21000	- 27	121	257	201	67.8	222	302	220	300	218	297
22000	- 29	121	255	200	67.3	221	305	219	303	217	300
23000	- 31	121	253	198	66.8	220	309	218	306	216	304
24000	- 33	121	252	198	66.5	219	312	217	310	215	307
25000	- 34	121	251	197	66.2	217	316	216	313	213	310
26000	- 36	120	249	196	65.9	216	319	214	316	212	313
27000	- 38	116	249	196	65.8	215	322	213	320	211	317
28000	- 40	113	249	195	65.7	214	326	212	323	209	320
29000	- 42	109	241	189	63.6	210	325	207	322	204	318
30000	- 44	105	232	182	61.2	205	324	203	321	200	317
31000	- 46	101	223	175	58.9	201	323	198	319	196	315

Figure 5.11.3 - CRUISE PERFORMANCE -
Maximum cruise / ISA - 10°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Maximum cruise

Conditions : **ISA - 5°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced up to 7 % above FL 260
above FL 260, airspeeds reduced by 2 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 260

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 17	121	334	262	88.3	244	245	243	244	242	243
5000	+ 8	121	307	241	81.2	239	257	238	256	236	255
10000	- 2	121	286	225	75.6	233	270	232	269	230	267
15000	- 11	121	274	215	72.5	228	285	226	283	224	281
18000	- 17	121	265	208	70.1	224	294	223	292	221	290
20000	- 20	121	260	204	68.7	222	301	220	298	218	296
21000	- 22	121	258	203	68.2	221	304	219	302	217	299
22000	- 24	121	256	201	67.6	220	307	218	305	216	302
23000	- 26	121	254	200	67.2	219	311	217	308	215	305
24000	- 28	121	253	198	66.8	217	314	216	312	213	309
25000	- 29	121	252	198	66.5	216	317	214	315	212	312
26000	- 31	117	251	197	66.3	215	321	213	318	211	315
27000	- 33	113	250	196	66.1	214	324	212	321	209	318
28000	- 35	109	243	191	64.2	210	324	208	321	205	317
29000	- 37	105	234	184	61.9	206	323	203	320	200	316
30000	- 39	102	226	177	59.7	202	323	199	319	197	314
31000	- 41	98	218	171	57.6	198	322	196	318	192	312

Figure 5.11.4 - CRUISE PERFORMANCE -
Maximum cruise / ISA - 5°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Maximum cruise

Conditions : **ISA**

Landing gear and flaps UP
2000 RPM (*) – BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced up to 8 % above FL 250
above FL 250, airspeeds reduced by 2 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 250

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 22	121	336	264	88.8	243	246	242	245	241	244
5000	+ 13	121	309	242	81.6	238	259	237	257	235	256
10000	+ 3	121	288	226	76.0	232	272	231	270	229	269
15000	- 6	121	276	216	72.8	227	287	225	285	223	283
18000	- 12	121	267	209	70.5	223	296	222	294	220	291
20000	- 15	121	261	205	69.0	221	302	219	300	217	298
21000	- 17	121	259	203	68.4	220	306	218	303	216	301
22000	- 19	121	257	202	68.0	219	309	217	307	215	304
23000	- 21	121	256	201	67.5	218	312	216	310	214	307
24000	- 22	121	254	199	67.1	216	316	215	313	212	310
25000	- 24	118	253	198	66.8	215	319	213	317	211	313
26000	- 26	115	252	198	66.6	214	323	212	320	210	317
27000	- 28	111	245	192	64.6	210	323	208	319	205	315
28000	- 30	107	236	185	62.4	206	322	204	318	201	314
29000	- 32	103	228	179	60.1	202	321	199	317	197	313
30000	- 34	99	220	172	58.0	198	320	196	316	193	311
31000	- 36	96	211	166	55.8	194	319	192	315	188	309

Figure 5.11.5 - CRUISE PERFORMANCE -
Maximum cruise / ISA

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Maximum cruise

Conditions : **ISA + 5°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced up to 8 % above FL 240
above FL 240, airspeeds reduced by 3 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 240

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 27	121	338	265	89.3	243	248	241	247	240	245
5000	+ 18	121	310	244	82.0	237	260	236	259	234	257
10000	+ 8	121	289	227	76.4	231	273	230	272	228	270
15000	- 1	121	277	218	73.2	226	288	224	286	222	284
18000	- 6	121	268	210	70.8	222	297	221	295	219	293
20000	- 10	121	263	206	69.4	220	304	218	302	216	299
21000	- 12	121	260	204	68.8	219	307	217	305	215	302
22000	- 14	121	259	203	68.3	218	311	216	308	214	305
23000	- 16	121	257	201	67.8	216	314	215	312	213	309
24000	- 17	119	255	200	67.4	215	317	213	315	211	312
25000	- 19	115	254	199	67.1	214	321	212	318	210	315
26000	- 21	111	247	194	65.2	210	321	208	318	206	314
27000	- 23	107	238	187	62.9	206	320	204	317	201	313
28000	- 25	103	229	180	60.6	202	320	200	316	197	311
29000	- 27	100	221	174	58.5	198	319	196	315	193	310
30000	- 29	96	213	167	56.3	195	318	192	313	188	308
31000	- 31	93	205	161	54.2	190	316	187	312	183	305

Figure 5.11.6 - CRUISE PERFORMANCE -
Maximum cruise / ISA + 5°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Maximum cruise

Conditions : **ISA + 10°C**

Landing gear and flaps UP

2000 RPM (*) - BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced up to 8 % above FL 230
above FL 230, airspeeds reduced by 4 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 230

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 32	121	340	267	89.8	242	249	241	248	239	247
5000	+ 23	121	312	245	82.5	236	261	235	260	233	259
10000	+ 13	121	291	228	76.8	230	275	229	273	227	272
15000	+ 4	121	279	219	73.6	225	290	223	288	221	286
18000	- 1	121	269	211	71.1	221	299	220	297	218	295
20000	- 5	121	264	207	69.7	219	306	217	304	215	301
21000	- 7	121	262	205	69.1	218	309	216	307	214	304
22000	- 9	121	260	204	68.6	217	312	215	310	213	307
23000	- 11	120	258	202	68.1	215	316	214	313	212	310
24000	- 13	117	256	201	67.7	214	319	212	316	210	313
25000	- 15	113	249	196	65.9	211	320	208	316	206	313
26000	- 17	109	240	189	63.5	207	319	204	315	201	311
27000	- 19	105	232	182	61.2	202	318	200	314	197	310
28000	- 20	101	223	175	59.0	198	317	197	313	193	308
29000	- 22	97	215	169	56.8	195	316	192	312	189	306
30000	- 24	94	207	163	54.7	191	315	188	310	184	304
31000	- 26	91	199	157	52.7	187	314	183	308	179	302

Figure 5.11.7 - CRUISE PERFORMANCE -
Maximum cruise / ISA + 10°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Maximum cruise

Conditions : **ISA + 20°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Use preferably recommended cruise power
- If BLEED HI selected,
torque reduced up to 10 % above FL 200
above FL 200, airspeeds reduced by 6 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 200

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	us gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 42	121	344	270	90.8	240	252	239	251	238	249
5000	+ 33	121	316	248	83.4	234	264	233	263	232	261
10000	+ 23	121	294	231	77.6	229	278	227	276	226	274
15000	+ 14	121	281	221	74.3	223	293	221	291	220	289
18000	+ 9	121	272	213	71.8	220	302	218	300	216	298
20000	+ 4	121	266	209	70.4	217	309	215	307	213	304
21000	+ 2	120	264	207	69.8	216	312	214	310	212	307
22000	0	117	257	202	67.9	213	313	211	310	208	307
23000	- 2	113	249	195	65.7	209	313	207	310	204	306
24000	- 3	109	241	189	63.6	205	313	203	310	200	305
25000	- 5	106	233	183	61.5	202	312	199	309	197	304
26000	- 7	102	224	176	59.3	198	312	196	308	193	303
27000	- 9	99	217	170	57.3	195	311	192	307	188	302
28000	- 11	95	209	164	55.3	191	310	188	306	184	300
29000	- 13	92	202	158	53.3	187	309	183	304	179	298
30000	- 15	89	195	153	51.4	182	308	179	302	174	295
31000	- 17	86	187	147	49.5	178	307	174	300	169	292

Figure 5.11.8 - CRUISE PERFORMANCE -
Maximum cruise / ISA + 20°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

NORMAL CRUISE (recommended)

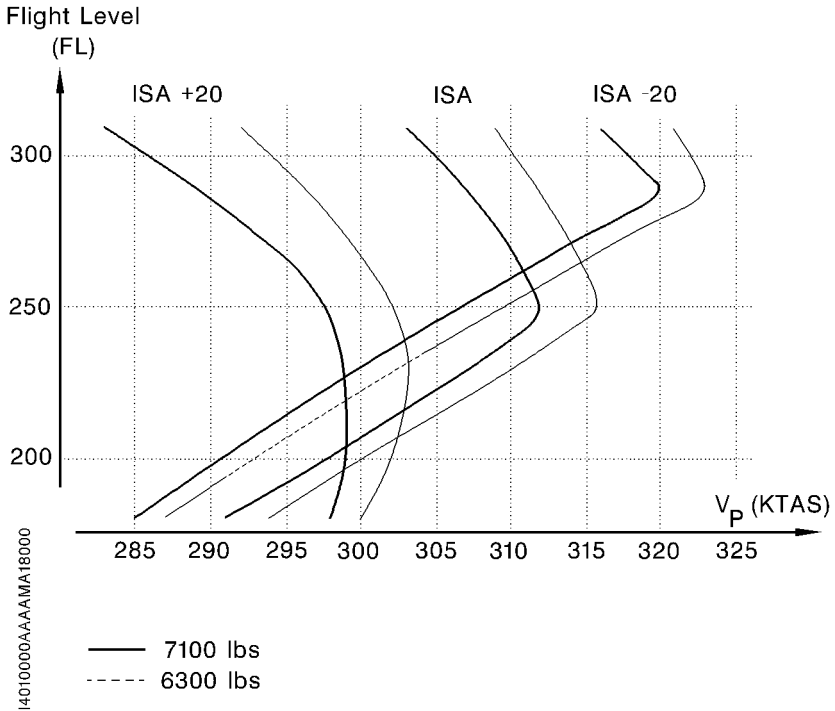


Figure 5.11.9 - CRUISE PERFORMANCE (Recommended cruise)

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA - 20°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced up to 6 % above FL 290
airspeeds reduced by 4 KIAS above FL 290
fuel flow increased by 2 % below FL 290

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 2	121	329	258	86.9	246	241	245	240	244	238
5000	- 8	121	303	238	80.0	241	253	240	252	239	250
10000	- 17	121	282	221	74.5	236	265	234	264	233	262
15000	- 26	121	270	212	71.4	230	280	229	278	227	276
18000	- 32	121	262	205	69.1	227	289	226	287	224	285
20000	- 36	121	256	201	67.7	225	295	224	293	222	291
21000	- 37	121	254	200	67.2	224	298	222	296	221	294
22000	- 39	121	252	198	66.7	223	302	221	299	219	297
23000	- 41	121	251	197	66.2	222	305	220	303	218	300
24000	- 43	121	249	196	65.9	221	308	219	306	217	303
25000	- 45	121	248	195	65.6	220	312	218	309	216	307
26000	- 46	120	247	194	65.3	219	315	217	313	215	310
27000	- 48	118	247	194	65.2	218	319	216	316	213	313
28000	- 50	114	247	194	65.2	216	322	214	320	212	317
29000	- 52	110	247	194	65.2	215	326	213	323	211	320
30000	- 54	106	240	188	63.3	211	326	209	322	206	318
31000	- 56	102	231	181	60.9	207	324	204	321	201	316

Figure 5.11.10 - CRUISE PERFORMANCE -
Normal cruise / ISA - 20°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA - 10°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced by 7 % above FL 260
above FL 260, airspeeds reduced by 3 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 260

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	^{us} gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 12	121	332	261	87.8	245	244	244	242	242	241
5000	+ 2	121	306	240	80.0	240	256	238	255	237	253
10000	- 7	121	285	223	75.2	234	269	232	267	231	265
15000	- 16	121	273	214	72.1	229	283	227	281	225	279
18000	- 22	121	264	207	69.8	225	292	224	290	222	288
20000	- 25	121	259	203	68.4	223	299	221	297	219	294
21000	- 27	121	257	201	67.8	222	302	220	300	218	297
22000	- 29	121	255	200	67.3	221	305	219	303	217	300
23000	- 31	121	253	198	66.8	220	309	218	306	216	304
24000	- 33	121	252	198	66.5	219	312	217	310	215	307
25000	- 34	120	251	197	66.2	217	316	216	313	213	310
26000	- 36	115	249	196	65.9	216	319	214	316	212	313
27000	- 38	111	248	195	65.5	215	322	212	319	210	315
28000	- 40	109	240	188	63.3	210	321	208	318	206	314
29000	- 42	105	231	182	61.1	206	321	204	317	201	313
30000	- 44	101	223	175	58.9	202	320	200	316	197	312
31000	- 46	97	215	169	56.8	198	319	196	315	193	310

Figure 5.11.11 - CRUISE PERFORMANCE -
Normal cruise / ISA - 10°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA - 5°C**
Landing gear and flaps UP
2000 RPM (*) - BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced by 7 % above FL 250
above FL 250, airspeeds reduced by 3 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 250

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	us gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 17	121	334	262	88.3	244	245	243	244	242	243
5000	+ 8	121	307	241	81.2	239	257	238	256	236	255
10000	- 2	121	286	225	75.6	233	270	232	269	230	267
15000	- 11	121	274	215	72.5	228	285	226	283	224	281
18000	- 17	121	265	208	70.1	224	294	223	292	221	290
20000	- 20	121	260	204	68.7	222	301	220	298	218	296
21000	- 22	121	258	203	68.2	221	304	219	302	217	299
22000	- 24	121	256	201	67.6	220	307	218	305	216	302
23000	- 26	121	254	200	67.2	219	311	217	308	215	305
24000	- 28	121	253	198	66.8	217	314	216	312	213	309
25000	- 29	115	252	198	66.5	216	317	214	315	212	312
26000	- 31	112	250	196	66.0	215	320	212	317	210	314
27000	- 33	108	241	189	63.7	210	320	208	316	206	313
28000	- 35	105	232	182	61.4	206	319	204	316	201	311
29000	- 37	101	224	176	59.3	202	318	200	315	197	310
30000	- 39	97	217	170	57.2	198	317	196	313	193	308
31000	- 41	94	209	164	55.1	195	316	192	312	188	306

Figure 5.11.12 - CRUISE PERFORMANCE -
Normal cruise / ISA - 5°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA**

Landing gear and flaps UP
2000 RPM (*) – BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced by 8 %
above FL 240, airspeeds reduced by 4 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 240

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	us gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 22	121	336	264	88.8	243	246	242	245	241	244
5000	+ 13	121	309	242	81.6	238	259	237	257	235	256
10000	+ 3	121	288	226	76.0	232	272	231	270	229	269
15000	- 6	121	276	216	72.8	227	287	225	285	223	283
18000	- 12	121	267	209	70.5	223	296	222	294	220	291
20000	- 15	121	261	205	69.0	221	302	219	300	217	298
21000	- 17	121	259	203	68.4	220	306	218	303	216	301
22000	- 19	121	257	202	68.0	219	309	217	307	215	304
23000	- 21	121	256	201	67.5	218	312	216	310	214	307
24000	- 22	121	254	199	67.1	216	316	215	313	212	310
25000	- 24	113	252	198	66.5	215	319	213	316	210	312
26000	- 26	110	243	191	64.2	211	318	208	315	206	311
27000	- 28	106	234	184	61.9	206	317	204	314	201	310
28000	- 31	102	226	177	59.7	202	317	200	313	197	308
29000	- 33	99	218	171	57.6	198	316	197	312	193	307
30000	- 35	95	210	165	55.5	195	315	192	310	189	305
31000	- 37	92	202	159	53.4	191	314	188	309	184	303

Figure 5.11.13 - CRUISE PERFORMANCE -
Normal cruise / ISA

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA + 5°C**
Landing gear and flaps UP
2000 RPM (*) – BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced by 8 % above FL 220
above FL 220, airspeeds reduced by 2 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 220

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	us gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 27	121	338	265	89.3	243	248	241	247	240	245
5000	+ 18	121	310	244	82.0	237	260	236	259	234	257
10000	+ 8	121	289	227	76.4	231	273	230	272	228	270
15000	- 1	121	277	218	73.2	226	288	224	286	222	284
18000	- 6	121	268	210	70.8	222	297	221	295	219	293
20000	- 10	121	263	206	69.4	220	304	218	302	216	299
21000	- 12	121	260	204	68.8	219	307	217	305	215	302
22000	- 14	121	259	203	68.3	218	311	216	308	214	305
23000	- 16	121	257	201	67.8	216	314	215	312	213	309
24000	- 18	114	253	199	66.9	215	317	213	314	210	310
25000	- 20	110	245	193	64.8	211	316	209	313	206	310
26000	- 22	106	236	185	62.4	207	316	204	312	202	308
27000	- 24	102	228	179	60.2	202	315	200	311	197	307
28000	- 26	98	220	173	58.1	198	314	197	310	193	305
29000	- 28	95	212	166	55.9	195	313	192	309	189	303
30000	- 30	92	204	160	53.9	191	312	188	307	184	301
31000	- 32	89	196	154	51.9	187	311	183	305	179	299

Figure 5.11.14 - CRUISE PERFORMANCE -
Normal cruise / ISA + 5°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA + 10°C**
Landing gear and flaps UP
2000 RPM (*) – BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced by 9 % above FL 210
above FL 210, airspeeds reduced by 4 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 210

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	us gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 32	121	340	267	89.8	242	249	241	248	239	247
5000	+ 23	121	312	245	82.5	236	261	235	260	233	259
10000	+ 13	121	291	228	76.8	230	275	229	273	227	272
15000	+ 4	121	279	219	73.6	225	290	223	288	221	286
18000	- 1	121	269	211	71.1	221	299	220	297	218	295
20000	- 6	121	264	207	69.7	219	306	217	304	215	301
21000	- 8	121	262	205	69.1	218	309	216	307	214	304
22000	- 10	121	260	204	68.6	217	312	215	310	213	307
23000	- 12	115	254	200	67.2	214	314	212	311	210	308
24000	- 13	112	246	193	65.1	211	314	208	311	206	307
25000	- 15	108	239	188	63.1	207	314	205	311	202	307
26000	- 17	104	230	181	60.8	203	313	200	310	197	305
27000	- 19	100	222	174	58.7	199	312	197	309	194	304
28000	- 21	96	214	168	56.5	195	311	193	307	189	302
29000	- 23	93	206	161	54.3	191	310	188	306	184	300
30000	- 25	90	198	156	52.4	187	309	184	304	180	297
31000	- 27	87	191	150	50.4	183	308	179	301	174	294

Figure 5.11.15 - CRUISE PERFORMANCE -
Normal cruise / ISA + 10°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Normal (recommended) cruise

Conditions : **ISA + 20°C**
Landing gear and flaps UP
2000 RPM (*) – BLEED AUTO

NOTE :

- Power recommended by PRATT & WHITNEY CANADA
- If BLEED HI selected,
torque reduced by 12 % above FL 160
above FL 160, airspeeds reduced by 7 KIAS+1 KIAS/2000 ft
fuel flow increased by 2 % below FL 160

Pressure altitude (feet)	IOAT (°C)	TRQ (%)	Fuel flow			AIRSPEEDS (kt)					
						5500 lbs (2495 kg)		6300 lbs (2858 kg)		7100 lbs (3220 kg)	
			l / h	kg / h	us gal / h	IAS	TAS	IAS	TAS	IAS	TAS
0	+ 42	121	344	270	90.8	240	252	239	251	238	249
5000	+ 33	121	316	248	83.4	234	264	233	263	232	261
10000	+ 23	121	294	231	77.6	229	278	227	276	226	274
15000	+ 14	121	281	221	74.3	223	293	221	291	220	289
18000	+ 9	121	272	213	71.8	220	302	218	300	216	298
20000	+ 4	117	259	203	68.4	214	305	212	302	210	299
21000	+ 2	114	251	197	66.4	211	305	209	302	207	299
22000	0	111	244	191	64.4	207	306	205	303	203	299
23000	- 2	108	237	186	62.5	204	306	202	303	199	299
24000	- 4	105	229	180	60.5	201	306	198	302	196	298
25000	- 6	101	222	174	58.6	197	306	195	302	192	297
26000	- 8	98	214	168	56.5	194	305	191	301	188	296
27000	- 10	94	207	162	54.6	190	304	187	299	183	294
28000	- 12	91	199	156	52.6	186	303	183	298	178	291
29000	- 14	87	192	150	50.6	182	302	178	296	174	289
30000	- 16	84	185	145	48.8	178	301	174	294	169	286
31000	- 18	81	178	140	47.0	174	299	169	292	164	283

Figure 5.11.16 - CRUISE PERFORMANCE -
Normal cruise / ISA + 20°C

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Long Range Cruise (5500 lbs - 2495 kg)

Conditions : Landing gear and flaps UP
2000 RPM (*)
BLEED AUTO or HI

LEGEND :	IOAT : °C	IAS : KIAS
	FF : us gal/h	
	FF : kg/h	TAS : KTAS

Pressure altitude (feet)	TRQ (%)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
		IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF
15000	45	- 28	156	- 18	154	- 8	152	+ 2	150	+ 12	148
		42.2		42.6		43.2		43.7		44.2	
		125	190	127	192	128	194	130	195	131	196
18000	45	- 34	152	- 24	150	- 14	148	- 4	146	+ 6	145
		39.7		40.2		40.8		41.2		41.7	
		118	194	120	196	121	197	122	199	124	202
19000	45	- 36	150	- 26	148	- 16	147	- 6	145	+ 4	144
		39.0		39.4		39.9		40.4		40.9	
		116	195	117	197	119	199	120	201	121	203
20000	45	- 38	149	- 28	147	- 18	146	- 8	144	+ 2	143
		38.2		38.7		39.1		39.6		40.1	
		113	197	115	199	116	201	118	203	119	205
21000	45	- 40	148	- 30	146	- 20	145	- 10	143	+ 0	142
		37.4		37.9		38.4		38.8		39.3	
		111	198	112	201	114	203	115	205	117	207
22000	45	- 42	147	- 32	145	- 22	144	- 12	142	- 2	140
		36.7		37.1		37.5		38.1		38.6	
		109	200	110	202	112	205	113	207	115	208
23000	45	- 44	146	- 34	144	- 24	142	- 14	141	- 4	139
		35.9		36.4		36.8		37.3		37.8	
		107	202	108	205	109	206	111	208	112	210
24000	45	- 46	145	- 36	143	- 26	141	- 16	139	- 6	138
		35.3		35.7		36.1		36.6		37.0	
		105	204	106	206	107	208	109	210	110	212

Figure 5.11.17 (1/2) - CRUISE PERFORMANCE -
Long Range Cruise (5500 lbs - 2495 kg) (Altitude ≤ 24000 ft)

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Long Range Cruise (5500 lbs - 2495 kg) (Cont'd)

Conditions : Landing gear and flaps UP
2000 RPM (*)
BLEED AUTO or HI

LEGEND :	IOAT : °C	IAS : KIAS
	FF : us gal/h	
	FF : kg/h	TAS : KTAS

Pressure altitude (feet)	TRQ (%)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
24000	45	- 46	145	- 36	143	- 26	141	- 16	139	- 6	138
		35.3		35.7		36.1		36.6		37.0	
		105	204	106	206	107	208	109	210	110	212
25000	49	- 48	150	- 38	148	- 28	146	- 18	145	- 8	143
		35.9		36.4		36.9		37.4		37.9	
		107	215	108	217	110	219	111	222	113	224
26000	52	- 50	153	- 40	151	- 30	150	- 20	148	- 10	147
		36.6		37.1		37.6		38.0		38.5	
		109	223	110	226	112	229	113	231	114	233
27000	54	- 52	155	- 42	153	- 32	152	- 22	150	- 12	148
		36.8		37.3		37.8		38.2		38.8	
		109	230	111	232	112	235	114	237	115	240
28000	55.5	- 53	156	- 43	154	- 33	153	- 23	151	- 13	149
		36.9		37.4		37.9		38.3		38.8	
		110	235	111	238	113	241	114	243	115	245
29000	56	- 55	156	- 45	154	- 35	152	- 25	150	- 15	148
		36.6		37.1		37.5		38.0		38.5	
		109	238	110	241	111	244	113	246	114	248
30000	56.5	- 57	155	- 47	154	- 37	152	- 27	150	- 17	148
		36.4		36.9		37.3		37.8		38.3	
		108	242	110	245	111	247	112	250	114	252
31000	57	- 59	155	- 49	153	- 39	151	- 29	149	- 19	147
		36.1		36.6		37.0		37.5		38.0	
		107	246	109	248	110	250	111	253	113	255

Figure 5.11.17 (2/2) - CRUISE PERFORMANCE -
Long Range Cruise (5500 lbs - 2495 kg) (Altitude ≥ 24000 ft)

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Long Range Cruise (6300 lbs - 2858 kg)

Conditions : Landing gear and flaps UP
2000 RPM (*)
BLEED AUTO or HI

LEGEND :	IOAT : °C	IAS : KIAS
	FF : us gal/h	
	FF : kg/h	TAS : KTAS

Pressure altitude (feet)	TRQ (%)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
		IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF
15000	50	- 28	159	- 18	156	- 8	154	+ 2	153	+ 12	151
		44.4		44.9		45.4		46.0		46.5	
		132	193	134	194	135	196	137	198	138	200
18000	50	- 34	154	- 24	153	- 14	151	- 4	149	+ 6	148
		41.8		42.3		42.8		43.4		43.9	
		124	197	126	199	127	201	129	203	130	205
19000	50	- 36	153	- 26	151	- 16	150	- 6	148	+ 4	146
		41.0		41.5		42.0		42.5		43.1	
		122	199	123	201	125	203	126	205	128	206
20000	50	- 38	152	- 28	150	- 18	149	- 8	147	+ 2	145
		40.2		40.8		41.2		41.7		42.2	
		120	201	121	203	122	205	124	206	125	208
21000	50	- 40	151	- 30	149	- 20	147	- 10	145	+ 0	143
		39.4		39.9		40.5		40.9		41.4	
		117	202	119	204	120	206	121	208	123	209
22000	50	- 42	149	- 32	148	- 22	146	- 12	144	- 2	142
		38.7		39.1		39.6		40.1		40.6	
		115	204	116	206	118	208	119	209	121	210
23000	50	- 44	148	- 34	146	- 24	144	- 14	142	- 4	140
		38.0		38.4		38.9		39.3		39.8	
		113	206	114	207	116	209	117	210	118	212
24000	50	- 46	147	- 36	145	- 26	143	- 16	141	- 6	139
		37.3		37.8		38.2		38.6		39.1	
		111	207	112	209	113	210	115	212	116	214

Figure 5.11.18 (1/2) - CRUISE PERFORMANCE -
Long Range Cruise (6300 lbs - 2858 kg) (Altitude ≤ 24000 ft)

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Long Range Cruise (6300 lbs - 2858 kg) (Cont'd)

Conditions : Landing gear and flaps UP
2000 RPM (*)
BLEED AUTO or HI

LEGEND :	IOAT : °C	IAS : KIAS
	FF : us gal/h	
	FF : kg/h	TAS : KTAS

Pressure altitude (feet)	TRQ (%)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
24000	50	- 46	147	- 36	145	- 26	143	- 16	141	- 6	139
		37.3		37.8		38.2		38.6		39.1	
		111	207	112	209	113	210	115	212	116	214
25000	53	- 48	151	- 38	149	- 28	147	- 18	145	- 8	143
		37.6		38.0		38.5		39.0		39.5	
		112	216	113	218	114	220	116	221	117	223
26000	56	- 50	154	- 40	152	- 30	150	- 20	148	- 10	146
		38.2		38.6		39.2		39.7		40.2	
		114	224	115	227	116	229	118	231	119	232
27000	58.5	- 52	157	- 42	155	- 32	153	- 22	151	- 12	148
		38.7		39.1		39.6		40.1		40.6	
		115	232	116	234	118	236	119	238	121	240
28000	60.5	- 53	158	- 43	156	- 33	154	- 23	152	- 13	150
		39.0		39.5		40.0		40.5		41.0	
		116	238	117	241	119	243	120	244	122	246
29000	61	- 55	157	- 45	155	- 35	153	- 25	151	- 15	149
		38.7		39.1		39.7		40.1		40.7	
		115	241	116	243	118	245	119	247	121	249
30000	61.5	- 57	157	- 47	155	- 37	153	- 27	150	- 17	148
		38.5		39.0		39.4		39.9		40.4	
		114	244	116	247	117	249	119	251	120	253
31000	62	- 59	156	- 49	154	- 39	152	- 29	150	- 19	147
		38.2		38.7		39.2		39.7		40.2	
		114	247	115	250	116	252	118	254	119	256

Figure 5.11.18 (2/2) - CRUISE PERFORMANCE -
Long Range Cruise (6300 lbs - 2858 kg) (Altitude ≥ 24000 ft)

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Long Range Cruise (7100 lbs - 3220 kg)

Conditions : Landing gear and flaps UP
2000 RPM (*)
BLEED AUTO or HI

LEGEND :	IOAT : °C	IAS : KIAS
	FF : us gal/h	
	FF : kg/h	TAS : KTAS

Pressure altitude (feet)	TRQ (%)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
		IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF
15000	55	- 28	161	- 18	159	- 8	157	+ 2	155	+ 12	153
		46.6	138	47.1	140	47.6	142	48.3	143	48.8	145
18000	55	- 34	157	- 24	155	- 14	153	- 4	151	+ 6	149
		43.9	130	44.4	132	44.9	134	45.6	135	46.1	137
19000	55	- 36	155	- 26	154	- 16	152	- 6	149	+ 4	147
		43.1	128	43.6	129	44.1	131	44.6	133	45.1	134
20000	55	- 38	154	- 28	152	- 18	150	- 8	148	+ 2	146
		42.2	125	42.7	127	43.3	129	43.8	130	44.3	132
21000	55	- 40	153	- 30	150	- 20	148	- 10	146	+ 0	144
		41.5	123	41.9	125	42.4	126	43.0	128	43.5	129
22000	55	- 42	151	- 32	149	- 22	147	- 12	145	- 2	143
		40.8	121	41.2	122	41.7	124	42.1	125	42.6	127
23000	55	- 44	150	- 34	147	- 24	145	- 14	143	- 4	141
		40.0	119	40.6	121	41.0	122	41.5	123	41.9	125
24000	55	- 46	148	- 36	146	- 26	144	- 16	141	- 6	139
		39.4	117	39.8	118	40.4	120	40.8	121	41.3	123

Figure 5.11.19 (1/2) - CRUISE PERFORMANCE -
Long Range Cruise (7100 lbs - 3220 kg) (Altitude ≤ 24000 ft)

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

CRUISE PERFORMANCE

Long Range Cruise (7100 lbs - 3220 kg) (Cont'd)

Conditions : Landing gear and flaps UP
2000 RPM (*)
BLEED AUTO or HI

LEGEND :	IOAT : °C	IAS : KIAS
	FF : us gal/h	
	FF : kg/h	TAS : KTAS

Pressure altitude (feet)	TRQ (%)	ISA - 20°C		ISA - 10°C		ISA		ISA + 10°C		ISA + 20°C	
		IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF	IOAT	FF
24000	55	- 46	148	- 36	146	- 26	144	- 16	141	- 6	139
		39.4		39.8		40.4		40.8		41.3	
		117	209	118	211	120	212	121	213	123	214
25000	58	- 48	152	- 38	149	- 28	148	- 18	145	- 8	143
		39.6		40.0		40.6		41.1		41.6	
		118	218	119	219	121	221	122	222	124	223
26000	61	- 50	155	- 40	153	- 30	151	- 20	149	- 10	146
		40.2		40.7		41.2		41.7		42.2	
		119	226	121	228	122	229	124	231	125	232
27000	63.5	- 52	158	- 42	155	- 32	153	- 22	151	- 12	149
		40.8		41.2		41.7		42.3		42.8	
		121	234	122	235	124	237	126	239	127	240
28000	65.5	- 53	159	- 43	157	- 33	154	- 23	152	- 13	150
		41.1		41.6		42.0		42.6		43.1	
		122	240	124	241	125	243	127	245	128	246
29000	66	- 55	158	- 45	156	- 35	153	- 25	151	- 15	149
		40.8		41.3		41.8		42.2		42.8	
		121	242	123	244	124	246	125	248	127	249
30000	66.5	- 57	158	- 47	155	- 37	153	- 27	150	- 17	148
		40.6		41.1		41.6		42.1		42.6	
		121	245	122	247	124	249	125	251	127	252
31000	67	- 59	157	- 49	154	- 39	152	- 29	149	- 19	147
		40.3		40.8		41.3		41.9		42.4	
		120	248	121	250	123	252	125	253	126	255

Figure 5.11.19 (2/2) - CRUISE PERFORMANCE - Long Range Cruise (7100 lbs - 3220 kg) (Altitude ≥ 24000 ft)

(*) Propeller RPM utilization between 1600 and 2000 RPM is possible without changing performance. Display the TRQ indicated in table with Np = 2000 RPM, then reduce Np without exceeding 121.4 % TRQ.

5.12 - TIME, CONSUMPTION AND DESCENT DISTANCE

Conditions : Power as required to maintain constant Vz
Landing gear and flaps UP
CAS = 230 KCAS - 2000 RPM - BLEED AUTO

Pressure altitude (feet)	Vz = 1500 ft/min					Vz = 2000 ft/min					Vz = 2500 ft/min				
	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)	Time (min. s)	Consump.			Dist. (NM)
		l	kg	us gal			l	kg	us gal			l	kg	us gal	
31000	20.40	73	58	19.4	101	15.30	49	39	13.1	75	12.25	35	28	9.3	60
30000	20.00	71	56	18.7	97	15.00	48	38	12.6	72	12.00	34	27	9.1	58
28000	18.40	66	52	17.5	89	14.00	45	35	11.8	66	11.10	32	25	8.5	53
26000	17.20	62	49	16.3	81	13.00	42	33	11.0	61	10.25	30	24	7.9	49
24000	16.00	57	45	15.1	74	12.00	39	30	10.2	55	09.35	28	22	7.4	44
22000	14.40	52	41	13.8	66	11.00	36	28	9.5	50	08.50	26	20	6.8	40
20000	13.20	48	38	12.8	59	10.00	33	26	8.6	44	08.00	24	19	6.2	36
18000	12.00	44	34	11.5	53	09.00	30	23	7.8	39	07.10	21	17	5.7	31
16000	10.40	39	31	10.3	46	08.00	27	21	7.0	34	06.25	19	15	5.0	28
14000	09.20	35	27	9.1	40	07.00	23	18	6.2	30	05.35	17	13	4.5	24
12000	08.00	30	23	7.9	33	06.00	20	16	5.4	25	04.50	15	11	3.8	20
10000	06.40	25	20	6.6	27	05.00	17	13	4.5	21	04.00	12	10	3.2	16
8000	05.20	20	16	5.4	22	04.00	14	11	3.6	16	03.10	10	8	2.6	13
6000	04.00	15	12	4.0	16	03.00	10	8	2.7	12	02.25	8	6	2.0	10
4000	02.40	10	8	2.7	10	02.00	7	6	1.9	8	01.35	5	4	1.3	6
2000	01.20	5	4	1.4	5	01.00	4	3	0.9	4	00.50	3	2	0.7	3
SL	00.00	0	0	0	0	00.00	0	0	0	0	00.00	0	0	0	0

Figure 5.12.1 - TIME, CONSUMPTION AND DESCENT DISTANCE

INTENTIONALLY LEFT BLANK

5.13 - HOLDING TIME

Conditions : Landing gear and flaps UP
 IAS = 120 KIAS - 2000 RPM - BLEED AUTO
 TRQ ≈ 35 %

Pressure altitude (feet)	FUEL USED DURING HOLDING TIME											
	Weight 5500 lbs (2495 kg)						Weight 6300 lbs (2858 kg)					
	10 min			30 min			10 min			30 min		
	l	kg	us gal	l	kg	us gal	l	kg	us gal	l	kg	us gal
SL	32	25	8.4	95	75	25.1	32	25	8.4	96	75	25.3
5000	28	22	7.3	83	65	22.0	29	23	7.6	86	68	22.7
10000	25	20	6.6	75	59	19.8	26	20	6.8	77	61	20.4
15000	23	18	6.1	69	54	18.3	24	19	6.3	72	57	19.0
20000	21	17	5.6	63	50	16.8	22	17	5.9	66	52	17.6

Figure 5.13.1 - HOLDING TIME

INTENTIONALLY LEFT BLANK

5.14 - LANDING DISTANCES

WEIGHT : 7024 lbs (3186 kg)

- Associated conditions :
- Landing gear DN and flaps LDG
 - Approach speed IAS = 85 KIAS
 - Touch-down speed IAS = 78 KIAS
 - Maximum braking without reverse
 - Hard, dry and level runway
 - GR = Ground roll (in ft)
 - D₅₀ = Landing distance (clear to 50 ft) (in ft)

PRESSURE ALTITUDE ft	ISA - 35°C		ISA - 20°C		ISA - 10°C		ISA	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1575	2135	1675	2265	1740	2330	1840	2430
2000	1675	2265	1805	2395	1870	2495	1970	2590
4000	1805	2395	1940	2560	2035	2660	2135	2790
6000	1940	2560	2100	2725	2200	2855	2300	2955
8000	2100	2725	2265	2920	2360	3020	2495	3180
PRESSURE ALTITUDE ft	ISA + 10°C		ISA + 20°C		ISA + 30°C		ISA + 37°C	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1905	2530	2000	2625	2070	2690	2135	2790
2000	2070	2690	2135	2790	2230	2890	2300	2955
4000	2230	2890	2330	2985	2430	3085	2495	3185
6000	2395	3050	2530	3215	2625	3315	2690	3380
8000	2590	3280	2725	3410	2855	3570	2920	3640

Figure 5.14.1 - LANDING DISTANCES - 7024 lbs (3186 kg)

- Corrections :
- Reduce total distances of 10 % every 10 kt of headwind
 - Increase total distances of 30 % every 10 kt of tail-wind

Other runway surfaces require the following correction factors :

- Increase by :
- 7 % on hard grass
 - 10 % on short grass
 - 15 % on wet runway
 - 25 % on high grass
 - 30 % on slippery runway

LANDING DISTANCES

WEIGHT : 6250 lbs (2835 kg)

- Associated conditions: - Landing gear DN and flaps LDG
 - Approach speed IAS = 80 KIAS
 - Touch-down speed IAS = 65 KIAS
 - Maximum braking without reverse
 - Hard, dry and level runway
 - GR = Ground roll (in ft)
 - D₅₀ = Landing distance (clear to 50 ft) (in ft)

PRESSURE ALTITUDE ft	ISA - 35°C		ISA - 20°C		ISA - 10°C		ISA	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1050	1900	1115	2000	1180	2070	1215	2135
2000	1115	2000	1215	2100	1245	2200	1310	2265
4000	1180	2100	1280	2230	1345	2330	1410	2395
6000	1280	2230	1380	2360	1445	2460	1510	2525
8000	1380	2360	1475	2490	1540	2590	1610	2690
PRESSURE ALTITUDE ft	ISA + 10°C		ISA + 20°C		ISA + 30°C		ISA + 37°C	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1280	2200	1310	2300	1380	2360	1445	2430
2000	1345	2330	1410	2430	1475	2495	1540	2560
4000	1445	2460	1510	2560	1575	2655	1640	2755
6000	1575	2645	1640	2720	1705	2820	1770	2920
8000	1705	2790	1770	2885	1835	2985	1900	3085

Figure 5.14.2 - LANDING DISTANCES - 6250 lbs (2835 kg)

- Corrections : . Reduce total distances of 10 % every 10 kt of headwind
 . Increase total distances of 30 % every 10 kt of tail-wind

Other runway surfaces require the following correction factors :

- Increase by : 7 % on hard grass 25 % on high grass
 10 % on short grass 30 % on slippery runway
 15 % on wet runway

LANDING DISTANCES

WEIGHT : 5071 lbs (2300 kg)

- Associated conditions :
- Landing gear DN and flaps LDG
 - Approach speed IAS = 80 KIAS
 - Touch-down speed IAS = 60 KIAS
 - Maximum braking without reverse
 - Hard, dry and level runway
 - GR = Ground roll (in ft)
 - D₅₀ = Landing distance (clear to 50 ft) (in ft)

PRESSURE ALTITUDE ft	ISA - 35°C		ISA - 20°C		ISA - 10°C		ISA	
	GR	D50	GR	D50	GR	D50	GR	D50
0	885	1900	950	2000	1000	2070	1030	2135
2000	950	2000	1030	2100	1065	2200	1115	2265
4000	1000	2100	1080	2230	1150	2330	1200	2395
6000	1080	2230	1180	2360	1230	2460	1280	2525
8000	1180	2360	1245	2490	1310	2590	1360	2690
PRESSURE ALTITUDE ft	ISA + 10°C		ISA + 20°C		ISA + 30°C		ISA + 37°C	
	GR	D50	GR	D50	GR	D50	GR	D50
0	1080	2200	1115	2300	1180	2360	1230	2430
2000	1150	2330	1200	2430	1245	2495	1310	2560
4000	1230	2460	1280	2560	1345	2655	1395	2755
6000	1345	2645	1395	2720	1445	2820	1510	2920
8000	1445	2790	1510	2885	1560	2985	1610	3085

Figure 5.14.3 - LANDING DISTANCES - 5071 lbs (2300 kg)

- Corrections :
- Reduce total distances of 10 % every 10 kt of headwind
 - Increase total distances of 30 % every 10 kt of tail-wind

Other runway surfaces require the following correction factors :

- Increase by :
- 7 % on hard grass
 - 10 % on short grass
 - 15 % on wet runway
 - 25 % on high grass
 - 30 % on slippery runway

INTENTIONALLY LEFT BLANK

SECTION 6

WEIGHT AND BALANCE

TABLE OF CONTENTS

	Page
6.1 GENERAL	6.1.1
6.2 AIRPLANE WEIGHING PROCEDURES	6.2.1
6.3 BAGGAGE LOADING	6.3.1
6.4 DETERMINING WEIGHT AND BALANCE	6.4.1
GENERAL	6.4.1
USING THE WEIGHT AND BALANCE FORM AND DIAGRAM	6.4.1
AIRPLANE LOADING FORM	6.4.3
EXAMPLE OF AIRPLANE WEIGHT AND BALANCE REPORT	6.4.4
WEIGHT AND BALANCE FORM AND DIAGRAM	6.4.6
WEIGHT AND BALANCE SAMPLES	6.4.11
DETERMINING EMPTY AIRPLANE CHARACTERISTICS	6.4.18
6.5 LIST OF EQUIPMENT	6.5.1

INTENTIONALLY LEFT BLANK

6.1 - GENERAL

This section is intended to provide the pilot with the procedure to determine the weight and balance of the airplane.

A list of equipment available for this airplane is referenced at the end of this Pilot's Operating Handbook – refer to Chapter 6.5.

It should be noted that the list of specific optional equipment installed on your airplane as delivered from the factory can be found in the records carried in the airplane.

IT IS THE PILOT'S RESPONSIBILITY TO ENSURE THAT THE AIRPLANE IS PROPERLY LOADED AND THE WEIGHT AND BALANCE LIMITS ARE ADHERED TO.

INTENTIONALLY LEFT BLANK

6.2 - AIRPLANE WEIGHING PROCEDURES

Refer to Maintenance Manual for the procedures to use.

NOTE :

Weighing carried out at the factory takes into account all equipment installed on the airplane. The list of this equipment and the total weight is noted in the Individual Inspection Record.

INTENTIONALLY LEFT BLANK

6.3 - BAGGAGE LOADING

There are two baggage compartments :

- one located in the rear of the pressurized cabin provides a maximum baggage capacity of 220 lbs (100 kg),
- the other one located in the rear fuselage section, non pressurized, between the rear pressure bulkhead at frame C17 and the frame C18 provides a maximum baggage capacity of 77 lbs (35 kg).

Stowing straps are provided for securing parcels and baggage on pressurized baggage compartment floor.

A partition net separating the cabin from the baggage compartment is attached to frame C14.

The rear (non pressurized) baggage compartment is provided with a holding elastic net.

WARNING

IT IS THE PILOT'S RESPONSIBILITY TO CHECK THAT ALL THE PARCELS AND BAGGAGES ARE PROPERLY SECURED IN THE CABIN

TRANSPORT OF DANGEROUS PRODUCT IS NORMALLY PROHIBITED, HOWEVER IF TRANSPORT OF SUCH PRODUCT IS NECESSARY, IT WILL BE PERFORMED IN COMPLIANCE WITH REGULATIONS CONCERNING TRANSPORT OF DANGEROUS PRODUCT AND ANY OTHER APPLICABLE REGULATION

Weight and balance graph should be checked to ensure the airplane is within the allowable limits.

INTENTIONALLY LEFT BLANK

6.4 - DETERMINING WEIGHT AND BALANCE

GENERAL

This section is intended to provide the pilot with the procedure to determine the weight and balance of the airplane.

IT IS THE PILOT'S RESPONSIBILITY TO ENSURE THAT THE AIRPLANE IS PROPERLY LOADED AND THE WEIGHT AND BALANCE LIMITS ARE ADHERED TO.

This procedure requires the following data related to the basic characteristics of the empty airplane to be obtained from the last airplane Weight and Balance Report :

- the empty weight, expressed in kg or lbs,
- the moment, expressed in m.kg or in.lbs,
- the CG, expressed in MAC %.

If the airplane empty weight has varied since last Weight and Balance Report (for example, due to installation of optional equipment), refer to paragraph "DETERMINING EMPTY AIRPLANE CHARACTERISTICS" to determine the new empty weight and the corresponding moment.

USING THE WEIGHT AND BALANCE FORM AND DIAGRAM

This procedure determines the airplane weight and balance characteristics for flight.

Select the units for the Weight and Balance determination, either m and kg, or lb and in, and use the dedicated form (Figures 6.4.3 or 6.4.4), appropriate to the chosen units and airplane configuration.

- 1) Record the basic empty weight (1 a), moment (1b) and CG (MAC %) (1c) from the last Weight and Balance Report (see sample of Weight and Balance reports Figures 6.4.1 and 6.4.2).
- 2) Record the expected loading (2a) and compute each associated moment (2b).
- 3) Compute Zero Fuel Weight (3a) and moment (3b) as sum of all the above weights (1a) + (2a) and moments (1b) + (2b).
- 4) Check value (3a) to be below Maximum Zero Fuel Weight.

- 5) Compute Zero Fuel Weight arm (5) and CG (MAC %) (5c) using given formulas.
- 6) Record the loaded Fuel (6a) and compute associated moment (6b).
- 7) Compute Ramp Weight (7a) and moment (7b) as sum of Zero Fuel Weight (3a) + loaded Fuel (6a) and moments (3b) + (6b).
- 8) Check value (7a) to be below Maximum Ramp Weight.
- 9) Compute Ramp Weight arm (9) and CG (MAC %) (9c) using given formulas.
- 10) Record the expected Taxi Fuel (negative value) (10a) and compute associated moment (10b).
- 11) Compute Takeoff Weight (11a) and moment (11b) as sum of Ramp Weight (7a) + Taxi Fuel (10a) and moments (7b) + (10b).
- 12) Check value (11a) to be below Maximum Takeoff Weight.
- 13) Compute Takeoff Weight arm (13) and CG (MAC %) (13c) using given formulas.
- 14) Record the expected Trip Fuel (negative value) (14a) and compute associated moment (14b).
- 15) Compute Landing Weight (15a) and moment (15b) as sum of Takeoff Weight (11a) + Trip Fuel (14a) and moments (11b) + (14b).
- 16) Check value (15a) to be below Maximum Landing Weight.
- 17) Compute Landing Weight arm (17) and CG (MAC %) (17c) using given formulas.
- 18) Plot Zero Fuel Weight, Takeoff Weight and Landing Weight on Weight and Balance Diagram.
- 19) Check that all points are within the weight and balance limits and that they are vertically aligned.
- 20) Record these data on your navigation log.

AIRPLANE LOADING FORM (m, kg)

Moment = Weight x Arm

$$CG (MAC\%) = \frac{(Arm (m) - 4.392)}{1.51} \times 100$$

Item	Weight (kg)	Arm (m)	Moment (m.kg)	CG (MAC %)
Empty Weight (kg)	(1a)		(1b)	(1c)
Front Seats (kg)	(2a)	4.534	(2b)	
Inter. Seats (kg)	(2a)	5.656	(2b)	
Rear bench (kg)	(2a)	6.785	(2b)	
Baggage AFT (pressurized area) (< 100 kg)	(2a)	7.695	(2b)	
Baggage AFT (non-pressurized area aft of C17) (< 35 kg)	(2a)	8.366	(2b)	
Zero Fuel Weight (< 2 736 kg)	(3a)	(5)	(3b)	(5c)
Fuel (kg)	(6a)	4.820	(6b)	
Ramp Weight (< 3 370 kg)	(7a)	(9)	(7b)	(9c)
Taxi Fuel (kg)	(10a)	4.820	(10b)	
Takeoff Weight (< 3 354 kg)	(11a)	(13)	(11b)	(13c)
Trip Fuel (kg)	(14a)	4.820	(14b)	
Landing Weight (< 3 186 kg)	(15a)	(17)	(15b)	(17c)

EXAMPLE OF AIRPLANE WEIGHT AND BALANCE REPORT

NOTE :

Airplane original report shall be kept with the airplane POH.

REGISTRE INDIVIDUEL DE CONTROLE INDIVIDUAL INSPECTION RECORD		TBM 700																					
FICHE DE PESEE CONFIGURATION 6 PLACES		S/N : F : 8																					
<p>Mise de niveau : Rails de sieges</p> <p>Point de levage avant Points de levage gauche et droit</p>		<p>SEULEMENT POUR INFORMATION, SE REFERER A LA LIMITATION DU MANUEL DE VOL SECTION 2</p> <p>LIMITATION</p> <p>Masse maxi au décollage : 2964 Kg A</p> <p>Masse maxi à l'atterrissage : 2935 Kg A</p> <p>Centrage, (trajectoires et volets renversés)</p> <table> <tr> <td>2000 Kg</td> <td>14 à 37 %</td> <td rowspan="3"> A</td> </tr> <tr> <td>2895 Kg</td> <td>16 à 37 %</td> </tr> <tr> <td>2514 Kg</td> <td>25 à 36 %</td> </tr> </table>		2000 Kg	14 à 37 %	A	2895 Kg	16 à 37 %	2514 Kg	25 à 36 %													
2000 Kg	14 à 37 %	A																					
2895 Kg	16 à 37 %																						
2514 Kg	25 à 36 %																						
<p>PESEE EFFECTUEE SUR POINTS DE LEVAGE</p> <p>Avion non peint Sans huile moteur</p> <table border="1"> <thead> <tr> <th>Point</th> <th>Masse lue (Kg)</th> <th>Tare (Kg)</th> <th>Masse nette (Kg)</th> </tr> </thead> <tbody> <tr> <td>Point gauche</td> <td>716,4</td> <td></td> <td>P2</td> </tr> <tr> <td>Point droit</td> <td>689,2</td> <td></td> <td>P3</td> </tr> <tr> <td>Point avant</td> <td>508,2</td> <td></td> <td>P1</td> </tr> <tr> <td colspan="2">Masse P0 (Kg) =</td> <td>1914,1</td> <td></td> </tr> </tbody> </table> <p>$(P1 \times d1) + (P2 + P3) \times d2$ P0 = $\frac{(508,2 \times 2,965) + (716,4 + 689,2) \times 5,297}{1914,1} = 4,683$</p>		Point	Masse lue (Kg)	Tare (Kg)	Masse nette (Kg)	Point gauche	716,4		P2	Point droit	689,2		P3	Point avant	508,2		P1	Masse P0 (Kg) =		1914,1		<p>DISTANCE DU C.G. A LA REFERENCE</p>	
Point	Masse lue (Kg)	Tare (Kg)	Masse nette (Kg)																				
Point gauche	716,4		P2																				
Point droit	689,2		P3																				
Point avant	508,2		P1																				
Masse P0 (Kg) =		1914,1																					
<p>CORRECTION</p> <table border="1"> <thead> <tr> <th>Masse (Kg)</th> <th>Bog Levier (m)</th> <th>Moment (m * Kg)</th> </tr> </thead> <tbody> <tr> <td>Masse P0</td> <td>4,683</td> <td>8963,73</td> </tr> <tr> <td>Peinture (2)</td> <td>4,873</td> <td>146,19</td> </tr> <tr> <td>Huile moteur (3)</td> <td>2,09</td> <td>23,41</td> </tr> <tr> <td>Carburant inconnu. (1a)</td> <td>4,7</td> <td>127,84</td> </tr> </tbody> </table>		Masse (Kg)	Bog Levier (m)	Moment (m * Kg)	Masse P0	4,683	8963,73	Peinture (2)	4,873	146,19	Huile moteur (3)	2,09	23,41	Carburant inconnu. (1a)	4,7	127,84	<p>CENTRAGE A VIDE (EN % DE LA CMA)</p> <p>$CG = \frac{D0 - 4,392}{1,51} \times 100$</p> <p>$CG = \frac{4,683 - 4,392}{1,51} \times 100 = 19,3$</p>						
Masse (Kg)	Bog Levier (m)	Moment (m * Kg)																					
Masse P0	4,683	8963,73																					
Peinture (2)	4,873	146,19																					
Huile moteur (3)	2,09	23,41																					
Carburant inconnu. (1a)	4,7	127,84																					
<p>RESULTATS W: 1941,3 D0: 4,683 M: 9091,57 (1b)</p>																							
<p>CALCUL DE L'INDEX DE BASE Cf section 6 du manuel de vol</p> <p>Masse à vide (W) : 1941,3 Kg (1a)</p> <p>Centrage à Vide (CG) : 19,3 % (1c)</p> <p>Moment (M) : 9091,57</p>																							
<p>1 - Rayer la mention inutile. 2 - Valeur non prise en compte si l'avion était peint lors de la pesée. 3 - Valeur non prise en compte si l'avion a été pesé avec huile.</p>																							
DATE :		VISA DE CONTRÔLE :																					

Figure 6.4.1 – Example of Weight and Balance Report and basic airplane characteristics, in kg and m

NOTE :

Airplane original report shall be kept with the airplane POH.

REGISTRE INDIVIDUEL DE CONTROLE INDIVIDUAL INSPECTION RECORD		TBM 700																					
WEIGHT AND BALANCE REPORT		S/N :																					
6-SEAT CONFIGURATION		F : 6																					
<p>Leveling : </p> <p>Seat rails</p> <p>Front wheel Left and right Wheel points</p> <p>WEIGHING CARRIED OUT ON JACK POINTS</p>		<p>ONLY FOR INFORMATION, REFER TO LIMITATIONS SECTION 2 OF POH</p> <p>LIMITATIONS</p> <p>Maximum take off weight : 6579 lbs A</p> <p>Maximum landing weight : 6250 lbs A</p> <p>Balance (landing gears down and flaps up)</p> <p>4400 lbs 14 - 37 % A</p> <p>6250 lbs 19 - 37 % A</p> <p>6579 lbs 20 - 36 % A</p> <p>DISTANCE FROM C.G. TO REFERENCE</p>																					
<p>Not painted airplane Without engine oil</p> <table border="1"> <thead> <tr> <th></th> <th>Gross Weight (lb)</th> <th>Tare (lb)</th> <th>Net Weight (lb)</th> <th>Distance (in)</th> </tr> </thead> <tbody> <tr> <td>Left point</td> <td>1579,4</td> <td></td> <td>P2</td> <td>P1</td> </tr> <tr> <td>Right point</td> <td>1520,1</td> <td></td> <td>P3</td> <td>P1</td> </tr> <tr> <td>Front point</td> <td>1120,4</td> <td></td> <td>P1</td> <td></td> </tr> </tbody> </table> <p>Weight PO (lbs) = 4219,9</p>			Gross Weight (lb)	Tare (lb)	Net Weight (lb)	Distance (in)	Left point	1579,4		P2	P1	Right point	1520,1		P3	P1	Front point	1120,4		P1		$D0 = \frac{(P1 \times W1) + (P2 \times W2) + (P3 \times W3)}{PO}$ $D0 = \frac{(1120,4 \times 117,5) + (1579,4 \times 1520,1) \times 208,5}{4219,9} = 184,3$	
	Gross Weight (lb)	Tare (lb)	Net Weight (lb)	Distance (in)																			
Left point	1579,4		P2	P1																			
Right point	1520,1		P3	P1																			
Front point	1120,4		P1																				
<p>CORRECTIONS</p> <table border="1"> <thead> <tr> <th></th> <th>Weight (lb)</th> <th>Arm (in)</th> <th>Moment (in * lb)</th> </tr> </thead> <tbody> <tr> <td>Weight PO</td> <td>4219,9</td> <td>184,3</td> <td>777892,8</td> </tr> <tr> <td>Paint (2)</td> <td>66,2</td> <td>191,8</td> <td>12697,2</td> </tr> <tr> <td>Engine oil (3)</td> <td>24,7</td> <td>82,3</td> <td>2032,8</td> </tr> <tr> <td>Unusable fuel</td> <td>60</td> <td>185</td> <td>11100,0</td> </tr> </tbody> </table>			Weight (lb)	Arm (in)	Moment (in * lb)	Weight PO	4219,9	184,3	777892,8	Paint (2)	66,2	191,8	12697,2	Engine oil (3)	24,7	82,3	2032,8	Unusable fuel	60	185	11100,0	<p>BALANCE MAC (%)</p> $CG = \frac{D0 - 173}{59} \times 100$ $CG = \frac{184,3 - 173}{59} \times 100 = 19,3$	
	Weight (lb)	Arm (in)	Moment (in * lb)																				
Weight PO	4219,9	184,3	777892,8																				
Paint (2)	66,2	191,8	12697,2																				
Engine oil (3)	24,7	82,3	2032,8																				
Unusable fuel	60	185	11100,0																				
<p>RESULTS W: 4279,9 D0: 184,3 M: 788992,75</p>		<p>(1a) (1b)</p>																					
<p>BASIC INDEX CALCULATION See section 6 of Pilot's Operating Handbook</p> <p>Empty weight (W) : 4279,9 lb (1a)</p> <p>Balance (C.G.) : 19,3 % (1c)</p> <p>Moment (M) : 788992,8</p>																							
<p>1 - Scratch useless mention. 2 - Values not taken into account if the airplane was painted when weighed. 3 - Values not taken account if the oil tank was full when the airplane was weighed.</p>																							
DATE :		INSPECTION VISA :																					

Figure 6.4.2 - Example of Weight and Balance Report and basic airplane characteristics, in lb and in

WEIGHT AND BALANCE FORM AND DIAGRAM (m, kg)

Moment = Weight x Arm

$$CG (MAC\%) = \frac{(Arm (m) - 4.392)}{1.51} \times 100$$

Item	Weight (kg)	Arm (m)	Moment (m.kg)	CG (MAC %)
Empty Weight (kg)				
Front Seats (kg)		4.534		
Inter. Seats (kg)		5.656		
Rear bench (kg)		6.785		
Baggage AFT (pressurized area) (< 100 kg)		7.695		
Baggage AFT (non-pressurized area aft of C17) (< 35 kg)		8.366		
Zero Fuel Weight (< 2 736 kg)				
Fuel (kg)		4.820		
Ramp Weight (< 3 370 kg)				
Taxi Fuel (kg)		4.820		
Takeoff Weight (< 3 354 kg)				
Trip Fuel (kg)		4.820		
Landing Weight (< 3 186 kg)				

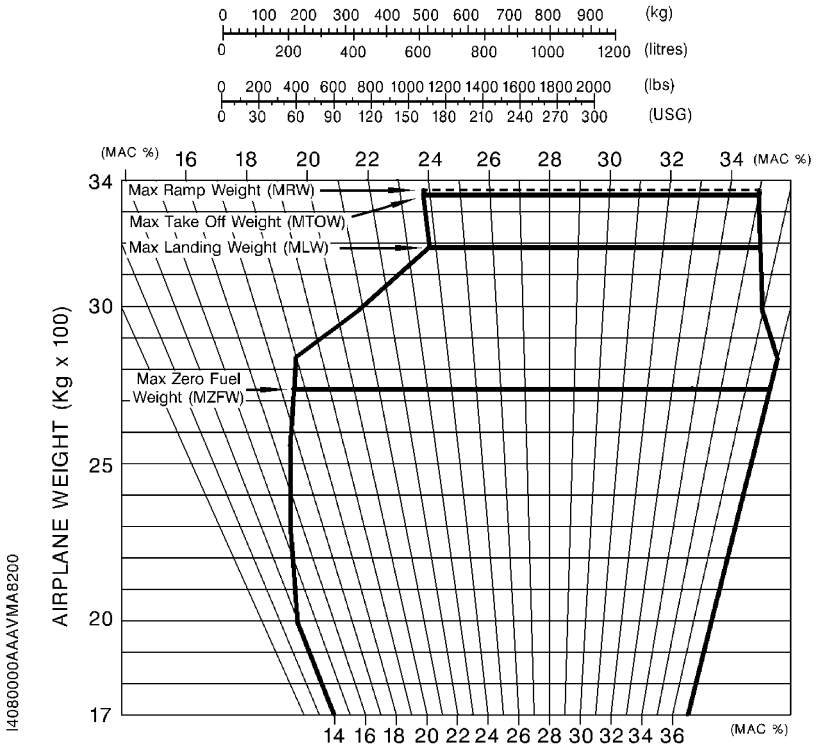


Figure 6.4.3 - Weight and Balance diagram

WEIGHT AND BALANCE FORM AND DIAGRAM (in, lbs)

Moment = Weight x Arm

$$CG (MAC\%) = \frac{(Arm (in) - 172.93)}{59.45} \times 100$$

Item	Weight (lbs)	Arm (in)	Moment (in.lbs)	CG (MAC %)
Empty Weight (lbs)				
Front Seats (lbs)		178.5		
Inter. Seats (lbs)		222.7		
Rear bench (lbs)		267.1		
Baggage AFT (pressurized area) (< 220 lbs)		303.0		
Baggage AFT (non-pressurized area aft of C17) (< 77 lbs)		329.4		
Zero Fuel Weight (< 6 032 lbs)				
Fuel (lbs)		189.8		
Ramp Weight (< 7 430 lbs)				
Taxi Fuel (lbs)		189.8		
Takeoff Weight (< 7 394 lbs)				
Trip Fuel (lbs)		189.8		
Landing Weight (< 7 024 lbs)				

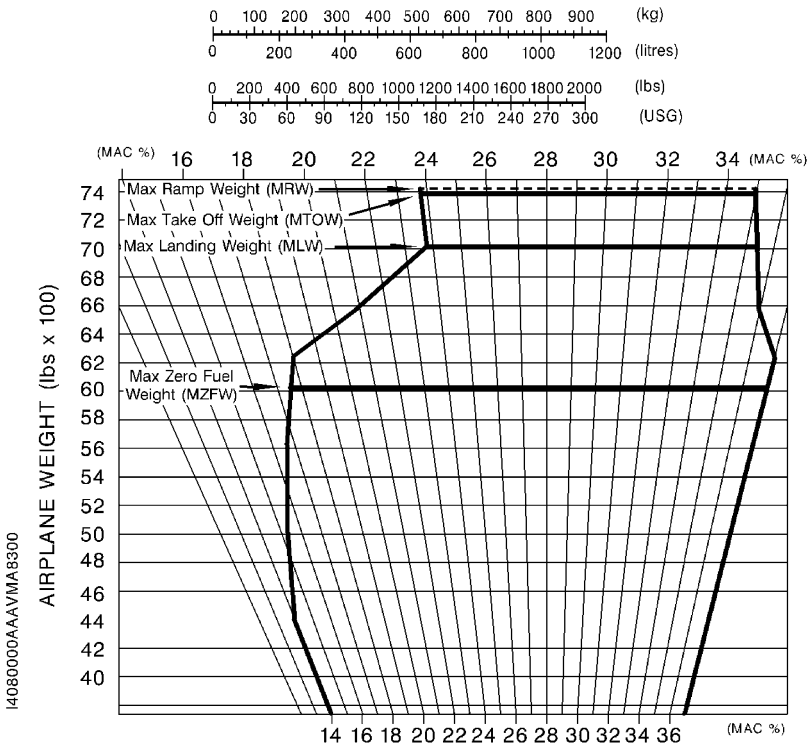


Figure 6.4.4 - Weight and Balance diagram

INTENTIONALLY LEFT BLANK

WEIGHT AND BALANCE SAMPLES (m, kg)

CAUTION

LOADING SAMPLES (FIGURE 6.4.5 OR 6.4.6) ARE ONLY GIVEN AS AN EXAMPLE ; FOR CALCULATION CONCERNING YOUR AIRPLANE, REFER TO THE DIAGRAM CORRESPONDING TO ITS VALIDITY

	Fig. 6.4.5
1 - Airplane basic characteristics : W = Empty weight 2 126 kg Moment 10 073 m.kg Balance Arm 4.738 m CG (MAC %) 22.9 %	
2 - Foreseen loading : 1 Pilot and 1 front Passenger 200 kg 2 Rear Passengers 160 kg AFT Cargo (pressurized area) 50 kg Fuel 820 kg	
3 - Foreseen fuel : Taxi Fuel - 16 kg Trip Fuel - 600 kg	

Moment = Weight x Arm

$$CG (MAC \%) = \frac{(Arm (m) - 4.392)}{1.51} \times 100$$

Item	Weight (kg)	Arm (m)	Moment (m.kg)	CG (MAC %)
Empty Weight (kg)	2126	4.738	10 073	22.9
Front Seats (kg)	200	4.534	907	
Inter. Seats (kg)	0	5.656	0	
Rear bench (kg)	160	6.785	1 086	
Baggage AFT (pressurized area) (< 100 kg)	50	7.695	385	
Baggage AFT (non-pressurized area aft of C17) (< 35 kg)	0	8.366	0	
Zero Fuel Weight (< 2 736 kg)	2 536	4.910	12 451	34.3
Fuel (kg)	820	4.820	3 952	
Ramp Weight (< 3 370 kg)	3 356	4.888	16 403	32.8
Taxi Fuel (kg)	- 16	4.820	- 77	
Takeoff Weight (< 3 354 kg)	3 340	4.888	16 326	32.8
Trip Fuel (kg)	- 600	4.820	- 2 892	
Landing Weight (< 3 186 kg)	2 740	4.903	13 434	33.8

14080000AAAUAUMA8200

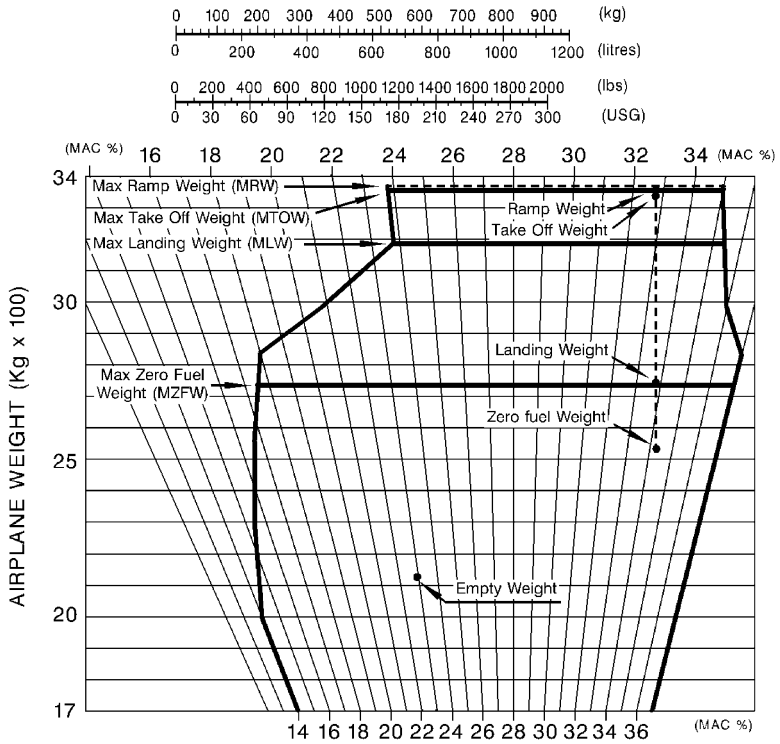


Figure 6.4.5 - Loading sample

INTENTIONALLY LEFT BLANK

WEIGHT AND BALANCE SAMPLES (in, lbs)

CAUTION


LOADING SAMPLES (FIGURE 6.4.5 OR 6.4.6) ARE ONLY GIVEN AS AN EXAMPLE ; FOR CALCULATION CONCERNING YOUR AIRPLANE, REFER TO THE DIAGRAM CORRESPONDING TO ITS VALIDITY

	Fig. 6.4.6
1 - Airplane basic characteristics : W = Empty weight Moment Balance Arm CG (MAC %)	4 638 lbs 864 173 in.lbs 186.3 in 22.6 %
2 - Foreseen loading : 1 Pilot and 1 front Passenger 1 Intermediate Passenger AFT Cargo (pressurized area) AFT Cargo (non-pressurized area aft of frame C17) Fuel	400 lbs 214 lbs 100 lbs 20 lbs 1 850 lbs
3 - Foreseen fuel : Taxi Fuel Trip Fuel	- 36 lbs - 1 400 lbs

Moment = Weight x Arm

$$CG (MAC \%) = \frac{(Arm (in) - 172.93)}{59.45} \times 100$$

Item	Weight (lbs)	Arm (in)	Moment (in.lbs)	CG (MAC %)
Empty Weight (lbs)	4 638	186.3	864 173	22.6
Front Seats (lbs)	400	178.5	71 400	
Inter. Seats (lbs)	214	222.7	47 658	
Rear bench (lbs)	0	267.1	0	
Baggage AFT (pressurized area) (< 220 lbs)	100	303.0	30 300	
Baggage AFT (non-pressurized area aft of C17) (< 77 lbs)	20	329.4	6 588	
Zero Fuel Weight (< 6 032 lbs)	5 372	189.9	1 020 119	28.5
Fuel (lbs)	1 850	189.8	351 130	
Ramp Weight (< 7 430 lbs)	7 222	189.9	1 371 249	28.5
Taxi Fuel (lbs)	- 36	189.8	- 6 833	
Takeoff Weight (< 7 394 lbs)	7 186	189.9	1 364 416	28.5
Trip Fuel (lbs)	- 1 400	189.8	- 265 720	
Landing Weight (< 7 024 lbs)	5 786	188.9	1 098 696	28.5

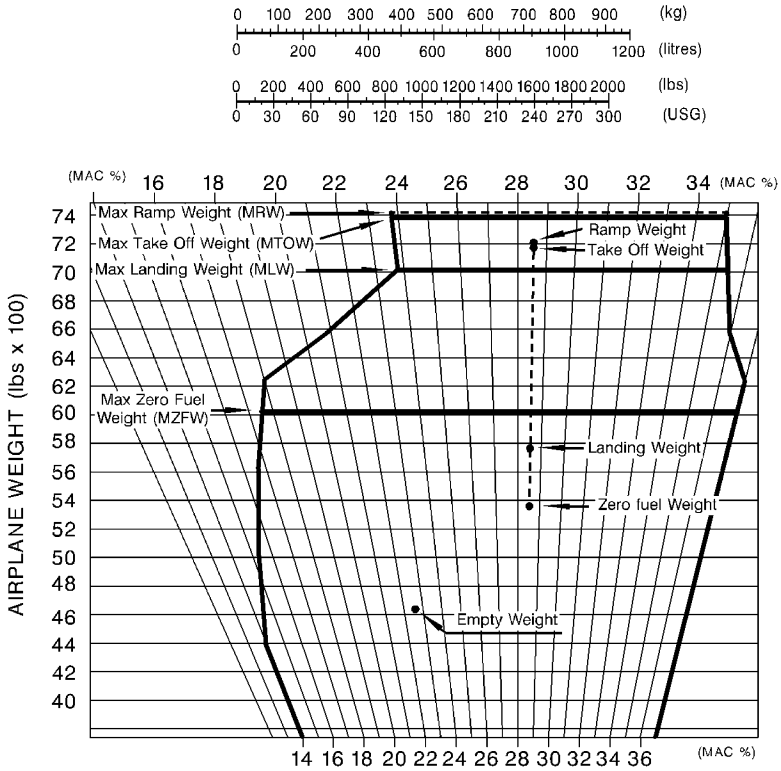

14080000AABAWA8000

Figure 6.4.6 - Weight and Balance diagram

DETERMINING EMPTY AIRPLANE CHARACTERISTICS

Empty airplane characteristics (weight and balance) may vary with regard to those indicated on weighing form according to installed optional equipment.

List of equipment (paragraph 6.5) contains the standard and optional equipment, as well as their characteristics (weight, arm).

Use the chart below to compute new empty weight and corresponding balance if necessary.

DATE	EQUIPMENT OR MODIFICATION DESCRIPTION	(+) (-)	WEIGHT MODIFICATION			BASIC EMPTY WEIGHT		
			Weight lb	Arm in.	Moment lb.in/1000	Weight W	Arm "d _o "	Moment
	According to delivery							

Figure 6.4.7 - SAMPLE WEIGHT AND BALANCE RECORD

Use the above formula to express arm "d_o" in % of mean aerodynamic chord.

$$CG\ MAC\% = \frac{(d_o - 172.93)}{59.45} \times 100$$

NOTE :

Arm expressed in inches with regard to reference.

- Front seats : 178.5 in. (4.534 m)
- Intermediate seats : 222.7 in. (5.656 m)
- Rear bench (2 seats) : 267.1 in. (6.785 m)
- Baggage compartment in pressurized cabin : 303.0 in. (7.695 m)
- Aft baggage compartment : 329.4 in. (8.366 m)
- Fuel : 189.8 in. (4.820 m)

6.5 - LIST OF EQUIPMENT

The list of equipment is available in SOCATA Report reference NAV No. 34/90-RJ-App 1, located at the end of this POH.

A separate list of equipment of items installed at the factory in your specific airplane is provided in your airplane file.

INTENTIONALLY LEFT BLANK

SECTION 7

DESCRIPTION

TABLE OF CONTENTS

		Page
7.1	GENERAL	7.1.1
7.2	AIRFRAME	7.2.1
	WINGS	7.2.3
	AILERONS, SPOILERS AND ROLL TRIM TAB	7.2.3
	WING FLAPS	7.2.3
	EMPENNAGES	7.2.7
7.3	ACCOMMODATIONS	7.3.1
	INSTRUMENT PANEL	7.3.1
	DOORS, WINDOWS AND EMERGENCY EXIT	7.3.22
	SEATS, BELTS AND HARNESSSES	7.3.30
	BAGGAGE COMPARTMENTS	7.3.31
7.4	FLIGHT CONTROLS	7.4.1
	ROLL	7.4.1
	ROLL TRIM	7.4.1
	ELEVATOR	7.4.7
	PITCH TRIM	7.4.7
	RUDDER	7.4.13
	RUDDER TRIM	7.4.13
7.5	LANDING GEAR	7.5.1
	HYDRAULIC PRESSURE	7.5.2
	LANDING GEAR CONTROL	7.5.2
	LANDING GEAR POSITION INDICATOR	7.5.2
	SAFETY	7.5.4
	GROUND MANEUVERS	7.5.6
	BRAKE SYSTEM	7.5.9
	PARKING BRAKE	7.5.9

TABLE OF CONTENTS
(Continued)

	Page
7.6 POWERPLANT	7.6.1
TURBOPROP ENGINE OPERATION	7.6.1
ENGINE CONTROLS (LEVERS)	7.6.4
ENGINE INSTRUMENTS	7.6.7
ENGINE LUBRICATION	7.6.10
ENGINE STARTING	7.6.10
ENGINE AIR INLET	7.6.12
EXHAUST SYSTEM	7.6.13
ENGINE ACCESSORIES	7.6.13
PROPELLER	7.6.15
7.7 FUEL SYSTEM	7.7.1
FUEL TANKS	7.7.1
FUEL UNIT	7.7.1
TANK MANUAL SELECTOR	7.7.1
AUTOMATIC TANK SELECTOR	7.7.4
ELECTRIC BOOST PUMP	7.7.5
MAIN MECHANICAL BOOST PUMP	7.7.8
ENGINE FUEL SYSTEM	7.7.8
FUEL GAGING INSTALLATION	7.7.8
FUEL FLOW TOTALIZER/COMPUTER	7.7.8
FUEL MONITORING INSTALLATION	7.7.9
FUEL SYSTEM DRAINING AND CLOGGING INDICATOR	7.7.10
7.8 ELECTRICAL SYSTEM	7.8.1
STARTER GENERATOR	7.8.1
STAND-BY GENERATOR	7.8.2
BATTERY	7.8.2
GROUND POWER RECEPTACLE	7.8.2
DISTRIBUTION	7.8.4
EMERGENCY USE	7.8.4
INDICATING	7.8.12
PROTECTION - SAFETY	7.8.13
EXTERIOR LIGHTING	7.8.17
INTERIOR LIGHTING	7.8.21

TABLE OF CONTENTS

(Continued)

	Page
7.9 AIR CONDITIONING AND PRESSURIZATION	7.9.1
AIR CONDITIONING	7.9.1
PRESSURIZATION	7.9.9
7.10 EMERGENCY OXYGEN SYSTEM	7.10.1
FLIGHT ABOVE 15000 FT WITH POSSIBLE EMERGENCY DESCENT WHEN REQUIRED TO REMAIN ABOVE 15000 FT DUE TO MINIMUM ENROUTE ALTITUDE	7.10.9 7.10.10
FLIGHT BETWEEN 15000 FT AND 10000 FT	7.10.11
7.11 AIR DATA SYSTEM AND INSTRUMENTS	7.11.1
STATIC PRESSURE SYSTEMS	7.11.1
DYNAMIC PRESSURE SYSTEM	7.11.4
7.12 VACUUM SYSTEM AND INSTRUMENTS	7.12.1
ATTITUDE INDICATOR	7.12.1
GYROSCOPIC INSTRUMENTS CONTROL	7.12.5
SUCTION GAGE	7.12.5
7.13 ICE PROTECTION EQUIPMENT	7.13.1
WING AND EMPENNAGE DEICING	7.13.1
PROPELLER DEICING	7.13.2
WINDSHIELD DEICING	7.13.2
HEATING OF PITOTS AND STALL WARNING SENSOR	7.13.3
TURBINE AIR INLET PROTECTION	7.13.3
7.14 RADIO MASTER AND GROUND COMMUNICATION	7.14.1
7.15 MISCELLANEOUS EQUIPMENT	7.15.1
STALL WARNING SYSTEM	7.15.1
STATIC DISCHARGERS	7.15.1
CABIN FIRE EXTINGUISHER	7.15.2
AUTOPILOT	7.15.2
ETM INDICATOR/COMPUTER	7.15.2
MULTIFUNCTION DISPLAY	7.15.2
WEATHER RADAR	7.15.2
EMERGENCY LOCATOR TRANSMITTER	7.15.2

INTENTIONALLY LEFT BLANK

7.1 - GENERAL

This Section provides description and operation of the TBM 850 airplane and its systems. Some of the equipment described herein is optional and may not be installed in the airplane.

Details of other optional systems and equipment are presented in Section 9 "Supplements" of the pilot's operating handbook.

NOTE :

Description and operation of communication and radio-navigation equipment are detailed in manufacturer technical handbooks.

INTENTIONALLY LEFT BLANK

7.2 - AIRFRAME


The TBM 850 is a six-place, low wing airplane. The structure is a semi-monocoque all-metal construction and is equipped with a retractable tricycle landing gear.

The pressurized cabin is equipped, on the left side of fuselage, with a "wide" one-piece door and folding stairs comprising a hand rail allowing pilot and passengers boarding. The occupants have access to cockpit and to rear seats through a central aisle.

A "pilot" door (if installed) located forward of the cabin on the left side allows to gain access to the cockpit by means of folding stairs.

The cabin rear part is a baggage compartment.

In fuselage non pressurized rear section, a compartment located between the rear pressure bulkhead at frame C17 and the frame C18 is provided as a secondary baggage compartment ; it is accessible through a door located on the fuselage L.H. side.

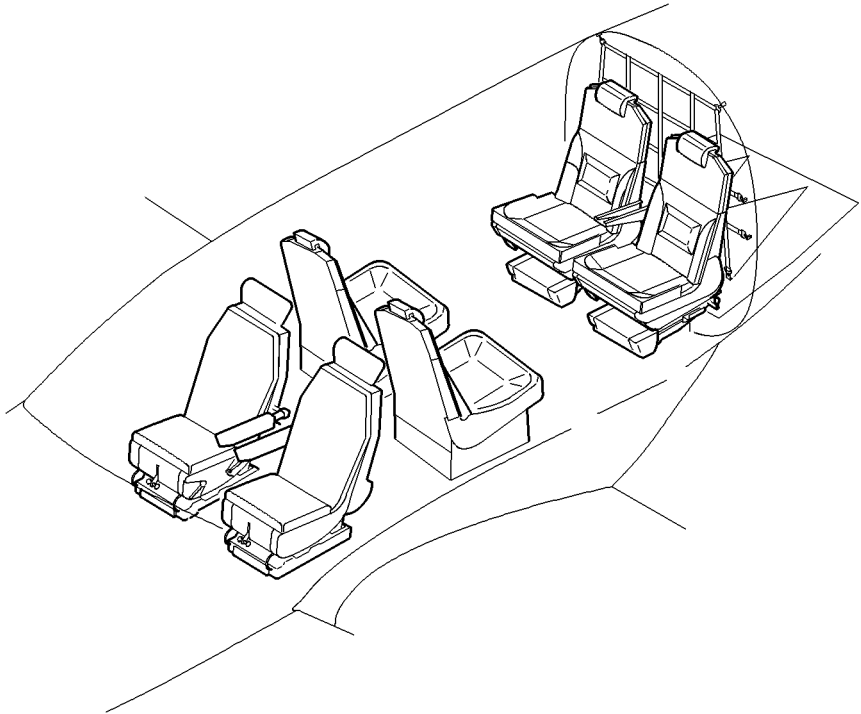

14251201AAAKMA8000

Figure 7.2.1 - CABIN ARRANGEMENT

WINGS

The wings are monocoque, bi-spar structures. Main spars of each wing are linked to the fuselage by two integral attach fittings. Each wing contains a main landing gear well and sealed casings forming the fuel tank. The wing leading edge is equipped with a deicing system.

AILERONS, SPOILERS AND ROLL TRIM TAB

The ailerons located on external trailing edge of each wing are hinged on two attach fittings fixed on the rear spar. They allow airplane lateral control and are controlled mechanically through control wheel rotation.

The spoilers located in front of flaps, on top skin side, are mechanically linked to the ailerons.

Trim tab attached on the trailing edge of left side aileron is electrically activated by a trim switch, through an actuator.

WING FLAPS (Figure 7.2.2)

The wing flaps are large span slotted flaps with a single rotation point. They are activated by actuating rod-controlled screw jacks linked to an electric motor located under the floor, inside the fuselage.

A preselection control located on the right side of pedestal console allows the pilot to select one of the three positions (UP - TO - LDG). For each control position, a deflection angle is defined (0°, 10°, 34°).

The flap control knob is protected by a casing to avoid accidental operation.

A monitoring device interrupts flaps movement as soon as a deflection dissymmetry is detected.

Wings characteristics :

Area	193.75 sq. ft (18 m ²)
Wing loading	38.16 lb/sq.ft (186.3 kg / m ²)
Root chord at y = 2.13 ft (0.650 m)	5.79 ft (1.765 m)
Tip chord	3.67 ft (1.120 m)
Mean aerodynamic chord at y = 9.16 ft (2.793 m)	4.95 ft (1.510 m)
Rigging angle to fuselage horizontal datum	2°
Sweep-angle (at 25 % chord)	0°
Dihedral (at datum plane)	6.5°
Aspect ratio (platform reference)	8.216
Taper ratio	0.608
Airfoil section (at wing root)	RA 16-43
Airfoil section (at wing tip)	RA 13.3-43
Twist	0°


Aileron - spoilers characteristics :

Global aileron area (including trim tab)	9.65 sq.ft (0.897 m ²)
Aileron trim tab area	0.78 sq.ft (0.072 m ²)
Spoiler area	1.80 sq.ft (0.167 m ²)

Flaps characteristics :


Type	Single-slotted, rotational
Global flap area	40.68 sq.ft (3.780 m ²)

- 1) Geared motor
- 2) Internal actuator
- 3) Intermediate bearings
- 4) Wing flap
- 5) External actuator
- 6) Rods
- 7) Position indicator
- 8) Control selector

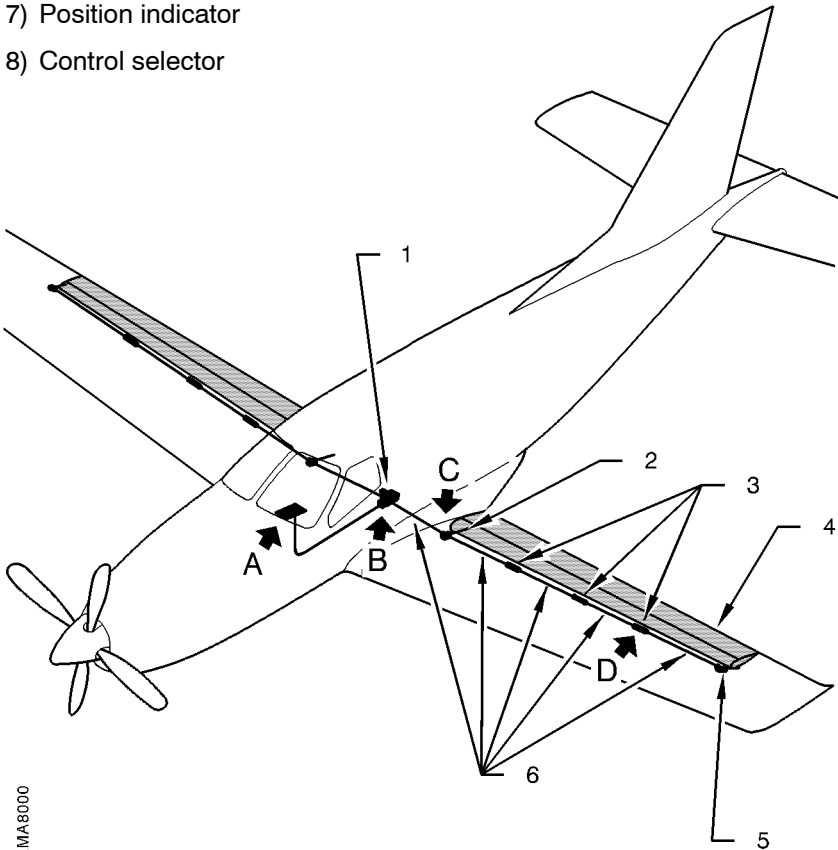

I4275000AAAAMA8000

Figure 7.2.2 (1/2) - WING FLAPS

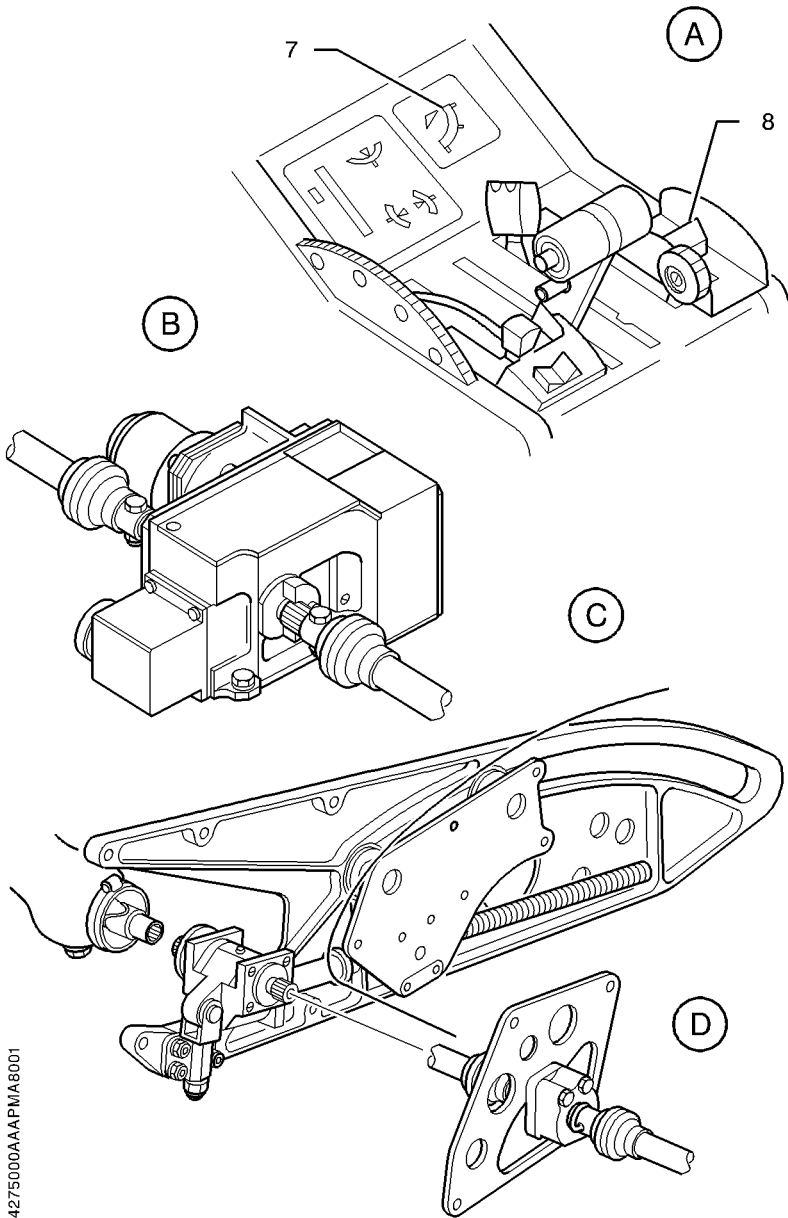

14275000AAAAPMA8001

Figure 7.2.2 (2/2) - WING FLAPS

EMPENNAGES

Empennages are composite structures. The horizontal empennage consists of a horizontal stabilizer (PHF), control surfaces and elevator trim tabs ; the vertical empennage consists of a vertical stabilizer, the rudder and the rudder trim tab. The empennage leading edge is equipped with a deicing system.

Horizontal stabilizer characteristics :

Overall span	16.36 ft (4.988 m)
Global area	52.52 sq.ft (4.879 m ²)
Chord	3.89 ft (1.186 m)
Tip chord	2.60 ft (0.795 m)
Mean aerodynamic chord at y = 3.76 ft (1.147 m)	3.26 ft (0.995 m)
Airfoil section	NACA 64 ₂ -A415 modified
Dihedral	6.5°
Rigging angle (leading edge up)	0.5°
Aspect ratio	5.034
Elevator global area (including trim tabs)	21.76 sq.ft (2.022 m ²)
Elevator trim tab area (right datum plane)	3.47 sq.ft (0.322 m ²)

Vertical stabilizer characteristics :

Global area	33.28 sq.ft (3.092 m ²)
Construction root chord	6.95 ft (2.120 m)
Reference tip chord	2.54 ft (0.775 m)
Mean aerodynamic chord	5.08 ft (1.551 m)
Construction airfoil section	NACA 63 ₁ -A012 modified
Sweep angle (at leading edge)	45°
Aspect ratio	1.481
Rudder area (including trim tab)	11.87 sq.ft (1.103 m ²)
Rudder trim tab area	1.36 sq.ft (0.126 m ²)

INTENTIONALLY LEFT BLANK

7.3 - ACCOMODATIONS

INSTRUMENT PANEL (Figure 7.3.1)

The instrument panel contains instruments and controls necessary for flight monitoring. The typical instrument panel consists of all standard equipment, as well as additional optional equipment.

Upper panel (Figure 7.3.2)

The upper panel located at the top part of the windshield, contains electrical generation control panels, engine starting and electrical systems.

Rearwards of upper panel, the central part of cockpit overhead panel provides loud-speakers, warning buzzers and cockpit floodlights and postlights (instrument panel emergency lighting).

Instrument panel

The instrument panel consists of three parts : left, central and right.

Left instrument panel (Figure 7.3.3) includes :

- general alarms, flight indicators and instruments, engine controls, deicing controls and indicators, landing gear control panel, parking brake control and left station control wheel.

Central instrument panel (Figure 7.3.4), surmounted by the stand-by compass, includes :

- control and AP computer boxes, advisory panel box, the radionavigation equipment box, "AP / TRIMS MASTER", "RADIO MASTER" and internal lighting switches.

Right instrument panel (Figure 7.3.5) comprises :

- "FUEL" and "ECS" control and check panels, flight indicators and instruments, the right section control wheel, alternate static source selector and locations for optional equipment.
- Emergency air control is located under the right instrument panel.

An adjustable air outlet and reception-micro jacks are located on both sides of instrument panel lower part.

Central pedestal (Figure 7.3.6)

The central pedestal under the radio rack, comprises position indicators and trim tabs controls, flaps, engine controls and fuel tank selector.

Circuit breakers panel (Figures 7.3.7 and 7.8.2)

Circuit breakers for all electrical equipment supplied by bus bars are located on a separate panel installed on the left side of cockpit, near the pilot or on right side when the airplane is equipped with a "pilot" door.

Advisory panel (Figure 7.3.8)

The advisory panel is attached on the upper central part of the instrument panel. This panel provides warning lights which alert the pilot when one of the monitored systems indicates a discrepancy.

A "MASTER WARNING" red flashing indicator and a "MASTER CAUTION" amber flashing indicator located on instrument panel in front of the pilot, illuminate as soon as one or several indicators of same color illuminate on the advisory panel.

To cancel and reset a general alarm, press on the red or amber indicator.

A "TEST" push-button and a "BRIGHT DIM" switch, located on the right side of the advisory panel, allows testing warning lights (double check) and dimming of their lighting (day / night position).

Aural warnings (Figure 7.3.2)

The aural warnings are intended to alert the pilot during some configurations. The aural signals are heard through the loud-speakers or the buzzers installed in upper panel, and for the KRA 405 radar altimeter through the buzzer located on the R.H. instrument panel. Aural warnings concerning the landing gear and the autopilot are also heard in the head-sets.

The aural warnings consist of :

- the aural warning box,
- the buzzers and loud-speakers,
- the amplifier.

The system uses :

- the stall warning horn,
- the VMO alarm,
- AP alarms,
- the landing gear control unit,
- the flap geared motor,
- the radar altimeter aural warning.

Aural warning box

The aural warning box consists of a box including logic circuits, which create the signals heard in the aural warning loud-speaker.

According to the airplane configuration, different signals are produced by the logic circuits :

- gear up and idle → high-pitched sound
- gear up and extended flaps → high-pitched sound
- stall → low-pitched sound
- gear up, idle and stall → alternate high-pitched and low-pitched sounds
- gear up, extended flaps and stall → alternate high-pitched and low-pitched sounds

The aural warning box is fixed under cabin floor, on L.H. side, between frames C5 and C6.

It is electrically supplied by "ESS BUS 1" bar and protected by "AUDIO WARN" circuit breaker.

Upper panel (Figure 7.3.2)

The upper panel includes following elements :

- the alarm loud-speaker (landing gear up with flaps extended and / or idle, stall),
- the altitude preselection indicating buzzer,
- the autopilot disconnection indicating buzzer,
- the VMO alarm buzzer,
- the "HORN TEST" knob,
- the emergency lighting rheostat.

It is attached to the cabin upper part between frames C6 and C7.

The alarm loud-speaker is electrically supplied by the aural warning box, the VMO alarm buzzer is electrically supplied by "ESS BUS 1" bar and protected by "AUDIO WARN" circuit breaker, the altitude preselection indicating buzzer is protected by "AP / ALT SEL" circuit breaker, the autopilot disconnection indicating buzzer is electrically supplied by "BUS 3" bar and protected by "AP / ALERT" circuit breaker and the emergency lighting rheostat is electrically supplied by "BUS BAT" bar and protected by "PANEL EMER" circuit breaker.

Amplifier

The amplifier allows to fit alarm signals heard in head-set to radio loud-speaker.

It is fixed under cabin floor, on L.H. side, between frames C6 and C7.

It is electrically supplied by "ESS BUS 1" bar and protected by "PHONE+MKR" circuit breaker.

Aural warning operation

The alarm loud-speaker receives signals from the aural warning box. According to the airplane configuration, these signals are low-pitched and / or high-pitched. Buzzers receive their signal directly from the concerned circuit.

All warning signals go through the amplifier before being heard in head-sets and in the radio loud-speaker.

The "HORN TEST" knob allows to test the correct operation of aural warnings :

- Set the "SOURCE" selector to "BAT" or to "GPU".
- Push and hold the "HORN TEST" knob :
 - . the VMO buzzer emits three "bips",
 - . the alarm loud-speaker emits alternate low-pitched and high-pitched sounds.
- Release the knob to stop the alarms.

NOTE :

The test is effective for head equipment when "AP / TRIMS MASTER" switch is set to "ON".

Operation of the radar altimeter aural warning

The radar altimeter aural warning (momentary) is coupled with the "DH" warning light (permanent illumination) on the radar altimeter indicator or the EADI.


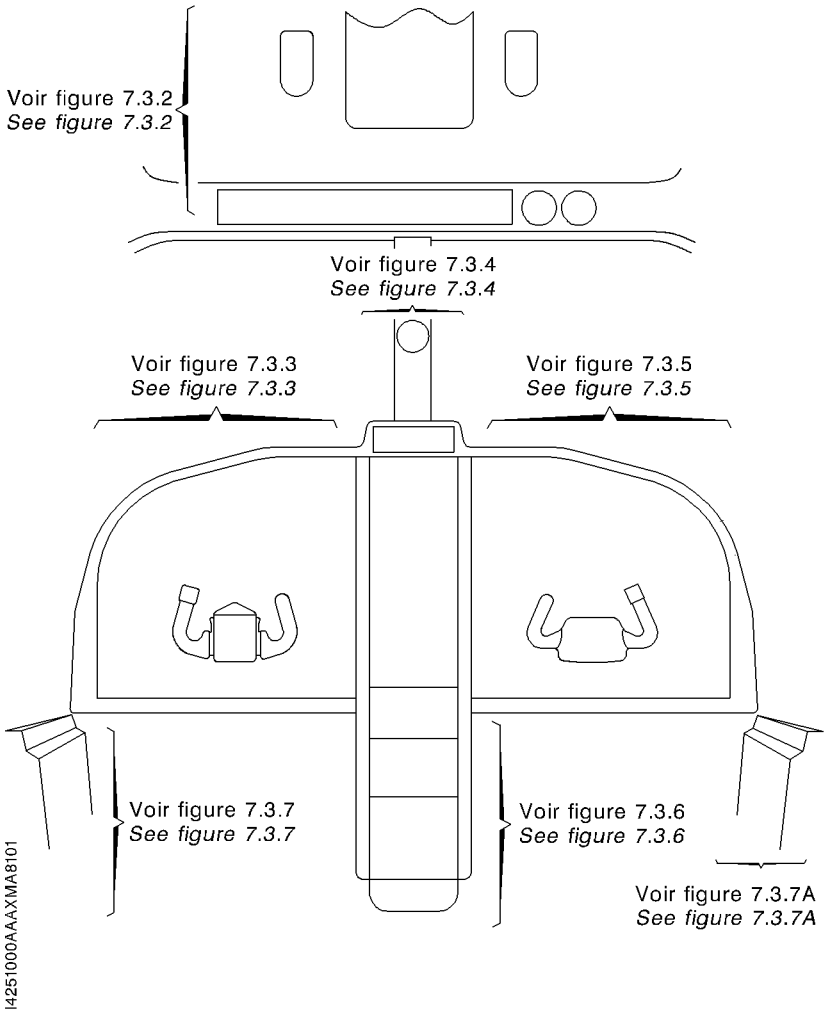


Figure 7.3.1 - INSTRUMENT PANEL ASSEMBLY
(Typical arrangement)

INTENTIONALLY LEFT BLANK

- 1) L.H. instrument panel emergency lighting
- 2) Buzzers (AP, landing gear not extended and V_{MO} alarms)
- 3) Loud-speakers (radio and stall warning horn)
- 4) R.H. instrument panel emergency lighting
- 5) Cockpit floodlight switches (rheostats)
- 6) R. H. side upper panel postlight
- 7) R.H. cockpit floodlight
- 8) Ammeter
- 9) Voltmeter
- 10) "ENGINE START" switches (Figure 7.6.4)
- 11) "ELECTRIC POWER" switches (Figure 7.8.5)
- 12) "GYRO INST" gyroscopic instrument switches (Figure 7.12.2)
- 13) "EXT LIGHTS" external lighting switches (Figure 7.8.6)
- 14) L.H. cockpit floodlight
- 15) L. H. side upper panel postlight
- 16) "HORN TEST" aural warning test

Figure 7.3.2 (1/2) - UPPER PANEL AND COCKPIT OVERHEAD PANEL

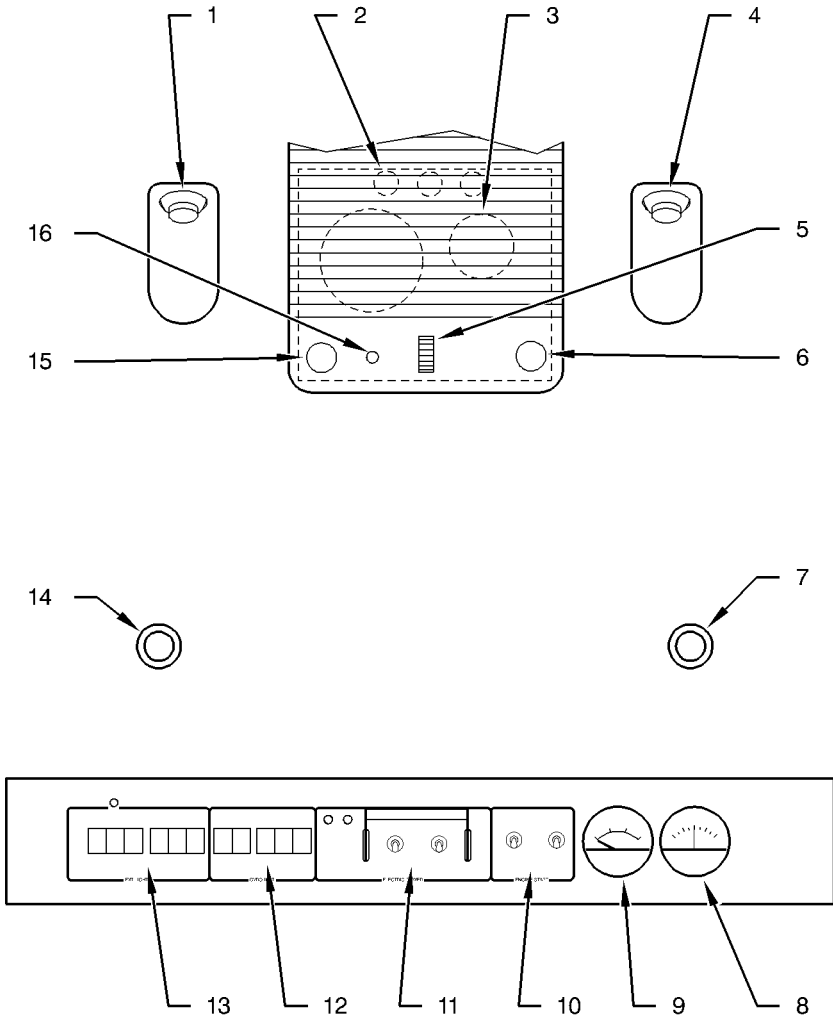


14251600AAA-NMMA8200

Figure 7.3.2 (2/2) - UPPER PANEL AND COCKPIT OVERHEAD PANEL

- | | |
|---|---|
| 1) Altitude preselection indicator | 21) "AP / DISC TRM INT" red push-button |
| 2) GPS indicator lights | 22) Electric pitch trim control |
| 3) Encoding altimeter 1 | 23) Maps reading tablet |
| 4) Torquemeter | 24) Electric rudder trim control |
| 5) Propeller RPM indicator | 25) Left station reception-micro jacks |
| 6) Vertical speed indicator 1 | 26) L.H. station rudder pedals adjusting handle |
| 7) ITT indicator | 27) Adjustable air outlet |
| 8) ITT test knob | 28) Flight conditions and instruction placard |
| 9) Gas generator speed indicator (Ng) | 29) "DE ICE SYSTEM" panel postlight |
| 10) EGPWS control box | 30) OAT indicator |
| 11) Oil pressure and temperature indicator | 31) Chronometer |
| 12) Fuel flow totalizer/computer | 32) Stand-by horizon |
| 13) Landing gear configuration and control panel (Figure 7.5.1) | 33) VOR / ILS 2 indicator |
| 14) Oxygen mask microphone switch (Figure 7.10.1) | 34) "GYRO 1 mode" indicator |
| 15) Left station control wheel tube | 35) Suction indicator |
| 16) Parking brake control | 36) Airspeed indicator 1 |
| 17) EHSI indicator | 37) General alarm red and amber indicators |
| 18) RMI indicator | 38) EADI indicator |
| 19) Deicing control and check panel (Figure 7.13.1) | 39) EFIS control panel |
| 20) Circuit breakers panel postlight (without "pilot" door) | |

Figure 7.3.3 (1/2) - LEFT INSTRUMENT PANEL

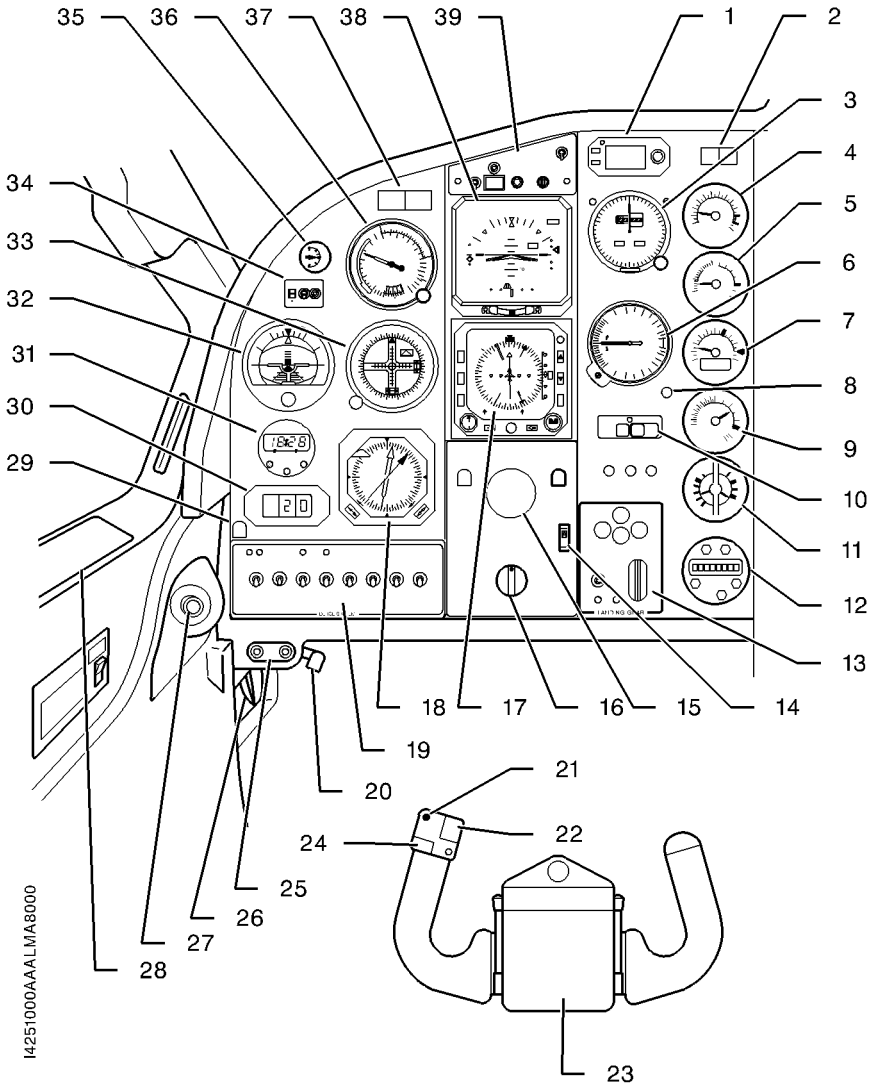

I4251000AAALMA8000

Figure 7.3.3 (2/2) - LEFT INSTRUMENT PANEL
(Typical arrangement)

- 1) Stand-by compass
- 2) AP mode controller (see Section 9)
- 3) Advisory panel (Figure 7.3.8)
- 4) Audio control box
- 5) COM/NAV/GPS 1
- 6) MFD
- 7) ADF
- 8) Cabin interior lighting rheostats and switches (Figure 7.8.7)
- 9) "RADIO MASTER" switch (Figure 7.14.1)
- 10) "AP / TRIMS MASTER" switch (see Section 9)
- 11) "GND CLR" ground communication indicating light (Figure 7.14.1)

Figure 7.3.4 (1/2) - CENTRAL INSTRUMENT PANEL

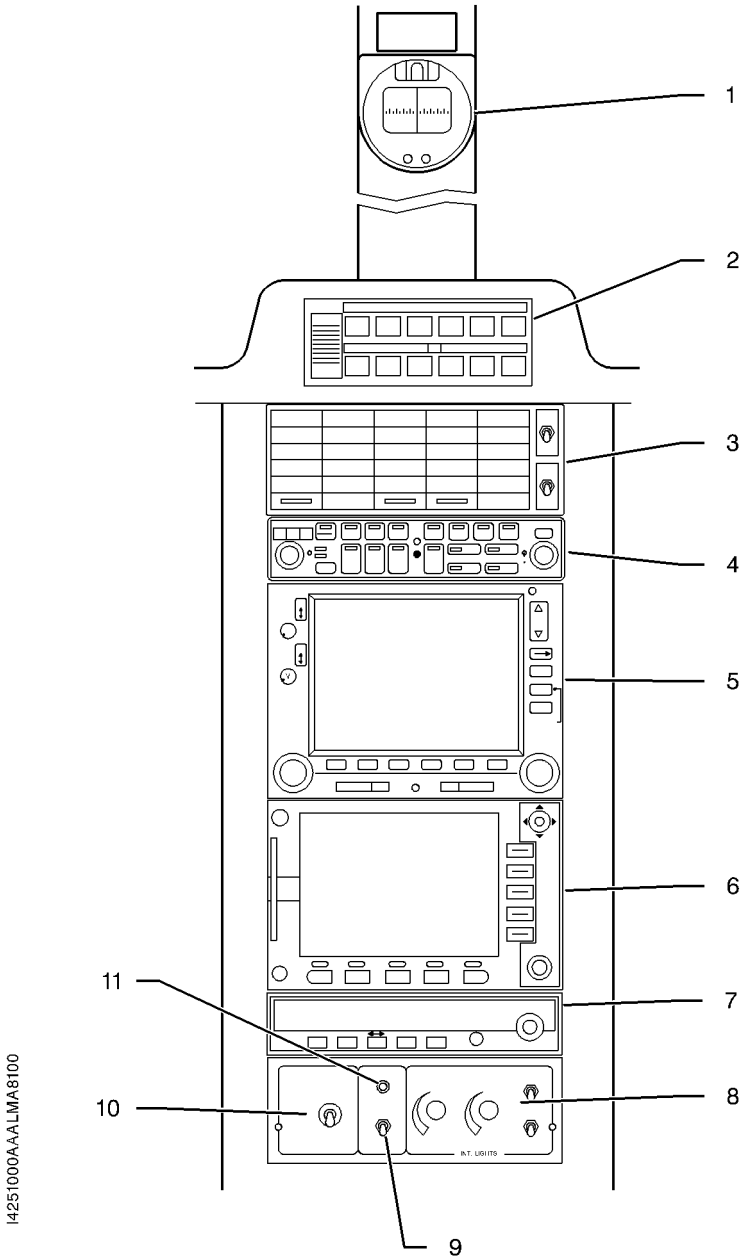


Figure 7.3.4 (2/2) - CENTRAL INSTRUMENT PANEL
(Typical arrangement)

- 1) "FUEL" check and control panel (fuel pressure and quantity indicators, "FUEL SEL" and "AUX BP" switches) (Figure 7.7.3)
- 2) ELT remote control switch
- 3) "GYRO 2 mode" indicator
- 4) Airspeed indicator 2
- 5) ADI 2 indicator
- 6) Encoding altimeter 2
- 7) HSI 2 indicator
- 8) Vertical speed indicator 2
- 9) Transponder 2
- 10) DME
- 11) Hour meter
- 12) Adjustable air outlet
- 13) R. H. station rudder pedals adjusting handle
- 14) Right station reception-micro jacks
- 15) Circuit breakers panel postlight (with "pilot" door)
- 16) Electric pitch trim control
- 17) Electric rudder trim control
- 18) "AP / DISC TRM INT" red push-button
- 19) Maps reading tablet
- 20) Radar altimeter buzzer
- 21) Servicing plug
- 22) Cabin emergency air control ("RAM AIR" control knob)
- 23) Static source selector
- 24) Right station control wheel tube
- 25) "ECS" air conditioning and pressurization panel (Figure 7.9.3)
- 26) Radar altimeter indicator
- 27) Transponder 1
- 28) COM/NAV/GPS 2
- 29) Registration

Figure 7.3.5 (1/2) - RIGHT INSTRUMENT PANEL

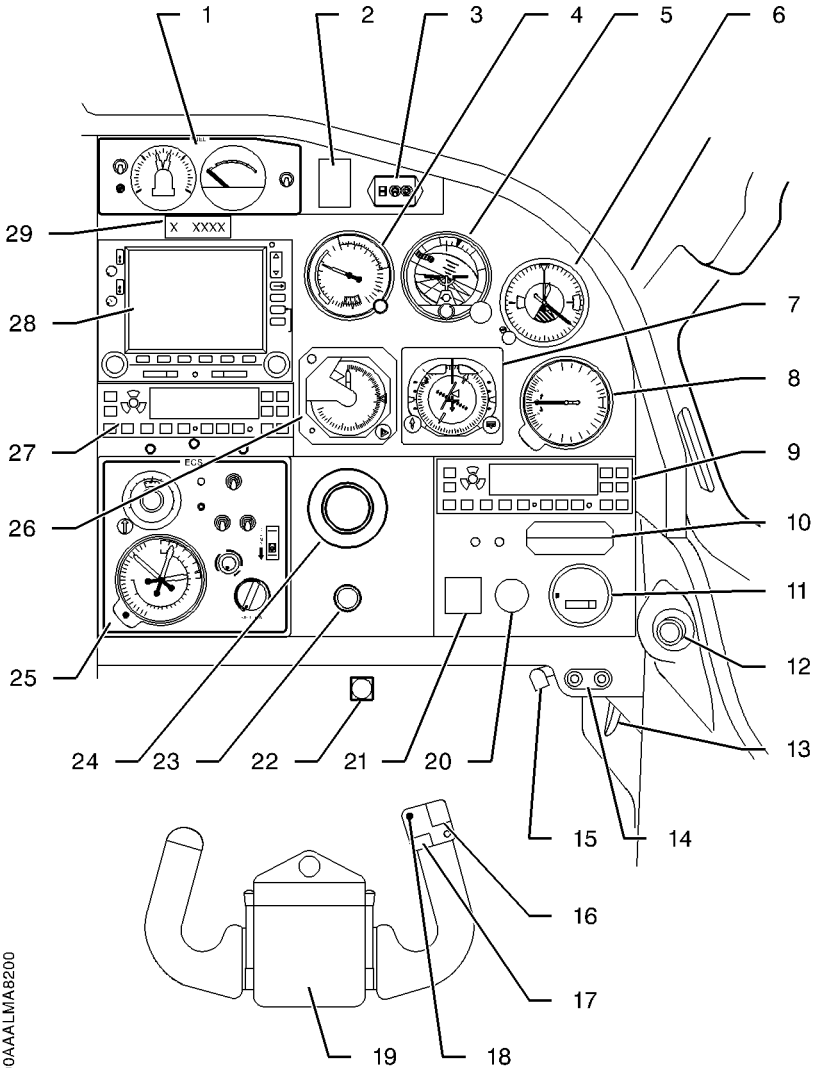


Figure 7.3.5 (2/2) - RIGHT INSTRUMENT PANEL
(Typical arrangement)

14251000AAALMA8200

- 1) Trim tabs indicators
- 2) Flaps position indicator
- 3) Propeller governor lever
- 4) Power lever
- 5) "PROP O' SPEED TEST" push-button (Figure 7.6.3)
- 6) Flaps control
- 7) Condition lever
- 8) Levers friction adjustment
- 9) Emergency fuel control
- 10) Manual fuel tank selector (Figure 7.7.2)
- 11) Roll trim tab control
- 12) Pitch trim tab control
- 13) Lock for access door to landing gear emergency pump (Figure 7.5.2)

Figure 7.3.6 (1/2) - PEDESTAL CONSOLE



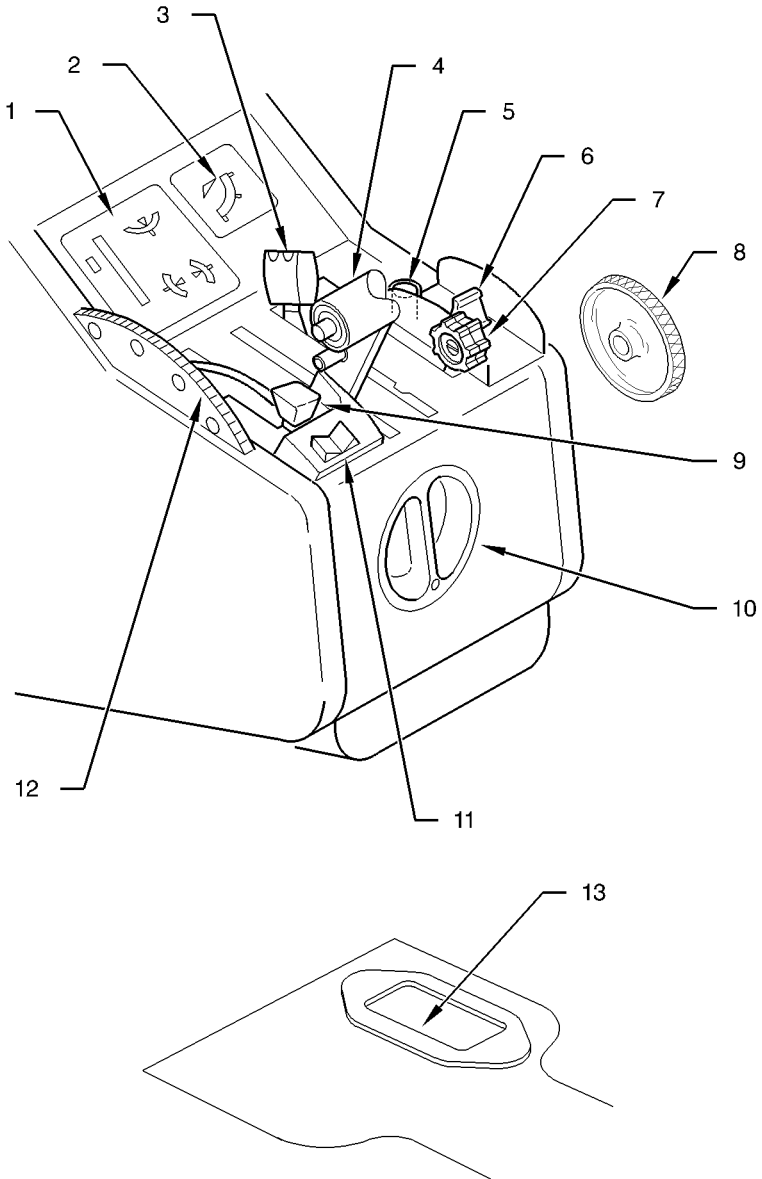



Figure 7.3.6 (2/2) - PEDESTAL CONSOLE
(Typical arrangement)

14251400AAA.BMA8300

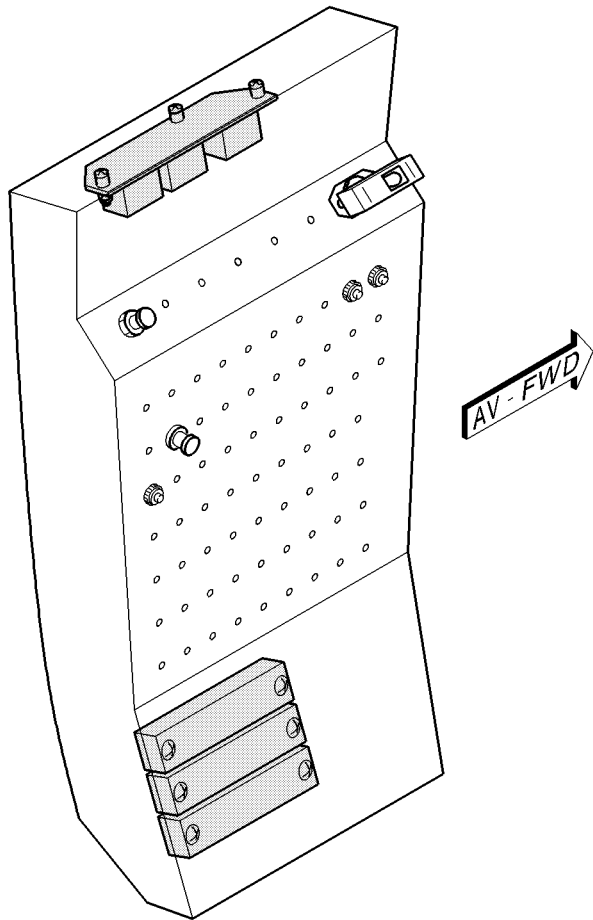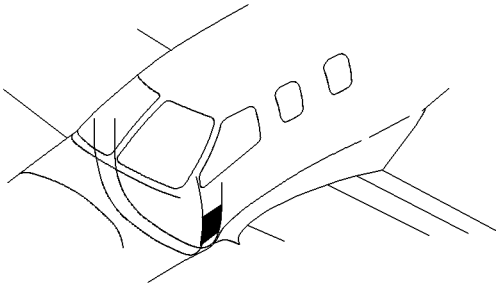

14246001AAAAWA8001

Figure 7.3.7 - CIRCUIT BREAKERS PANEL - Without "pilot" door

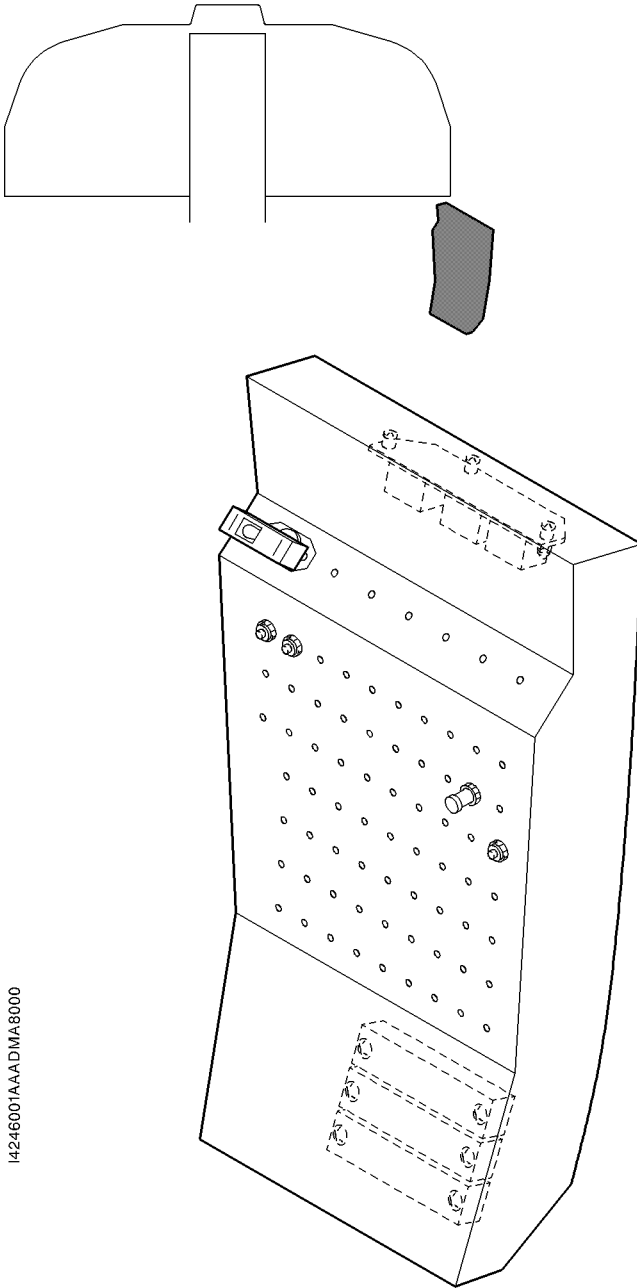


14246001AAA DMA8000

Figure 7.3.7A - CIRCUIT BREAKERS PANEL - With "pilot" door

MASTER WARNING	General warning upon illumination of red warning light
MASTER CAUTION	General warning upon illumination of amber warning light
ITT	Inter turbine temperature $\geq 850^{\circ}\text{C}$
OIL PRESS	Engine oil low pressure ≤ 4.1 bar (60 psi)
STARTER	Starter generator running (flashing)
IGNITION	Ignition exciter running
PARK BRAKE	Parking brake applied
FIRE	Engine compartment fire (temperature greater than 200°C) (if installed)
BLEED TEMP	Conditioned air temperature at outlet cooling turbine compressor $\geq 317^{\circ}\text{C}$
BLEED OFF	Pressure regulator / shut-off closed
CAB PRESS	Cabin altitude ≥ 10000 ft or $\Delta P \geq 423$ mbar (6.2 psi)
DOOR	Passenger's door, not closed and locked
FLAPS	Dissymmetry between L.H. and R.H. flaps
OXYGEN	Oxygen cylinder closed
PITOT 1	Pitot tube Nr 1 not heated
PITOT 2	Pitot tube Nr 2 not heated
STALL HTR	Stall warning not heated
INERT SEP	Inertial separator "INERT SEP" control switch set to "ON"
VACUUM LO	Vacuum generator, vacuum ≤ 3.75 in.Hg
TRQ	Engine torque exceeds 124.4 %
CHIP	Oil contaminated by chips (if installed)
BAT OFF	Battery unconnected and main distribution bar supplied by another generator
MAIN GEN	Starter generator unconnected
LO VOLT	Battery, voltage ≤ 26 Volts
G P U	GPU receptacle door not closed
FUEL OFF	Fuel tank selectors set to "OFF"
FUEL PRESS	Fuel pressure ≤ 10 psi (± 2 psi)
AUX BP ON	Electric fuel pump, running (manual or automatic mode)
FUEL L. LO	L.H. fuel tank low level, fuel quantity ≤ 34.6 l (9.1 us gal)
FUEL R. LO	R.H. fuel tank low level, fuel quantity ≤ 34.6 l (9.1 us gal)
AUTO SEL	Fuel timer OFF or out of service
BRIGHT	Indicator lights brightness selector, day position
DIM	Indicator lights brightness selector, night position
TEST 1 & 2	Lights test switch (double check)

Figure 7.3.8 (1/2) – ADVISORY PANEL AND GENERAL ALARMS WARNING LIGHTS

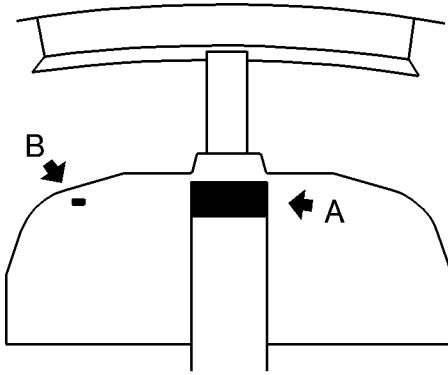


(A)

ITT	BLEED TEMP	PITOT 1	TRQ	FUEL OFF	BRIGHT
OIL PRESS	BLEED OFF	PITOT 2	BAT OFF	FUEL PRESS	DIM
STARTER	CAB PRESS	STALL HTR	MAIN GEN	AUX BP ON	TEST 1
IGNITION	DOOR	INERT SEP	LO VOLT	FUEL L.LO	TEST 2
PARK BRAKE	FLAPS	VACUUM LO	GPU	FUEL R.LO	
	OXYGEN			AUTO SEL	

(B)

 
Légende voyants
Lights key




Rouge
Red



 Ambre
Amber



Non utilisé
Free

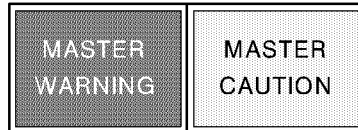

I4315001AAABMA8200

Figure 7.3.8 (2/2) - ADVISORY PANEL AND GENERAL ALARMS WARNING LIGHTS

DOORS, WINDOWS AND EMERGENCY EXIT

Cabin access door (Figure 7.3.9)

The cabin one-piece access door, located on the left side of fuselage aft of the wings, opens outside. The retractable stairs and hand rail make boarding easier.

To open the door from outside the airplane (make sure the door is not locked), press on front end of the handle embedded in door (this pressure disengages the handle from its recess), then turn the handle upwards. Raise the door helping it to open. Two compensation actuators bring and maintain the door at its maximum opening position.

After door opening, tilt stairs downwards. Stairs down movement is damped by means of two gas struts and leads the hand rail to extend.


CAUTION

RETRACT STAIRS BEFORE CLOSING ACCESS DOOR AND MAKE SURE DOOR DEFLECTION AREA IS CLEAR

To retract stairs, press on locking pin located on stairs front string board (see detail "1"), raise retractable handle (see detail "2") and pull stairs inside cabin. While stairs are retracted, the hand rail folds up.

To close the door from inside the airplane, press on knob inside cabin forward of the door. The door driven by a geared motor tilts downwards up to a position near the complete closing. Pull the door until it aligns with fuselage and lock it by moving inside handle downwards. Check that all latch pins and hooks are correctly engaged (visible green marks).

The "DOOR" warning light located on advisory panel remains illuminated as long as the door is not correctly locked.

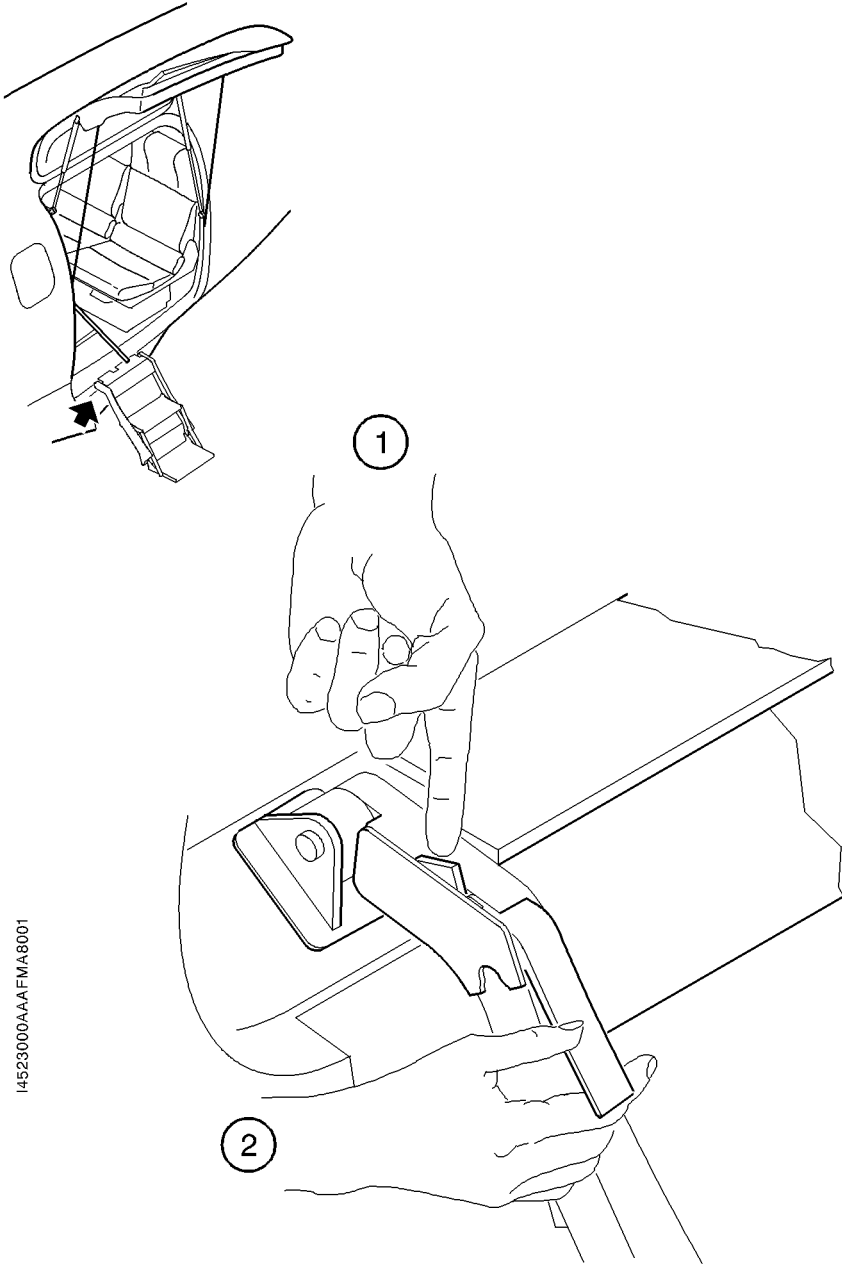

14523000AAA.FMA8001

Figure 7.3.9 - CABIN ACCESS DOOR

CAUTION

**BEFORE OPENING ACCESS DOOR, MAKE SURE DOOR
DEFLECTION AREA IS CLEAR**

To open door from inside the cabin, unlock the handle by pressing on knob located on its left side, pull the handle toward inside and move it upwards. Open the door by pushing it upwards.

After door opening, tilt stairs downwards which leads the hand rail to extend.

CAUTION

**RETRACT STAIRS BEFORE CLOSING ACCESS DOOR AND MAKE
SURE DOOR DEFLECTION AREA IS CLEAR**

To retract stairs from outside the airplane, raise stairs by pushing them upwards from the lower part and fold them inside cabin. While stairs are retracted, the hand rail folds up.

To close the door from outside the airplane, press on knob on outside fuselage at the right side of the door. The door driven by a geared motor tilts downwards up to a position near the complete closing. Pull the door until it aligns with fuselage and lock it by moving outside handle downwards, then fold handle in its recess.

Check that all latch pins and hooks are correctly engaged (visible green marks).

In case of geared motor failure, the door can be manually tilted downwards by pulling sufficiently to override action of compensating struts.

Cockpit access door (Figure 7.3.9A)

The cockpit access door, so-called "pilot" door, (if installed) located on the left side of fuselage forward of the wings, opens outside. Retractable footstep makes boarding easier.

WARNING**AS THE "PILOT" DOOR IS LOCATED IN A DANGEROUS AREA, WAIT FOR COMPLETE ENGINE STOP BEFORE OPERATING THIS DOOR**

To open the door from outside the airplane (make sure the door is not locked), press on front end of the handle embedded in door (this pressure disengages the handle from its recess), then turn the handle downwards. Pull the door helping it to open until it reaches its maximum opening position.

After door opening, tilt and unfold footstep.

CAUTION**RETRACT FOOTSTEP BEFORE CLOSING ACCESS DOOR**

Fold and tilt footstep upwards.

To close the door from inside the airplane, pull the door until it aligns with fuselage and lock it by moving inside handle downwards. Check that each latch is correctly engaged in its recess (visible green marks).

The "DOOR" warning light located on advisory panel remains illuminated as long as cabin access door and / or "pilot" access door is (are) not correctly locked.


To open door from inside the cockpit, unlock the handle by pressing on knob located on its right side, pull the handle inwards and move it upwards. Open the door helping it to open until it reaches its maximum opening position.

After door opening, tilt and unfold footstep.

CAUTION**RETRACT FOOTSTEP BEFORE CLOSING ACCESS DOOR**

Fold and tilt footstep upwards.

To close the door from outside the airplane, push the door until it aligns with fuselage and lock it by moving outside handle upwards, then fold handle in its recess.

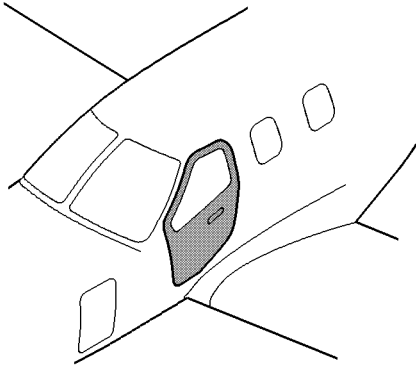

I4523000AAAF1M8101

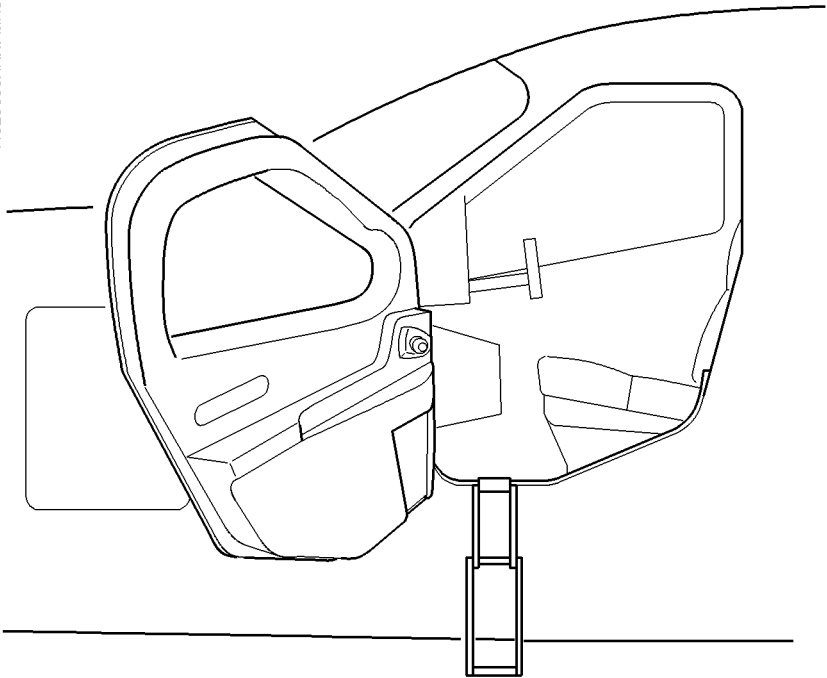


Figure 7.3.9A - COCKPIT ACCESS DOOR ("PILOT" DOOR)

FWD compartment door

The FWD compartment door is located on the airplane left side between the firewall and the front pressure bulkhead. It is hinged at the top. It is maintained in the up position by a compensation rod. Two interlocking-type latches ensure its closing and it is equipped with a lock (same key as for the access door, "pilot" door (if installed) and aft baggage compartment door). When the door is closed, latches are flush with the fuselage profile.

AFT baggage compartment door

The AFT baggage compartment door is located on the airplane left side between the rear pressure bulkhead at frame C17 and the frame C18. It is hinged at the top. It is maintained in the up position by a compensation rod. Two interlocking-type latches ensure its closing and it is equipped with a lock (same key as for the access door, "pilot" door (if installed) and FWD compartment door). When the door is closed, latches are flush with the fuselage profile.

Windows

Windows do not open. The windshield consists of two parts electrically deiced.


Emergency exit (Figure 7.3.10)

The emergency exit is installed on the right side of the fuselage and opens towards the inside. It is equipped with two handles, one inside and the other outside, each located on the upper frame.

When the airplane is parked, the closing system may be locked by a safety pin provided with a flag marker. The handle is then inoperable.

WARNING**TAXIING AND FLYING WITH THIEF-PROOF SAFETY PIN INSTALLED IS FORBIDDEN.**

To open the emergency exit, pull one of the two handles and tilt the emergency exit from top to bottom towards inside of airplane.

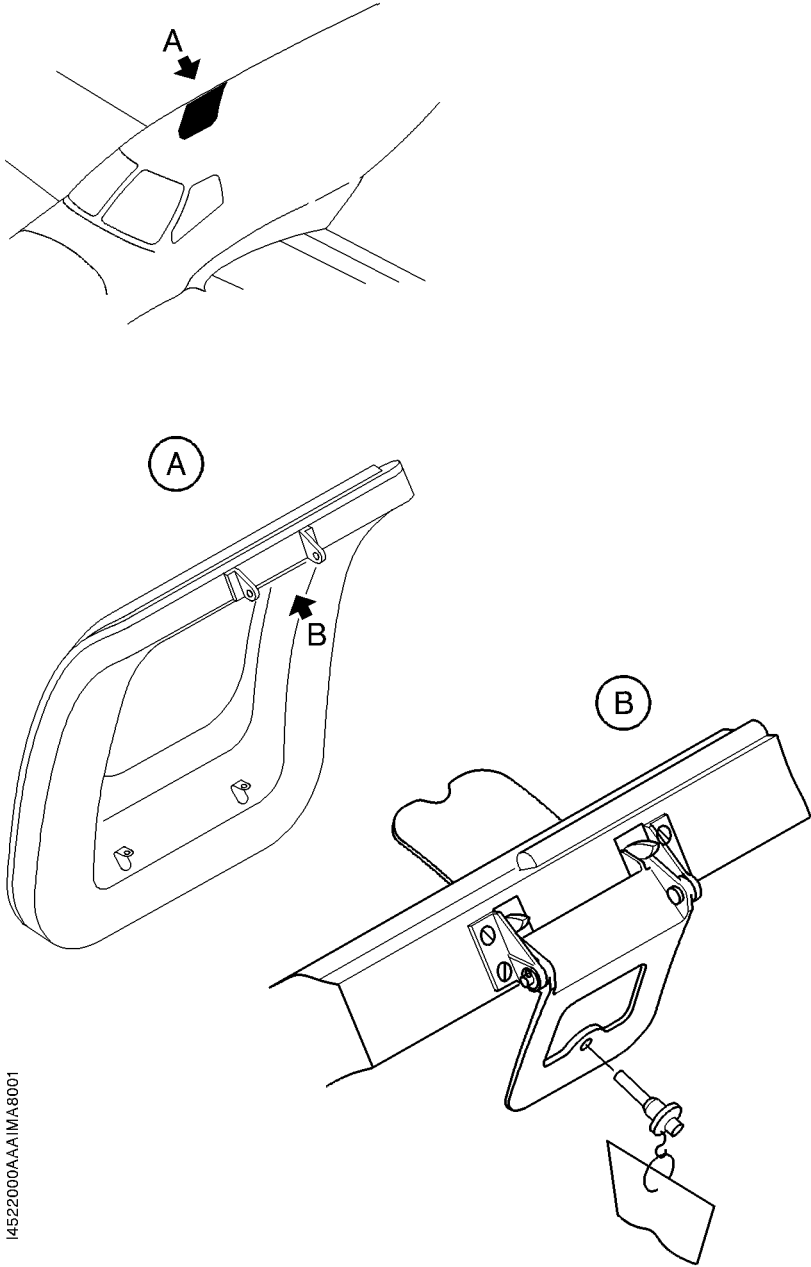

14522000AA-11M1A8001

Figure 7.3.10 - EMERGENCY EXIT

INTENTIONALLY LEFT BLANK

SEATS, BELTS AND HARNESSSES

Cockpit seats (Figure 7.3.11)

L.H. and R.H. front seats are mounted on rails attached to the structure. Longitudinal position, height and back-rest tilting of each seat can be adjusted and the arm-rest is hinged.

Pull up the handle located forward for longitudinal setting.

The seat height is adjusted by pulling up side forward handle while relieving the seat from the body weight.

The seat back angle is adjusted by pulling up side rearward handle.

Passengers' seats (Figure 7.3.11)

The accommodation consists of :

- two individual seats, installed back to the flight direction, mounted on the same rails as the front seats.

The seat back angle is adjusted by pulling up side handle.

- two rear seats arranged as a bench, mounted on the same rails as the front seats.

The seat back-rests tilt forward by pulling up a rear handle and each seat may tilt forwards by pulling up a side rear handle to ease baggage loading in baggage compartment.

For longitudinal setting pull up the handle located forward.

Belts and harnesses (Figure 7.3.12)

WARNING

INCORRECT CLOSURE OF THE SAFETY BELT MAY INTRODUCE A RISK. MAKE SURE IT IS TIGHTENED WHEN BUCKLED. TO BE MOST EFFICIENT, THE BELT MUST NOT BE TWISTED. CHECK THAT THERE IS NO CONSTRAINT WHEN OPERATED. AFTER A SERIOUS ACCIDENT, REPLACE ALL BELTS

Each cockpit seat is equipped with a four-point restraint system consisting of an adjustable lap belt and a dual-strap inertia reel-type shoulder harness.

Each passenger seat is equipped with a three-point restraint system consisting of an adjustable lap belt and an inertia reel-type shoulder harness.

BAGGAGE COMPARTMENTS

There are two baggage compartments :

- a compartment located in the pressurized cabin between rear passenger seats and rear pressure bulkhead,
- an AFT compartment (non-pressurized) located between the rear pressure bulkhead at frame C17 and the frame C18.

The pressurized compartment is accessible through the cabin by tilting forward the L.H. rear seat and / or L.H. or R.H. rear seat back-rests.

The AFT compartment is accessible by opening the external door located on the left side of the airplane.

The floor of the pressurized compartment is equipped with rings fitted with lashing straps provided for securing parcels and baggage on compartment floor.

These locations are designed for the carrying of low density loads ; loading and unloading must be carried out with caution to avoid any damage to airplane.

The cabin is separated from the baggage compartment by a partition net intended to protect the passengers from injuries that could be caused by improper tie-down of a content.

The partition net is mounted at frame C14 (Figure 7.2.1), it is secured at the bottom to 4 points of the floor and on the sides to 6 points of the structure.

The rear (non pressurized) baggage compartment is provided with a holding elastic net.

Maximum loads allowable in baggage compartments depend on airplane equipment, refer to Section 6 "Weight and balance".

WARNING

ANY PARCEL OR BAGGAGE MUST BE STOWED BY STRAPS.

IT IS THE PILOT'S RESPONSIBILITY TO CHECK THAT ALL THE PARCELS AND BAGGAGE ARE PROPERLY SECURED IN THE CABIN.

IN CASE OF TRANSPORT OF DANGEROUS MATERIALS, RESPECT THE LAW CONCERNING TRANSPORT OF DANGEROUS MATERIALS AND ANY OTHER APPLICABLE REGULATION

- 1) Front passenger's seat
- 2) L. H. pilot's seat
- 3) R. H. intermediate passenger's seat (back to flight direction)
- 4) L. H. intermediate passenger's seat (back to flight direction)
- 5) R. H. rear passenger's seat
- 6) L. H. rear passenger's seat } Rear bench
- 7) Front seat(s) longitudinal shift control
- 8) Front seat(s) height control
- 9) Front seat(s) back-rest tilt control
- 10) Drawer for pilot's piddle pak
(front side : new bags, rear side : used bags)
- 11) Intermediate seat(s) back-rest tilt control
- 12) Rear bench seat(s) back-rest tilt control
- 13) Rear bench L.H. seat tilt control

NOTE :

To have access to the baggage compartment, pull forwards the back-rest of rear bench L.H. seat, then pull forwards control (Item 13) to tilt L.H. seat assembly forwards.

If necessary, pull forwards the back-rest of rear bench R.H. seat.

Figure 7.3.11 (1/2) - SEATS

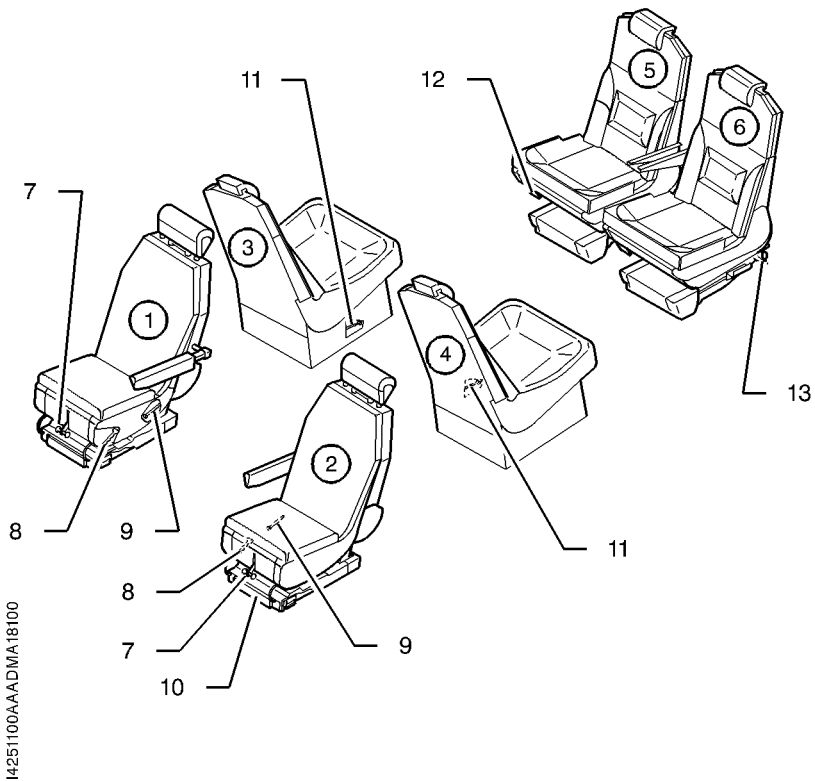


Figure 7.3.11 (2/2) - SEATS

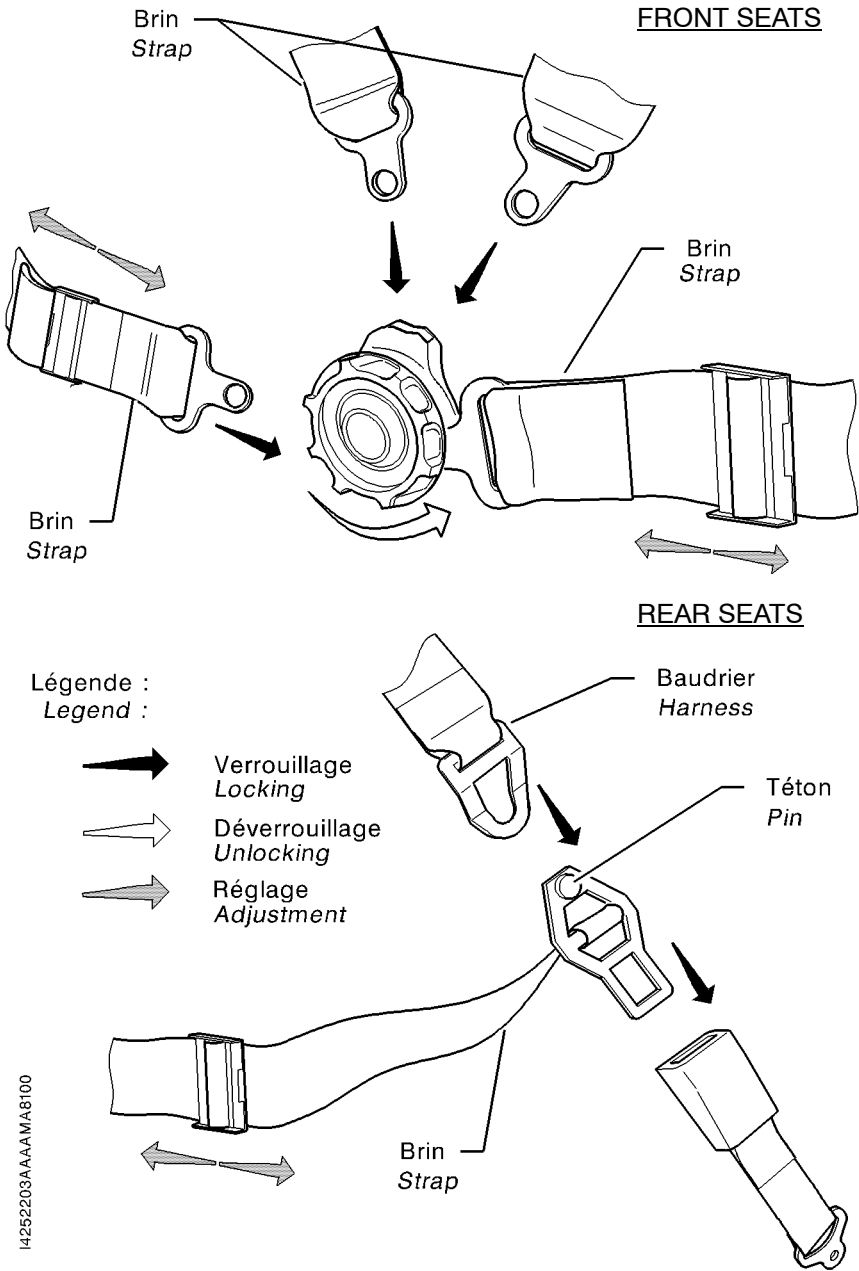


Figure 7.3.12 - FRONT AND REAR SEAT BELTS (with movable straps) AND HARNESSSES

7.4 - FLIGHT CONTROLS

Flight controls consist of roll, pitch and rudder controls, as well as roll trim tab, pitch trim tab and rudder trim tab controls.

NOTE :

During airplane parking, it is recommended to lock flight controls (see Figure 8.6.2)

ROLL (Figure 7.4.1)

The roll control is activated by an assembly of rods and cables which links control wheels with the ailerons and the spoilers.

Aileron displacement is combined with that of spoilers, located at upper surface of each wing forward of flaps.

The spoiler rises from wing upper surface profile, when the aileron is deflected upwards and remains in wing profile, when the aileron is deflected downwards.

Control wheel movement is transmitted through rods to fuselage roll lever located under the floor. The movement is then transmitted through cables to the spoiler mechanism and from the spoiler mechanism to wing roll lever which activates the aileron through a rod.

A rudder / roll combination spring-type system induces roll deflection at the time of pedals movement and vice versa.

ROLL TRIM (Figure 7.4.2)

The roll trim is controlled by a trim tab attached at trailing edge of the L.H. aileron. The trim tab is connected through two links to an electric actuator located in the aileron. A trim switch located on pedestal controls the roll trim tab maneuver.

Roll trim tab electrical circuit is protected by the "AIL-TRIM" circuit breaker.

- 1) Pedestal assembly
- 2) Control wheels
- 3) Fuselage roll lever
- 4) Spoiler
- 5) Aileron
- 6) Aileron control in wing
- 7) Spoiler control


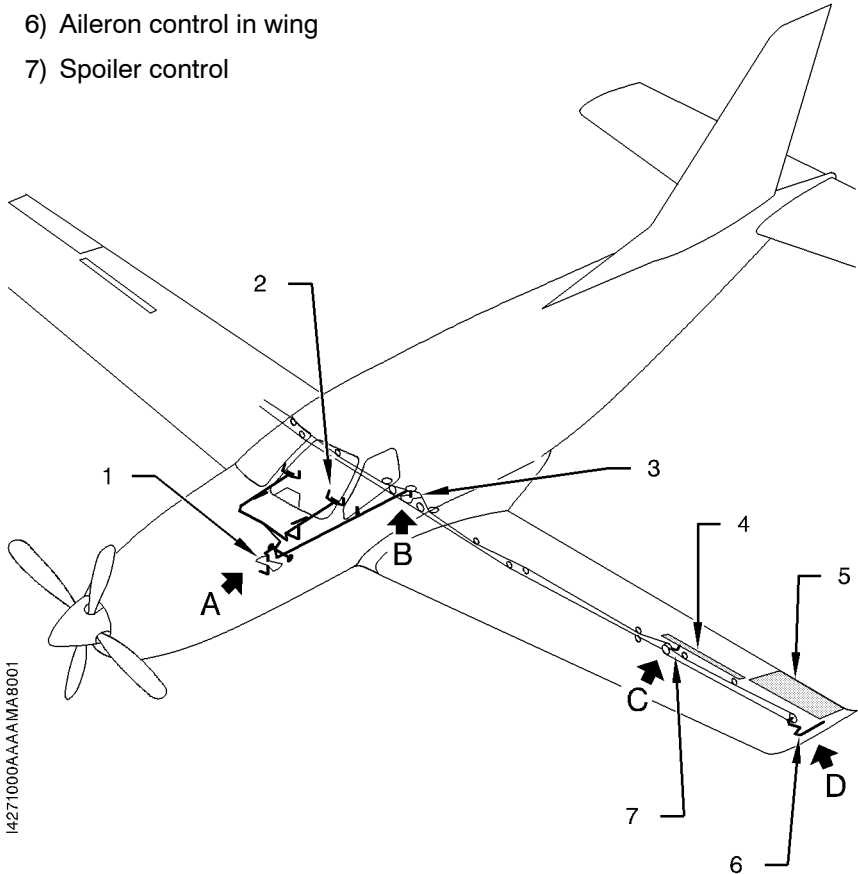



Figure 7.4.1 (1/2) - ROLL

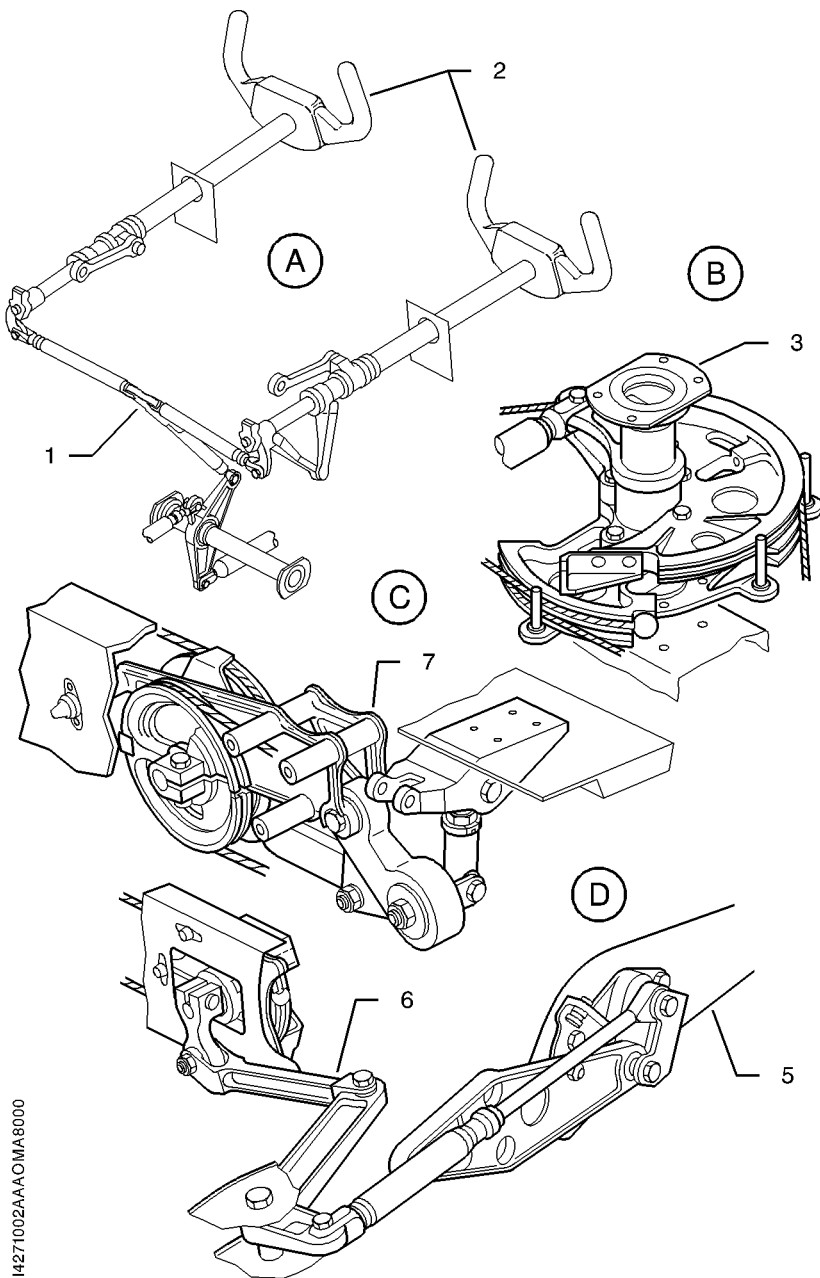

14271002AAA0MA8000

Figure 7.4.1 (2/2) - ROLL

- 1) Roll trim tab
- 2) Aileron
- 3) Adjustable rods
- 4) Actuator
- 5) Trim tab control wiring
- 6) Aileron trim tab position indicator
- 7) Trim switch on pedestal console

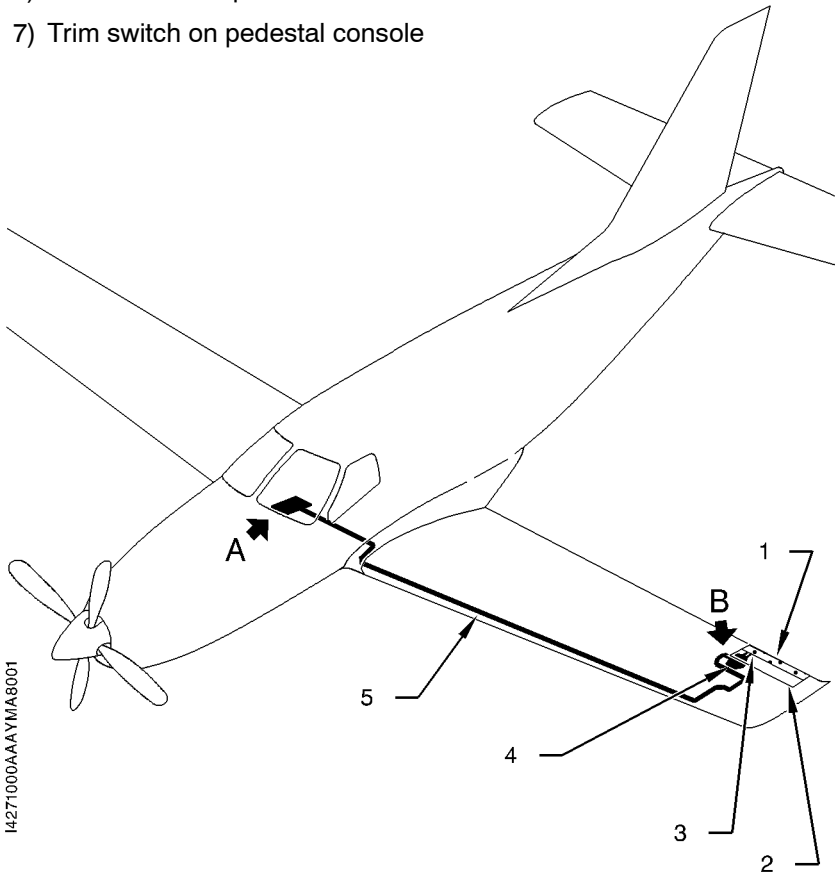

I4271000AAA YMA8001

Figure 7.4.2 (1/2) - LATERAL TRIM

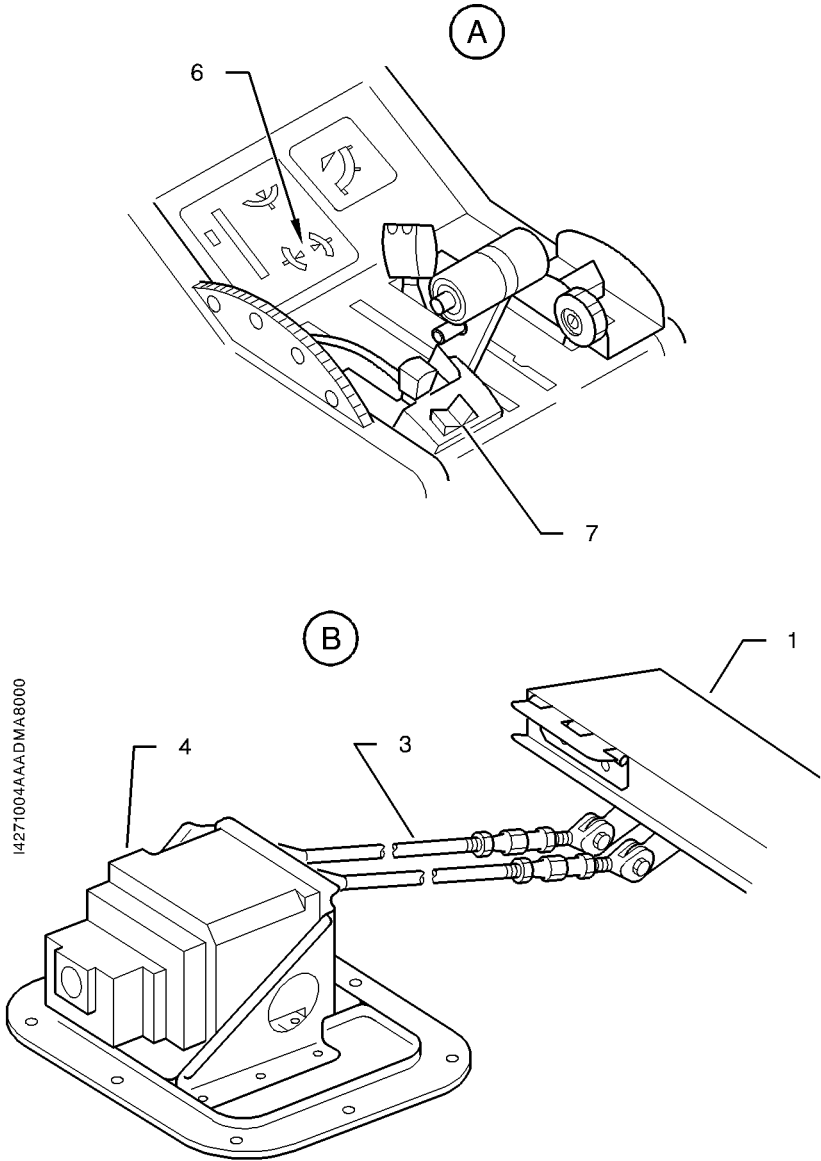


Figure 7.4.2 (2/2) - LATERAL TRIM

INTENTIONALLY LEFT BLANK

ELEVATOR (Figure 7.4.3)

Both elevators are activated simultaneously by the same control. Each control surface is hinged at three points to the rear part of horizontal stabilizer.

The control wheel controls the two elevators through rods, bearings and bellcranks.

A spring actuator creates a "nose-down" artificial force which allows a better static stability.

Each control surface is provided with an automatic anti-tab (automaticity about 0.3), which is also used as trim tab.

PITCH TRIM (Figure 7.4.4)

The pitch trim is accomplished through the two anti-tabs located on left and right elevators.


The trim tab can be controlled electrically or manually. It is activated through cables and a chain on two screw actuators attached to the horizontal empennage.

The electrical control consists of a switch located on the pilot control wheel and a servo-motor attached under the pedestal.

The electrical circuit for pitch trims is protected by the "PITCH TRIM" circuit breaker.

Manual control wheel is installed vertically on left side of pedestal console.

- 1) Control wheel assembly
- 2) Elevators
- 3) Lever assembly, fuselage rear part
- 4) Elevator bellcrank
- 5) Rod with presseal connection
- 6) Lever assembly under floor
- 7) Pedestal assembly
- 8) Actuator

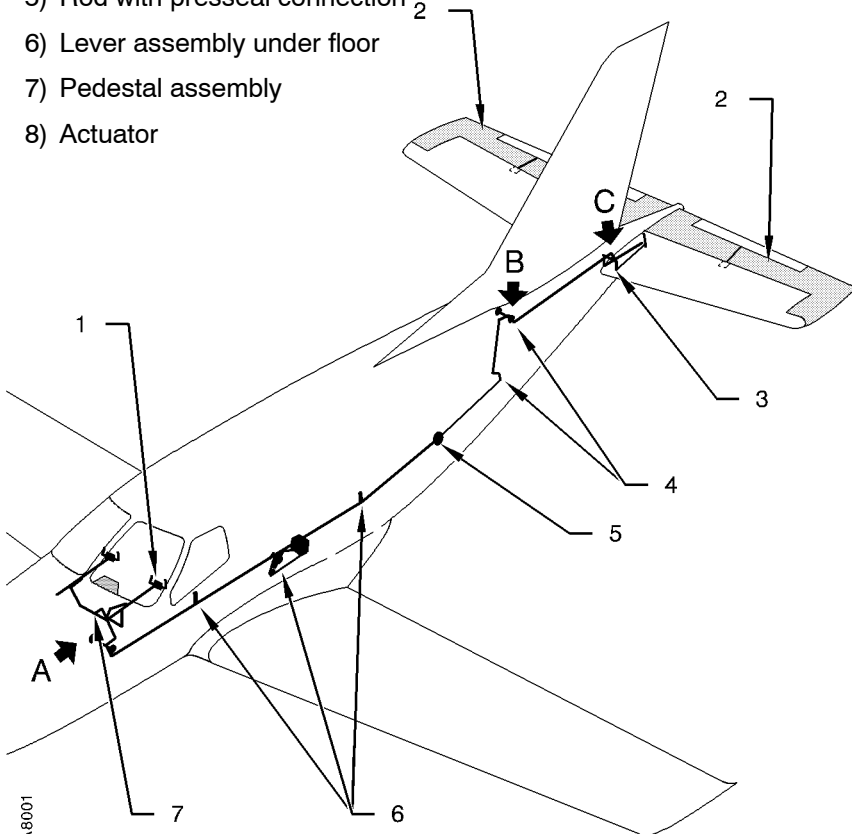

14273000AAAA.MA8001

Figure 7.4.3 (1/2) - ELEVATOR


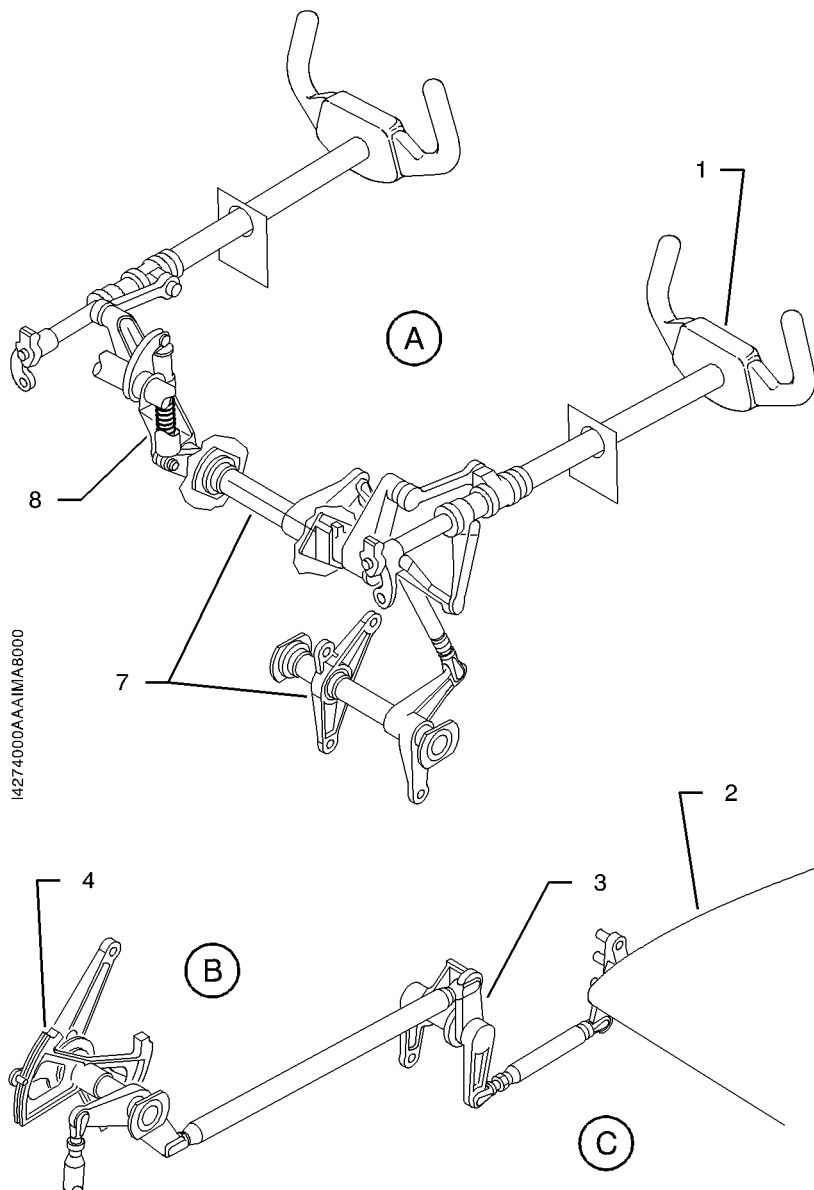


Figure 7.4.3 (2/2) - ELEVATOR

- 1) Cables
- 2) Pulleys
- 3) Pitch trim tabs
- 4) Actuating rods
- 5) Actuator
- 6) Pitch trim tab position indicator
- 7) Pitch trim manual control wheel
- 8) Pitch trim electrical control

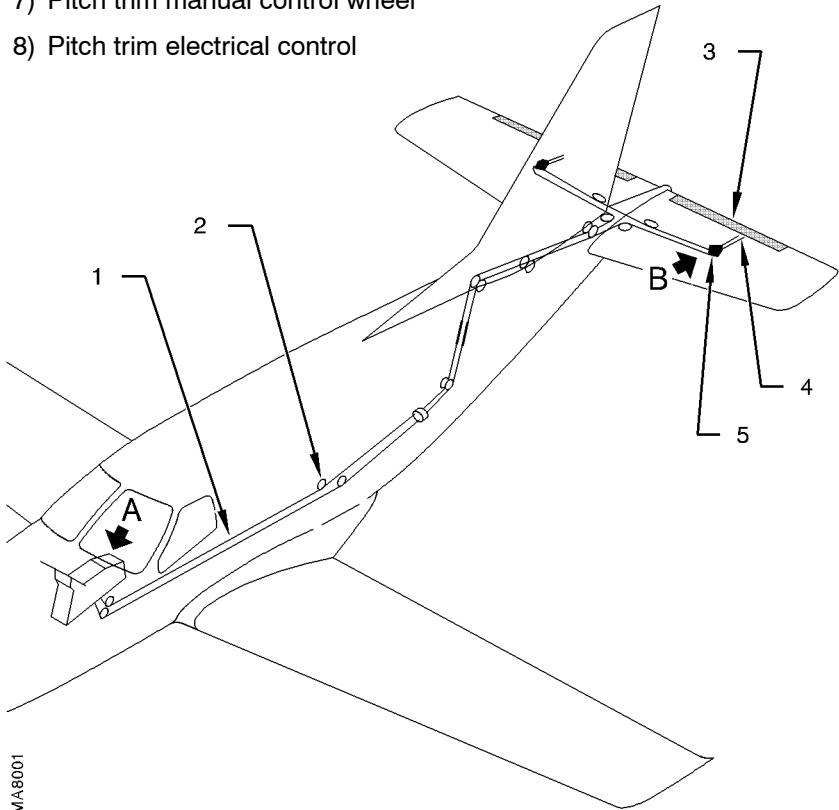

14274000AAABMA8001

Figure 7.4.4 (1/2) - PITCH TRIM

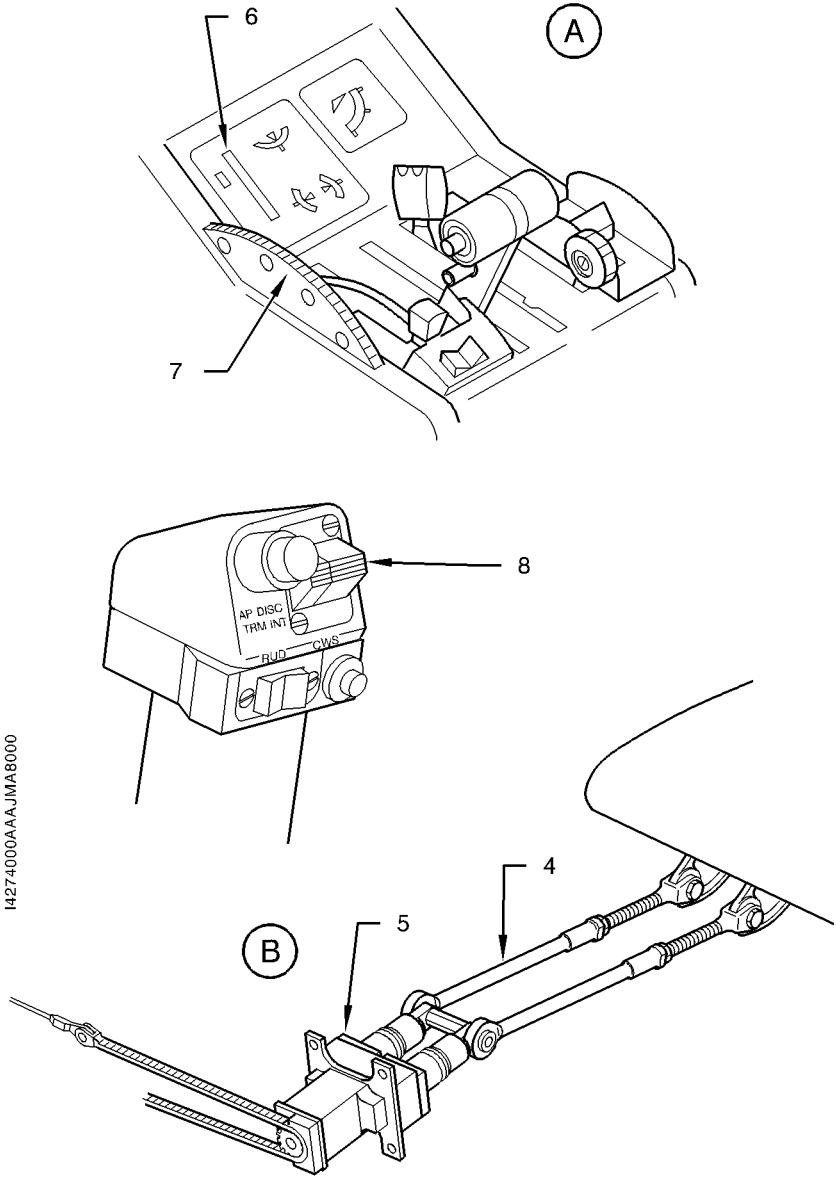


Figure 7.4.4 (2/2) - PITCH TRIM

INTENTIONALLY LEFT BLANK

RUDDER (Figure 7.4.5)

The rudder is hinged on three fittings attached to the vertical stabilizer rear spar.

- The rudder pedals / rudder linkage is ensured through cables and a rod.

Pilot and R.H. station rudder pedal positions are adjustable at each station. The rudder pedal adjustment mechanism (for piloting comfort purposes) includes a manual control located against the external bulkhead beneath the instrument panel and a locking device on the rudder pedals. This ball locking device allows selecting six different positions.

When landing gear is down, rudder pedals are linked to nose gear steering system.

Spring system of rudder / roll combination induces aileron deflection at the time of pedal displacement and vice versa.

RUDDER TRIM (Figure 7.4.6)

A trim tab hinged at two points located at rudder trailing edge provides rudder trim.

Trim tab is linked by two rods to an electric actuator attached to rudder. It is controlled by "RUD" switch (L / R) located on pilot control wheel.

Electrical circuit of rudder trim tab is protected by "RUD TRIM" circuit breaker.

- 1) Roll / rudder combination bellcrank installation
- 2) Rudder pedals assembly
- 3) Control cables
- 4) Pulleys
- 5) Rudder lever assembly
- 6) Rod
- 7) Rudder
- 8) Nose gear steering rod

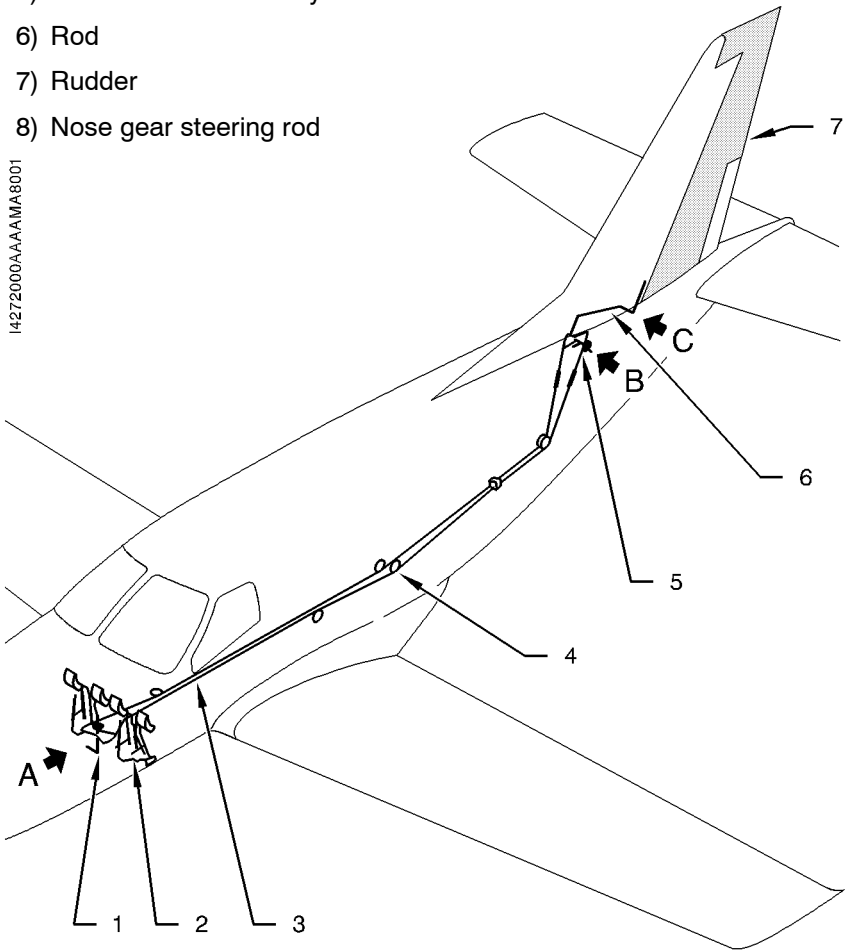


Figure 7.4.5 (1/2) - RUDDER

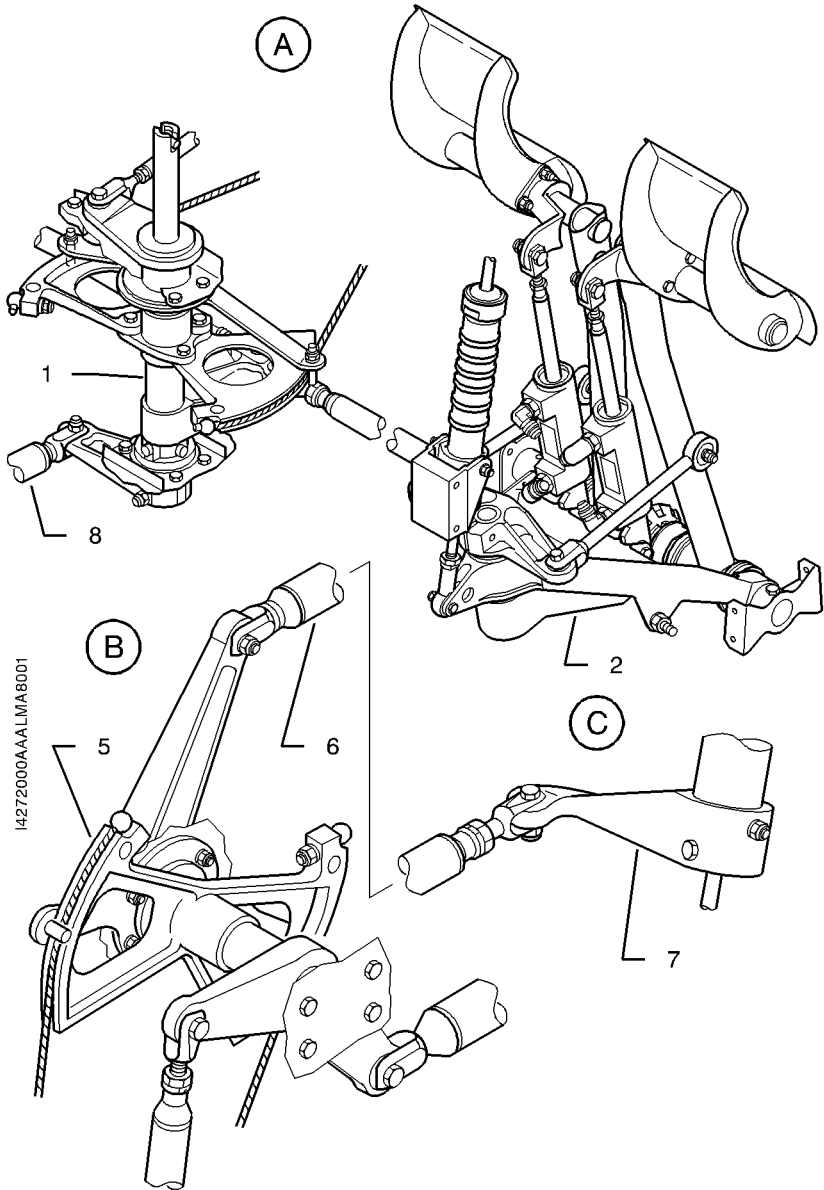


Figure 7.4.5 (2/2) - RUDDER

- 1) Trim switch on control wheel
- 2) Actuator
- 3) Rudder trim tab
- 4) Rods
- 5) Rudder trim control wiring
- 6) Rudder trim tab position indicator


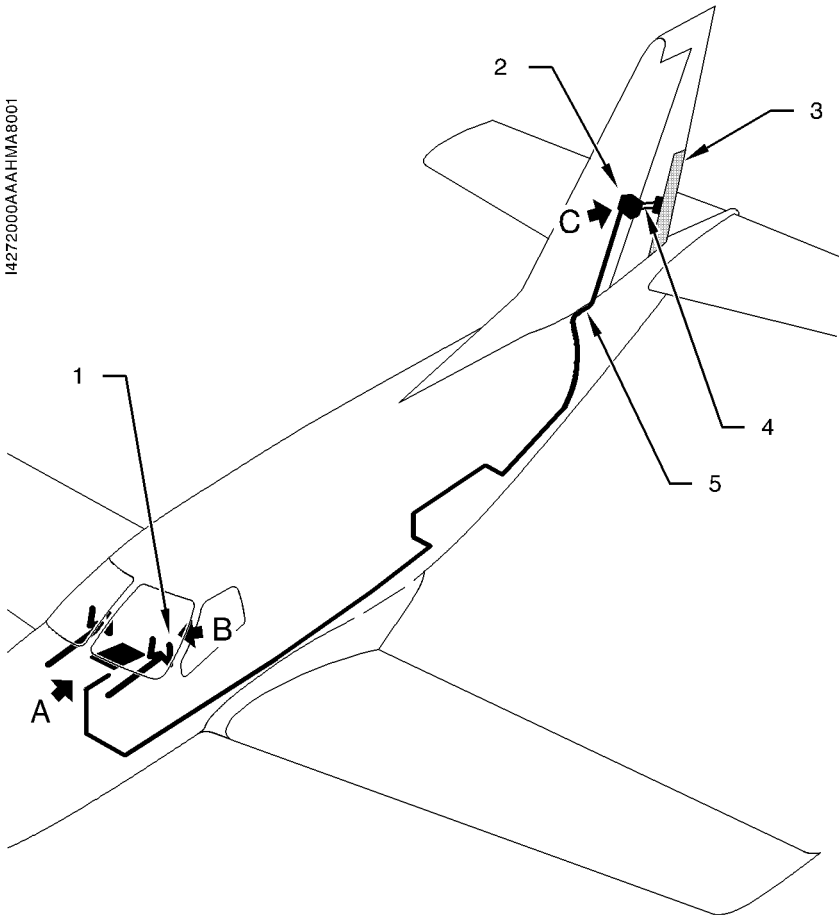


Figure 7.4.6 (1/2) - RUDDER TRIM

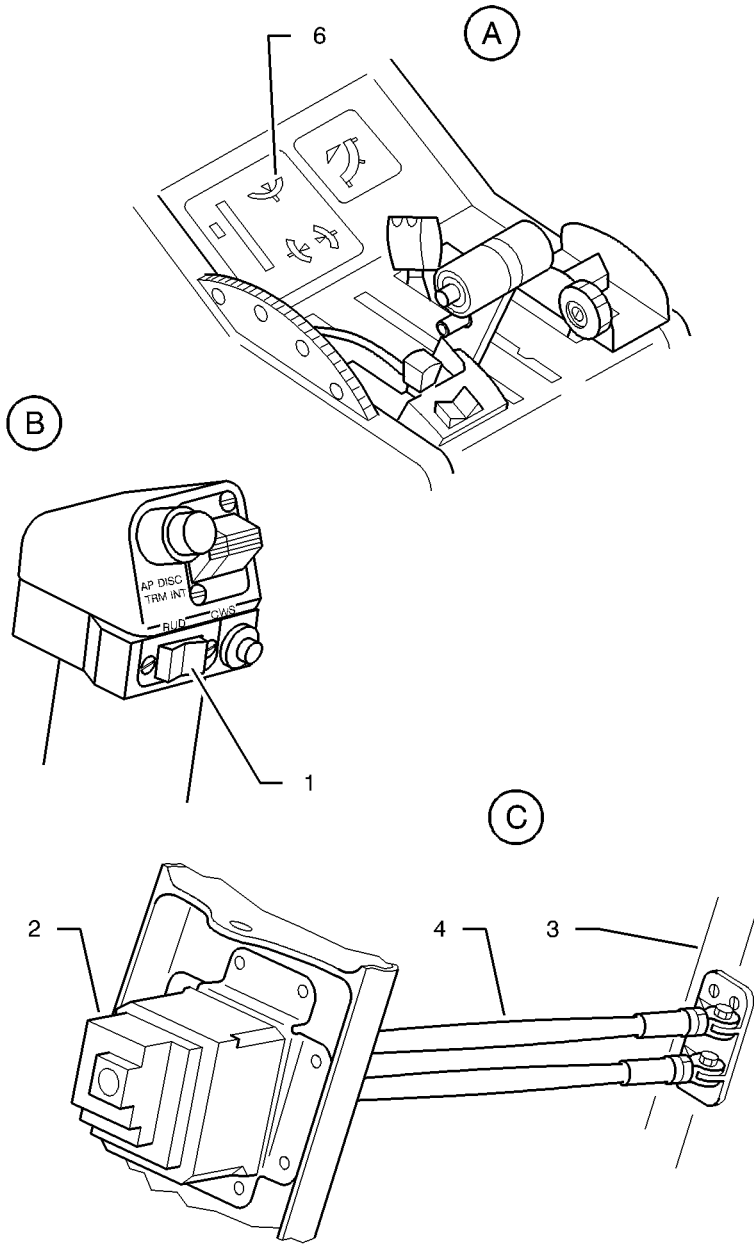

14272002AAAGMAB000

Figure 7.4.6 (2/2) - RUDDER TRIM

INTENTIONALLY LEFT BLANK

7.5 - LANDING GEAR

The TBM 850 is equipped with electro-hydraulically actuated, fully retractable tricycle landing gear.

Each landing gear is equipped with one wheel and an oil-air shock absorber integrated in the strut.

Main landing gears swivel on two ball joints installed on wing spars. Each landing gear retracts toward airplane centerline. The operation is accomplished by a hydraulic actuating cylinder which also provides up and down locking.

Nose gear swivels on two ball joints installed on a tubular steel mount frame. Its operation is accomplished by a hydraulic actuating cylinder which also provides up and down locking. The nose wheel is steerable. It is connected to pedals through a spring rod and is provided with a shimmy damper. In UP position, nose wheel is automatically disconnected.

Actuating cylinders have a locking device integrated at both ends. This device maintains landing gear in up or down position.

All doors are mechanically kept in down position.

■ Pre-MOD70-0342-52 (Lower main landing gear doors)

Landing gear doors, two on the nose gear, one on each main landing gear, are driven and kept in UP position by the landing gear itself.

■ Post-MOD70-0342-52 (Lower main landing gear doors)

Landing gear doors, two on the nose gear, two on each main landing gear, are driven and kept in UP position by the landing gear itself.

All

All doors are mechanically kept in down position.

HYDRAULIC PRESSURE

- **Hydraulic pressure** required for landing gear operation is provided :
 - during normal operation, by an electro-hydraulic generator with integrated reservoir,
 - during emergency extension operation by a hand pump supplied with an auxiliary reservoir.

LANDING GEAR CONTROL (Figure 7.5.1)

Landing gear control, located on "LANDING GEAR" panel at the bottom of instrument panel left part, is accomplished by an electric selector actuated through a lever ending with a knob representing a wheel. Operation is carried out by pulling on lever and by putting it in the desired "UP" (retracted) or "DN" (extended) position. This selector controls hydraulic generator.

■ LANDING GEAR POSITION INDICATOR (Figure 7.5.1)

Landing gear position indication is accomplished by 4 warning lights :

- - 3 green indicator lights (one per landing gear),
- 1 red warning light.

NOTE :


The red warning light flashes as soon as landing gears are operating and remains continuously on in case of locking problem.

When landing gear is correctly retracted, all warning lights are OFF.

Down-locked correct indication is when there are 3 green indicator lights ON and 1 red warning light OFF on the landing gear position indicator. All other cases mean the gear is not down-locked.

In case of doubt about "landing gear down-locked" position, an independant electrical circuit provides a countercheck capability of the indication system. Pressing the "CHECK DN" switch, located on the "LANDING GEAR" panel, checks the down-locking of the gear illuminating the green indicator lights corresponding to the down-locked gear.

Indication panel is provided with two tests which allow checking green indicator lights and red warning light bulbs through two distinct electric power supplies.

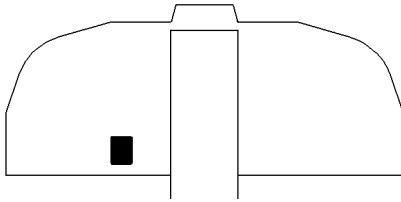

- 1) Red warning light (LDG GR)
- 2) Green indicator light (LDG GR)
- 3) Landing gear control selector
- 4) Test switch
- 5) Test knobs

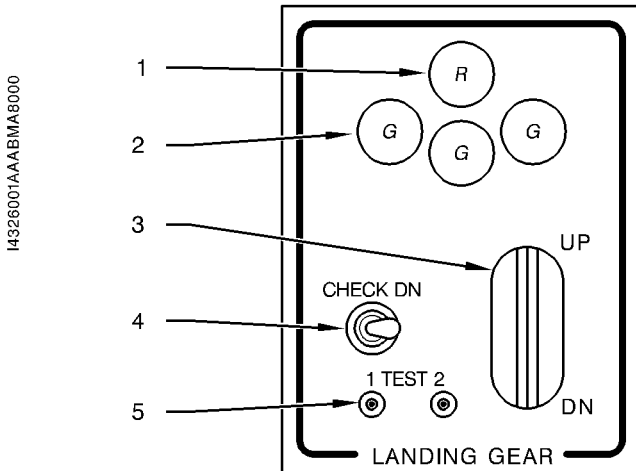


Figure 7.5.1 - CONTROL PANEL AND LANDING GEAR INDICATING

SAFETY

Safety switch (landing gear retraction)

A safety switch installed on each main landing gear prevents, by detecting shock strut compression, landing gear accidental retraction when airplane is on ground.

Landing gear horn

Landing gear horn is controlled by power lever and / or flaps. It sounds (continuous high-pitched sound) when :

- power lever is on IDLE position and landing gear is not down-locked,
- flaps are beyond "TO" position (Takeoff) and landing gear is not down-locked.

NOTE :

If one of above conditions exists and airplane is in stall configuration, the audio-warning signal becomes alternated (high-pitched sound / low-pitched sound).

Emergency landing gear extension control (Figure 7.5.2)

Emergency landing gear extension control consists of a hand pump and a by-pass selector.

This control is accessible by removing the floor panel located aft of the pedestal.

After bypass selector closing, hand pump operation sends hydraulic fluid directly into landing gear actuators ; landing gear full extension and locking requires up to 110 cycles.

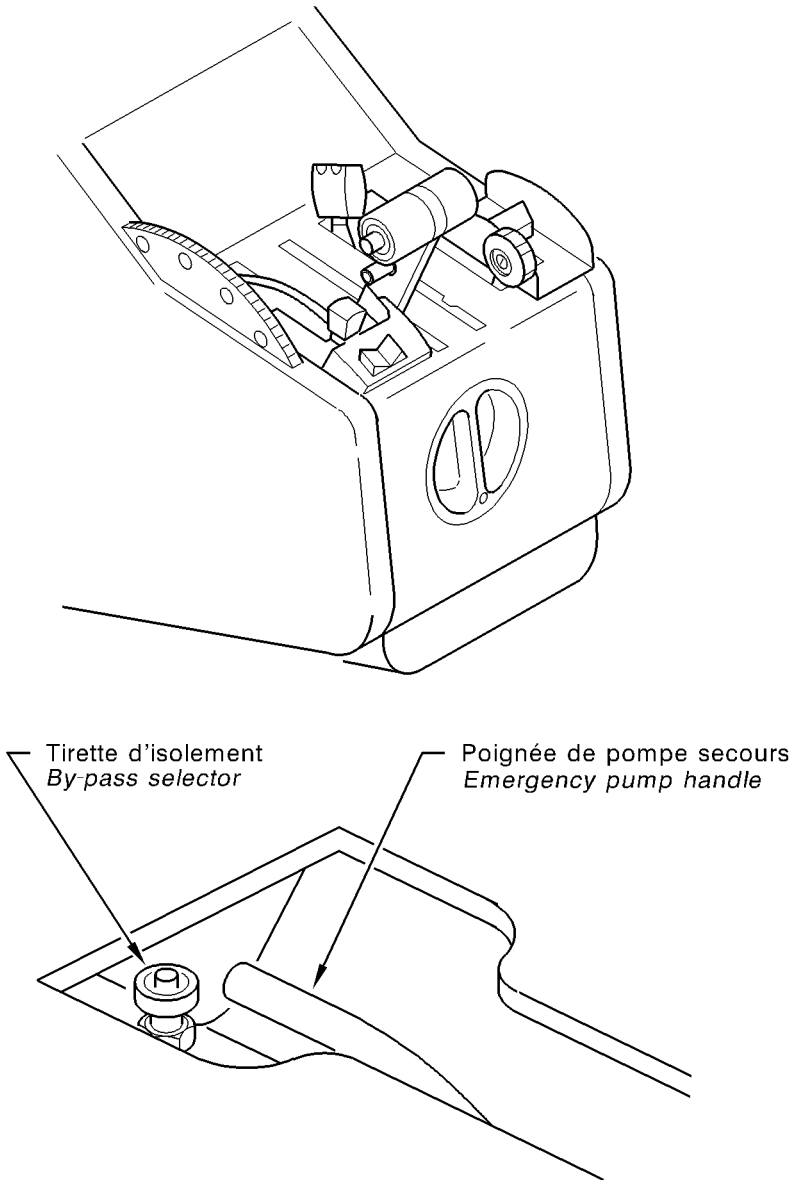


Figure 7.5.2 - EMERGENCY LANDING GEAR EXTENSION CONTROL

GROUND MANEUVERS

Nose gear steering control (Figures 7.5.3 and 7.5.4)

Nose gear steering control is combined with rudder pedals and is fitted with a shimmy damper. When one of rudder pedals is fully pushed, nose wheel swivels about 20°. Steering may be increased up to 28° by applying differential braking to each side.

Airplane may be towed by attaching a steering or towing bar on nose gear (Refer to Chapter 8.6 for operation). In that case nose wheel steering angle is limited to $\pm 28^\circ$.

Minimum turn diameter

Minimum turn diameter, Figure 7.5.4, is obtained by using nose gear steering and differential braking. Since tight turns lead to untimely tire wear, turns should be made using the largest possible turning radius.

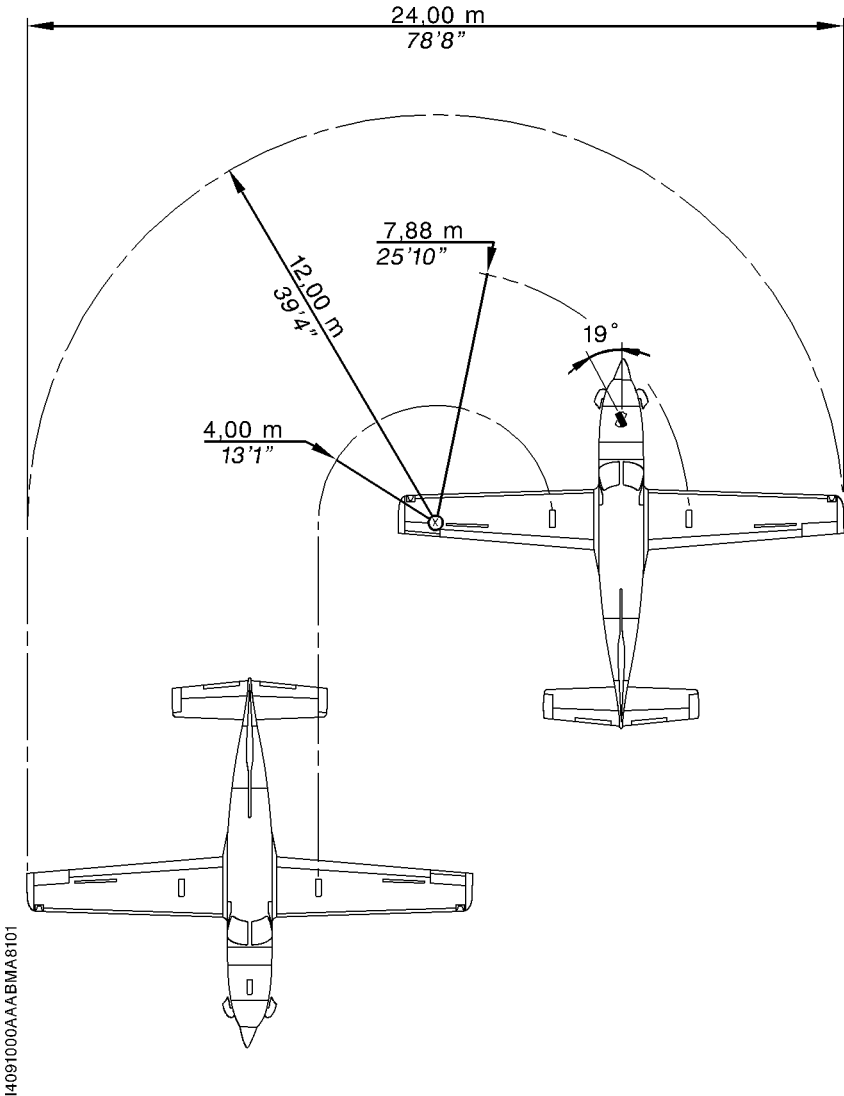


Figure 7.5.3 - MINIMUM TURN DIAMETER
(Full rudder pedals travel without
using differential braking)

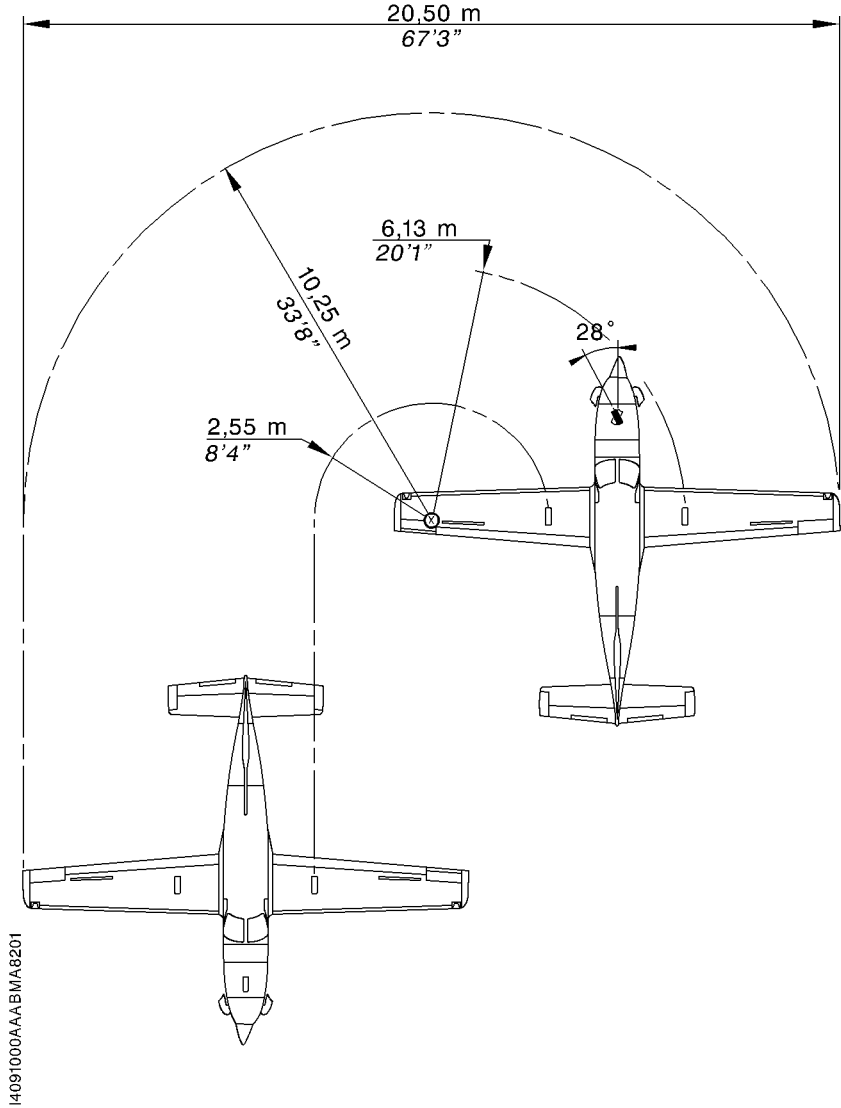


Figure 7.5.4 - MINIMUM TURN DIAMETER
(Full rudder pedals travel by
using differential braking)

BRAKE SYSTEM (Figure 7.5.5)

Airplane is equipped with a hydraulically actuated disc braking system installed on the main landing gear wheels.

Each toe brake at pilot and front passenger stations is equipped with a master cylinder which sends hydraulic pressure to the corresponding disc brake : left pedals left side brake ; right pedals ride side brake. Use differential braking to help maneuvering during taxi.

PARKING BRAKE (Figures 7.5.5 and 7.5.6)

Parking brake control consists of a control knob located on pilot's side lower instrument panel, a valve which regulates brake pressure and a "PARK BRAKE" warning light located on advisory panel.

To apply the parking brake, press on toe brake of rudder pedals and set the control knob to "ON".

The "PARK BRAKE" warning light is ON when the control knob is set to "ON".

NOTE :

Operating the parking brake knob without applying pressure on rudder pedals does not cause the wheels to be braked.

CAUTION


FAILURE TO APPLY BRAKE PRESSURE WHILE RELEASING THE PARKING BRAKE CAN DAMAGE THE PARKING BRAKE VALVE. THIS DAMAGE CAN CAUSE THE PARKING BRAKE VALVE TO NOT RELEASE THE PRESSURE.


To release the parking brake, press on toe brake of rudder pedals and set the control knob to "OFF". Check at the same time that the "PARK BRAKE" warning light is OFF.


- 1) Reservoir
- 2) Vent
- 3) R.H. station master cylinders
- 4) Parking brake control knob
- 5) Parking brake valve
- 6) Drain
- 7) Pilot's station master cylinders
- 8) L.H. brake assembly
- 9) R.H. brake assembly


Figure 7.5.5 (1/2) - BRAKE SYSTEM

Légende - Key


 Tuyauterie souple alimentation
Supply hose

 Tuyauterie flexible pression
Flexible pressure pipe

 Tuyauterie rigide pression
Rigid pressure pipe

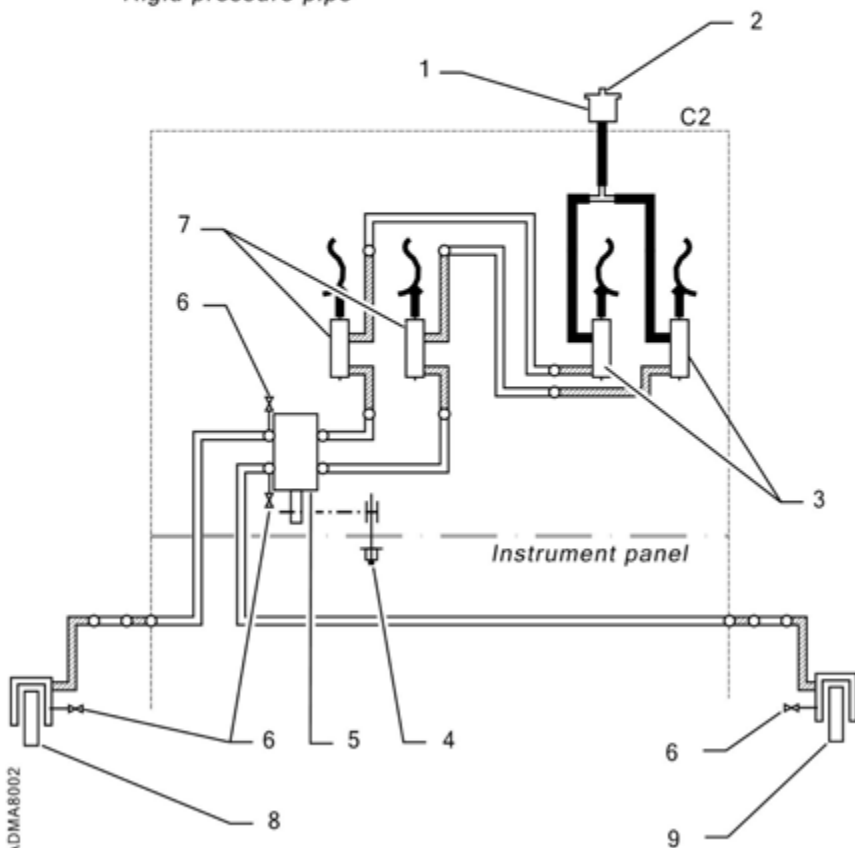

I4324000AAADMA8002

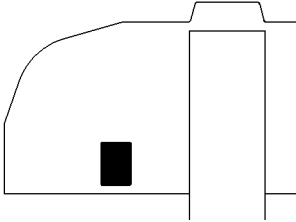

14351000AAAAMIA8202

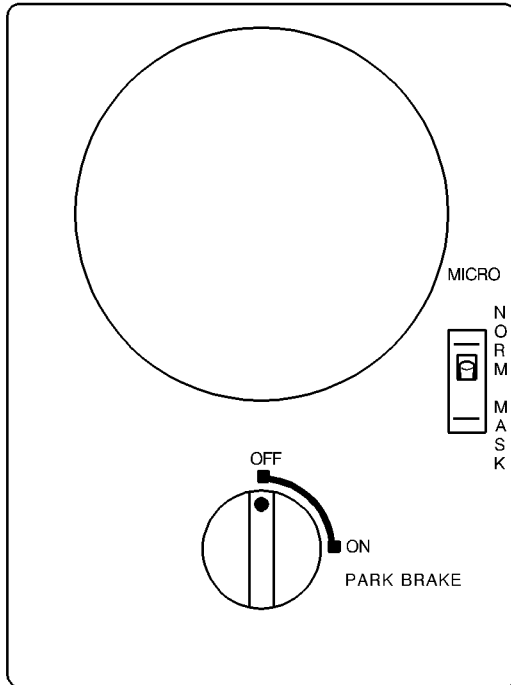


Figure 7.5.6 - PARKING BRAKE

7.6 - POWERPLANT

TURBOPROP ENGINE OPERATION (Figure 7.6.1)


The PRATT & WHITNEY CANADA turboprop engine (PT6A-66D model) is a free turbine engine rated at 850 SHP and developing a thermodynamic power of 1825 ESHP. An electrically driven device limits the power of the engine to 770 SHP (110 % TRQ - 2000 RPM) at sea level, when the flap control lever is not on "850" position (UP/TO/LDG).

Intake air enters engine through an annular casing and is then ducted toward compressor. The latter consists of four axial stages and one single centrifugal stage assembly to form a whole assembly. Compressed air and fuel are mixed and sprayed into combustion chamber by fuel nozzles. The mixture is first ignited by two spark igniter plugs, then combustion continues as a result of air-fuel mixture flow. Gases resulting from combustion expand through a series of turbines. The first one (gas generator turbine) drives compressor assembly and accessories, the two other ones (power turbines), independent from the first one, drive propeller shaft through a reduction gear box. Hot gases are evacuated through two exhaust stubs located laterally on both sides forward of engine cowling.

All engine driven accessories, except power turbine tachometer and propeller governor, are installed on accessory gearbox located rearward of engine.

- 1) Propeller governor
- 2) Exhaust stub
- 3) Axial compressors
- 4) Accessory gearbox
- 5) FCU Fuel control unit
- 6) Oil to fuel heater
- 7) Input coupling shaft
- 8) Air intake
- 9) Centrifugal impeller
- 10) Combustion chamber
- 11) Compressor turbine
- 12) Power turbine 1st stage
- 13) Power turbine 2nd stage
- 14) Power turbine shaft

Figure 7.6.1 (1/2) - POWERPLANT

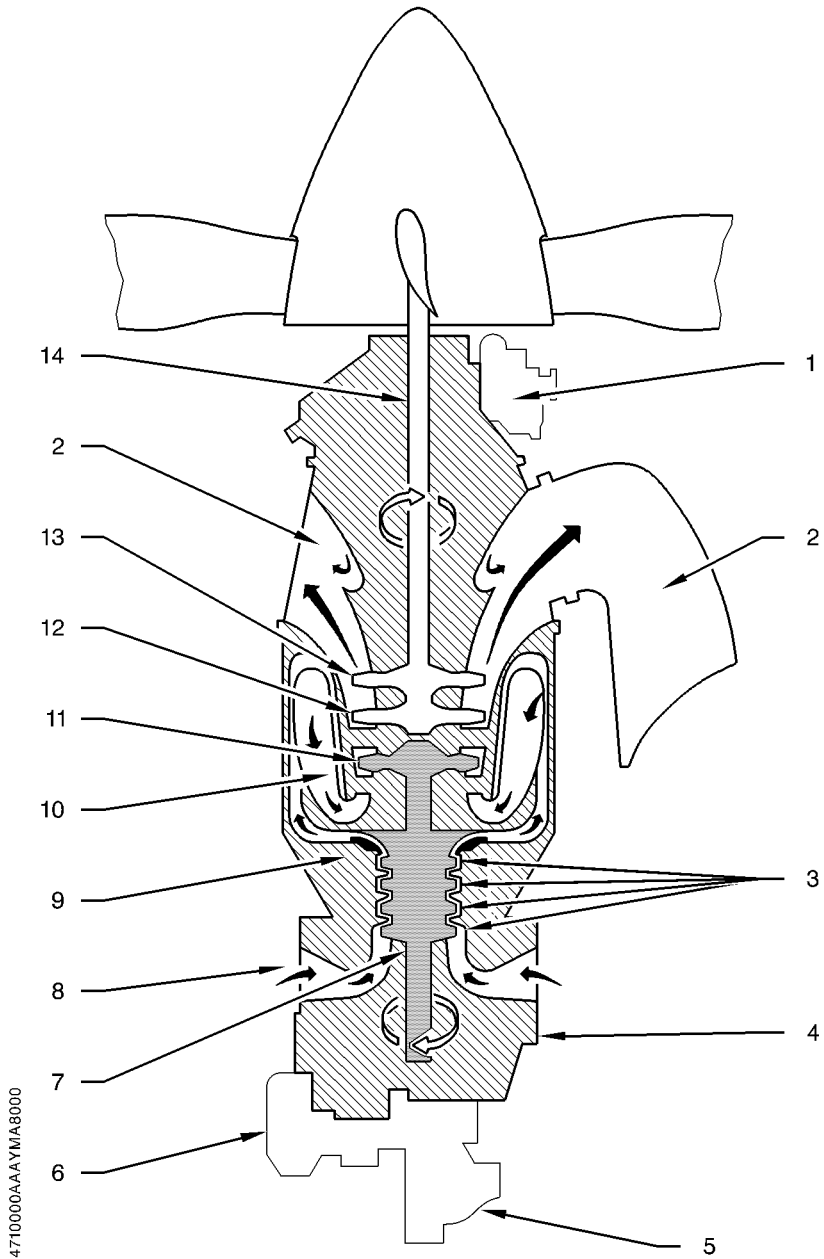

14710000AAAAYMA8000

Figure 7.6.1 (2/2) - POWERPLANT


ENGINE CONTROLS (LEVERS) (Figure 7.6.2)

Engine operation requires use of four levers located on pedestal console in cabin :

- power lever (Item 2), and its detent for reverse (Item 6)
- propeller governor lever (Item 1),
- condition lever (Item 3),
- "MAN OVRD" emergency fuel regulation lever (Item 5).

NOTE :

Thumbwheel for lever friction (Item 4)

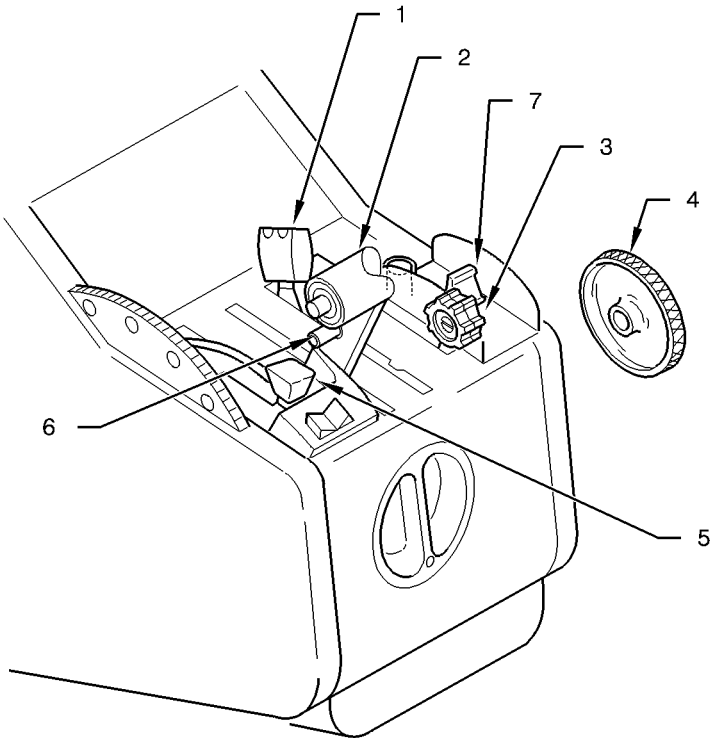

251400AAAABMA8201

Figure 7.6.2 - ENGINE CONTROLS (LEVERS)

Power control lever

The power control lever is linked to fuel control unit. It modulates engine power from full reverse to takeoff.

Engine running, the power control lever rearward displacement, past the lock using the detent, allows to control :

- the engine power in the Beta range from idle to maximum reverse,
- the Beta valve to select the propeller pitch in reverse.

Return to idle position is accomplished by pushing the power control lever forward.

CAUTION

DO NOT MOVE THE COCKPIT POWER CONTROL LEVER INTO THE PROPELLER REVERSE POSITION OR DAMAGE TO THE LINKAGE WILL RESULT.

REVERSE MAY ONLY BE SELECTED WITH ENGINE RUNNING AND PROPELLER TURNING

When engine is shutdown, there is no oil pressure in the propeller and the feathering spring locks the Beta ring and the propeller reversing interconnect linkage on the engine.

■ Moving the power control lever rearward past the idle stop may damage or break the flexible control cable.

Propeller governor lever

The propeller governor lever activates the propeller governor located forward of the engine to select and maintain any propeller speed between 1600 and 2000 RPM. This lever allows propeller feather. Changing from normal range to feather position requires "FEATH" stop by moving lever toward left side and back. The lever being locked in feather position, unlocking requires moving the lever toward left side and forward.

Condition lever

The fuel condition lever is linked to FCU. It can be positioned to cutoff, idle LO / IDLE or idle HI / IDLE. Change from idle LO / IDLE to cutoff position is only possible after having overridden the idle gate. To override idle gate, raise lever and move it rearwards. If the lever is locked in cutoff position, unlocking is performed by raising lever and moving it forward.

Post-MOD70-0256-76

The fuel condition lever has a "HI / IDLE" locked position. Change from idle "HI / IDLE" to "LO / IDLE" position is only possible after having overridden the idle gate. To override idle gate, raise lever and move it rearwards.

"MAN OVRD" emergency fuel regulation lever

Emergency fuel regulation lever is normally in locked position. In case of FCU or power lever failure, it allows setting engine power manually. Unlocking and locking are performed by pulling lever knob up.

NOTE :

The power available if the power lever fails will be limited by the position of the lever.

Lever friction (Figure 7.6.2)

A thumbwheel (Item 4) located on right side of pedestal console increases friction to avoid control slip after setting.

Maximum power mode (Figure 7.6.2)

850 SHP maximum power is selected by the pilot for climb and cruise, only with retracted flaps, by moving flap control lever (Item 7) past the lock to the 850 position.

Unlocking is performed by raising the lever and moving it forward.

ENGINE INSTRUMENTS (Figure 7.6.3)

Engine indicating panel consists of the following instruments : a torquemeter, a propeller speed indicator, an ITT indicator, a gas generator speed indicator, an oil pressure and temperature indicator and a fuel flow totalizer/computer.

Torquemeter (TRQ) indicates engine torque expressed in percent (%).

NOTE :

Engine torque is also checked by a red warning light labelled "TRQ" located on advisory panel.

Propeller speed indicator (PROP) indicates propeller speed in RPM.

ITT indicator indicates gas temperature between generator turbine and power turbine by a dual display (pointer and digital indication). Gages are graduated in "°C".

NOTE :

Interturbine temperature check is also assured by the "ITT" red warning light that illuminates on advisory panel when interturbine temperature exceeds 850 °C.

Gas generator speed indicator (Ng) indicates generator rotation speed expressed in percent (%).

Oil pressure and temperature indicator (ENG OIL) is a dual indicator graduated in "°C" and in PSI.

NOTE :

Each instrument is provided with marks indicating utilization limits. Lubrication system monitoring is ensured by "OIL PRESS" warning light, which illuminates on advisory panel when engine oil pressure is too low.

Fuel flow totalizer/computer (FLOW) is a digital display instrument which indicates :

- quantity of fuel consumed since beginning of flight,
- instantaneous consumption,
- remaining flight time depending on fuel quantity.

"PROP O' SPEED TEST" push-button allows checking the overspeed valve for correct operation.

"ITT TEST" button allows checking the ITT indicator for correct operation :

- digital display **"1888"**
- the pointer abuts against maximum limit
- the "ITT" indicator light illuminates on the advisory panel.

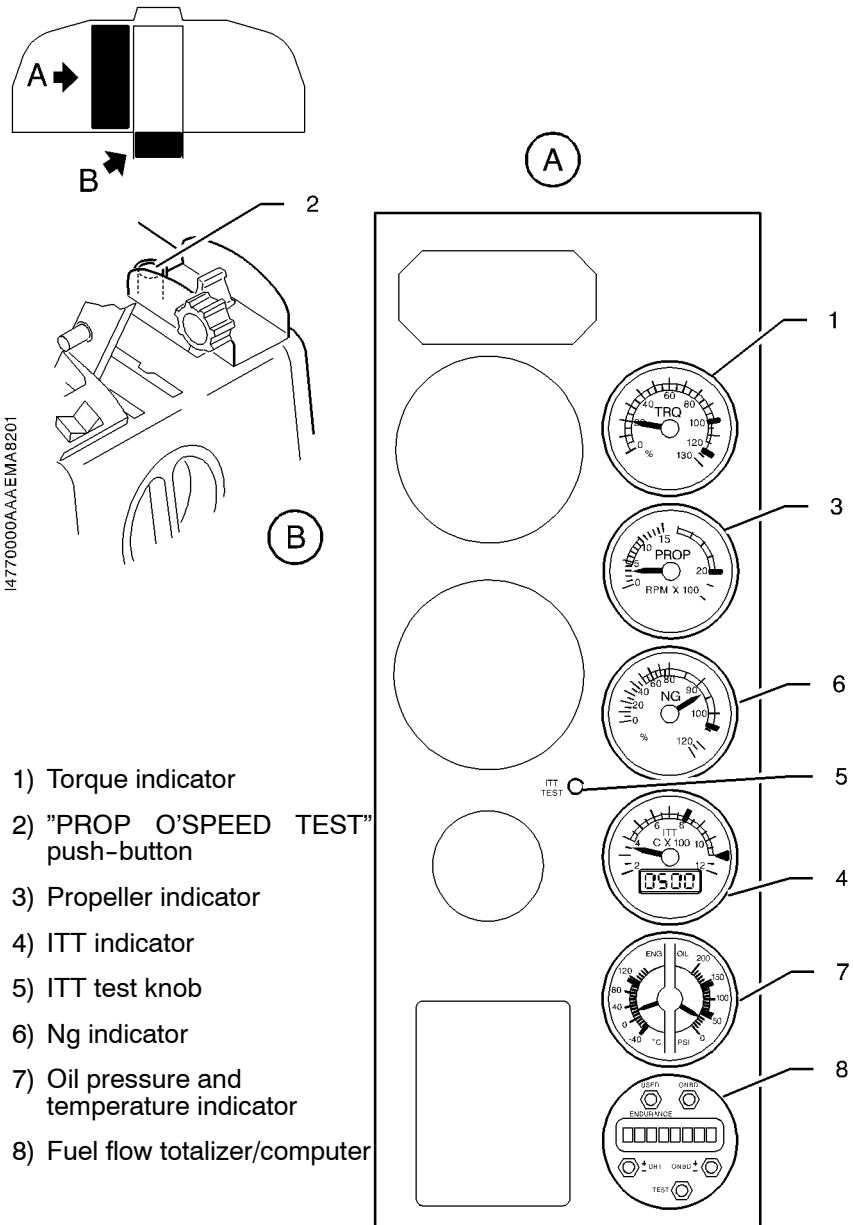


Figure 7.6.3 - ENGINE INSTRUMENTS

ENGINE LUBRICATION

Engine oil is in a tank incorporated into the powerplant. It ensures lubrication and engine cooling. A cooler located on left side in engine compartment maintains oil temperature within limits. Oil flow into the cooler is metered by a thermostatic valve. Engine oil also supplies propeller governor and engine torquemeter.

Lubrication system content, cooler included, is 12.7 quarts (12 litres). A graduated dipstick allows checking oil quantity in system. A visual oil sight glass, located on engine left side, allows a rapid checking of oil level.

NOTE :

For checking and oil filling-up, refer to Section 8.



ENGINE STARTING (Figure 7.6.4)

Ignition function

Ignition system consists of an ignition unit and two spark igniter plugs in powerplant, a three-position "IGNITION" switch "OFF - AUTO - ON" located on "ENGINE START" panel at upper panel and "IGNITION" warning light located on advisory panel.

Ignition unit supplies, from 28-Volt source, high voltage current necessary to spark igniter plugs. When "IGNITION" switch is positioned to "AUTO", ignition unit supply is ensured as long as "STARTER" switch located on left side of "IGNITION" switch is maintained "ON" : this is normal procedure for ground starting or flight air start with starter.

"ON" position for "IGNITION" switch is used in case of flight air start without starter. In this configuration, ignition unit is supplied permanently. In any case, "IGNITION" warning light illuminates as long as ignition unit is supplied.

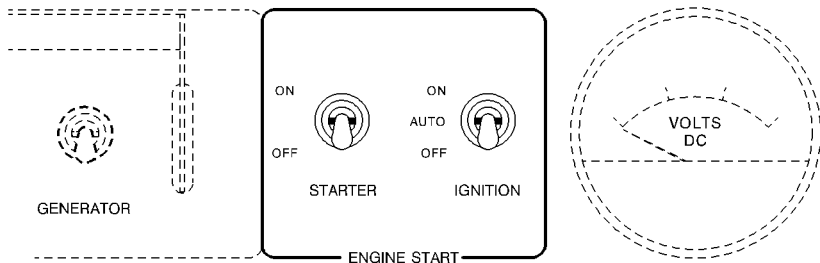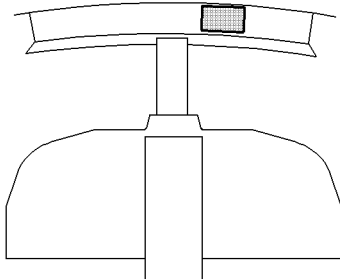

14240000AAAEMA8000

Figure 7.6.4 - ENGINE STARTING

Starter function

Starting system consists of "STARTER" switch located on "ENGINE START" panel, starter generator, "STARTER" warning light in advisory panel and ignition circuit (Refer to Paragraph "Ignition function").

Starting procedure is manual. Setting "STARTER" switch to "ON" connects the starter generator which drives powerplant. "STARTER" warning light illuminates indicating that the starter generator is operating.

WARNING

ENGINE STARTING MUST BE PERFORMED BY QUALIFIED PERSONNEL AND BY FOLLOWING PROCEDURES AND PARAMETERS DESCRIBED IN SECTION 4 "NORMAL PROCEDURES"

ENGINE AIR INLET

Engine air inlet is located at front lower section of engine cowling. Air inlet port is protected against icing by a hot air flux provided by engine. Air is driven throughout a duct in engine casing before entering engine through a protective screen. An inertial separator system inside the air duct protects the engine from ingesting dense particles (water, ice, fine gravels, sand).

Separator consists of two movable vanes. During normal operation, air is conducted directly towards engine air inlet. To separate particles suspended in the air, vanes are positioned to force engine induction air to execute a sharp turn : under the effect of centrifugal force denser particles separate from the air and are discharged overboard through two apertures located under engine cowling.

Operation of inertial separator vanes is electrically controlled by "INERT SEP" inverter located on "DE-ICE SYSTEM" panel. When inverter is set to ON, an electric actuator activates vanes ; "INERT SEP" warning light on advisory panel illuminates when vanes have reached their maximum deflection and remains illuminated as long as switch remains ON. Full deflection takes about 30 seconds.

EXHAUST SYSTEM

Exhaust gases are evacuated through exhaust stubs located on sides of engine cowlings.

ENGINE ACCESSORIES

All engine driven accessories [except power turbine tacho-generator (Np) and propeller governor] are installed on accessory gearbox located rearwards of engine.

Oil pump

Oil pump is a self-controlled gear pump located at the bottom of oil casing.

Fuel high pressure pump (HP)

Fuel high pressure pump is installed on accessory gearbox. It supplies fuel nozzles, flow being controlled by fuel regulator (FCU). Fuel provided by engine driven main pump (mechanical) enters high pressure pump through a filter, then it is discharged under pressure into fuel regulator (FCU) through a second filter. In case of contamination of this second filter, a by-pass valve allows fuel to go directly from high pressure pump to the regulator.

Compressor turbine tacho-generator (Ng)

Compressor turbine tacho-generator (Ng) is attached on accessory gearbox. It supplies a voltage which feeds gas generator speed indicator.

Power turbine tacho-generator (Np)

Power turbine tacho-generator is attached on the right side of the reduction gearbox. It supplies a voltage which feeds propeller speed indicator.

Torque transmitter

Torque transmitter is attached on the torque limiter, it measures torque produced by the power turbine by comparing oil pressures (reduction gear and power turbine) and converts pressure difference into a voltage which is applied to torquemeter.

Propeller overspeed limiter

Propeller overspeed limiter is installed on left side of the reduction gear box. It prevents a propeller overspeed in case of main propeller governor failure.

Propeller overspeed limiter is equipped with a test solenoïd which allows performing ground tests by arming limiter under normal overspeed power.

"PROP O'SPEED TEST" propeller test push-button (Figure 7.6.3) of overspeed limiter is located near flap control lever on the pedestal console.

Torque limiter

Torque limiter is located on right side of the reduction gear box. It is rated to limit engine torque to 110 % at sea level. The torque limiter is deactivated when the flap control lever is on "850" position.

PROPELLER

Airplane is equipped with an all-metal, four-bladed, constant-speed and full-feathering propeller.

Regulation

Propeller governor located on engine maintains rotation speed selected by pilot with propeller governor lever. Regulation is obtained through propeller blade pitch variation : counterweights drive propeller blades toward high pitch (low RPM) whereas oil pressure delivered by governor drives back blades toward low pitch (high RPM).

Propeller governor allows feathering either by voluntary pilot action via the propeller governor lever or automatically in case of engine failure or shutdown.

Propeller reverse pitch allows reduced taxiing speed or landing roll. Change from idle to reverse position is performed with power lever (Refer to Paragraph "ENGINE CONTROLS").

Propeller overspeed regulator tests (Figure 7.6.3)

"PROP O'SPEED TEST" push-button located on pedestal console near flap control lever is used on ground to check proper operation of propeller overspeed regulator. This push-button activates a solenoid, attached on propeller overspeed regulator, which limits propeller rotation speed when power lever is positioned forwards.

INTENTIONALLY LEFT BLANK

7.7 - FUEL SYSTEM (Figure 7.7.1)

The fuel system comprises fuel tanks, fuel unit, selectors (manual and automatic), electric and mechanical boost pumps, engine fuel system, gaging installation, monitoring installation and drains.

FUEL TANKS

Fuel tanks are formed by sealed casings in each wing. Each fuel tank comprises a filling port located at the end of wing upper surface, two drain valves located at the lower surface (one near main landing gear, at trailing edge side, the second one near wing root side, at leading edge), a vent valve located on the lower surface, a suction strainer and three level gages.

FUEL UNIT


The fuel unit combines shut-off valve, tank selector and filter functions. It is connected to the manual selector through a mechanical control. The fuel filter is located in a bowl at the lower part of the unit. It is fitted with a by-pass valve, a clogging indicator and a drain valve.

TANK MANUAL SELECTOR (Figure 7.7.2)

The tank manual selector is located on the pedestal rear face. It allows selecting the tank ("R" or "L") to be used and setting unit to "OFF". To change from "L" position to "OFF" position, turn the selector clockwise ("L" → "R" → "OFF") ; change from "R" position to "OFF" position requires a voluntary action from the pilot (pull and turn). The "pull and turn" maneuver prevents involuntary operation. When the unit is set to "OFF", the "FUEL OFF" warning light on advisory panel remains illuminated.

- 1) Flow divider
- 2) Flowmeter
- 3) Collector tank
- 4) Fuel regulator
- 5) High pressure pump (HP)
- 6) Oil to fuel heater
- 7) Low pressure switch
- 8) Pressure transmitter
- 9) Fuel jet
- 10) Main mechanical boost pump
- 11) Electric boost pump
- 12) Fuel filter
- 13) Filter clogging by-pass valve
- 14) Filter clogging indicator
- 15) Fuel unit
- 16) Filter drain
- 17) Fuel return pipe
- 18) Filling port
- 19) NACA scoop
- 20) Tank vent valve
- 21) Fuel level gages
- 22) Tank drain valve
- 23) Check-valve
- 24) Low level detector
- 25) Suction strainer
- 26) Fuel pressure indicator
- 27) Fuel gage indicator
- 28) Sequencer
- 29) Advisory panel
- 30) Fuel flow totalizer/computer

Figure 7.7.1 (1/2) - FUEL SYSTEM

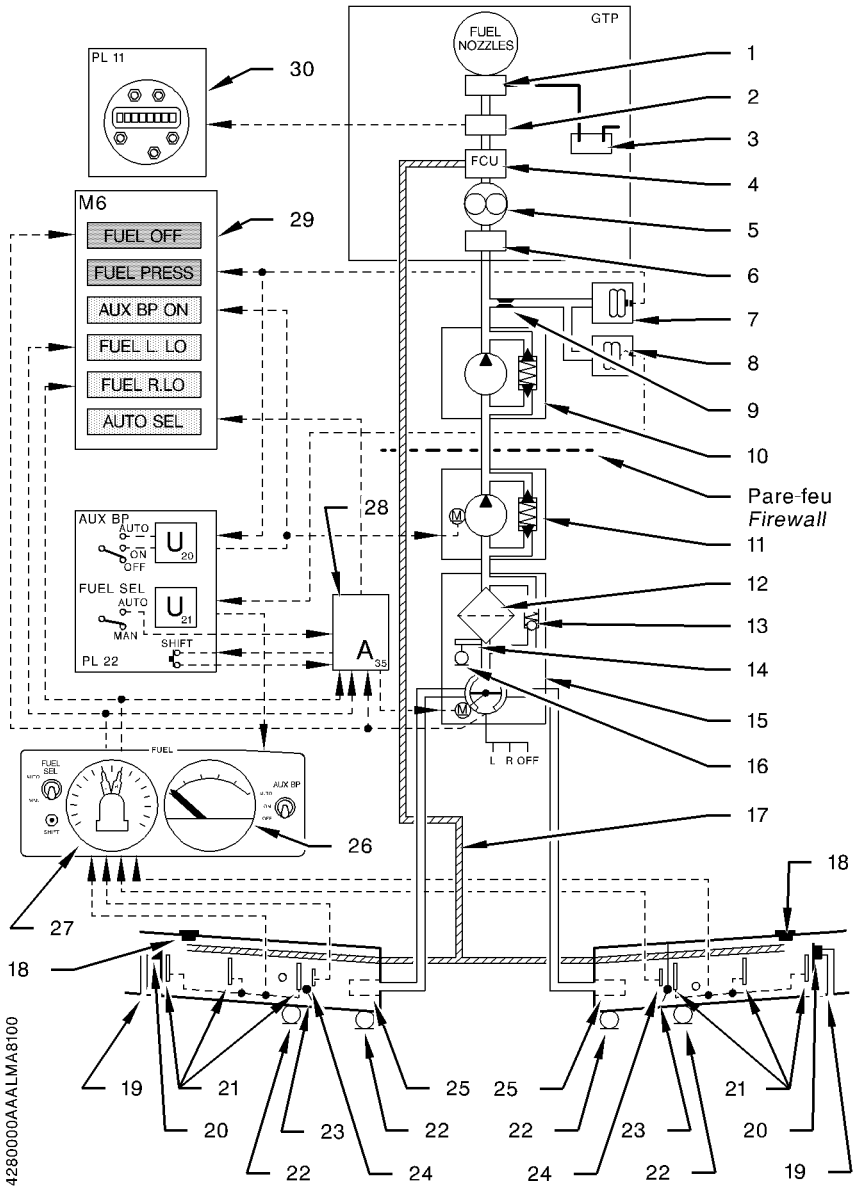

14280000AALLMA8100

Figure 7.7.1 (2/2) - FUEL SYSTEM

AUTOMATIC TANK SELECTOR (Figures 7.7.2 and 7.7.3)

Automatic tank selection allows, without pilot's intervention, feeding the engine from one tank to the other in predetermined sequences. These sequences depend on airplane configuration (ground, in-flight, fuel low level warning lights illuminated).

Automatic tank selection system comprises an electronic box (sequencer), an actuator attached on fuel unit, "FUEL SEL" two-position selector ("AUTO", "MAN") and "SHIFT" knob located on "FUEL" panel as well as "AUTO SEL" warning light located on advisory panel.

To operate the automatic selector, set "FUEL SEL" switch to "AUTO" position and manual selector to "R" or "L".

Selector operation

When the system is operated, "AUTO SEL" warning light goes out ; the sequencer chooses a tank ("R" or "L") and through the actuator, positions the fuel unit selector on the selected tank. The sequencer controls the time during which the selected tank will operate. This time varies, depending on airplane conditions.

Airplane on ground : tank is changed every minute and 15 seconds.

Pre-MOD70-0402-28

Airplane in flight : tank is changed every ten minutes, as long as both "FUEL L. LO" or "FUEL R. LO" low level warning lights are not illuminated. When the first low level warning light illuminates, the sequencer immediately selects the other tank. The selected tank will operate until the second low level warning light illuminates. When both low level warning lights are illuminated, the sequencer changes tanks every minute and 15 seconds.

Post-MOD70-0402-28

Airplane in flight : tank is changed every five minutes, as long as both "FUEL L. LO" or "FUEL R. LO" low level warning lights are not illuminated. When the first low level warning light illuminates, the sequencer immediately selects the other tank. The selected tank will operate until the second low level warning light illuminates. When both low level warning lights are illuminated, the sequencer changes tanks every minute and 15 seconds.

■ All**NOTE :**

The manual selector is driven by the fuel unit and is positioned on "R" or "L" mark corresponding to the tank selected by the sequencer. Therefore, the pilot continuously knows the tank which is operating.

Test for system proper operation

"SHIFT" push-knob allows the pilot to test system proper operation anytime.

When the system operates, the fuel tank is changed when "SHIFT" push-knob is pressed once.

If airplane is on ground or in flight, low level warning lights not illuminated, the new selected tank remains operating and a new sequence is initiated.

NOTE :

This procedure allows the pilot to preferably choose the tank from which he wants to take fuel.


In all cases, proper system operation is indicated by rotation of the manual selector.

Setting "FUEL SEL" switch to "MAN" position or setting manual selector to "OFF" position leads to system de-activating and illumination of "AUTO SEL" warning light on advisory panel. "AUTO SEL" warning light also illuminates when order given by the sequencer has not been executed after 12 seconds.

ELECTRIC BOOST PUMP ("AUX BP")

Electric boost pump is an auxiliary pump located between fuel unit and main mechanical boost pump. It is controlled through "AUX BP" switch located on "FUEL" panel. This switch allows stopping or selecting the two pump operating modes :

- when set to "ON", electric boost pump operates permanently
- when set to "AUTO", electric boost pump is automatically operated in case of fuel pressure drop at the mechanical boost pump outlet.

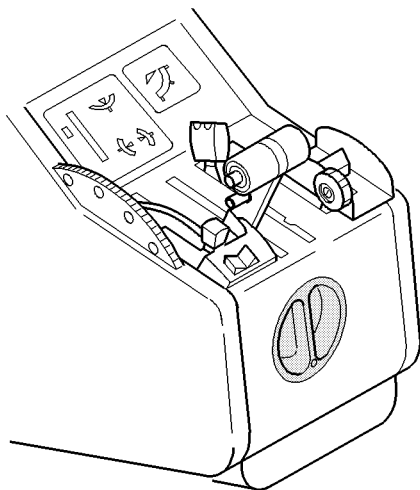

14282002AAAAGMIA8001


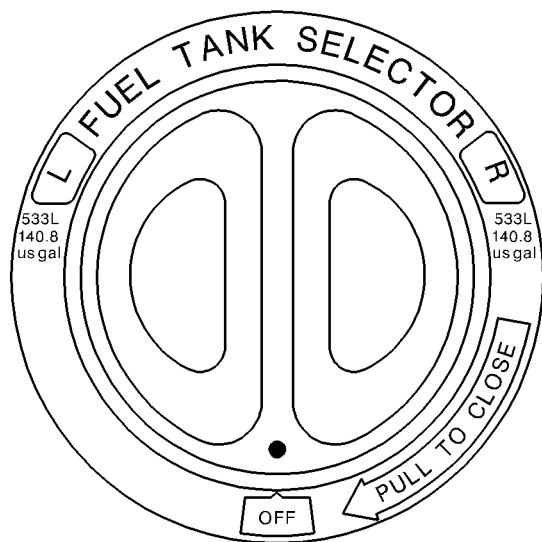



Figure 7.7.2 - MANUAL SELECTOR OF FUEL TANKS

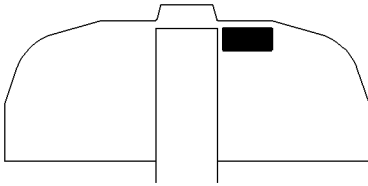

Indicateur quantité
réservoir gauche
*L.H. fuel quantity
indicator*

Indicateur quantité réservoir droit
*R.H. fuel quantity
indicator*

Indicateur pression
carburant
*Fuel pressure
indicator*

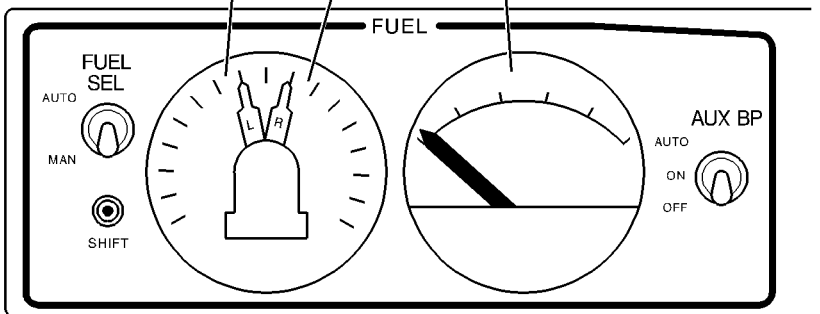

I4280001AAAA MA8100

Figure 7.7.3 - FUEL CONTROL PANEL

MAIN MECHANICAL BOOST PUMP

The mechanical boost pump is attached to accessory gearbox and supplies fuel necessary for engine operation.

ENGINE FUEL SYSTEM

The engine fuel system consists of a fuel regulator, pumps, filters, a fuel divider and fuel nozzles. The system provides the fuel flow necessary to satisfy the engine power and rating needs.

The fuel coming from airplane system goes through a heater which is automatically controlled by a thermostatic valve.

FUEL GAGING INSTALLATION

Fuel gaging installation is a capacitive type and consists of a dual indicator graduated in us gallons (Figure 7.7.3) and fuel level gages. Three fuel level gages are installed in each tank. The wing root side fuel level gage is equipped with a low level detector which leads to "FUEL L. LO" or "FUEL R. LO" warning light illumination when usable fuel quantity remaining in the concerned fuel tank is under about 9.1 us gal (34.6 Litres).

FUEL FLOW TOTALIZER/COMPUTER

Located at the lower part of L.H. instrument panel, the fuel flow totalizer/computer helps the pilot to control fuel during one or several flights. Fuel flow totalizer/computer operation is described in manufacturer technical data.

CAUTION

**THE FUEL FLOW TOTALIZER/COMPUTER NEITHER REPLACES
FUEL GAGES NOR FUEL PRESSURE INDICATOR. THESE
INSTRUMENTS SHALL BE CONSULTED FIRST FOR FLIGHT
MANAGEMENT.**

FUEL MONITORING INSTALLATION (Figure 7.7.3)

Monitoring installation comprises pressure indicator and warning lights grouped on advisory panel.

Pressure indicator is attached on "FUEL" panel ; it indicates fuel pressure at main booster pump outlet.

Indications provided by illumination of warning lights on advisory panel :

- "FUEL OFF" : Fuel tank selector set to "OFF"
- "FUEL PRESS" : Fuel pressure at mechanic pump outlet under 10 psi \pm 2 psi
- "AUX BP ON" : Electric boost pump operating
- "FUEL L. LO" : Fuel quantity in L.H. fuel tank under about 9.1 us gal (34.6 Litres) of usable fuel
- "FUEL R. LO" : Fuel quantity in R.H. fuel tank under about 9.1 us gal (34.6 Litres) of usable fuel
- "AUTO SEL" : Sequencer inactive or operating defect

FUEL SYSTEM DRAINING AND CLOGGING INDICATOR (Figure 7.7.4)

The fuel system comprises five drain points, a drain on the filter bowl, two drain valves on each tank, located on wing lower surface, one at wing root and the other past main landing gear well.

These drains allow draining water or sediments contained in fuel.

Fuel tank drain valves are provided with a slot which allows opening them with a screwdriver.

Fuel system draining shall be performed prior to the first flight of the day and after each tank refueling, using a sampler to pick off fuel at the two drain valves of each tank and at the filter vent valve.


A red filter bypass flag on the fuel unit and visible from outside, when an inspection door located on L.H. side under front baggage compartment is open, indicates filter clogging. A push-button, adjacent to the inspection door, controls the illumination of a light provided to improve visibility of the clogging indicator. This indicator shall be observed during preflight inspection.

NOTE :

When filter gets clogged in flight, the filter is by-passed in order not to deprive power plant from fuel. The power plant is then supplied with non-filtered fuel.

- | | |
|------------------------|-----------------|
| 1) Lighting switch | 5) Filter drain |
| 2) Mirror door | 6) Tank drain |
| 3) Clogging indicator | 7) Drain bowl |
| 4) Central access door | |

Figure 7.7.4 (1/2) – FUEL SYSTEM DRAINING POINTS AND
CLOGGING INDICATOR

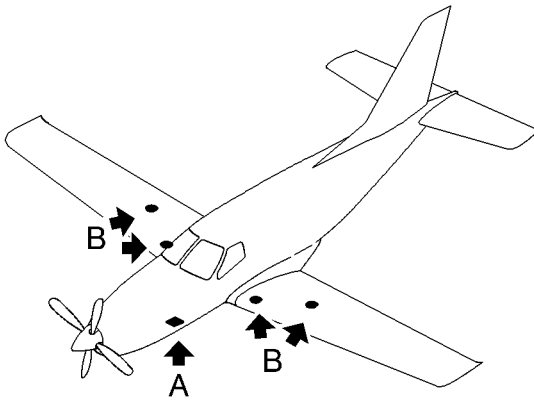

I4281001AAABMA8102

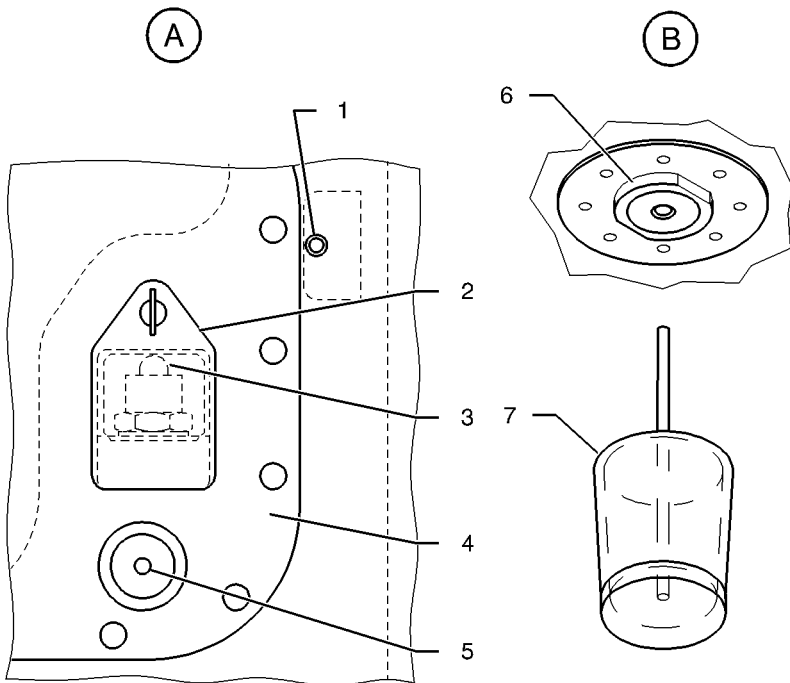


Figure 7.7.4 (2/2) - FUEL SYSTEM DRAINING POINTS AND CLOGGING INDICATOR

INTENTIONALLY LEFT BLANK

7.8 - ELECTRICAL SYSTEM (Figures 7.8.1 and 7.8.5)

The airplane is fitted with a direct-current electrical system rated to 28 volts with negative pole at ground.

Airplane mains supply is obtained from various power supplies :

- an engine driven starter generator
- a stand-by generator driven by the engine through a belt
- a battery located in engine compartment
- a ground power receptacle located in engine compartment, on L.H. side. It is accessible from outside through a door.

Connection relays, main bus bar, generator regulation and protection systems and control logic systems are grouped in electrical power center attached to front baggage compartment upper section.

Indicating and checking warning lights are grouped on advisory panel.

STARTER GENERATOR

The starter generator is the main electrical power source. It only performs its generator function when starting sequence is completed.

Generator connection with main bus bar is controlled through "GENERATOR" selector set to "MAIN" position. It will be effective when connection conditions are met. Generator connection is indicated by "MAIN GEN" warning light extinguishing.

STAND-BY GENERATOR

Stand-by generator supplies a 28-volt stand-by direct current which may be used in case of main generator failure.

Generator connection with main bus bar is controlled through "GENERATOR" selector set to "ST-BY", it will be effective when connection conditions are met.

NOTE :

In order to prevent possible errors during flight, access to "ST-BY" position requires a double action from the pilot (pull to unlock).

BATTERY

The battery provides the power required for starting when no ground power unit is available and is a power supply source when engine driven generators are stopped.

The battery is always connected to "BAT BUS" bus bar except when CRASH lever is pulled down.

Battery connection to main bus bar is controlled through "SOURCE" selector set to "BAT" position.

"BAT OFF" warning light is illuminated when battery is isolated from the main bus and when main bus is supplied through another source.

GROUND POWER RECEPTACLE

The ground power receptacle allows connection to a ground power unit. Ground power receptacle connection with main bus bar is controlled through "SOURCE" selector when set to "GPU" position, it will be effective when connection conditions are met.

NOTE :

Ground power receptacle has priority on other generators.

Ground power receptacle door opening is indicated by "GPU" warning light illumination.

INTENTIONALLY LEFT BLANK

DISTRIBUTION

Airplane electrical systems are connected to "BUS" bars and protected by circuit breakers located on L.H. side panel, near the pilot (See Figure 7.8.3) or on R.H. side panel, if "pilot" door installed (See Figure 7.8.3A). In case of overload of a system, the circuit breaker triggers and switches the system off. Allow it to cool for about three minutes, then the circuit breaker may be reengaged (pressed down). Some systems are equipped with "pull off" type circuit breakers which allow the pilot to insulate, if necessary, the corresponding equipment.

"BUS 1", "BUS 2" and "BUS 3" bus bars are directly connected to main bus bar and protected by fuses located in electrical power center.

"ESS 1" and "ESS 2" essential bus bars are connected to main bus bar through "ESS BUS TIE" selector set to "NORM" position. "ESS BUS TIE" selector is attached to circuit breaker panel, "NORM" position is protected and locked by a cover. Common power supply to both essential bus bars is protected by a fuse, each bar being individually protected by a circuit breaker.

"BUS BAT" bar is directly connected to the battery, it is protected by a fuse located in electrical power center.

NOTE :

The electrical distribution of bus bars is described in Figure 7.8.2.

EMERGENCY USE

With both generators de-activated in flight, it is still possible to use battery power to supply all airplane systems maintaining "SOURCE" selector on "BAT" position.


In order to save battery power, it is possible to shed the charges which are not essential for flight safety, for that set :

- "ESS BUS TIE" selector to "EMER" position

In this configuration, only "ESS 1", "ESS 2" and "BAT BUS" bars are supplied.

NOTE :

Supplying "BUS 1", "BUS 2" and "BUS 3" bars is always possible, resetting temporarily "ESS BUS TIE" selector to "NORM" position.

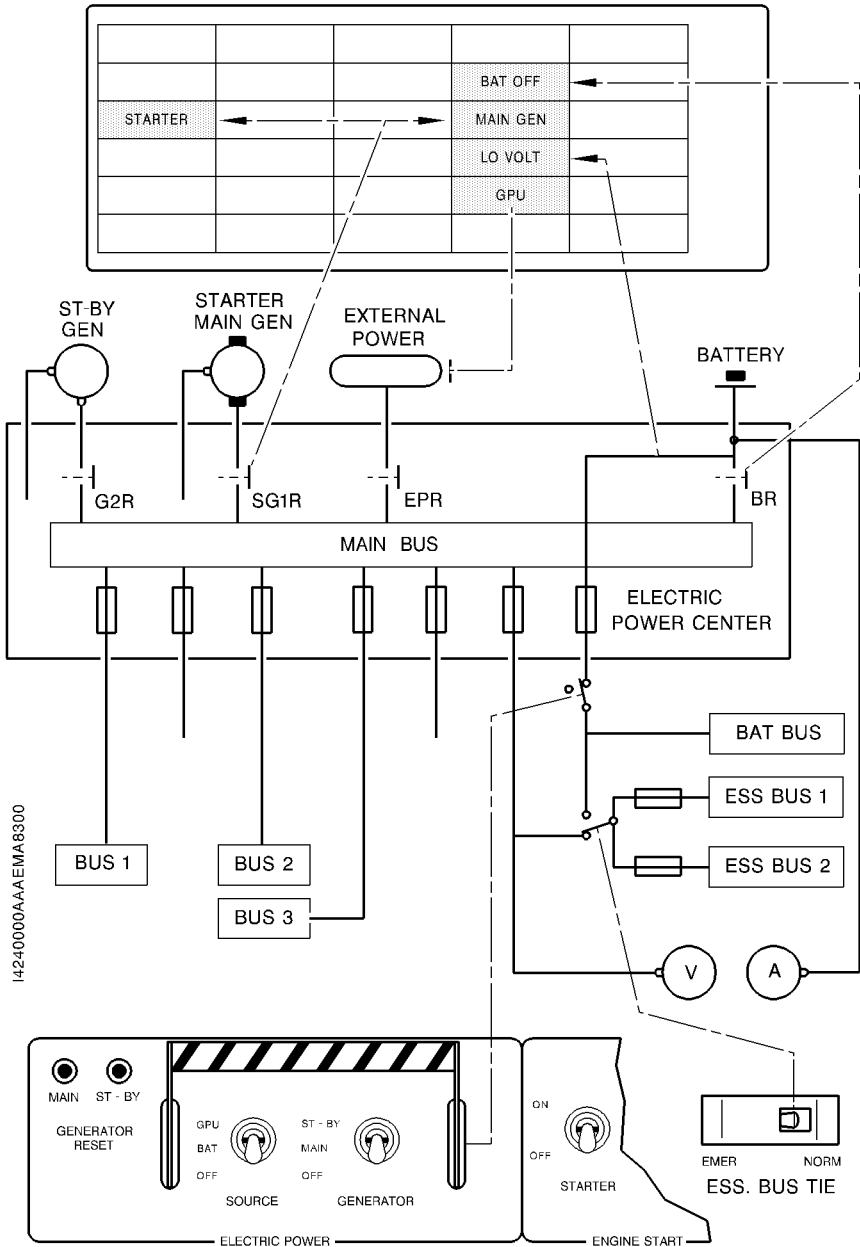

1424000AAA EIMA 8300

Figure 7.8.1 - ELECTRICAL DIAGRAM


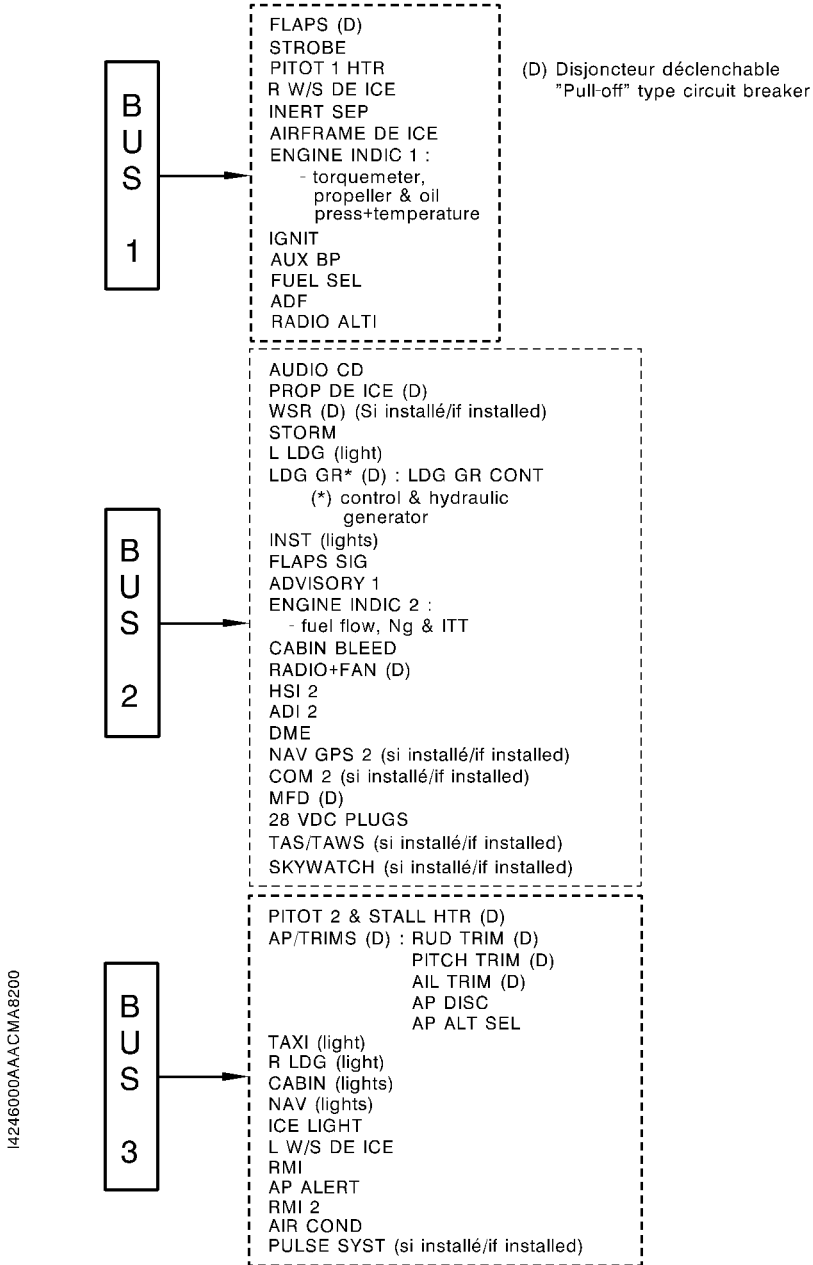


Figure 7.8.2 (1/2) - ELECTRICAL DISTRIBUTION OF BUS BARS

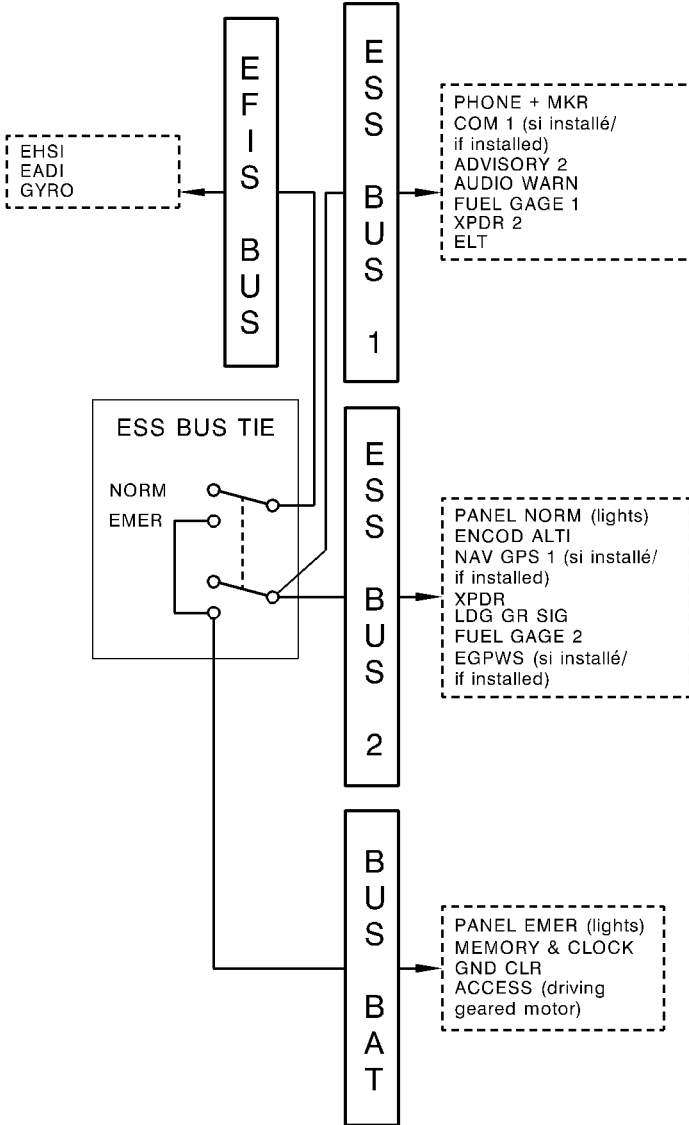


I4246000AAAACMA8300



Figure 7.8.2 (2/2) - ELECTRICAL DISTRIBUTION OF BUS BARS

AP / TRIMS	AP & trims general protec.	FUEL GAGE 1	L.H gage protection
RUD TRIM	Rudder trim protection	FUEL GAGE 2	R.H gage protection
AIL TRIM	Aileron trim protection	FUEL SEL	Timer protection
PITCH TRIM	Pitch trim protection	AUX BP	Fuel pump protection
FLAPS	Flaps protection	ENGINE INDIC 1	Powerplant cont. protec. : Oil temp. & pres., torque, propeller
LDG GR	Landing gear general protec.	ENGINE INDIC 2	Powerplant cont. protection : Ng, flowmeter & ITT
ESS BUS TIE	Essential bus NORM & EMER switch	IGNIT	Powerplant ignit. protection
PITOT 1 HTR	Pitot 1 deicing protection	CABIN BLEED	Cabin air bleed valve protec.
PITOT 2 & STALL HTR	Pitot 2 and stall warning deicing protection	AIR COND	Cabin ventilation and vapor cycle cooling system protec.
INERT SEP	Inertial separator protection	MEMORY & CLOCK ACCESS	Stop watch and flowmeter protec. Cabin lightings & access door closing geared motor protec.
LW/S DE ICE	L.H. windshield deicing protection	EHSI	EHSI protection
RW/S DE ICE	R.H. windshield deicing protection	EADI	EADI protection
PROP DE ICE	Propeller deicing protection	GYRO	EFIS static converter protection
AIRFRAME DE ICE	Empennage and wing leading edges deicing protection	RMI	RMI 1 protection
AUDIO CD	CD reader protection (if installed)	ADI 2	ADI No. 2 protection
FLAPS SIG	Flaps signalization protec.	RMI 2	RMI 2 protection
LDG GR CONT	Landing gear control protection	HSI 2	HSI 2 protection
LDG GR SIG	Landing gear signalization protection	ELT	Emergency beacon protection
AP DISC	Trim and AP cont. protection	28VDC PLUGS	28 volts plugs protection
AP ALERT	Trim and AP audio signalization protection	PHONE+MKR	Reception line and loudspeaker + MKR protection
AP ALT SEL	Altitude selector protection	NAV GPS 1	GARMIN NAV GPS 1 protec. (if installed)
ESS BUS 1	Essential bus 1 circuit protection	GND CLR	Ground communication protec.
ESS BUS 2	Essential bus 2 circuit protection	XPDR 2	Transponder 2 protection
ADVISORY 1	Visual warnings protection	NAV GPS 2	GARMIN NAV GPS 2 protec. (if installed)
ADVISORY 2	Visual warnings protection	ENCOD ALTI	Encoding altimeter protection
AUDIO WARN	Audio warnings protection	XPDR	Transponder 1 protection
L LDG TAXI	L.H. landing light protection	RADIO ALTI	RADIO ALTI protection
R LDG NAV	R.H. landing light protection	RADIO + FAN	Radio ventilation + radio master protection
STROBE	Strobe lights protection	ADF	ADF protection
ICE	L.H. wing leading edge light. and lighting test protection	DME	DME protection
LIGHT PULSE	Pulse lite system (if installed) protection	TAS/TAWS	TAS/TAWS protec. (if installed)
SYST INSTR	Instruments lighting protec.	STORM	Stormscope protection
PANEL NORM	Instrument panel normal lighting protection	WSR	Weather radar (if installed) protection
PANEL EMER	Instrument panel emergency lighting protection	MFD	Multi-function display protec.
CABIN	Passenger's reading lamps protection	COM 1	VHF 1 protection (if installed)
		COM 2	VHF 2 & radio protection (if installed)

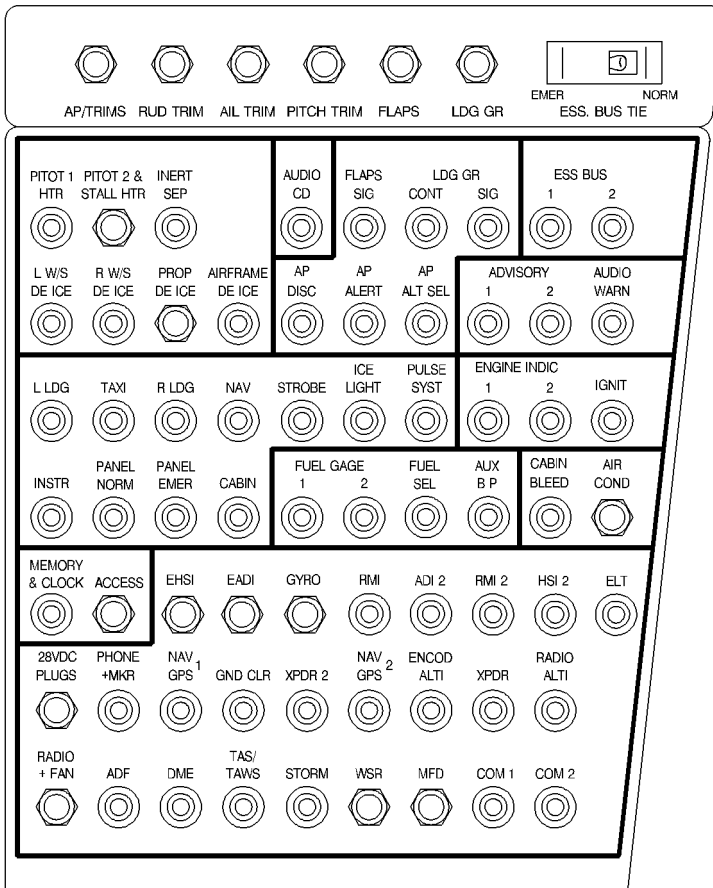Figure 7.8.3 (1/2) - CIRCUIT BREAKER PANEL (Typical arrangement)



14255004AAA.G/M/A8403

-  Disjoncteur déclenchable
"PULL-OFF" type circuit breaker
-  Disjoncteur non déclenchable
Circuit breaker which cannot be pulled off


NOTE :

If an additional equipment is installed, its circuit breaker is installed on a free location.



Figure 7.8.3 (2/2) - CIRCUIT BREAKER PANEL
(typical arrangement)

ESS BUS TIE	Essential bus NORM & EMER switch	PULSE SYST	Pulse lite system (if installed) protection
LDG GR	LDG general protection	ICE LIGHT	L.H. wing leading edge lighting and lighting test protection
FLAPS	Flaps protection	STROBE	Strobe lights protection
PITCH TRIM	Pitch trim protection	L LDG	L.H. landing light protection
AIL TRIM	Aileron trim protection	TAXI	Taxi light protection
RUD TRIM	Rudder trim protection	R LDG	R.H. landing light protection
AP / TRIMS	AP & trims general protec.	NAV INSTR	Navigation lights protection Instruments lighting protec.
ESS BUS 1	Essential bus 1 circuit protection	PANEL NORM	Instrument panel normal lighting protection
ESS BUS 2	Essential bus 2 circuit protection	PANEL EMER	Instrument panel emergency lighting protection
ADVISORY 1	Visual warnings protection	CABIN	Passenger's reading lamps protection
ADVISORY 2	Visual warnings protection	ACCESS	Cabin lightings & access door closing geared motor protec.
AUDIO WARN	Audio warnings protection	MEMORY & CLOCK	Stop watch and flowmeter protec.
FLAPS SIG	Flaps signalization protec.	ELT	Emergency beacon protection
LDG GR CONT	Landing gear control protection	EHSI	EHSI protection
LDG GR SIG	Landing gear signalization protection	EADI	EADI protection
AP DISC	Trim and AP cont. protection	GYRO	EFIS static converter protection
AP ALERT	Trim and AP audio signalization protection	RMI	RMI 1 protection
AP ALT SEL	Altitude selector protection	ADI 2	ADI No. 2 protection
AUDIO CD	CD reader protection (if installed)	RMI 2	RMI 2 protection
PITOT 1 HTR	Pitot 1 deicing protection	HSI 2	HSI 2 protection
PITOT 2 & STALL HTR	Pitot 2 and stall warning deicing protection	RADIO ALTI	RADIO ALTI protection
INERT SEP	Inertial separator protection	28VDC PLUGS	28 volts plugs protection
LW/S DE ICE	L.H. windshield deicing protection	PHONE+MKR	Reception line and loudspeaker + MKR protection (if installed)
RW/S DE ICE	R.H. windshield deicing protection	NAV GPS 1	GARMIN NAV GPS 1 protec. (if installed)
PROP DE ICE	Propeller deicing protection	GND CLR	Ground communication protec.
AIRFRAME DE ICE	Empennage and wing leading edges deicing protection	XPDR 2	Transponder 2 protection (if installed)
ENGINE INDIC 1	Powerplant contr. protec. : Oil T° & pres., torque, propel.	NAV GPS 2	GARMIN NAV GPS 2 protec. (if installed)
ENGINE INDIC 2	Powerplant cont. protec. : Ng, flowmeter & ITT	ENCOD ALTI	Encoding altimeter protection
IGNIT	Powerplant ignit. protection	XPDR	Transponder 1 protection
CABIN BLEED AIR COND	Cabin air bleed valve protec. Cabin ventilat. and vapor cycle cooling system protec.	COM 1	VHF 1 protection (if installed)
FUEL GAGE 1	L.H gage protection	COM 2	VHF 2 & radio (if insta.) protec.
FUEL GAGE 2	R.H gage protection	ADF	ADF protection
FUEL SEL	Timer protection	DME	DME protection
AUX BP	Fuel pump protection	TAS/TAWS	TAS/TAWS (if installed) protec.
		STORM	Stormscope protection
		WSR	Weather radar (if installed) protection
		MFD	Multi-function display protection
		RADIO+ FAN	Radio ventilation + radio master protection

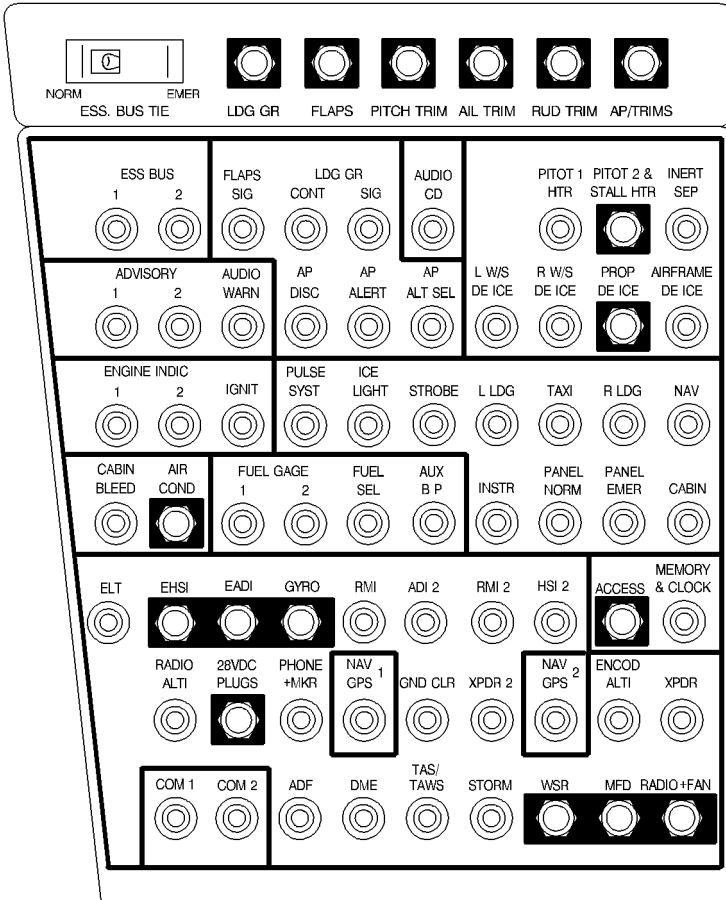Figure 7.8.3A (1/2) - CIRCUIT BREAKER PANEL (Typical arrangement)



14255004AAAGMA18303

-  Disjoncteur déclenchable
"PULL-OFF" type circuit breaker
-  Disjoncteur non déclenchable
Circuit breaker which cannot be pulled off

NOTE :
If an additional equipment is installed, its circuit breaker is installed on a free location.

Figure 7.8.3A (2/2) - CIRCUIT BREAKER PANEL
(typical arrangement)

INDICATING (Figure 7.8.4)

Electrical system indicating consists of a voltmeter and an ammeter located on the upper panel, as well as warning lights grouped on advisory panel.

The **voltmeter** indicates the voltage with generator connected to main bus bar. When the starter generator or stand-by generator are operating normally, the voltmeter needle will be in green sector.

The **ammeter**, graduated from - 200 to + 200 amperes, indicates the battery charge and discharge. The needle indicates a positive value when battery and starter generator (or stand-by generator) are connected to main bus bar.

Indications provided by warning light illumination are as follows :

- "BAT OFF" : Battery is not connected to main bus bar and the latter is supplied by another power source
- "MAIN GEN" : Starter generator is not connected to main bus bar
- "LO VOLT" : Battery voltage is below the minimum value and main bus bar is supplied
- "GPU" : Ground power receptacle access door is not closed

Moreover, the indicating system may be completed by a battery temperature indicator located on the R.H. lower part of the R.H. instrument panel. This indicator is connected to a probe installed on the battery.

PROTECTION - SAFETY (Figure 7.8.5)


 


The electrical power center provides systems protection in case of :

- overvoltage coming from the starter generator, the stand-by generator or the ground power receptacle
- short-circuit in starter generator feeder
- starter generator undervoltage

In case of disconnection of starter generator or stand-by generator following a failure, it is possible to re-activate the system by pressing on "MAIN" or "ST-BY" knob of "GENERATOR RESET".


A **crash lever** located on upper panel center part allows isolating simultaneously "BUS BAT" bar and setting to "OFF", "SOURCE" and "GENERATOR" selectors when lowered. All bus bars are isolated from generators.

- 1) Ammeter
- 2) Voltmeter
- 3) General flashing red and amber warning lights
- 4) Electric system warning lights on the "ADVISORY PANEL"

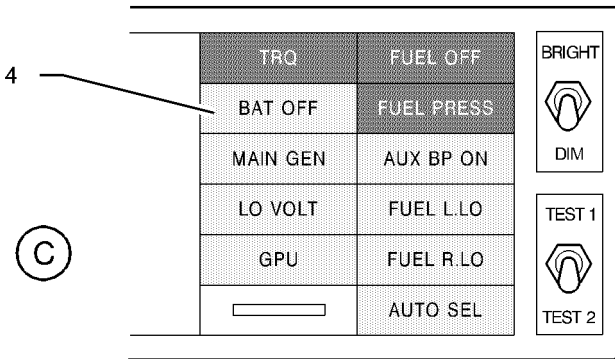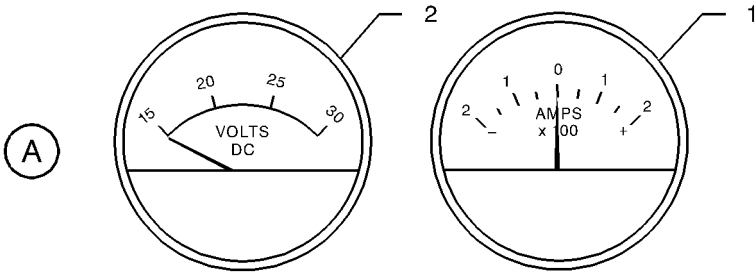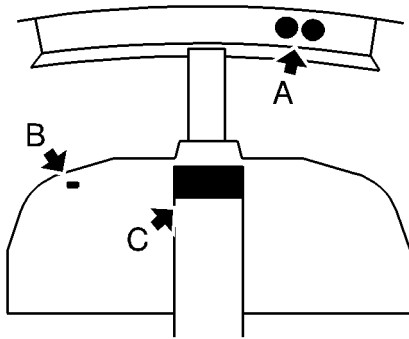

14315001AAA.BM.A8300

Figure 7.8.4 - INDICATING

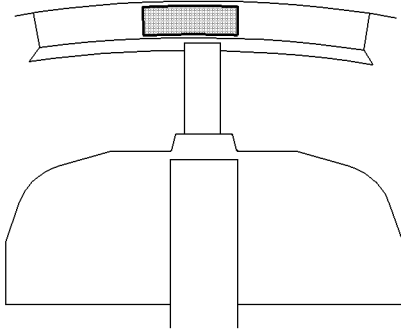

- 1) "MAIN" reset knob
- 2) "ST-BY" reset knob
- 3) Crash lever
- 4) "SOURCE" selector
- 5) "GENERATOR" selector

1424000AAA EIMA8200

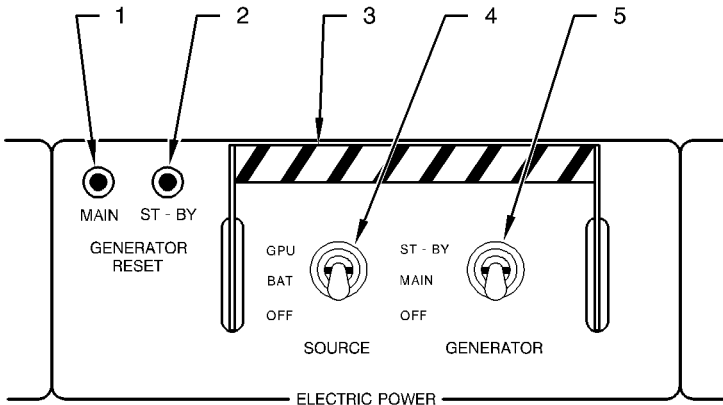


Figure 7.8.5 - ELECTRICAL CONTROL

EXTERIOR LIGHTING (Figure 7.8.6)

The airplane is equipped with two navigation lights, two strobe lights, two landing lights, a taxi light, a wing leading edge icing inspection light.

A "LTS TEST" test-knob located above lights switches allows checking proper operation of warning lights ; their brightness may be dimmed by main "DIM" switch on advisory panel.

Landing lights

Landing lights are located at each wing tip and located in leading edges. Lights illumination is controlled by "L. LDG" and "R. LDG" switches located on upper panel. A warning light is incorporated in each switch to indicate proper operation of used landing light.

The Pulse lite system (if installed) enables the pilot to control landing light flashing to be seen by the control tower or in heavy traffic areas.

Taxi light

The taxi light is attached to the nose gear, it is controlled by "TAXI" switch located on upper panel. A warning light is incorporated in this switch to indicate proper operation of used light.

Navigation lights and strobe lights

Navigation lights and strobe lights are installed on wing tips. They are controlled by "NAV" and "STROBE" switches located on upper panel.

NOTE :

By night, do not use anticollision lights in fog, clouds or mist as light beam reflexion may lead to dizziness and loss of sense of orientation.

Leading edge icing inspection light

The leading edge icing inspection light is installed on fuselage L.H. side, its beam illuminates the wing leading edge. It is controlled by the "ICE LIGHT" switch installed on "DE-ICE SYSTEM" panel (Figure 7.13.1).

FWD compartment light

The dome light of the FWD compartment has two positions :


- the first allows automatic illumination via the switch located in the upper section of the door frame,
- the second maintains the dome light permanently off regardless of the door position.

Fuel unit compartment light

The lighting of the fuel unit compartment allows improving the visibility of the clogging indicator by pressing the push-button located besides the inspection door.

- 1) L.H. landing light switch
- 2) Test knob (test light integrated to switches)
- 3) Taxi light switch
- 4) R.H. landing light switch
- 5) Navigation lights switch
- 6) Strobe lights switch
- 7) Pulse lite system switch (if installed)

Figure 7.8.6 (1/2) - EXTERNAL LIGHTING CONTROLS

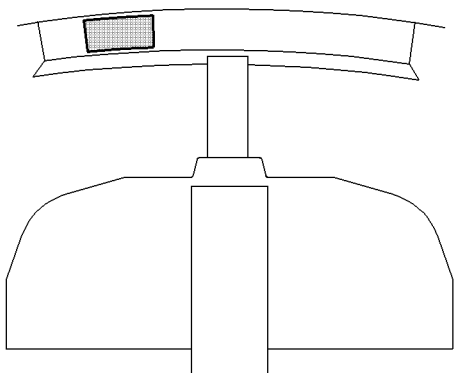

I4334000AAAAA/A8100

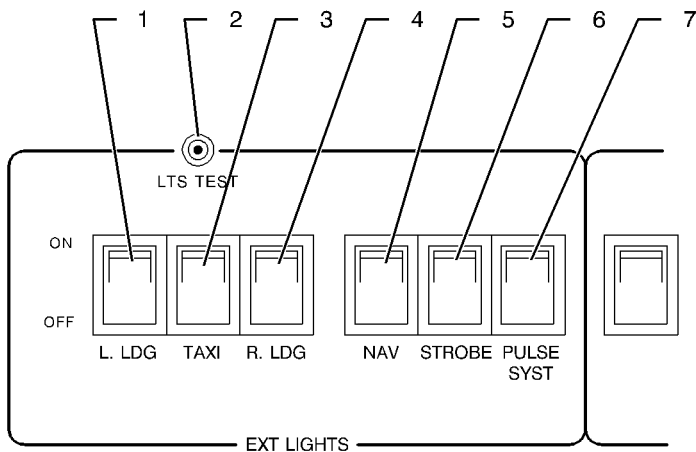


Figure 7.8.6 (2/2) - EXTERNAL LIGHTING CONTROLS

INTERIOR LIGHTING (Figure 7.8.7)

Interior lighting consists of access, cabin, instrument panel, instruments, baggage compartment and emergency lighting.

Access lighting

Access lighting consists of two floodlights located on the ceiling upholstery (one at the level of the access door, the other at the level of the storage cabinet) and the L.H. dome light of baggage compartment. "ACCESS" push-button on "INT LIGHTS" panel and the push-button located on access door rear frame control these 3 lights via a delayed breaker.

If the CRASH lever is down, access lighting is automatically cut out after 3 minutes.

If the CRASH lever is up, there is no access lighting automatic cut out.

Cabin lighting

Cabin lighting consists of two swiveling floodlights for front seats, six individual floodlights for rear passenger seats and the baggage compartment R.H. dome light. Each floodlight is controlled by a switch located on side upholstery strip. The floodlight above the table is controlled by two switches which are two-way switches type. The pilot can switch off the cabin floodlights and the baggage compartment dome light with the "CABIN" switch.

Instrument panel lighting

Instrument panel lighting is controlled by the "PANEL" rheostat located on "INT. LIGHTS" panel. This lighting consists of visor lighting and the two postlights located on the upper duct (forward of emergency floodlights).

Instruments and radio equipment lighting

The lighting, controlled by the "INSTR" rheostat located on "INT. LIGHTS" panel is integrated in instruments and radio equipment.

NOTE :

"PANEL" and "INSTR" rheostats control lighting operation and intensity. Clockwise rotation of control knob allows changing from "OFF" position to maximum lighting. Counterclockwise rotation reduces lighting to minimum brightness.

Emergency lighting

Emergency lighting consists of two swiveling floodlights located on the upper duct above front seats. It illuminates instrument panel assembly in case of visor lighting and / or instrument integrated lighting failure.



The rheostat located near R.H. floodlight controls emergency lighting operation and intensity. Forward rotation of control knob allows changing from "OFF" position to minimum lighting then increasing lighting to maximum brightness.

Map reading light illumination

The illumination of the map reading lights located on control wheels is controlled by the switch (rheostat) located on each light.

- 1) Instrument lighting switch (rheostat)
- 2) Instrument panel lighting switch (rheostat)
- 3) Cabin lighting switch (rear seats reading light)
- 4) Access door, baggage compartment and FWD dome light (delayed breaker) push-button
- 5) Emergency lighting switch (rheostat)

Figure 7.8.7 (1/2) - INTERNAL LIGHTING CONTROLS

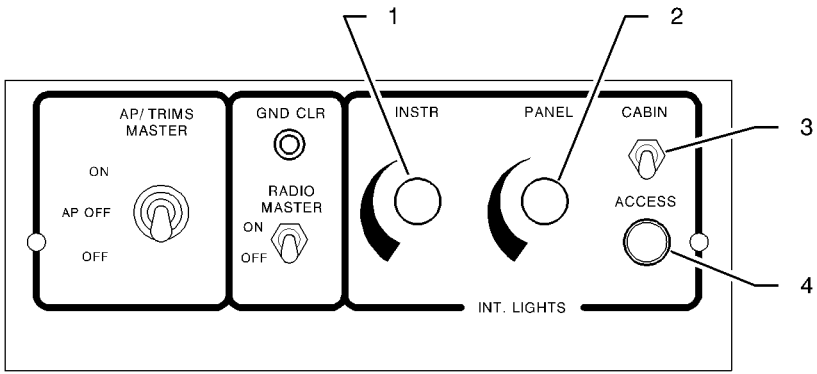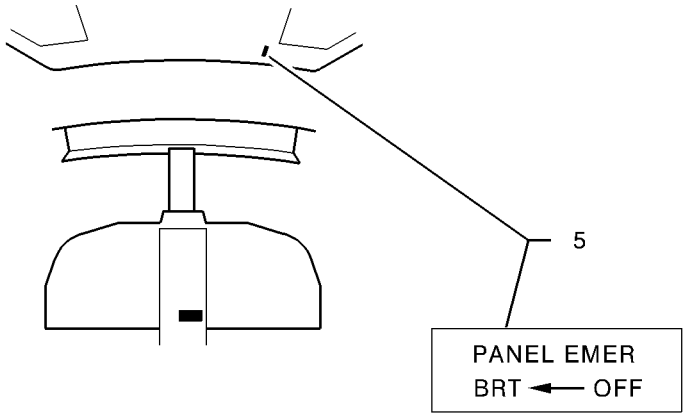

14332001AAAFMA8200

Figure 7.8.7 (2/2) - INTERNAL LIGHTING CONTROLS

7.9 - AIR CONDITIONING AND PRESSURIZATION

AIR CONDITIONING (Figure 7.9.1)

Air conditioning system includes the temperature and flow-pressure regulation system (ACS), the vapor cycle cooling system (VCCS), control and check systems and distribution.

Temperature and flow-pressure regulation system

Air necessary for conditioning is picked up from the engine. A valve regulates pressure and bleed hot air flow and is also used as shutoff valve. This valve is controlled by the "BLEED" switch. Hot air is cooled by going through a temperature exchanger and a cooling turbine, then it reduces the humidity through the water separator before entering the cabin through a check-valve.

Temperature exchanger is located in a duct which directs cooling air. This air is picked up outside by the NACA scoop located on R.H. FWD engine cowling. When the airplane is on ground, air flow is created by the cooling turbine driven by air picked up from the engine.

Temperature regulation is accomplished by adding hot air to the air coming from cooling turbine. An electronic control unit analyses the temperature of conditioned air, as it enters the cabin, as well as cabin ambient temperature and acts on the temperature regulation valve according to the requested temperature.

Vapor cycle cooling system

The vapor cycle cooling system improves the passengers and crew comfort in warm and / or humid atmospheric conditions. The refrigerant used is called R134A.

The installation comprises :

- A high pressure pack consisting of :
 - . a condenser,
 - . a condenser fan,
 - . a compressor,
 - . an electric motor,
 - . a receiver drier,
 - . two pressure switches,
 - . an overpressure relief valve.

The horseshoe condenser surrounds the electric motor, which directly drives the compressor.

The fan is driven by its own electric motor.

A low pressure switch (LP) rated at 0.725 psi (0.05 bars) and a high pressure switch (HP) rated at 406 psi (28 bars) ensure system safety by cutting out electrical power supply of the high pressure pack, when either pressure is reached. This pack is also equipped with an overpressure relief valve rated to open at 464 psi (32 bars).

The pack is installed in the FWD compartment between frames C1 and C2 inside a metallic housing. This housing is connected by means of a flexible duct with a screened air inlet located on the R.H. side in front of the windshield.

The high pressure pack is supplied by the "VENT" BUS bar.

- An evaporator,
- A fan,
- A solenoïd valve.

The evaporator is attached between frames C16 and C17 on baggage compartment ceiling. This evaporator has a thermostatic expansion valve controlled by a temperature control/sensor, which is installed on the hose at evaporator outlet.

The fan provides air circulation in the cabin through the evaporator. It is attached under the floor, on R.H. side, between frames C14 and C15. The fan is supplied by the "BUS 4" bar and protected by the CB 111 "FAN" circuit breaker.

The solenoid valve is installed on high pressure line and controlled by the high pressure pack. It is intended to avoid refrigerant migrations, when the system is off.

- Two service valves,


The low pressure (LP) service valve and the high pressure (HP) service valve are installed into supply hoses in the R.H. equipment compartment between frames C1 and C2.

Both valves fool-proofing is ensured by their different diameters ; LP service valve diameter is more important than HP one.

- A sight glass, used to check correct refrigerant filling without bubbles. It is located on the flexible hose at high pressure pack inlet.

- | | |
|--|---|
| 1) Heat exchanger/cooling turbine pack | 21) Cabin differential pressure switch |
| 2) Water separator | 22) Auxiliary volume tank |
| 3) Check valve | 23) Emergency air supply |
| 4) Duct overtemperature switch | 24) Controller |
| 5) Duct temperature sensor | 25) Compressor/condenser pack |
| 6) Demisting outlets | 26) Pressure regulating and shutoff valve |
| 7) Distribution box | 27) Overpressure switch |
| 8) Demisting microswitch | 28) Temperature control valve |
| 9) Air outlets and distribution orifices | 29) Water injector |
| 10) Outflow valve | 30) Overtemperature switch |
| 11) Safety valve | 31) Remote datum |
| 12) Cabin fan | 32) HP shutoff valve |
| 13) Depressurization solenoïd valve | 33) HP pressure switch selector |
| 14) Evaporator | 34) Non-return valve |
| 15) Refrigerant solenoïd valve | |
| 16) Cabin temperature sensor | |
| 17) Ground safety switch | |
| 18) Control panel | |
| 19) Cabin altitude switch | |
| 20) Advisory panel | |

Figure 7.9.1 (1/2) - AIR CONDITIONING

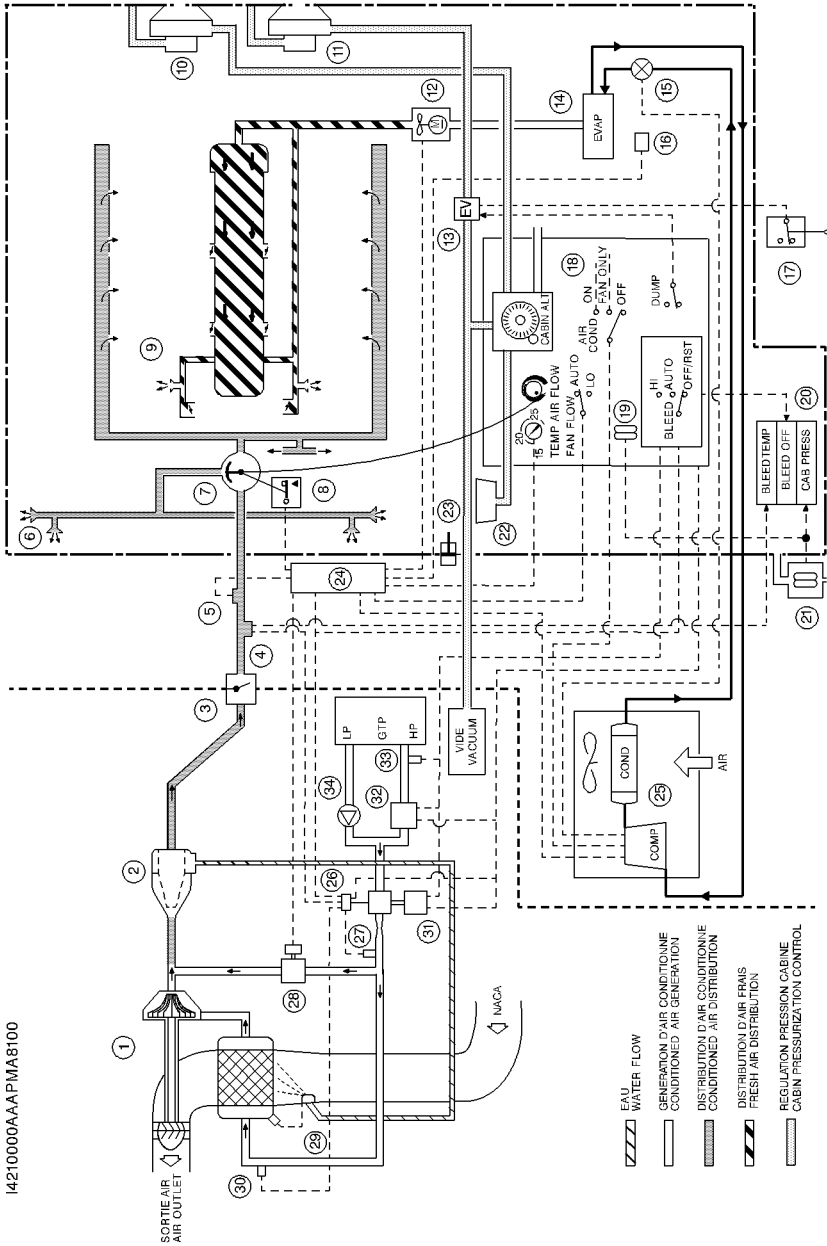

I421000AAAP/MA8100

Figure 7.9.1 (2/2) - AIR CONDITIONING

When vapor cycle cooling system operation is requested by the controller, the compressor pressurizes the refrigerant and discharges it to the condenser through the HP pressure switch.

At the condenser outlet, refrigerant cooled by the condenser fan flows through the receiver drier to the thermostatic expansion valve located at the evaporator inlet.

The temperature control/sensor monitors the hose temperature at the evaporator outlet and pilots the thermostatic expansion valve opening or closing to control the refrigerant flow through the exchanger.

The expansion of the high pressure liquid refrigerant to a low pressure liquid extracts heat from the cabin air flowing through the evaporator and the low pressure refrigerant gas flows back to the compressor through the LP pressure switch.

The evaporator fan suctions hot and moistened cabin air through the evaporator and expels it cold and dry in a duct where it is blown into the cabin overhead duct equipped with air outlets and through air outlets located on arm rests of pilot and R.H. front passenger stations.

The system operates under two modes :

- engine running with "GENERATOR" selector on "MAIN",
- engine off with "SOURCE" selector on "GPU".

The system includes an automatic load shedding feature which operates when :

- "GENERATOR" selector is on "ST-BY",
- "AIRFRAME DE-ICE" switch is "ON",
- "PROP DE-ICE" switch is "ON",
- engine is started with system fed by a GPU.

Distribution

Conditioned air enters the distribution box from where it is dispatched either into the cabin through two outlets located at the level of rudder pedals, through a row of ports located on the lower section of the L.H. and R.H. side upholstery or through the demisting outlets. Each seat is also provided with a swivelling and adjustable air outlet, supplied with fresh air by the vapor cycle cooling system.

NOTE :

For a better efficiency of vapor cycle cooling system, do not obstruct air suction point at the level of baggage compartment.

Control and check (Figure 7.9.3)**AIR CONDITIONING SYSTEM**

Air conditioning system controls are located on "ECS" panel and indicator lights are grouped on advisory panel.

Conditioning occurs when :

- "BLEED" switch is set to "AUTO", what leads to opening of pressure regulator and shut-off valve and switches off "BLEED OFF" warning light, and at the same time
- "AIR COND" switch is set to "ON", what ensures automatic regulation of cabin temperature.

During specific flight configurations, such as high altitude and low temperature flight conditions, the cabin heating can be speeded-up by setting "BLEED" switch to "HI".

The "BLEED" switch is fitted with a blocking device between "AUTO" and "OFF/RST" positions preventing the operator from a non expected setting of "BLEED" switch to "OFF/RST" position.

Two overtemperature switches cause the illumination of "BLEED OFF" and "BLEED TEMP" warning lights located on advisory panel and simultaneously the closing of the pressure regulating and shut-off valve. These overtemperature switches are located at the temperature exchanger inlet and at the cabin inlet. System cannot be reactivated as long as "BLEED TEMP" warning light is illuminated. After "BLEED TEMP" warning light has gone out, set "BLEED" switch to "OFF/RST", then to "AUTO" to reactivate the system.

An air overpressure switch located after pressure regulating and shut-off valve causes the illumination of "BLEED OFF" warning light and simultaneously the closing of the pressure regulating and shut-off valve. To reactivate the system, set "BLEED" switch to "OFF/RST", then to "AUTO".

VAPOR CYCLE COOLING SYSTEM

The "AIR COND" switch has three positions :

- "OFF" : No automatic regulation of cabin temperature.
- "FAN ONLY" : Controls only cabin fan operation.
- "ON" : Controls operation of the cabin fan and automatic regulation of cabin temperature.

The "FAN FLOW" switch has two positions :

- "AUTO" : Selects full speed for the cabin fan, when "AIR COND" switch is set to "FAN ONLY" and lets controller manage speed, when "AIR COND" switch is set to "ON".
- "LO" : Selects low speed for the cabin fan.

"CABIN TEMP/°C" selector enables to select requested temperature in the cabin.

■ An "ECS FAULT" amber light illuminates when the controller detects a faulty operation of ECS system.

NOTE :

■ *If "ECS FAULT" light illuminates, inform maintenance service*

"AIR FLOW" distributor directs air flow to demisting outlets ("DEFOG") or to the cabin ("CABIN").

Whatever the selected cabin temperature is, "HOT" position enables hot air to be directed only to demisting outlets and starts vapor cycle cooling system operation, when "AIR COND" switch is set to "ON".

Emergency air control ("RAM AIR" control knob), located under R.H. instrument panel facing control wheel, enables outside air to enter the cabin through a valve. In "NORMAL" position, the valve is closed and the control is locked. To open emergency ventilation valve, press on locking knob and move control rearwards.

PRESSURIZATION (Figures 7.9.2 and 7.9.3)

Pressurization system maintains the pressure corresponding to an altitude compatible with passengers' safety and comfort inside the cabin.

The system uses the air conditioning system to pressurize the cabin and the vacuum generation system for check and safety. Pressure controller, located on "ECS" panel allows pilot selecting :

- a cabin altitude between sea level and 9350 ft,
- the cabin climb speed.

A three position indicator shows cabin altitude, cabin climb speed and cabin-atmosphere differential pressure. Cabin altitude is maintained by an outflow valve and a safety valve limits differential pressure between cabin and atmosphere at 6.2 psi (427 mb).

These valves are attached to rear pressure bulkhead and each one is connected to a static port located on rear cone for the outflow valve and under rear baggage compartment for safety valve.

Cabin is automatically depressurized as soon as the airplane is on ground through landing gear switch (airplane on ground) or, if necessary, by actuating "DUMP" switch located on "ECS" panel (in normal operation, this switch is protected and locked by a cover).

Indicating

In addition to the three purpose indicator, the system consists of the "CAB PRESS" warning light which illuminates when cabin altitude reaches 10000 ft or if cabin-atmosphere differential pressure exceeds 6.2 psi (427 mb).

NOTE :

"CAB PRESS" warning light illumination has no effect on system functioning - Refer to Section 3 "Emergency procedures".

- 1) Check valve
- 2) Cabin differential pressure switch
- 3) Advisory panel
- 4) Outflow valve
- 5) Safety valve
- 6) Depressurization valve
- 7) Landing gear switch (airplane on ground)
- 8) Pressure controller
- 9) Cabin altitude switch
- 10) Auxiliary volume tank

Figure 7.9.2 (1/2) - PRESSURIZATION

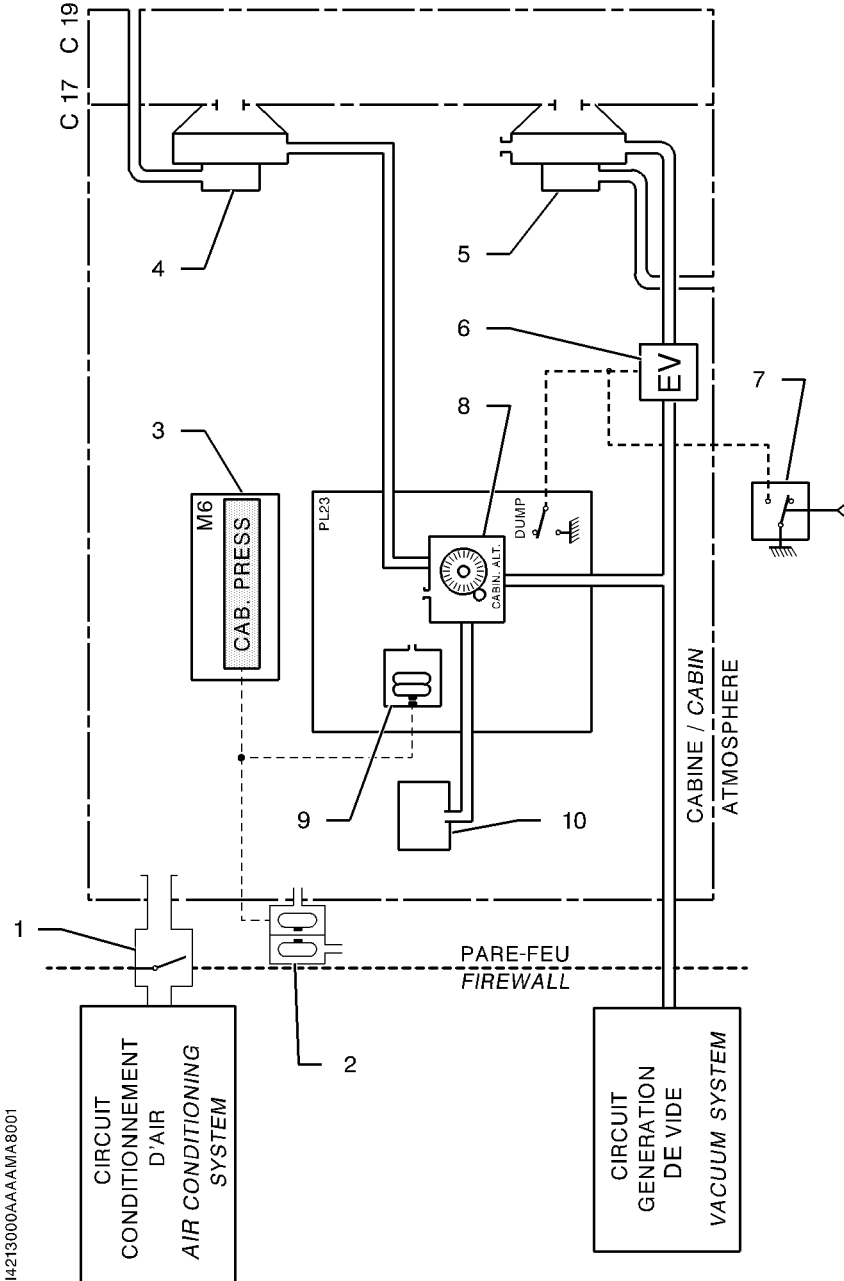


Figure 7.9.2 (2/2) - PRESSURIZATION

- 1) Amber warning light
- 2) Warning light test push-button
- 3) "BLEED" switch - "HI / AUTO / OFF/RST"
- 4) "AIR COND" switch - "ON / FAN ONLY / OFF"
- 5) "FAN FLOW" switch - "AUTO / LO"
- 6) "DUMP" switch
- 7) "AIR FLOW" distributor - "HOT / DEFOG / CABIN"
- 8) "CABIN TEMP/°C" selector
- 9) Cabin rate selector
- 10) Cabin altitude selector
- 11) Three-position indicator (cabin altitude, cabin climb speed and differential pressure)

Figure 7.9.3 (1/2) - "ECS" CONTROL AND CHECK PANEL

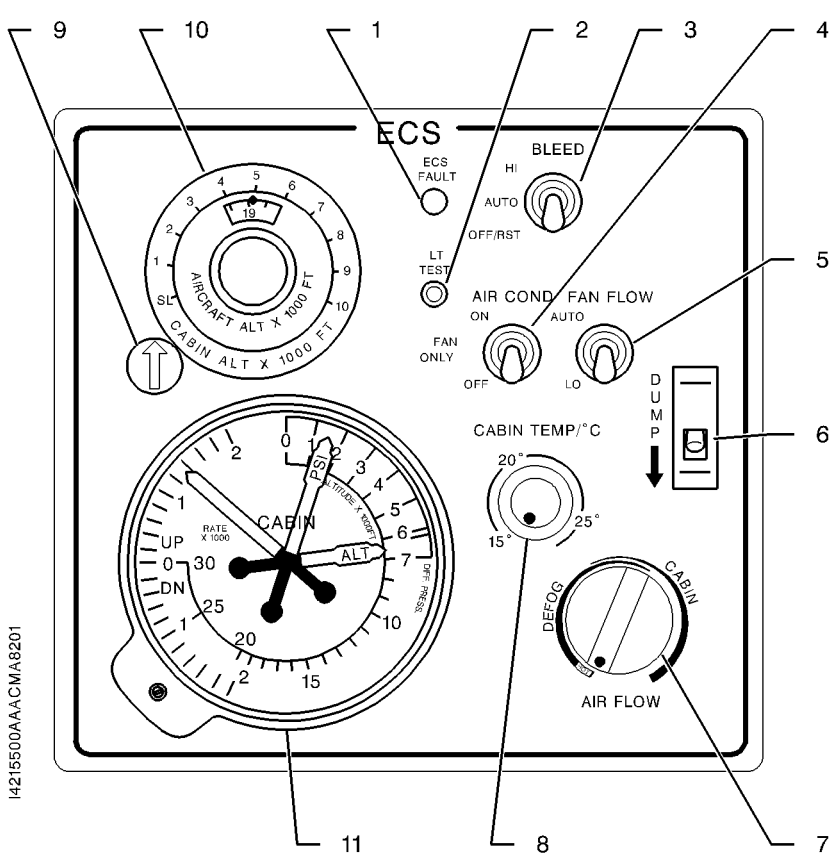
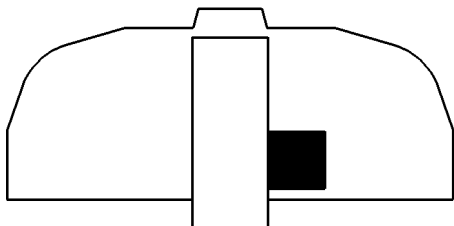


Figure 7.9.3 (2/2) - "ECS" CONTROL AND CHECK PANEL

INTENTIONALLY LEFT BLANK

7.10 - EMERGENCY OXYGEN SYSTEM (Figure 7.10.1)

The gaseous oxygen system will be used by the crew and the passengers, when the cabin altitude is greater than 10000 ft following a loss of pressurization or if there is smoke or fumes in the cabin.

The oxygen reserve is contained in an oxygen cylinder made of composite material and located outside of the pressurized cabin in a compartment in the right wing fairing. Its capacity is 50.3 cu.ft (1425 litres) "STPD" and use limit pressures are :

- maximum pressure 1850 PSIG (127 bars) at 70° F (21° C). The maximum pressure for different outside temperatures is given in Section 8, Figure 8.7.4, as well as on a placard on the inside of the cylinder service door,
- minimum pressure 217 PSIG (15 bars).

CAUTION

IF THE OXYGEN CYLINDER PRESSURE FALLS BELOW THE MINIMUM, THE CYLINDER MUST BE PURGED BEFORE REFILLING. INFORM MAINTENANCE DEPARTMENT.

The oxygen cylinder head is equipped with :

- a hand-controlled isolation valve to permit cylinder installation and removal,
- a microswitch supplying the "OXYGEN" warning light located on the advisory panel. This warning light illuminates when the isolation valve is closed,
- a graduated pressure gage,
- a charging valve - refer to the replenishment procedure in Section 8,
- an overpressure system consisting of a safety disc. This disc is designed to rupture between 2500 and 2775 PSIG (172 and 191 bars) discharging the cylinder contents overboard,
- a pressure reducing valve regulating oxygen pressure to the masks between 64 and 85 PSIG (4.4 and 5.9 bars),
- a low pressure safety valve calibrated to 116 PSIG (8 bars).

An indicating and control panel located in the cockpit overhead panel at the disposal of the pilot includes :

- a graduated pressure gage to permit checking the cylinder charge,
- a two-position valve "ON/OFF" ("OXYGEN" switch) to permit the supply of the front seats occupiers masks,
- a two-position valve "ON/OFF" ("PASSENGERS OXYGEN" switch) with guard to permit the supply of the four passenger masks, when the "OXYGEN" switch is set to "ON".

An altimetric valve provides an automatic passenger masks actuation function at a cabin altitude between 12500 and 14750 ft when the "OXYGEN" switch is set to "ON".

Two pressure-demand type masks allowing quick donning with only one hand, covering the nose and the mouth, as well as two pairs of smoke goggles are at disposal of the pilot and the front passenger. Masks are installed in cups on the cabin walls aft of the front seats. For the ease of donning and for ergonomic reason, the pilot mask is located in the right side cup and the front passenger mask is located in the left side cup. The masks are permanently connected to the oxygen system.

The smoke goggles are stowed in the cabinet drawer behind the right front seat.

Each cockpit mask is equipped with :

- 1 - a microphone, controlled by the "NORM/MASK" switch under cover located on the instrument panel near the pilot's control wheel.

Airplane equipped with MC10 Smart Mike oxygen masks (Post-MOD70-0714-35)

- 2 - a Smart Mike system that reduces the breathing noise in the headsets. The noise reduction function operates when the switch located on the O₂ connecting line is set to "ON" - see Figure 7.10.4.

All

- 3 - a vent valve integrated in the facepiece of the mask to provide airflow to the goggles.

Airplane equipped with MRA005 oxygen masks
(Pre-MOD70-0714-35)

NOTE :

Opening of the vent valve is automatic when goggles are in place.

Airplane equipped with MC10 Smart Mike oxygen masks
(Post-MOD70-0714-35)

NOTE :

Manual opening of the vent valve is necessary when goggles are in place.

All

- 4 - a regulator equipped with :

Airplane equipped with MRA005 oxygen masks
(Pre-MOD70-0714-35)

- a three-position "NORMAL - 100 % - EMERGENCY" rotating knob with a "PRESS TO TEST" function.

NOTE :

When smoke or fumes are present, the mask can be set to provide positive pressure to prevent smoke or fumes from infiltrating the mask and to provide airflow to clear the goggles. Set the three-position rotating knob to the "EMERGENCY" position.

Airplane equipped with MC10 Smart Mike oxygen masks (Post-MOD70-0714-35)

- a two-position control tab "N (NORMAL) - 100 %",
- an "EMERGENCY" rotating knob with a "PRESS TO TEST" function.

NOTE :

When smoke or fumes are present, the mask can be set to provide positive pressure to prevent smoke or fumes from infiltrating the mask and to provide airflow to clear the goggles. Push the "N-100 %" control tab in towards the mask to the "100 %" position and turn the "EMERGENCY" control knob to the "EMERGENCY" position. After donning the goggles, open the goggle vent on the bridge of the mask by pulling the slide fully downwards.

All

A flow indicator (blinker) into the oxygen tubing signals the proper flow.

In accordance with airplane configuration, for more information, refer to masks manufacturer documentation available on myTBM.aero website.

Four passenger constant-flow type masks, covering the nose and the mouth and permanently connected, are installed in two containers on the cabin ceiling. The opening of these containers and the descent of the masks are controlled:

- by the pilot, when the "OXYGEN" and "PASSENGERS OXYGEN" switches are set to "ON",
- or automatically at a cabin altitude between 12500 and 14750 ft with the "OXYGEN" switch set to "ON".



Oxygen flow to the passenger masks is obtained when the passenger pulls on the lanyard to release the connected pin. The green bag on the oxygen mask inflates when oxygen flow is obtained.

WARNING

SMOKING IS STRICTLY PROHIBITED WHEN THE OXYGEN SYSTEM IS IN USE.

BEFORE USING OXYGEN, REMOVE ANY TRACE OF OIL, GREASE, SOAP AND OTHER FATTY SUBSTANCES (INCLUDING LIPSTICK, MAKE-UP, ETC.)

- 1) Microphone switch
- 2) "OXYGEN" switch
- 3) "PASSENGERS OXYGEN" switch

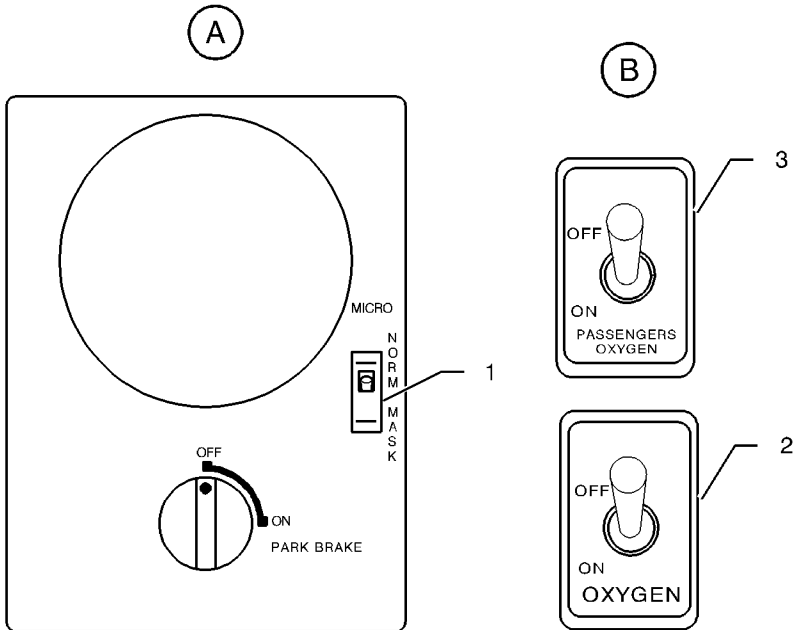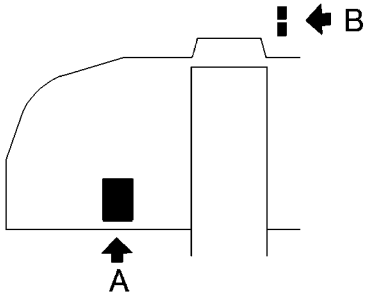


I4351000AAA/MA18003

Figure 7.10.1 - EMERGENCY OXYGEN SYSTEM

Airplane equipped with MRA005 oxygen masks (Pre-MOD70-0714-35)

- 1) Harness inflation side vanes
- 2) Regulator control knob
- 3) "PRESS TO TEST" function

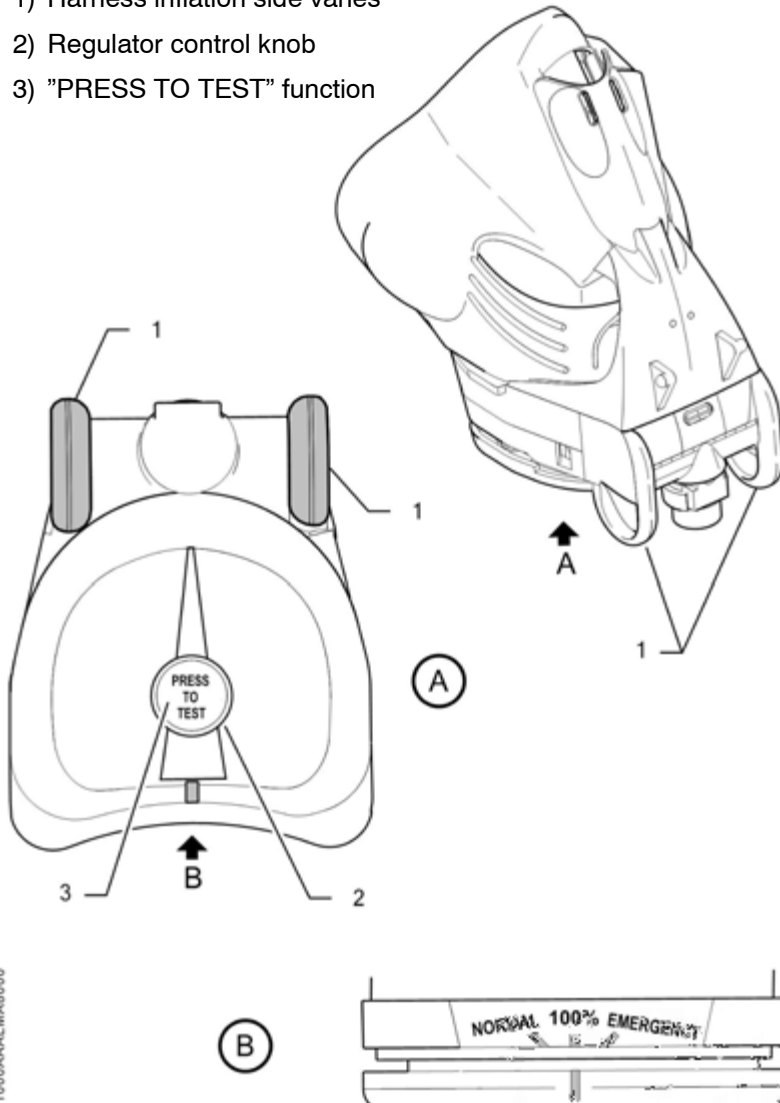

C4351000AAALMA8000

Figure 7.10.2 - CREW OXYGEN MASKS – REGULATOR CONTROLS

Airplane equipped with MC10 Smart Mike oxygen masks (Post-MOD70-0714-35)

- 1) Harness inflation side vanes
- 2) "N (Normal) – 100%" regulator control tab
- 3) "EMERGENCY" control knob
- 4) "PRESS TO TEST" function
- 5) Vent valve

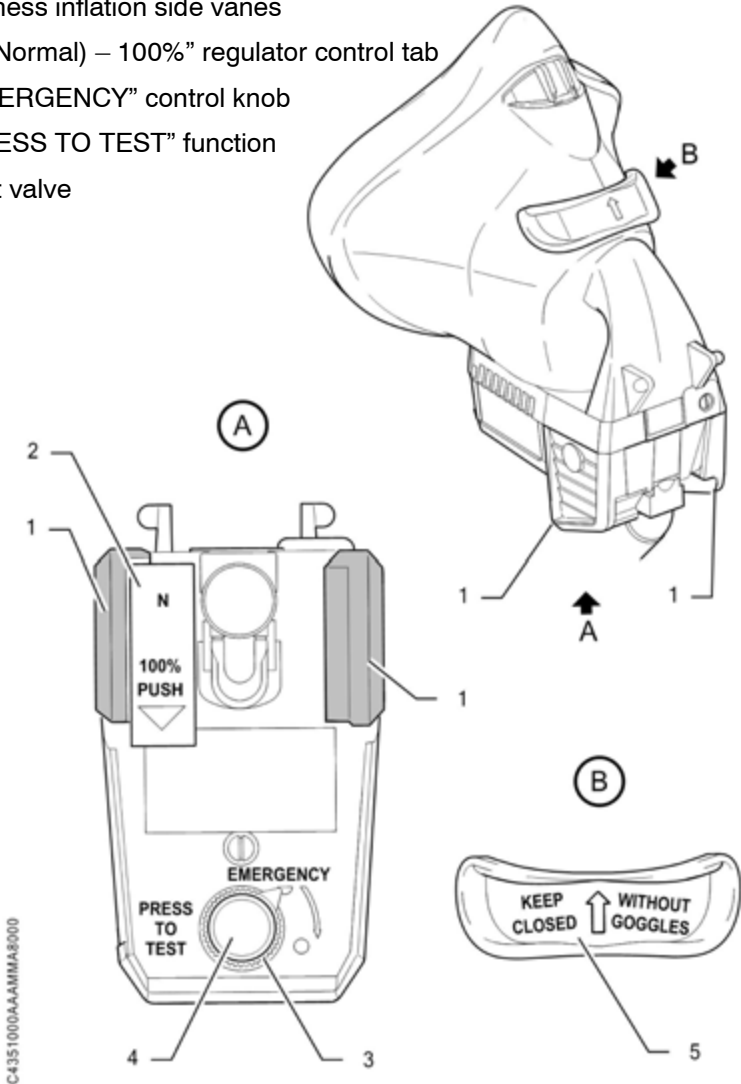


Figure 7.10.3 - CREW OXYGEN MASKS – REGULATOR CONTROLS

Airplane equipped with MC10 Smart Mike oxygen masks
(Post-MOD70-0714-35)

I4351100AA/LEM/A8000

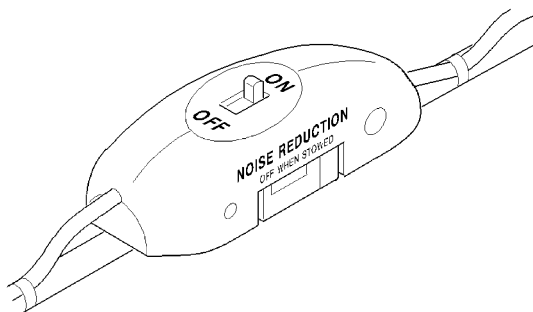


Figure 7.10.4 - CREW OXYGEN MASKS - NOISE REDUCTION SWITCH

All

FLIGHT ABOVE 15000 FT WITH POSSIBLE EMERGENCY DESCENT

Minimum oxygen pressure (PSIG) for following conditions :

- Crew oxygen masks in NORMAL mode.
- 4 minutes usage by each pilot and passenger from 31000 ft to 15000 ft.
- Plus 30 minutes usage by each pilot and passenger at 15000 ft.
- Plus 86 minutes usage by each pilot at 10000 ft.

Number of occupants		OUTSIDE TEMPERATURE						
Cockpit	Cabin	110° F/ 43° C	90° F/ 32° C	70° F/ 21° C	50° F/ 10° C	30° F/ -1° C	10° F/ -12° C	-10° F/ -23° C
1	0	631	614	597	580	563	546	529
1	1	759	736	713	691	668	646	623
1	2	885	856	828	799	771	743	715
1	3	1010	976	941	907	873	839	806
1	4	1137	1096	1056	1015	975	935	897
2	0	1037	1001	965	930	894	859	825
2	1	1164	1122	1080	1038	997	956	916
2	2	1289	1241	1192	1144	1097	1050	1004
2	3	1416	1361	1306	1252	1198	1145	1093
2	4	1541	1480	1418	1357	1297	1238	1180

Figure 7.10.5 - MINIMUM OXYGEN PRESSURE (PSIG)
[FLIGHT ABOVE 15000 ft WITH POSSIBLE EMERGENCY DESCENT]

NOTE :

Increase the pressure in the table by 8 % if the airplane has been parked in the sun for a long time.

WHEN REQUIRED TO REMAIN ABOVE 15000 FT DUE TO MINIMUM ENROUTE ALTITUDE

Minimum oxygen pressure (PSIG) for following conditions :

- Crew oxygen masks in NORMAL mode.
- Flight above 15000 ft. All equipment used.
- 1 hour usage by each pilot and passenger.
- Plus 1 hour usage by each pilot under 15000 ft.

Number of occupants		OUTSIDE TEMPERATURE						
Cockpit	Cabin	110° F/ 43° C	90° F/ 32° C	70° F/ 21° C	50° F/ 10° C	30° F/ -1° C	10° F/ -12° C	-10° F/ -23° C
1	0	618	602	585	569	552	536	520
1	1	842	816	789	763	736	710	685
1	2	1067	1029	992	955	918	882	846
1	3	1513	1240	1192	1144	1097	1050	1004
1	4	1513	1452	1392	1333	1275	1217	1161
2	0	992	958	925	891	858	825	793
2	1	1215	1170	1125	1081	1037	994	952
2	2	1439	1382	1326	1270	1215	1161	1108
2	3	1662	1593	1525	1457	1391	1326	1262
2	4	1888	1807	1725	1645	1567	1490	1415

Figure 7.10.6 - MINIMUM OXYGEN PRESSURE (PSIG)
[WHEN REQUIRED TO REMAIN ABOVE 15000 FT DUE TO MINIMUM ENROUTE ALTITUDE]

NOTE :

Increase the pressure in the table by 8 % if the airplane has been parked in the sun for a long time.

FLIGHT BETWEEN 15000 FT AND 10000 FT

Minimum oxygen pressure (PSIG) for following conditions :

- Crew oxygen masks in NORMAL mode.
- Flight under 15000 ft.
- 90 minutes usage by each pilot and one passenger.
- Plus 30 minutes usage by each pilot at 10000 ft.

Number of occupants		OUTSIDE TEMPERATURE						
Cockpit	Cabin	110° F/ 43° C	90° F/ 32° C	70° F/ 21° C	50° F/ 10° C	30° F/ -1° C	10° F/ -12° C	-10° F/ -23° C
1	0	618	602	585	569	552	536	520
1	1	961	929	896	864	833	801	770
1	2	961	929	896	864	833	801	770
1	3	961	929	896	864	833	801	770
1	4	961	929	896	864	833	801	770
2	0	992	958	925	891	858	825	793
2	1	1333	1282	1231	1181	1131	1083	1035
2	2	1333	1282	1231	1181	1131	1083	1035
2	3	1333	1282	1231	1181	1131	1083	1035
2	4	1333	1282	1231	1181	1131	1083	1035

Figure 7.10.7 - MINIMUM OXYGEN PRESSURE (PSIG)
[FLIGHT BETWEEN 15000 FT AND 10000 FT]

NOTE :

Increase the pressure in the table by 8 % if the airplane has been parked in the sun for a long time.

INTENTIONALLY LEFT BLANK

7.11 - AIR DATA SYSTEM AND INSTRUMENTS (Figure 7.11.1)

Airplane air data system consists of :

- two separate static pressure systems supplying the altimeters, airspeed and vertical speed indicators. They also provide a static pressure reference to the ΔP cabin and to the Autopilot system Air Data Computer (ADC).

System 1 is backed up by an alternate system which operation is controlled by a switching valve (normal / alternate) attached to instrument panel under R.H. control wheel. In case of obstruction or icing of ports, this selector isolates airplane normal static system. When selector is on alternate position (pulled rearwards), static pressure is picked from a port located in airplane rear fuselage.

- two separate dynamic pressure systems supplying the airspeed indicators systems, V_{MO} audio warning detector and the Autopilot system Air Data Computer (ADC).

STATIC PRESSURE SYSTEMS

Primary systems

Two dual static ports (one on either side of the fuselage tail part) supply a dual system routed towards the cockpit.


System 1 is connected to the switching valve (normal / alternate) which supplies the encoding altimeter, the ΔP cabin, vertical speed 1 and airspeed 1 indicators and the Autopilot system Air Data Computer (ADC).

System 2 is directly connected to the second altimeter and optional equipment.

Both systems feature a drain valve located under the instrument panel on R.H. side. On static system 1, an additional drain is installed on ADC system. It is attached under floor and attainable through emergency landing gear door.

- 1) Pitot 1
- 2) Pitot 2
- 3) Pitot 2 dynamic drain
- 4) Pitot 1 dynamic drain
- 5) V_{MO} detector
- 6) Static drain
- 7) Emergency static drain
- 8) Static drain
- 9) FWD pressure bulkhead
- 10) Airspeed indicator 1
- 11) Encoding altimeter 1
- 12) Vertical speed indicator 1
- 13) ΔP cabin
- 14) Altimeter 2
- 15) Airspeed indicator 2
- 16) Vertical speed indicator 2
- 17) ADC dynamic drain
- 18) Autopilot system Air Data Computer (ADC)
- 19) Static source (Normal / Alternate)
- 20) Instrument panel
- 21) ADC static drain
- 22) Rear pressure bulkhead
- 23) R.H. static ports
- 24) Emergency bleed on frame C19
- 25) L.H. static ports

Figure 7.11.1 (1/2) - AIR DATA SYSTEM

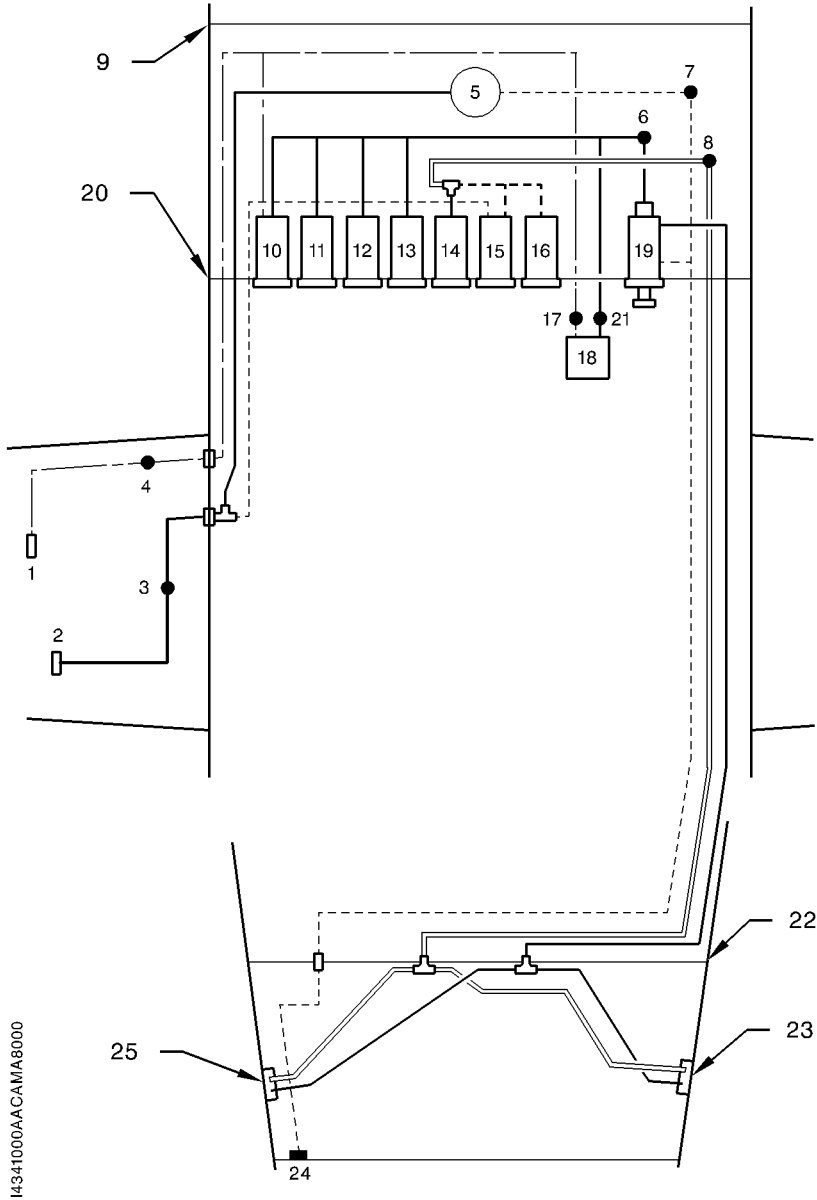

I4341000AACAM/A8000

Figure 7.11.1 (2/2) - AIR DATA SYSTEM

Alternate static source

The alternate static port located in the rear fuselage supplies a system routed to the switching valve (normal / alternate) in order to replace static system 1 and also supplies the V_{MO} warning.

The alternate line incorporates a drain plug located under the instrument panel on right side.

Static pressure from the alternate line is only provided to instruments on the left side of the instrument panel.

DYNAMIC PRESSURE SYSTEM

Two heated pitot probes are installed under the left wing. The first one supplies the airspeed indicator 1 and the Autopilot system Air Data Computer (ADC).

The second one supplies the V_{MO} audio warning and optional equipment.

Both lines incorporate a drain plug located in the left wing root. On dynamic system 1, an additional drain is installed on ADC system. It is located under the floor and is accessible from emergency landing gear door.

Pitot heating

Pitot heating is controlled by "PITOT 1 HTR" and "PITOT 2 & STALL HTR" switches, installed on "DE-ICE SYSTEM" panel.

"PITOT 1", "PITOT 2" and / or "STALL HTR" warning lights, located on the advisory panel are illuminated when corresponding switch is set to "OFF" or if heating system does not operate when the switch is set to "ON".

NOTE :

Do not use heating during prolonged periods on ground to avoid pitot overheat.

7.12 - VACUUM SYSTEM AND INSTRUMENTS (Figure 7.12.1)

The airplane is fitted with a vacuum system providing the suction necessary to operate the stand-by attitude indicator, the cabin pressurization and the leading edge deicing.

Vacuum system includes :

- A pressure regulator
- An ejector
- A regulating and relief valve
- A signalization microswitch
- A suction gage indicator

Compressed air necessary for the ejector to create decompressed air is taken from the powerplant. The air flow is regulated before going into the ejector which creates necessary vacuum by venturi effect.

A relief valve fixed in cabin to frame C2, maintains the vacuum for pressurization and instrument systems. In case of pressure drop, a microswitch, installed in the system, indicates the failure by illuminating "VACUUM LO" warning light on the advisory panel.

ATTITUDE INDICATOR

The attitude indicator provides a visual reference of actual airplane flight attitude. An index at the top of the indicator shows bank attitude relative to the bank scale which has index marks at 10°, 20°, 30°, 60° and 90° either side of the center mark.

Pitch and roll attitudes are shown by a miniature airplane superimposed over a symbolic horizon area divided into two sections by a white horizon bar. The upper "sky blue" area and the lower "ground" area have arbitrary pitch reference lines useful for pitch attitude control.

- 1) Pressure regulator
- 2) Ejector
- 3) Valve
- 4) Regulating and relief valve
- 5) Pressure switch
- 6) Failure warning light (Figure 7.3.8)

Figure 7.12.1 (1/2) - VACUUM SYSTEM


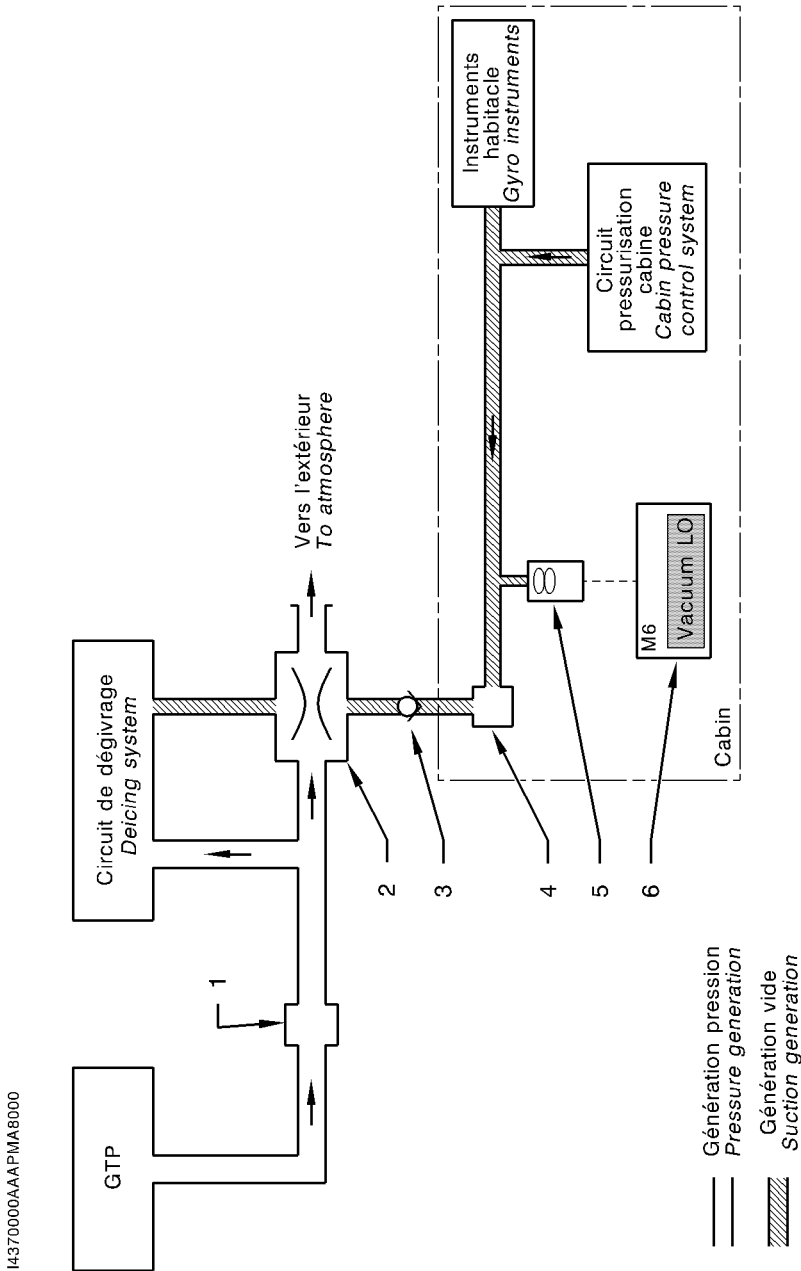


Figure 7.12.1 (2/2) - VACUUM SYSTEM

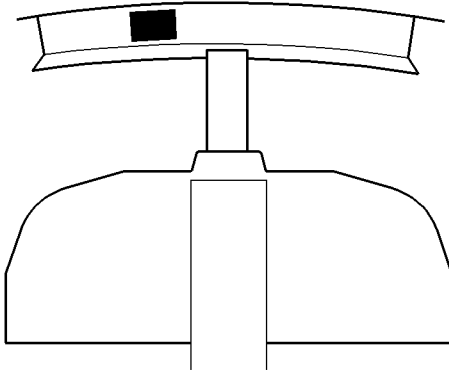

14342000AAA DMA8100

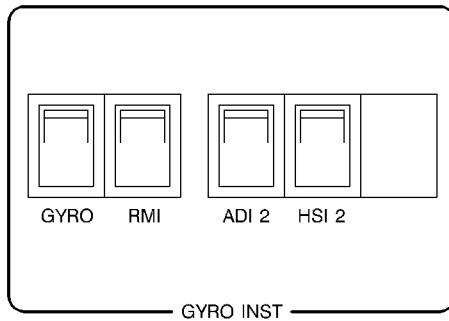


Figure 7.12.2 - GYROSCOPIC INSTRUMENTS CONTROL

GYROSCOPIC INSTRUMENTS CONTROL (Figure 7.12.2)

Gyroscopic instruments : electrical attitude gyros, HSI, RMI, ADI, etc... are controlled by switches located on instrument panel upper strip.

SUCTION GAGE

The suction gage is calibrated in inches of mercury and indicates the suction available for operation of the attitude indicator. The desired vacuum range is 4.4 to 5.2 in.Hg.

A vacuum reading out of this range may indicate a system malfunction or improper adjustment. In this case, all pneumatic instruments should be considered unreliable.

The suction gage is located on L.H. panel of pilot's instrument panel.

INTENTIONALLY LEFT BLANK

7.13 - ICE PROTECTION EQUIPMENT (Figure 7.13.1)

Ice protection equipment is as follows :

- Pneumatic deice system for inboard, central and outboard wing and for stabilizers : "AIRFRAME DE-ICE"
- Propeller electrical deice system : "PROP DE-ICE"
- Windshield electrical deice system : "L.WINDSHIELD" and "R.WINDSHIELD"
- Electrical heating system for both pitots and for the stall warning sensor : "PITOT 1 HTR" and "PITOT 2 & STALL HTR"
- Turbine air inlet deice systems : "INERT SEP"

Deicing check and control panel is located on the lower L.H. side of the instrument panel.

WING AND EMPENNAGE DEICING

A pneumatic deice system assures protection of wing leading edges, horizontal stabilizer, elevator horns and vertical stabilizer. The system automatically cycles when "AIRFRAME DE-ICE" switch is set to "ON". The 67-second cycle breaks down in two inflation cycles :

- a first cycle induces inflation of leading edges deicer boots in wing central and outboard sections,
- the second cycle induces inflation of leading edges deicer boots in horizontal stabilizer, elevator horns, vertical stabilizer and wing inboard section.

During each inflation cycle, one of the two corresponding warning lights located above "AIRFRAME DE-ICE" switch, remains illuminated.

Wing leading edge icing inspection light - see Chapter 7.8 Paragraph "EXTERIOR LIGHTING".

PROPELLER DEICING

Propeller deicing is accomplished through electrical heating of blade roots. This system operates cyclically and alternately on two opposite blades at the same time. Each cycle is 180 seconds long. The system operation is correct when green warning light located above "PROP DE ICE" switch illuminates. The cycles continue as long as the switch remains set to "ON".

WINDSHIELD DEICING

The windshields are deiced electrically by embedded heating resistors. The system includes a controller and two heat probes embedded in each windshield. They are operated by "L.WINDSHIELD" and "R.WINDSHIELD" switches.

When the switch is positioned to "ON", the controller supplies the heating resistors, the windshield temperature is monitored by probe # 1. When the temperature reaches 45°C (113°F), the controller cuts the electrical supply to the heating resistors and resumes supply when the temperature falls below 30°C (86°F). The cycle continues as long as the switch remains set to "ON".

In the event of failure by probe # 1, the controller receives the temperature data from probe # 2. The electrical supply to the heating resistors is cut when the windshield temperature reaches 56°C (133°F). In that case, the windshield is no longer heated, the pilot can reset the system by setting the switch to "OFF", then to "ON".

A green light located above "L.WINDSHIELD" and "R.WINDSHIELD" switches goes on when the heating resistors are being supplied.

HEATING OF PITOTS AND STALL WARNING SENSOR ("PITOT 1 HTR" AND "PITOT 2 & STALL HTR")


The two pitots, which supply airspeed indicators and the stall warning sensor are electrically heated. This deice equipment must be used even during flight into non-icing conditions ; in that case ("PITOT 1 HTR", "PITOT 2 & STALL HTR" switches set to "ON") when "PITOT 1", "PITOT 2" or "STALL HTR" are lit, corresponding probe heating has failed.

NOTE :

Correct operation of the audible stall warning may be altered by severe or prolonged icing.

TURBINE AIR INLET PROTECTION

Operation and description are set forth in Chapter 7.6 Paragraph "ENGINE AIR INLET".

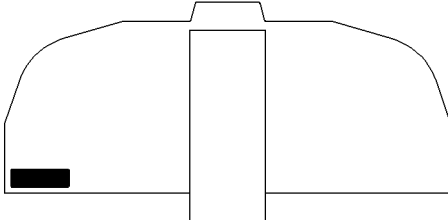

14330001AAAA MAB000

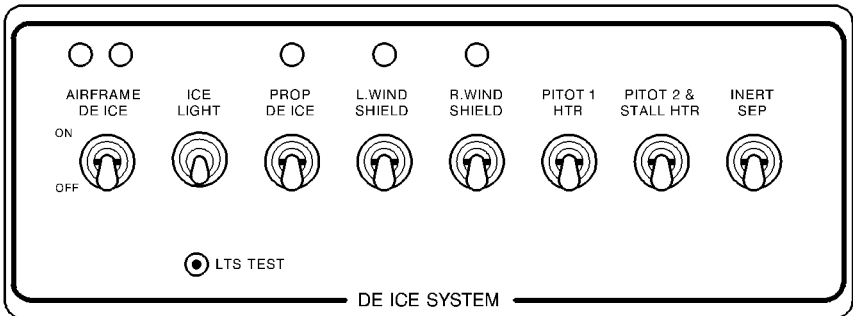


Figure 7.13.1 - DEICING CONTROL AND CHECK PANEL

7.14 - RADIO MASTER AND GROUND COMMUNICATION

(Figure 7.14.1)


The electrical supply of radio communication and radio navigation equipment assembly is controlled by the "RADIO MASTER" switch located on the "INT LIGHTS" panel.

Airplanes are equipped with the ground clearance function which enables to use the COM 1 installation from the BUS BAT when the "SOURCE" selector is "OFF". The ground clearance function is operating as soon as the "RADIO MASTER" switch is set to "ON" and the "SOURCE" selector is "OFF". The "GND CLR" green indicator light located near the "RADIO MASTER" switch is ON when the function is activated.


The "SOURCE" selector setting to the "BAT" or "GPU" positions de-activates the ground clearance function.

NOTE :

The electrical supply of radio communication and radio navigation equipment is automatically cut-off during the starting phase and is operating after the starter stop.

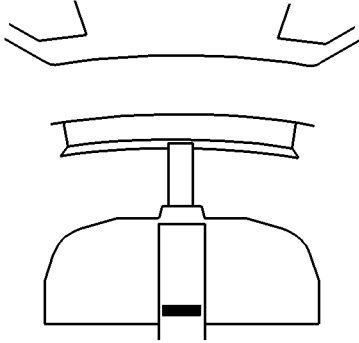

- 1) "RADIO MASTER" switch
- 2) "GND CLR" (ground clearance) ground communication indicator light

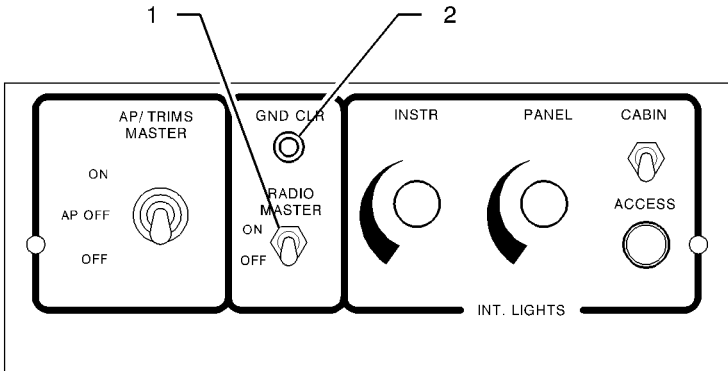

14230000AAA EIMA8200

Figure 7.14.1 - RADIO MASTER AND GROUND COMMUNICATION

7.15 - MISCELLANEOUS EQUIPMENT

STALL WARNING SYSTEM

The airplane is equipped with an electrically deiced stall sensor in the leading edge of the right wing. This sensor fitted with a vane is electrically connected to an audible warning. The vane senses the change in airflow over the wing and operates the warning unit, which produces a tone over the alarm speaker. This warning tone begins between 5 and 10 knots above the stall in all configurations.

The stall warning system should be checked during the preflight inspection by momentarily turning on the "SOURCE" selector and by manipulating the vane in the wing. The system is operational if a continuous tone (low-pitched sound) is heard on the alarms speaker.

NOTE :

The audible stall warning may be altered by severe or prolonged icing.

STATIC DISCHARGERS

As an aid in flight, static dischargers are installed to improve radio communications during flight by reducing interference from dust or various forms of precipitations (rain, snow or ice crystals).

Under these conditions, the build-up and discharge of static electricity from the trailing edges of the wings (flaps and ailerons), rudder, stabilator, propeller tips and radio antennas can result in loss of usable radio signals on all communications and navigation radio equipment. Usually, the ADF is first and VHF communication equipment is the last to be affected.

Installation of static dischargers reduces interference from precipitation static, but it is possible to encounter severe precipitation static conditions which might cause the loss of radio signals, even with static dischargers installed. Whenever possible, avoid known severe precipitation areas to prevent loss of dependable radio signals. If avoidance is impractical, minimize airspeed and anticipate temporary loss of radio signals while in these areas.

CABIN FIRE EXTINGUISHER

The fire extinguisher is located behind FWD R.H. seat. It is attached on the floor by means of a quick-disconnect support. A pressure gage allows checking the fire extinguisher condition. Follow the recommendations indicated on the extinguisher.

Pre-MOD70-0391-26D

If there is a R.H. cabinet, the fire extinguisher is fixed on the cabinet.

Post-MOD70-0391-26D

The fire extinguisher is located in the lower drawer of the R.H. cabinet, inserted in foam.

AUTOPILOT

Refer to Section 9 "Supplements".

ETM INDICATOR/COMPUTER (if installed)

Refer to Section 9 "Supplements".

MULTIFUNCTION DISPLAY

Refer to Section 9 "Supplements".

WEATHER RADAR (if installed)

Refer to Section 9 "Supplements".

EMERGENCY LOCATOR TRANSMITTER

The airplane is equipped with an emergency locator transmitter which enables to locate it in case of distress. It is located in fuselage rear section with a service door on fuselage R.H. side.

The emergency locator transmitter assembly is constituted of a transmitter supplied by a battery, of an antenna attached on upper fuselage and of a remote control located on R.H. instrument panel.

NOTE :

For test sequences, refer to manufacturer manual.

ELT ARTEX C406-1

Operation of the emergency locator transmitter is obtained as follows :

- from the instrument panel by setting "ON/ARM" remote control switch to "ON" (locator transmitter "ON/OFF" switch set to "OFF"),
- from the locator transmitter by setting its "ON/OFF" control switch to "ON",
- automatically in case of shock, when remote control switch is set to "ARM" and locator transmitter switch is set to "OFF".

A red indicator light located on "ELT" remote control switch in the cockpit indicates to the pilot the emergency locator transmitter is transmitting.

A red indicator light located above locator transmitter switch and a buzzer located in the fuselage rear section indicate the emergency locator transmitter is transmitting.

Reset after an inadvertent activation

- | | |
|---|--|
| 1) Set remote control switch or ELT switch to "ON". | a) The ELT keeps on transmitting emergency signal. |
| | b) On remote control box, red indicator light flashes. |
| | c) On ELT, red indicator light flashes. |
| | d) Near ELT, the buzzer sounds. |
| 2) Wait approximately for 1 second. | |

- | | |
|---|--|
| 3) Set remote control switch to "ARM" or ELT switch to "OFF". | a) The ELT does not transmit emergency signal any longer.

b) On remote control box, red indicator light illuminates for about 1 second, then goes off.

or

c) On ELT, red indicator light goes off.

d) Near ELT, the buzzer does no more sound. |
|---|--|

ELT KANNAD 406 AF

Operation of the emergency locator transmitter is obtained as follows :

- from the instrument panel by setting "ON/ARMED/RESET-TEST" remote control switch to "ON" (locator transmitter "ARM/ON/OFF" switch set to "ARM"),
- from the locator transmitter by setting its "ARM/ON/OFF" control switch to "ON",
- automatically in case of shock, when remote control switch is set to "ARMED" and locator transmitter switch is set to "ARM".

A red indicator light located on "ELT" remote control switch in the cockpit indicates to the pilot the emergency locator transmitter is transmitting.

A red indicator light located above locator transmitter switch and a buzzer located in the fuselage rear section indicate the emergency locator transmitter is transmitting.

Reset after an inadvertent activation

On "ON/ARMED/RESET-TEST" remote control switch, press on "RESET-TEST" or set locator transmitter switch to "OFF", then to "ARM".

ELT ARTEX ME 406

Operation of the emergency locator transmitter is obtained as follows :

- from the instrument panel by setting "ON/ARM" remote control switch to "ON" (locator transmitter "ON/ARM" switch set to "ARM"),
- from the locator transmitter by setting its "ON/ARM" control switch to "ON",
- automatically in case of shock, when remote control switch is set to "ARM" and locator transmitter switch is set to "ARM".

A red indicator light located on "ELT" remote control switch in the cockpit indicates to the pilot the emergency locator transmitter is transmitting.

A red indicator light located on R.H. side of locator transmitter switch and a buzzer located in the fuselage rear section indicate the emergency locator transmitter is transmitting.

Reset after an inadvertent activation

- | | |
|---|--|
| 1) Set remote control switch or ELT switch to "ON". | a) The ELT keeps on transmitting emergency signal. |
| | b) On remote control box, red indicator light flashes. |
| | c) On ELT, red indicator light flashes. |
| | d) Near ELT, the buzzer sounds. |
| 2) Wait approximately for 1 second. | |

- 3) Set remote control switch to "ARM" or ELT switch to "ARM".
- a) The ELT does not transmit emergency signal any longer.
 - b) On remote control box, red indicator light illuminates for about 1 second, then goes off.

or
 - c) On ELT, red indicator light goes off.
 - d) Near ELT, the buzzer does no more sound.

SECTION 8

HANDLING, SERVICING AND MAINTENANCE

TABLE OF CONTENTS

	Page
8.1 GENERAL	8.1.1
8.2 IDENTIFICATION PLATE	8.2.1
8.3 PUBLICATIONS	8.3.1
8.4 INSPECTION PERIODS	8.4.1
8.5 ALTERATIONS OR REPAIRS	8.5.1
8.6 GROUND HANDLING	8.6.1
TOWING	8.6.1
PARKING	8.6.1
TIE-DOWN	8.6.3
JACKING	8.6.3
LEVELING	8.6.3
FLYABLE STORAGE	8.6.5
LONG TERM STORAGE WITHOUT FLYING	8.6.5
8.7 SERVICING	8.7.1
MAINTENANCE	8.7.1
ENGINE OIL	8.7.1
FUEL	8.7.2
LANDING GEAR	8.7.7
OXYGEN	8.7.8

TABLE OF CONTENTS

(Continued)

	Page
8.8 AIRPLANE CLEANING AND CARE	8.8.1
WINDSHIELD AND WINDOWS	8.8.1
PAINTED SURFACES	8.8.2
PROPELLER CARE	8.8.2
ENGINE CARE	8.8.2
INTERIOR CARE	8.8.2
8.9 UTILIZATION BY COLD WEATHER (- 0°C to - 25°C) OR VERY COLD WEATHER (- 25°C to - 40°C)	8.9.1

8.1 - GENERAL

This section contains the procedures recommended by the manufacturer for the proper ground handling and routine care and servicing of TBM 850 airplane. Also included in this section are the inspection and maintenance requirements which must be followed if your airplane is to retain its performance and dependability.

It is recommended that a planned schedule of lubrication and preventive maintenance be followed, and that this schedule be tailored to the climatic or flying conditions to which the airplane is subjected.

For this, see Manufacturer's Maintenance Manual.

INTENTIONALLY LEFT BLANK

8.2 - IDENTIFICATION PLATE

Any correspondence regarding your airplane should include its serial number. This number together with the model number, type certificate number and production certificate number are stamped on the identification plate attached to the left side of the fuselage beneath the horizontal stabilizer.

INTENTIONALLY LEFT BLANK

8.3 - PUBLICATIONS

When the airplane is delivered from the factory, it is supplied with a Pilot's Operating Handbook and supplemental data covering optional equipment installed in the airplane (refer to Section 9 "Supplements" and pilot's guides).

In addition, the owner may purchase the following :

- Maintenance Manual
- Wiring Manual
- Illustrated Parts Catalog (Bilingual)
- Illustrated Tool and Equipment Manual
- Catalog of Service Bulletins, Service Letters and Service Information Letters

CAUTION

**PILOT'S OPERATING HANDBOOK MUST ALWAYS
BE IN THE AIRPLANE**

INTENTIONALLY LEFT BLANK

8.4 - INSPECTION PERIODS

Refer to regulations in force in the certification country for information concerning preventive maintenance to be carried out.

A maintenance Manual must be obtained prior to performing any preventive maintenance to make sure that proper procedures are followed. Maintenance must be accomplished by licensed personnel.

INTENTIONALLY LEFT BLANK

8.5 - ALTERATIONS OR REPAIRS

It is essential that the Airworthiness authorities be contacted prior to any alterations or repairs on the airplane to make sure that airworthiness of the airplane is not violated. Alterations or repairs must be accomplished by licensed personnel.

INTENTIONALLY LEFT BLANK

8.6 - GROUND HANDLING**CAUTION**

**ONLY MOVE OR TOW THE AIRPLANE WITH SOMEONE IN THE
COCKPIT**

TOWING**CAUTION**

**USING THE PROPELLER FOR GROUND HANDLING COULD RESULT
IN SERIOUS DAMAGE, ESPECIALLY IF PRESSURE OR PULL IS
EXERTED ON BLADE TIPS**

The airplane should be moved on the ground with a towing bar and a suitable vehicle in order not to damage the nose gear steering mechanism. Nose gear fork is equipped with an integrated towing fitting.

CAUTION

**DO NOT TOW THE AIRPLANE WHEN CONTROLS ARE SECURED
WHEN TOWING WITH A VEHICLE, DO NOT EXCEED THE NOSE
GEAR TURNING ANGLE, AS THIS MAY RESULT IN DAMAGE TO THE
GEAR AND STEERING MECHANISM**

(see Figure 8.6.1)

PARKING

When parking the airplane, head it into the wind. Do not set the parking brake when brakes are overheated or during cold weather when accumulated moisture may freeze the brakes. Care should be taken when using the parking brake for an extended period of time during which an air temperature rise or drop could cause difficulty in releasing the parking brake or damage the brake system.

Make sure that the fuel selector is set to "OFF".

14091000AAAABMA8000

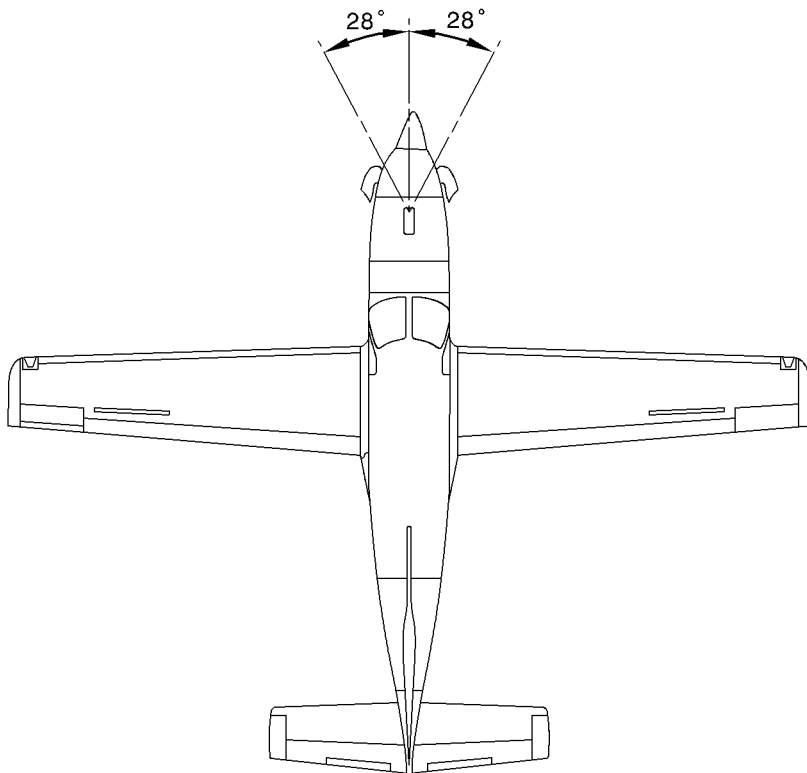


Figure 8.6.1 - TURNING ANGLE LIMITS

NOTE :

Do not use solar screens or shields installed on the airplane inside, or leave sun visors down against windshield when airplane on ground. The reflected heat from these items causes a temperature increase which accelerates the crack growth or crazing and may cause the formation of bubbles in the inner layer of multilayer windshields.

Beyond 24 hours parking, use windshield protection screen provided with lateral and underside straps.

For long term parking, blanking covers (static ports, pitot, engine air inlet), cockpit cover, tie-downs, wheel chocks and control lock are recommended.

In severe weather and high wind conditions, tie the airplane down as outlined in the following paragraph.

TIE-DOWN

Proper tie-down procedure is the best protection against damage to the airplane by gusty or strong winds. To tie down the airplane securely, proceed as follows :



- Install control lock (see Figure 8.6.2).
- Chock all wheels.
- Tie sufficiently strong ropes or chains to hold airplane down ; insert a rope in each tie-down hole located on flap hinge arm ; secure each rope to a ramp tie-down or to mooring rod.
- Check that doors are closed and locked.

JACKING

When it is necessary to jack the airplane off the ground, refer to Maintenance Manual for specific procedures and equipment required.

LEVELING

Level the airplane as described in Maintenance Manual.

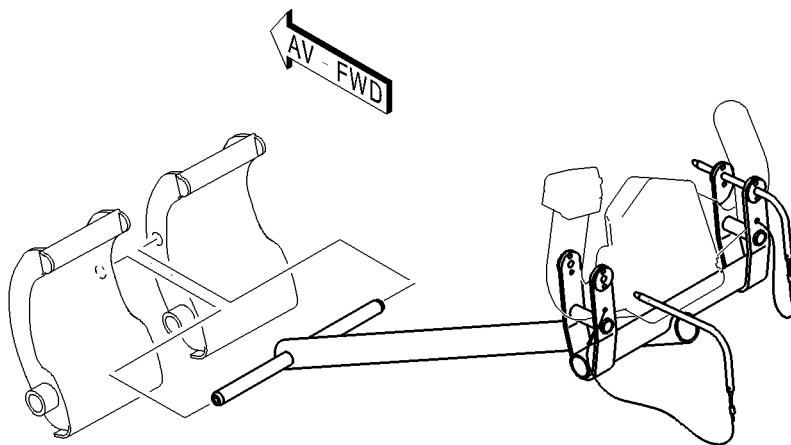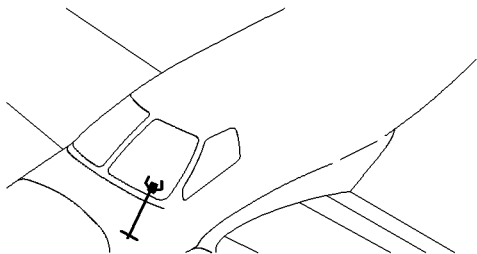

14101000AAADMA8002

Figure 8.6.2 - CONTROL LOCK DEVICE

FLYABLE STORAGE

Airplanes placed in storage for a maximum of 28 days are considered in flyable storage.

Storage from 0 to 7 days :

- Engine : according to Maintenance Manual P & W C.

Airplane fueling :

- Keep fuel tanks full to minimize condensation in the tanks. Keep the battery fully charged to prevent the electrolyte from freezing in cold weather.
Close oxygen cylinder isolation valve.

Storage from 8 to 28 days :

- Engine : according to Maintenance Manual P & W C.

Airplane fueling :

- Keep fuel tanks full to minimize condensation in the tanks. Keep the battery fully charged to prevent the electrolyte from freezing in cold weather.
Close oxygen cylinder isolation valve.

Battery (remaining in the airplane or removed) :

- Disconnect battery and check its charge level at regular intervals.

LONG TERM STORAGE WITHOUT FLYING

Refer to Maintenance Manual for the procedures to follow.

INTENTIONALLY LEFT BLANK

8.7 - SERVICING

MAINTENANCE

In addition to the preflight inspection (refer to Section 4, "Normal Procedures"), servicing, inspection and test requirements for the airplane are detailed in the Maintenance Manual.

Maintenance Manual outlines all items which require servicing, inspection or testing or overhaul.

ENGINE OIL

Oil type :

CAUTION

DO NOT MIX DIFFERENT VISCOSITIES OR SPECIFICATIONS OF OIL AS THEIR DIFFERENT CHEMICAL STRUCTURE CAN MAKE THEM INCOMPATIBLE

Specification

Nominal Viscosity	Specification	NATO Code
5cSt	MIL-PRF-23699G	O.156 (STD) O.154 (HTS)

Figure 8.7.1 - RECOMMENDED ENGINE OIL TYPES

(Reference : Service Bulletin P & W - C. No. 14001 at the latest revision)

Oil capacity :

System total capacity :

12.7 Quarts (12 Litres) (oil cooler included)

Usable capacity :

6 Quarts (5.7 Litres)

Servicing :

The engine oil should be changed and the oil filter cleaned/replaced at intervals recommended in Pratt & Whitney Canada Engine Maintenance Manual (EMM) (Ref. Chapter 72-00-00, Table 601, Periodic Inspections).

Oil level check :

To avoid overfilling of oil tank, and high oil consumption, an oil level check is recommended within 30 minutes after engine shutdown. Ideal interval is 15 to 20 minutes. If more than 30 minutes have passed and the dipstick indicates that oil is needed, start the engine and run at LO-IDLE for five minutes, and recheck oil level.

Check oil level against marking on dipstick and top-up as required. Normal oil level is between MAX HOT and one US quart (0.83 Imp. Quart, 0.95 litres) below MAX HOT, with engine in horizontal attitude.

NOTE :

Filling the oil to the maximum level may result in high consumption rate, with the oil exiting through the accessory gearbox breather.

CAUTION

**WHEN FILLER CAP ASSEMBLY IS INSTALLED AND LOCKED, NO
MOVEMENT IS ALLOWED**

FUEL

Total capacity each tank : 145.3 us gal (550 l).

NOTE :

To minimize condensation, it is recommended that airplane be refueled after each flight, respecting weight and balance limits.

CAUTION

**NEVER FLY THE AIRPLANE WITH CONTAMINATED (WATER, SAND,
RUST, DUST...) OR UNAPPROVED FUEL**

Before each flight and after each fueling, use a sampler to bleed off some fuel through each tank and fuel filter drain to detect possible contamination and be sure that fuel used is the proper quality. If contamination is present, continue draining through all draining points until fuel is free of contamination. If quality of fuel used is not correct, defuel airplane completely and refuel with proper quality fuel.

CAUTION

DURING FUELING OPERATIONS, TAKE CARE NOT TO DAMAGE PNEUMATIC DEICER BOOTS LOCATED ON WING LEADING EDGE.

THE USE OF AVIATION GASOLINE (AVGAS) MUST BE RESTRICTED TO EMERGENCIES ONLY. AVGAS WILL NOT BE USED FOR MORE THAN 150 CUMULATIVE HOURS DURING ANY PERIOD BETWEEN ENGINE OVERHAUL

WARNING

DURING ALL FUELING OPERATIONS, FIRE FIGHTING EQUIPMENT MUST BE AVAILABLE ; ATTACH GROUNDING WIRE TO AN UNPAINTED METALLIC PART OF THE AIRPLANE.

DO NOT OPERATE ANY AVIONICS OR ELECTRICAL EQUIPMENT ON THE AIRPLANE DURING FUELING. DO NOT ALLOW OPEN FLAME OR SMOKING IN THE VICINITY OF THE AIRPLANE WHILE FUELING

NOTE :

Use of AVGAS must be recorded in engine module logbook

US Specification (US)	French Specification (FR)	English Specification (UK)	NATO Code
ASTM-D1655 JET A ASTM-D1655 JET A1 ASTM-D1655 JET B	AIR 3405C Grade F35	DERD 2494 Issue 9	F35 without additive
MIL-DTL-5624 Grade JP-4	AIR 3407B	DERD 2454 Issue 4 Amdt 1	F40 with additive
MIL-DTL-5624 Grade JP-5	AIR 3404C Grade F44	DERD 2452 Issue 2 Amdt 1	F44 with additive when utilization
MIL-DTL-83133 Grade JP-8	AIR 3405C Grade F34	DERD 2453 Issue 4 Amdt 1	F34 with additive S748
	AIR 3404C Grade F43	DERD 2498 Issue 7	F43 without additive

Figure 8.7.2 - RECOMMENDED FUEL TYPES
(Reference : Service Bulletin P & W C. No. 14004)

Fuel additives

Fuel used must contain an anti-ice additive conforming to MIL-I-27686 or MIL-I-85470 specification.

Strict adherence to recommended preflight draining instructions as called for in Section 4 will eliminate any free water accumulations from the tank sumps. While small amounts of water may still remain emulsified in the gasoline, it will normally be consumed and go unnoticed in the operation of the engine.

One exception to this can be encountered when operating under the combined effect of use of certain fuels, with high humidity conditions on the ground followed by flight at high altitude and low temperature. Under these unusual conditions, small amounts of water emulsified can precipitate from the fuel stream and freeze in sufficient quantities to induce partial icing of the engine fuel system.

While these conditions are quite rare and will not normally be a problem to owners and operators, they do exist in certain areas of the world and consequently must be dealt with, when encountered.

Therefore, to alleviate the possibility of fuel icing occurring under these unusual conditions, it is required to add an ethylene glycol monomethyl ether (EGME or DIEGME) compound to the fuel supply.

The introduction of an EGME or DIEGME compound into the fuel provides two distinct effects :

- it absorbs the dissolved water from the fuel
- alcohol has a freezing temperature depressant effect.

EGME or DIEGME must be carefully mixed with the fuel in concentration, it must be between a minimum of 0.06 % and a maximum of 0.15 % by volume. Figure 8.7.3 provides EGME or DIEGME / fuel mixing ratio information.

CAUTION

DO NOT PERMIT THE CONCENTRATE OF EGME OR DIEGME TO COME IN CONTACT WITH THE AIRPLANE FINISH OR FUEL TANK MIXING OF THE EGME OR DIEGME WITH THE FUEL IS EXTREMELY IMPORTANT. AN EXCESSIVE CONCENTRATION (GREATER THAN 0.15 % BY VOLUME MAXIMUM) WILL RESULT IN DETRIMENTAL EFFECTS TO THE FUEL TANKS BY DETERIORATION OF PROTECTIVE PRIMER, SEALANTS AND SEALS OF SYSTEM AND ENGINE COMPONENTS. USE ONLY BLENDING EQUIPMENT RECOMMENDED BY THE MANUFACTURER TO OBTAIN PROPER PROPORTIONING.

Prolonged storage of the airplane will result in a water buildup in the fuel which "leeches out" the additive. An indication of this is when an excessive amount of water accumulates in the fuel tank sumps. The concentration can be checked using a differential refractometer. It is imperative that the technical manual for the differential refractometer be followed explicitly when checking the additive concentration.

Fuel and fuel additives in Ukraine and CIS countries

It is possible to use kerosene GOST 10227 RT with addition of anti-icing liquid :

- liquid "И" - GOST 8313-88

Above-mentioned liquid is added in the quantity equal to 0.3 percent per volume.

CAUTION

REFER TO SERVICE BULLETIN P & WC No. 14004 AT ITS LATEST REVISION FOR APPROPRIATE QUANTITIES

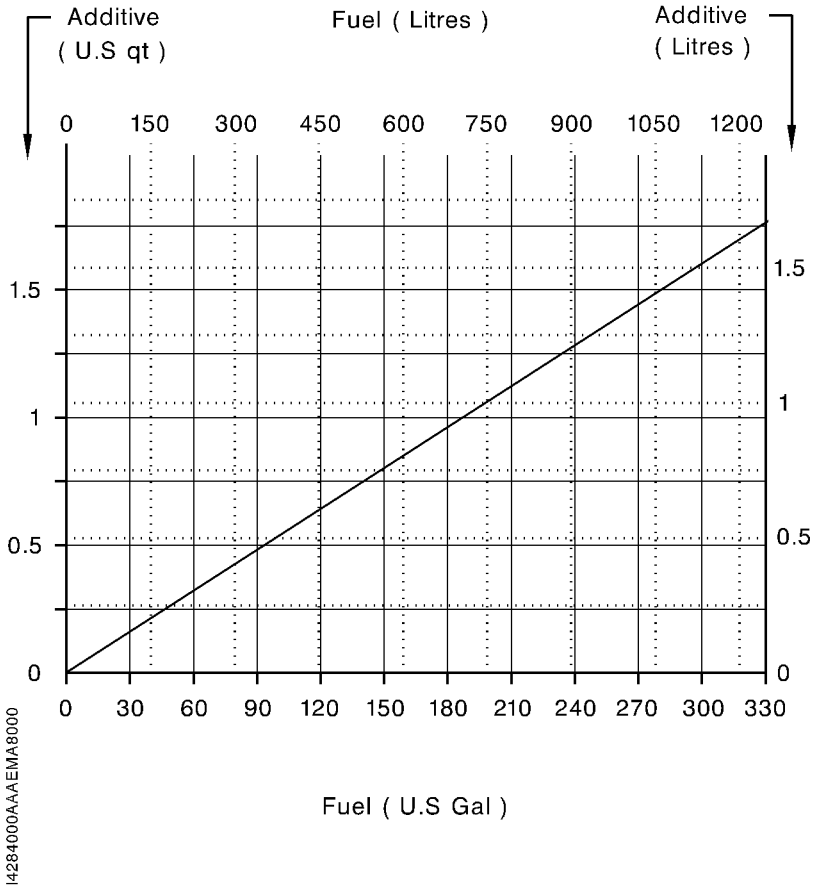


Figure 8.7.3 - ADDITIVE MIXING RATIO (EGME or DIEGME)

LANDING GEAR**Nose gear tire :**

5.00-5 10 PR – Inflation pressure : 98 psi (6.7 bars) *

Main gear tires :

18 5.5 10 PR – Inflating pressure : 135 psi (9.32 bars) *

Nose gear shock absorber :

Fill with hydraulic fluid AIR 3520 B (MIL.H5606E) ; inflate with nitrogen to 87 psi (6 bars).

Main gear shock absorbers :

Fill with hydraulic fluid AIR 3520 B (MIL.H5606E) ; inflate with nitrogen to 160 psi (11 bars).

Hydraulic system :

Check every 100 hours and service with AIR 3520 B (MIL.H5606E) hydraulic fluid.

Brakes :

Service as required with AIR 3520 B (MIL.H5606E) hydraulic fluid.

NOTE :

A higher inflation pressure has to be applied to tires and shock absorbers when in very cold conditions (refer to Chapter 8.9).

- (*) Tire inflation pressures are given for an airplane on ground at 21°C.
An ambient temperature change of 3°C produces approximately 1 % pressure change.

OXYGEN

The oxygen replenishment device is installed directly on the oxygen cylinder head. It consists of a charging valve and a pressure gage graduated from 0 to 2000 PSIG. A chart - see Figure 8.7.4, located on the inside of the cylinder service door, gives the maximum cylinder charge pressure for the ambient temperature.

14112400AAAMAB000

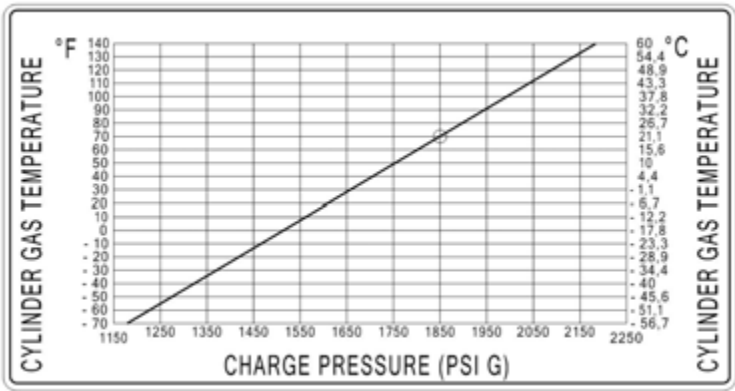


Figure 8.7.4 - Charge pressure chart

Replenishment procedure**WARNING**

MAKE SURE THAT THE AIRPLANE IS FITTED WITH A GROUNDING CABLE AND IS PROPERLY GROUNDED. THE OXYGEN CART MUST BE ELECTRICALLY BONDED TO THE AIRPLANE.

DO NOT OPERATE THE AIRPLANE ELECTRICAL SWITCHES OR CONNECT/DISCONNECT GROUND POWER DURING OXYGEN SYSTEM REPLENISHMENT.

DO NOT OPERATE THE OXYGEN SYSTEM DURING REFUELING/DEFUELING OR PERFORM ANY OTHER SERVICING PROCEDURE THAT COULD CAUSE IGNITION.

INTRODUCTION OF PETROLEUM BASED SUBSTANCES SUCH AS GREASE OR OIL TO OXYGEN CREATES A SERIOUS FIRE HAZARD. USE NO OIL OR GREASE WITH THE OXYGEN REPLENISHMENT EQUIPMENT.

ALWAYS OPEN SHUT-OFF VALVE SLOWLY TO AVOID GENERATING HEAT AND REPLENISH THE SYSTEM SLOWLY AT A RATE NOT EXCEEDING 200 PSIG (13.7 BARS) PER MINUTE

CAUTION

REPLENISHMENT OF THE OXYGEN SYSTEM SHOULD ONLY BE CARRIED OUT BY QUALIFIED PERSONNEL

NOTE :

The cylinder is fully charged at a pressure of 1850 PSIG (127 bars) at a temperature of 70° F (21° C). If the cylinder temperature differs from 70° F (21° C), refer to Figure 8.7.4 which lists the required pressures according to the cylinder temperature.

Open the oxygen service door at the rear of the right wing fairing.

Measure the oxygen cylinder temperature.

Make sure the thermometer indication is constant. Note the indication.

Refer to the temperature/pressure chart for the correct oxygen cylinder pressure.

If the pressure on the oxygen cylinder gage is lower than the maximum for the cylinder temperature, fill the oxygen cylinder.

The minimum pressure for the oxygen cylinder is 217 PSIG (15 bars).

CAUTION

**IF THE OXYGEN CYLINDER PRESSURE FALLS BELOW THE
MINIMUM, THE CYLINDER MUST BE PURGED BEFORE REFILLING.
INFORM MAINTENANCE DEPARTMENT.**

Make sure the area around the oxygen cylinder charging valve is clean. Remove the cap from the charging valve.

Make sure the oxygen supply hose is clean and connect it to the charging valve.

Slowly pressurize the oxygen cylinder to the correct pressure.

Close the oxygen supply and let the cylinder temperature become stable.

Monitor the oxygen pressure on the gage and fill to the correct pressure if necessary.

Release the pressure in the oxygen supply hose and disconnect from the charging valve.

Install the cap on the charging valve.

Make sure all the tools and materials are removed and the work area is clean and free from debris.

Close the oxygen service door.

Passengers' masks repacking instructions

WARNING

**DO NOT USE OIL OR OTHER PETROLEUM BASED LUBRICANTS ON
PASSENGER OXYGEN MASK OR DEPLOYMENT CONTAINER. OIL
BASED LUBRICANTS ARE A FIRE HAZARD IN OXYGEN-RICH
ENVIRONMENTS**

WARNING

REPACKING PROCEDURES SHALL BE PERFORMED BY PERSONNEL FAMILIAR WITH THE INSTRUCTIONS AND WARNINGS IN THIS DOCUMENT. IMPROPERLY PACKED MASKS CAN DAMAGE THE MASKS OR RESULT IN FAILURE OF THE MASKS TO DEPLOY


WARNING

MASKS SHALL BE REPACKED IN AN AREA FREE OF OIL, GREASE, FLAMMABLE SOLVENTS OR OTHER CONTAMINANTS


Inspect and disinfect mask and deployment container with an aqueous solution of Zephiran Chloride ("Scott Aviation" P/N 00-2572) or with disinfection cleaners ("EROS" P/N SAN50). After disinfecting and thoroughly drying the mask, lightly dust the outside of the facepiece with Neo-Novacite powder ("Scott Aviation" P/N 00-736). Contamination can be removed with mild soap and water solution.

Fold headstrap into facepiece. Pull lanyard cord out to side of facepiece so that it does not interfere with repacking.


Lay reservoir bag on flat surface and smooth out wrinkles.

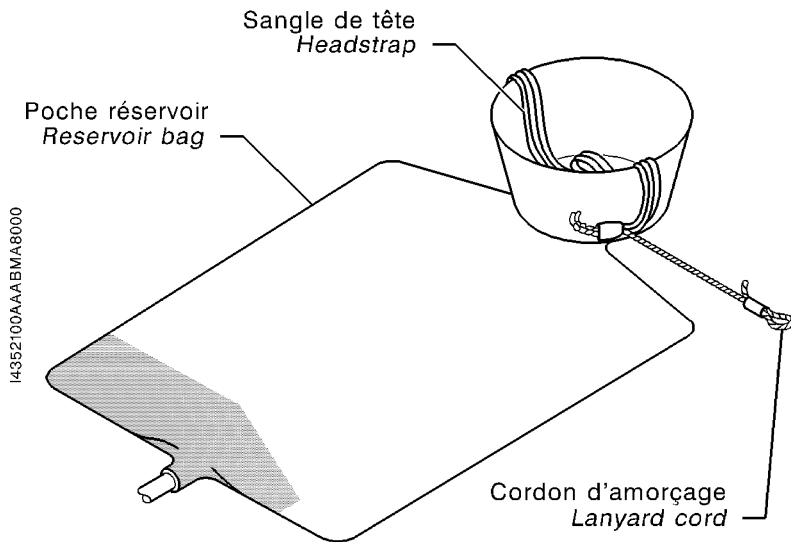

Gently fold reservoir bag lengthwise into thirds (outside edges folded inward over center of bag). Do not crease bag.

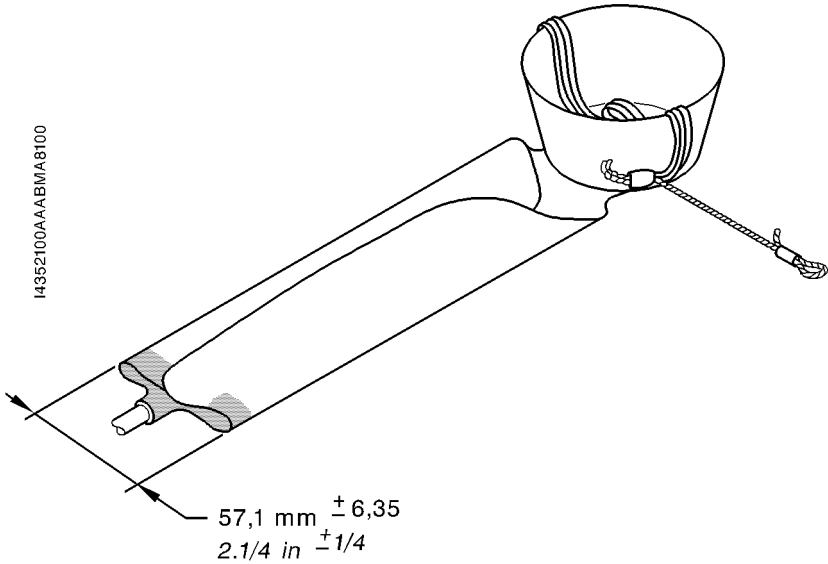


Fold reservoir bag away from breathing valves and into facepiece. Make sure bag does not cover breathing valves.

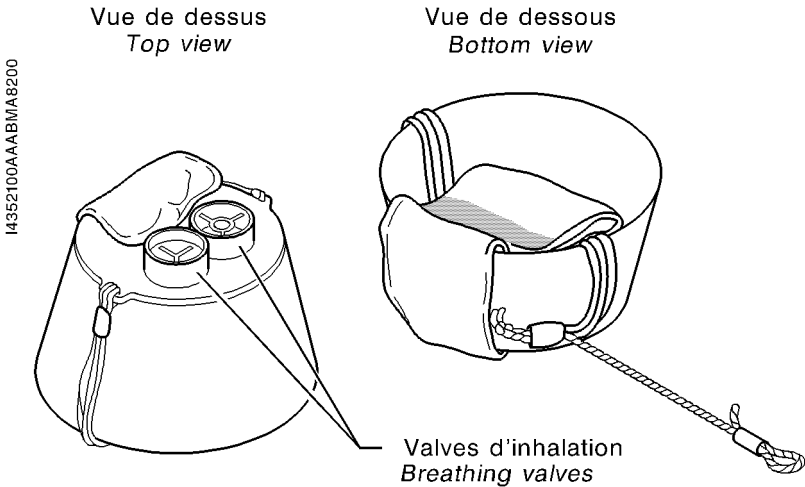

Coil oxygen tubing inside facepiece over reservoir bag.

14352100AAA BMA 18000

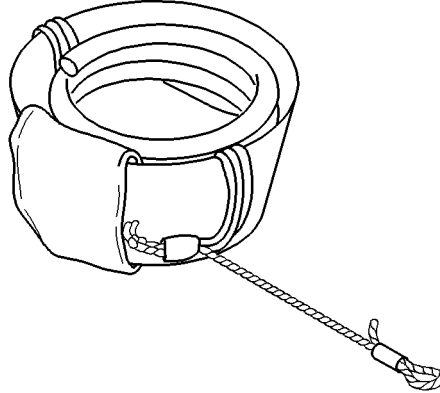

Connect oxygen tubing to manifold oxygen fitting.

WARNING

MAKE SURE LANYARD PIN IS INSERTED INTO CORRECT CHECK VALVE FOR MASK BEING INSTALLED. CROSS CONNECTED PINS WILL RESULT IN PASSENGERS PULLING LANYARD CORDS ONLY TO INITIATE OXYGEN FLOW TO ANOTHER MASK

Insert lanyard pin into corresponding check valve.

Place mask facepiece - first in deployment container. Make sure that oxygen tubing and lanyard cord are free to deploy and are not caught between the container and lid.

Close and latch deployment container lid.

INTENTIONALLY LEFT BLANK

8.8 - AIRPLANE CLEANING AND CARE

WINDSHIELD AND WINDOWS

The windshield and windows should be cleaned with an airplane windshield cleaner.

NOTE :

Refer to the Maintenance Manual for products and procedures to apply.

Apply the cleaner sparingly with soft cloths and rub with moderate pressure until all dirt, oil scum and bug stains are removed. Allow the cleaner to dry, then wipe it off with soft flannel cloth.

CAUTION

DO NOT USE ANY OF THE FOLLOWING PRODUCTS ON, OR FOR CLEANING WINDOWS : METHANOL, METHYLATED ALCOHOL, GASOLINE, BENZENE, XYLENE, METHYL-ETHYL-KETONE, ACETONE, CARBON TETRACHLORIDE, LACQUER PAINT THINNERS, COMMERCIAL OR HOUSEHOLD WINDOW CLEANING SPRAYS. IN CASE OF DOUBT CONCERNING A PRODUCT, DO NOT USE IT.

DURING CLEANING OPERATION, AVOID WEARING OBJECTS SUCH AS RING, WATCH, BRACELET AND EXERCISE CARE TO PREVENT BUTTONS, BUCKLES AND ANY HARD OBJECTS FROM TOUCHING THE WINDSHIELD AND THE WINDOWS.

ADHESIVE TAPES OTHER THAN MINNESOTA 3M TYPE 670 SHALL NOT BE USED ON ACRYLIC SURFACES.

NEVER USE BUFFING MACHINES AS EXCESSIVE FORCES OR SPEEDS MIGHT PRODUCE REDHIBITORY DEFECTS

Follow by carefully washing with a mild detergent and plenty of water. Rinse thoroughly, then dry with a clean moist chamois. Do not rub the plastic with a dry cloth since this builds up an electrostatic charge which attracts dust. Waxing will finish the cleaning operation. A thin, even coat of wax polished out by hand with clean soft flannel cloth will fill in minor scratches and help prevent further scratching.

Do not use a canvas cover on the windshield unless freezing rain or sleet is anticipated since the cover may scratch the plastic surface.

PAINTED SURFACES

Refer to Maintenance Manual for the products and procedures to apply.

PROPELLER CARE

Preflight inspection of propeller blades for nicks and cleaning them occasionally with a cloth soaked with soapy water to clean off grass and bug stains will assure long blade life. Small nicks on the propeller, particularly near the tips and on the leading edges, should be dressed out as soon as possible since these nicks produce stress concentrations, and if not removed, may result in cracks. Never use an alkaline cleaner on the blades ; remove grease and dirt.

ENGINE CARE

Refer to Maintenance Manual for the procedures to follow.

INTERIOR CARE

To remove dust and loose dirt from the upholstery and carpet, clean the interior regularly with a vacuum cleaner.

For additional information, refer to Maintenance Manual.

8.9 - UTILIZATION BY COLD WEATHER (- 0°C TO - 25°C) OR VERY COLD WEATHER (- 25°C TO - 40°C)

NOTE :

Check pressure values in a hangar heated at about 15°C with control equipment at room temperature.

If a landing is foreseen by cold or very cold weather or in case of airplane prolonged operation in such conditions, it is recommended to prepare the airplane as follows :

- 1 - Smear with silicone grease the door and engine cowlings seals, as well as the leading edge deicers.
- 2 - Apply engine oil on the engine cowling latches.
- 3 - Inflate main landing gear shock absorbers to 247 psi (17 bars) at a room temperature of 15°C.
- 4 - Position a 0.59 in (15 mm) shim at the bottom of the piston tube and against forward landing gear half-fork to reduce shock absorber travel. Refill with hydraulic liquid. Remove the shim and inflate shock absorber to 138 psi (9.5 bars) at a room temperature of 15°C.
- 5 - Inflate main landing gear tires to 130 psi (8.96 bars) and nose tire to 102 psi (7 bars) at a room temperature of 15°C.

NOTE :

See Table 1 hereafter to check pressure values and to inflate tires and shock absorbers.

Check pressure values and inflate, if necessary, according to following table 1 during operation in cold weather only :

		OAT (°C)	- 40°	- 30°	- 20°	- 10°	+ 15°
P R E S S U R E p s i (b a r s)	Main landing gear shock absorber	189 (13)	196 (13.5)	203 (14)	218 (15)	247 (17)	
	Nose gear shock absorber	102 (7)	109 (7.5)	116 (8)	123 (8.5)	138 (9.5)	
	Main landing gear tire	144 (9.96)	144 (9.96)	130 (8.96)	130 (8.96)	130 (8.96)	
	Nose gear tire	94 (6.5)	94 (6.5)	102 (7)	102 (7)	102 (7)	

Table 1

SUPPLEMENT
"BENDIX / KING" VERTICAL SPEED AND
ALTITUDE SELECTOR
TYPE KAS 297C

TABLE OF CONTENTS

	Page
1 - GENERAL	9.2.2
2 - LIMITATIONS	9.2.2
3 - EMERGENCY PROCEDURES	9.2.2
4 - NORMAL PROCEDURES	9.2.3
5 - PERFORMANCE	9.2.6
6 - WEIGHT AND BALANCE	9.2.6
7 - DESCRIPTION	9.2.7

SECTION 1 GENERAL

This supplement is provided to acquaint the pilot with the limitations as well as the normal and emergency operating procedures of the BENDIX / KING KAS 297C Vertical Speed and Altitude Selector when added to a KFC 275 or KFC 325 Flight Control System.

The KAS 297C provides the pilot with the following features : ability to select vertical speed hold ; ability to select, arm and, upon approaching the selected altitude, automatically transfer into Altitude Hold ; altitude alerting as specified by the regulation.

SECTION 2 LIMITATIONS

When the airplane is equipped with the KAS 297C, in addition to the autopilot, limitations are identical to those of the standard airplane plus those of the autopilot.

Refer to Section 2 "Limitations" of the basic Pilot's Operating Handbook and of the Autopilot Supplement.

SECTION 3 EMERGENCY PROCEDURES

No change in the basic emergency procedures of the airplane described in Section 3 "Emergency Procedures" of the basic Pilot's Operating Handbook and of the Autopilot Supplement.

SECTION 4 NORMAL PROCEDURES

These procedures supplement those of standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook and of the Autopilot Supplement.

BEFORE TAXIING

KAS 297C TEST

- 1 - "TEST" knob of KMC 321 **PRESS**
- 2 - Check :
 - All legends and digits are displayed on the KAS 297C.

VERTICAL SPEED MODES

MODE ENGAGEMENT

- 1 - Select knob **PULL**, then **ROTATE**
to display the desired vertical speed
- 2 - "ENG" push-button **PRESS**

VERTICAL SPEED CHANGE

- 1 - Using "CWS"
 - "CWS" push-button **PRESS**
until the desired vertical speed is displayed
 - "CWS" push-button **RELEASE**
when the desired vertical speed is reached

The autopilot will maintain the desired vertical speed.



VERTICAL SPEED MODES (Cont'd)

- 2 - Using Vertical Trim Control
 - Vertical Trim Control **PRESS**
either "UP" or "DN"

The search of the new vertical speed will be performed at the rate of 100 ft/min per second.

- Vertical Trim Control **RELEASE**
when desired time in seconds has passed
(for example : press 5 seconds
for a change of 500 ft/min)

The autopilot will maintain the desired vertical speed.

CAUTION

VERTICAL SPEED HOLD MODE USE REQUIRES MONITORING OF THE INDICATED SPEED ESPECIALLY WHEN INDICATED SPEEDS ARE LOW (CLIMB) OR HIGH (DESCENT).

CAUTION

WHEN NEARING A PRESELECTED ALTITUDE. VERTICAL TRIM USE OR PRESELECTED ALTITUDE CHANGES WHILE THE SYSTEM IS IN CAPT MODE, WILL CANCEL THE MODE AND THE PRESELECTED ALTITUDE WILL BE DISREGARDED. THE SYSTEM MUST BE RE-ARMED BY THE PILOT. IF THE AIRPLANE HAS PASSED BEYOND THE SELECTED ALTITUDE, THE PILOT MUST ALSO RE-ESTABLISH THE NECESSARY INTERCEPT ATTITUDE

ALTITUDE PRESELECT MODES

MODE ENGAGEMENT

- 1 - Select knob **PRESS, then ROTATE to display the desired altitude**
- 2 - "ARM" push-button **PRESS**
- 3 - Display an airplane attitude or a longitudinal mode ("IAS" or "VS") necessary to intercept the selected altitude.

SECTION 5

PERFORMANCE

No change in the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.


SECTION 6

WEIGHT AND BALANCE

Weight and balance corresponding to the KAS 297C "BENDIX KING" autopilot are given in the optional equipment list attached to Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

SECTION 7
DESCRIPTION

7.1 - KAS 297C CONTROLS AND DISPLAYS

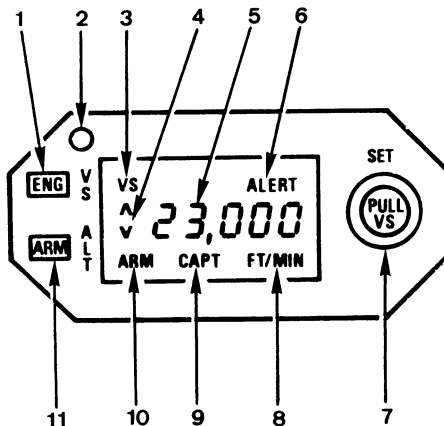

S-4-700-22-0003


Figure 9.2.1 - KAS 297C CONTROLS AND DISPLAYS

- Item 1 - VERTICAL SPEED MODE (ENG) BUTTON
When pressed will engage the Vertical Speed Hold mode. When pressed a second time will disengage the Vertical Speed Hold mode. When pressed with altitude displayed, will engage the Vertical Speed Hold mode and re-sync the Vertical speed Hold mode to the current vertical speed of the airplane.
- Item 2 - PHOTOCCELL
Automatically dims display according to the cockpit ambient light.

- Item 3 - VERTICAL SPEED (VS) ANNUNCIATOR
Illuminates when the Vertical Speed Hold mode is engaged.
- Item 4 - VERTICAL SPEED UP / DOWN CARETS (^ or v)
Indicates whether the selected vertical speed is up or down.
- Item 5 - GAS DISCHARGE DISPLAY
Displays selected altitude from 100 to 35000 feet or the selected vertical speed from 0 to 3000 ft per minute up or down.
- Item 6 - ALTITUDE ALERT (ALERT) ANNUNCIATOR
The ALERT annunciator is illuminated 1000 ft prior to the selected altitude, goes out 300 ft prior to the selected altitude and illuminates momentarily when the selected altitude is reached. Once the selected altitude is reached, the light signifies that the 300 ft "safe band" has been exceeded and will remain on until 1000 ft from the selected altitude. The alert light is accompanied by a 2 second, pulsating aural tone anytime the light initially comes on.
- Item 7 - VERTICAL SPEED / ALTITUDE SELECT KNOB
Concentric knobs which allow easy setting of altitude or vertical speed. The small knob (inner) has an IN and OUT position.
Altitude is displayed and selected when the small knob is in the IN position. When rotated the small knob selects altitude in 100 foot increments with roll over into the 1000 digits. The larger knob (outer) selects altitude in 1000 foot increments with roll over into the 10000 digits.
Vertical speed is displayed and selected when the small knob is in the OUT position. When rotated the small knob selects vertical speed in 100 ft / min increments.
The larger knob selects vertical speed in 1000 ft / min increments up to a maximum of 3000 ft / min.

- Item 8 - **MODE (FT or FT / MIN) ANNUNCIATOR**
Indicates FT / MIN when in the Vertical Speed Hold mode and FT when in the Altitude Select mode.
- Item 9 - **ALTITUDE CAPTURE (CAPT) ANNUNCIATOR**
Indicates the KAS 297C has switched the autopilot from Pitch Attitude Hold or Vertical Speed Hold mode into the pitch roundout mode (CAPT). The point, just prior to transfer into Altitude Hold, at which the CAPT mode becomes active varies with the vertical speed, i.e. the higher the rate of climb, the sooner the CAPT mode becomes active ; at low rates of climb the activation of the CAPT mode and transfer to altitude hold occur almost simultaneously. Engagement of any vertical mode or use of vertical trim, when in CAPT mode, will cancel this mode.
- Item 10 - **ALTITUDE SELECT MODE (ARM) ANNUNCIATOR**
Indicates that the Altitude Select mode is armed to capture the selected altitude.
- Item 11 - **ALTITUDE SELECT MODE (ARM) BUTTON**
When pressed and the selected altitude is displayed, will arm the Altitude Select mode. The Altitude Select (ARM) mode will cancel altitude hold (ALT) if ALT is already engaged. If Altitude Select (ARM) mode is present when GS couple occurs, the GS mode will cancel Altitude Select (ARM) mode. The engagement of ALT by the pilot's use of the ALT switch will cancel the altitude Select (ARM) mode.
- Item 12 - **CONTROL WHEEL STEERING (CWS) BUTTON (Not shown) -**
When pressed, in addition to the normal autopilot functions, the CWS also interfaces with the KAS 297C. When operating in the Vertical Speed Hold mode, the CWS will re-sync the vertical Speed Hold mode to the current vertical speed of the airplane. If altitude is displayed when the CWS is pressed, the display will automatically display vertical speed as long as the CWS is depressed. CWS does not affect the Altitude Select mode.

7.2 - KMC 321 CONTROL BOX

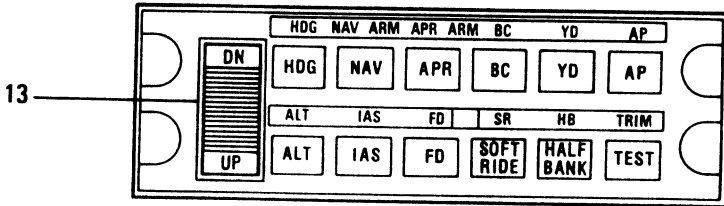

S.4.700.22.0016

Figure 9.2.2 - KMC 321 CONTROL BOX

Item 13 - VERTICAL TRIM CONTROL

When in the Vertical Speed Hold mode this control can be used to slew the vertical speed up or down at 100 ft / min for every second the rocker switch is held down. If altitude is being displayed at the time the rocker switch is depressed, vertical speed will be displayed until 1 - 2 seconds after the rocker switch is released.

7.3 - CIRCUIT-BREAKERS

Autopilot components are supplied through following circuit-breakers :

<u>LABEL</u>	<u>FUNCTION</u>
AP / TRIMS	Supplies power to the KCP 220, the autopilot pitch, roll and yaw servos and the "PITCH TRIM", "AIL TRIM", "RUD TRIM" and "AP DISC" circuit-breakers.
AP ALERT	Supplies power to the KAA 15 audible alarm.
AP ALT SEL	Supplies power to the KAS 297C.
HSI RMI	Supplies the compass system.
PITCH TRIM	Supplies power to the manual electric pitch trim.
AP DISC	Delivers a control signal (28 VDC switched by "AP DISC TRM INT" switch) to the KCP 220 autopilot computer and to the KAA 15 alarm unit.

INTENTIONALLY LEFT BLANK

SUPPLEMENT**"BFG" WX-500 OR WX-950 OR
WX-1000 OR 1000+ OR 1000E
STORMSCOPE****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.6.2
2 - LIMITATIONS	9.6.2
3 - EMERGENCY PROCEDURES	9.6.3
4 - NORMAL PROCEDURES	9.6.4
5 - PERFORMANCE	9.6.4
6 - WEIGHT AND BALANCE	9.6.5
7 - DESCRIPTION	9.6.7

"BFG" STORMSCOPE**SECTION 1****GENERAL**

This supplement supplies information to the pilot about limitations, normal and emergency procedures when the optional "BFG" WX-500 or WX-950 or WX-1000 or 1000+ or 1000E stormscope is installed on the TBM airplane. The stormscope must be used within limits of this supplement.

SECTION 2**LIMITATIONS**

These limitations supplement those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

The "BFG" stormscope systems signal displays are not intended for the purpose of penetrating thunderstorm areas or areas of severe turbulence ; such intentional use is prohibited.

NOTE :

Range selection determines receiver sensitivity and therefore relative range. Displayed range is based on signal strength and is not to be used for accurate determination of thunderstorm location.

WX-1000 or 1000+ or 1000E

The "BFG" stormscope checklist functions are for reference only.

All**CAUTION**

**THE STORMSCOPE MUST NOT BE USED FOR THUNDERSTORM
PENETRATION**

- The Stormscope "BFG" Pilot's Handbook, Series II, No. 75-0299-7690-1 (WX-1000 or 1000+ or 1000E),
or
- The WX-950 Pilot's guide, Series II, No. 009-10951-001,
or
- The WX-500 Pilot's guide, Series II, No. 009-11501-001 and the "GARMIN" GNS 530 Pilot's Guide, No. 190-00181-00,
or
- The WX-500 Pilot's guide, Series II, No. 009-11501-001 and the "HONEYWELL" KMD 550/850 Pilot's Guide P/N 006-18222-0000,
or
- The WX-500 Pilot's guide, Series II, No. 009-11501-001 and the "GARMIN" GMX 200 Pilot's Guide, No. 190-00607-02,
or
- Airplane equipped with GARMIN G1000 flight deck (MOD70-0176-00)
- The WX-500 Pilot's guide, Series II, No. 009-11501-001 and the "GARMIN" G1000 Integrated Flight Deck Cockpit Reference Guide for the TBM 850, P/N 190-00708-00,
or
- Airplane retrofited with GARMIN G1000 NXi flight deck (MOD70-0539-00)
- The WX-500 Pilot's guide, Series II, No. 009-11501-001 and the "GARMIN" G1000 Nxi Integrated Flight Deck Cockpit Reference Guide for the TBM 850/900, P/N 190-02349-00,

at their last revision, shall be readily available to the pilot, each time the "BFG" stormscope operation is foreseen.

SECTION 3

EMERGENCY PROCEDURES

Installation and operation of "BFG" stormscope do not change the basic emergency procedures of the airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

SECTION 4

NORMAL PROCEDURES

Normal operating procedures of the "BFG" stormscope are outlined in :

- the Pilot's Handbook, Series II, No. 75-0299-7690-1 at its last revision for "BFG" stormscope model WX-1000 or 1000+ or 1000E
or
- the WX-950 Pilot's Guide, Series II, No. 009-10951-001 at its last revision for "BFG" stormscope model WX-950
or
- the WX-500 Pilot's Guide, Series II, No. 009-11501-001 at its last revision for "BFG" stormscope model WX-500.

SECTION 5

PERFORMANCE

Installation and operation of "BFG" stormscope do not change the basic emergency procedures of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6 WEIGHT AND BALANCE

Informations hereafter supplement the ones given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
	34 - NAVIGATION			
A	Stormscope WX-1000+ (OPT 70 34009A)	BFG	16.535 (7.500)	228.35 (5.800)
A	Stormscope WX-1000 (OPT 70 34009B)	BFG	15.432 (7.000)	230.71 (5.860)
A	Stormscope WX-1000+ EFIS coupled (OPT 70 34009C)	BFG	15.432 (7.000)	230.71 (5.860)
A	Stormscope WX-1000E EFIS coupled - Remote installed control (OPT 70 34009D)	BFG	9.502 (4.310)	269.09 (6.835)
A	Stormscope WX-1000E EFIS coupled (OPT 70 34009E)	BFG	15.939 (7.230)	230.94 (5.866)
A	Stormscope WX-1000E shared with the SKYWATCH (OPT 70 34009F)	BFG	15.939 (7.230)	230.94 (5.866)
A	Stormscope WX-1000+ shared with the SKYWATCH (OPT 70 34009G)	BFG	16.535 (7.500)	228.35 (5.800)
A	Stormscope WX-950 (OPT 70 34041)	BFG	4.696 (2.130)	191.85 (4.873)

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
A	Stormscope WX-500 - shared with the GNS 530 GPS or with the KMD 850 or GMX 200 MFD (OPT 70 34056A)	BFG	4.94 (2.240)	232.28 (5.900)
A	Stormscope WX-500 - shared with the GARMIN flight deck system (OPT 70 34056B)	BFG	4.94 (2.240)	232.28 (5.900)

SECTION 7
DESCRIPTION

The "BFG" (Series II) stormscope, weather mapping system provides a visual screen readout of the electrical discharges associated with thunderstorms. This information with proper interpretation, will allow the pilot to detect severe thunderstorm activity. A series of green dots or of strike points will be displayed on the screen to indicate the electrical discharge areas.

Dots or strike points may be displayed on two selectable views : 360° view of surrounding airspace and 120° view of forward airspace only.

The display scope provides full scale selectable ranges of 200, 100, 50 and 25 NM.

Post-MOD70-125-23 and without GARMIN G1000 or G1000 NXi flight deck

Stormscope setting to ON or OFF is performed by using the "RADIO MASTER" switch.

INTENTIONALLY LEFT BLANK

SUPPLEMENT
"BENDIX / KING"
EFS 40

TABLE OF CONTENTS

	Page
1 - GENERAL	9.9.2
2 - LIMITATIONS	9.9.2
3 - EMERGENCY PROCEDURES	9.9.4
4 - NORMAL PROCEDURES	9.9.11
5 - PERFORMANCE	9.9.17
6 - WEIGHT AND BALANCE	9.9.17
7 - DESCRIPTION	9.9.18

SECTION 1

GENERAL

This supplement provides information necessary for airplane utilization when the system EFIS "BENDIX / KING" EFS 40 type is installed on TBM 700 airplane.

SECTION 2

LIMITATIONS

These limitations supplement those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

The installation of EFS 40 EFIS is subordinated to the installation of the modification Nr MOD 70-010-24 "Alternator Ventilation".

The using of COMPOSITE MODE is only authorized when one of both displays is out of order or when ventilation of one of both displays is out of order.

To undertake an IFR-flight :

- The EADI and EHSI must be available.
- The stand-by horizon must be available.
- No red or yellow "SG" or "DU" warning must be present.
- The "CHECK CONFIG" warning must not be present.
- ATTITUDE FAIL and HDG warnings must not be present.

CAUTION

EFS 40 CONFIGURATION OF THE TBM 700 AIRPLANE IS MENTIONED ON FIGURE 9.9.1. MODIFICATION OF THIS CONFIGURATION IS PROHIBITED

1	VIEW / EDIT OPERATING CHAR			
2	ITEM	SG	RK1	RK2
4	DCLTR GS ON BC	1	1	1
6	DISPLAY WIND VEC	1	1	1
7	DISPLAY DRIFT	1	1	1
9	DME DIST ONLY	1	1	1
1	VIEW / EDIT OPERATING			
2	ITEM	SG	RK1	RK2
6	DCLTR UNUS ATT	1	1	1
1	VIEW / EDIT OPERATING			
2	ITEM	SG	RK1	RK2
4	VERT PTR TYPE	2	2	2
5	DISPLAY FMS MSG	1	1	1
9	RISING RUNWAY	1	1	1
11	CMD BAR FILTER	1	1	1

NOTE :

Confirm all missing lines above mentioned as follows :

<i>SG</i>	<i>RK1</i>	<i>RK2</i>
<i>0</i>	<i>0</i>	<i>0</i>

Figure 9.9.1 - TABLE OF OPERATING CONFIGURATIONS CERTIFIED FOR TBM 700 AIRPLANE

The "BENDIX / KING Pilot's Guide EFS 40 system" P/N 006-08701-00001K at its latest revision shall be readily available for the operation of the EFIS.

SECTION 3

EMERGENCY PROCEDURES

These procedures supplement those of standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Manual.

TABLE OF CONTENTS OF EMERGENCY PROCEDURES

	Page
TRANSITION TO COMPOSITE MODE	9.9.5
RED WARNING ATTITUDE FAIL	9.9.6
RED WARNING HDG	9.9.6
EADI FAILURE	9.9.7
EHSI FAILURE	9.9.7
YELLOW WARNING DU	9.9.7
YELLOW WARNING SG	9.9.8
RED WARNING CP	9.9.8
SELF-TEST DISPLAY	9.9.8
RED CROSS DISPLAY ON HEADING BUG	9.9.9
RED CROSS DISPLAY ON COURSE POINTER	9.9.9
RED WARNING RCP	9.9.9
RED WARNINGS ATTITUDE FAIL AND HDG	9.9.10
SMALL RED WARNING SG	9.9.10
BIG RED WARNING SG	9.9.10
YELLOW WARNING ↔ HDG	9.9.10A

TRANSITION TO COMPOSITE MODE**CAUTION**

THE USE OF COMPOSITE MODE IS ONLY AUTHORIZED WHEN ONE OF BOTH DISPLAYS IS OUT OF ORDER OR WHEN VENTILATION OF ONE OF BOTH DISPLAYS IS OUT OF ORDER

- 1 - Control the attitudes referring to stand-by horizon
- 2 - Select COMPOSITE MODE by pressing CMPST push-button
When COMPOSITE figuration appears :
- 3 - Fully reduce brightness of the faulty display
- 4 - Control referring to the remaining display

CAUTION

THE AUTOPILOT DISENGAGES AS SOON AS COMPOSITE MODE IS SELECTED. AS SOON AS COMPOSITE FIGURATION APPEARS, THE AUTOPILOT CAN BE REENGAGED

RED WARNING

ATTITUDE FAIL

This warning, displayed on EADI center, indicates a vertical gyro failure. It causes pitch and roll attitudes scales removal and involves autopilot disconnection.

- Control the attitude referring to stand-by horizon.

RED WARNING

HDG

This warning, displayed on EHSI lubber line indicator location, indicates a directional gyro failure. It involves autopilot transition to wings level basic mode.

- Control the heading referring to emergency compass.

NOTE :

- . *Only bearing information remains valid for ADF.*
- . *Only QDM and course deviation information remain valid for the VOR.*

EADI FAILURE

If EADI symbols partially or completely disappear, the display is out of order.

In order to reconfigure the system, apply transition to COMPOSITE MODE procedure.

EHSI FAILURE

If EHSI symbols partially or completely disappear, the display is out of order.

In order to reconfigure the system, apply transition to COMPOSITE MODE procedure.

YELLOW WARNING**DU**

This warning, displayed on the lower left corner of the EADI or EHSI, indicates a loss of airflow of the concerned display.

- If the failure occurs **BEFORE FINAL APPROACH PHASE**, apply transition to **COMPOSITE MODE** procedure.
- If the failure occurs **DURING FINAL APPROACH**, continue without changing anything.

NOTE :

In the worst ambient temperature conditions, the display correctly operates during at least 30 minutes after annunciation.

YELLOW WARNING

SG

This warning, displayed on the lower left corner of the EADI and at the lower right corner of the EHSI, indicates a loss of airflow of the symbol generator.

- 1 - Reduce, if possible, displays brightness
- 2 - Lighten the display information if possible (radar image, navigation secondary information)

NOTE :

In the worst ambient temperature conditions, the symbol generator correctly operates during at least 30 minutes after annunciation.

RED WARNING

CP

This warning, displayed on the L.H. of the EHSI and at the lower left corner of the EADI, indicates that a control panel switch of the EHSI has become stuck.

In this case, ALL CURRENTLY SELECTED CONDITIONS ARE FROZEN.

SELF-TEST DISPLAY

A self-test display during the flight indicates :

- that the pilot pressed the TST / REF push-button during more than 3 seconds,
- or that the TST / REF push-button remained stuck after having been briefly depressed.

In the case of a stuck button, the EADI and the EHSI return to normal display after 6 seconds.

**RED CROSS DISPLAY ON
HEADING BUG**

A red cross, displayed on the HEADING BUG, indicates a HDG rotactor failure.

In this case, THE HEADING SELECTION IS FROZEN.

**RED CROSS DISPLAY ON
COURSE POINTER**

A red cross, displayed on head and tail of the COURSE pointer, indicates a CRS rotactor failure.

In this case, THE COURSE SELECTION IS FROZEN.

RED WARNING**RCP**

This warning, displayed on the lower left corner of the EHSI, indicates a radar control panel failure.

NOTE :

In case of absence of specific radar screen, the radar goes automatically into ST-BY mode, regardless of radar control panel setting, whenever a weather radar mode is not selected for EHSI.

RED WARNINGS

ATTITUDE FAIL

AND

HDG

These warnings indicate a failure of directional and vertical gyros power supply converter. It involves autopilot disconnection as well as the removal of ADF information.

- Control referring to emergency instruments.
- Set "EFIS MASTER" switch to OFF.

SMALL RED WARNING

SG

This warning, displayed on EHSI upper part or on EADI lower part, indicates that information present on the concerned display are no longer valid.

- Use these information, particularly the attitudes, only after validation with emergency instruments and only as additional information.

BIG RED WARNING

SG

This warning, displayed on the entire EADI or EHSI screen, indicates that the symbols generator of the concerned display is unusable. It involves the autopilot disconnection.

- Control referring to corresponding emergency instruments.
- Fully reduce brightness of the concerned display.

OPTION OPT70-01-018 (if installed)

YELLOW WARNING
HDG

This warning displayed on the L.H. side of the heading bug, indicates a heading difference greater than 6° between the EHSI and HSI#2 directional gyros.

- Determine the wrong heading source by referring to a 3rd heading source.

INTENTIONALLY LEFT BLANK

SECTION 4
NORMAL PROCEDURES

4.1 - GENERAL

These procedures supplement those of standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook.

4.2 - LIST OF GROUND CHECKS

BEFORE TAXIING	
1 - Check no flags "DU", "SG", "CP"	
EFS 40 SYSTEM AUTOTEST (if desired)	
1 - "TST / REF" button	PRESS and HOLD for 3 seconds
2 - Check :	
- the EHSI and EADI test images appear	
- the "SELF TEST PASS" or "SELF TEST FAIL" message is annunciated in the center of each test pattern	
If the "SELF TEST FAIL" message appears, the EFS 40 system must be serviced.	

4.3- LIST OF INFLIGHT CHECKS

SELECTION OF NAVIGATION SYSTEM

1 - Push-button

1
2

 PRESS

NOTE :

If only one navigation sensor is installed, the display will not cycle and the sensor annunciation will not show a system number.

SELECTION OF THE PRIMARY NAVIGATION SENSOR

1 - Push-button

N
A
V

 PRESS

 
A press of the NAV push-button sequentially selects the primary navigation sensor. The sequence movement is :

- VOR, LOR (if installed), ADF then VOR, etc...

NOTE :

When the VOR navigation sensor is selected and an ILS frequency displayed, or if the KNS 81 is in RNAV mode, the VOR annunciation is respectively replaced by LOC or RNAV.



SELECTION OF THE 360-DEGREE HSI MODE


1 - Push-button  **PRESS**

A press of the HSI push-button, sequentially selects the 360-degree display formats. The movement sequence is :

- COMPASS ROSE
- COMPASS ROSE AND NAVIGATION MAP
- COMPASS ROSE AND NAVIGATION MAP AND RADAR IMAGE (if radar installed)

  SELECTION OF BEARING POINTERS

1 - Push-button  or  **PRESS**

 The button  is paired with the white single bar pointer.

The button  is paired with the magenta double bar pointer.

A press of the bearing pointer buttons, sequentially selects the navigation sensors which are interfaced with the pointers.

The movement sequence is :

- no pointer (declutter function)
- VOR
- LOR (if installed)
- ADF
- no pointer, etc...



SELECTION OF BEARING POINTERS (Cont'd)

NOTE :

- *The pointers are displayed only if a valid radio-electric information exists.*
- *The VOR position is withdrawn from the sequence if an ILS frequency is selected.*
- *The DME information is displayed below the sensor annunciation - in VOR function, if a VOR-DME frequency is selected - in ADF function, if a VOR-DME frequency is selected and the DME positioned to "HOLD".*
- *The distance indication is displayed only if a valid DME signal is really received.*

SELECTION OF THE "ARC" DISPLAY MODE

1 - Push-button



A
R
C


 
 PRESS

A press of the ARC push-button, sequentially selects the ARC display formats. An approximate 85-degree sector display of the compass is presented. The movement sequence is :

ARC - ARC + NAV - ARC + NAV + RADAR (if installed) -
ARC + RADAR (if installed) - ARC...


RANGE SELECTION


1- Push-button  or  **PRESS**

A press of the buttons  or  respectively selects the next higher or lower range to be displayed while in the NAV MAP or RADAR modes of operation. The selectable ranges are :

5 NM - 10 NM - 20 NM - 40 NM - 80 NM - 160 NM - 240 NM - 320 NM - 1000 NM.

COURSE SELECTION

1-  CRS knob **ROTATE**

Pushing the center of the CRS knob will cause the course pointer to slew to the direct  course to the selected NAVAID or active waypoint.

HEADING SELECTION

1-  HDG knob **ROTATE**

Pushing the center of the HDG knob will cause the heading bug to slew to the present aircraft heading. 

SETTING OF GROUND SPEED OR TIME TO THE STATION

1- TST / REF button **PRESS**

When the EFIS system is coupled with the KLN 90A or KLN 90B GPS, a press of the TST / REF button displays one after the other in NAVIGATION MAP mode the following items on the screen background :

- FPL ID
- AIRPORT
- NAVAIDS.

CAUTION

WHEN THE TST / REF BUTTON IS PRESSED AND HELD FOR 3 SECONDS, IT INITIATES THE EFS 40 SYSTEM TEST AND DISENGAGES THE AUTOPILOT

SECTION 5 PERFORMANCES

The installation and the operation of "BENDIX/KING" EFS 40 system do not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6 WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
	01 – SPECIFIC OPTIONAL EQUIPMENT			
A	Heading#1/Heading#2 EHSI miscompare (OPT70 3401018)	KING	0.033 (0.015)	125.98 (3.200)
	34 – NAVIGATION			
O	EFIS (EFS 40 + AP) KFC 325 (OPT 70 34001) – with standby horizon M32 RC ALLEN RCA 22 – with horizon M32 EDO AIRE /SIGMATEK 5000B	KING	71.716 (32.530) 71.520 (32.440)	133.19 (3.383) 132.60 (3.368)

SECTION 7 DESCRIPTION

7.1 - EFS 40 CONTROLS

- 1) EADI
- 2) EHSI
- 3) Push-button of EFS 40 self-test or of DME ground speed or time-to-station alternate display
- 4) Scale setting push-button in MAP or WEATHER mode
- 5) ARC symbologic mode selecting push-button
- 6) Selected heading bug knob
- 7) ERMI dual pointer selecting push-button
- 8) EHSI brightness setting knob
- 9) ERMI single pointer selecting push-button
- 10) Navigation course selecting knob
- 11) EHSI figuration modes selecting push-button
- 12) Navigation source selecting push-button
- 13) Navigation system selecting push-button
- 14) MARKER test and level selecting toggle switch
- 15) EADI brightness setting knob
- 16) COMPOSITE MODE selecting push-button
- 17) CMPST push-button light test
- 18) DME frequency tuning selecting rotary switch
- 19) EFIS MASTER switch - see Figure 9.9.4

Figure 9.9.2 (1 / 2) - CONTROLS AND DISPLAY

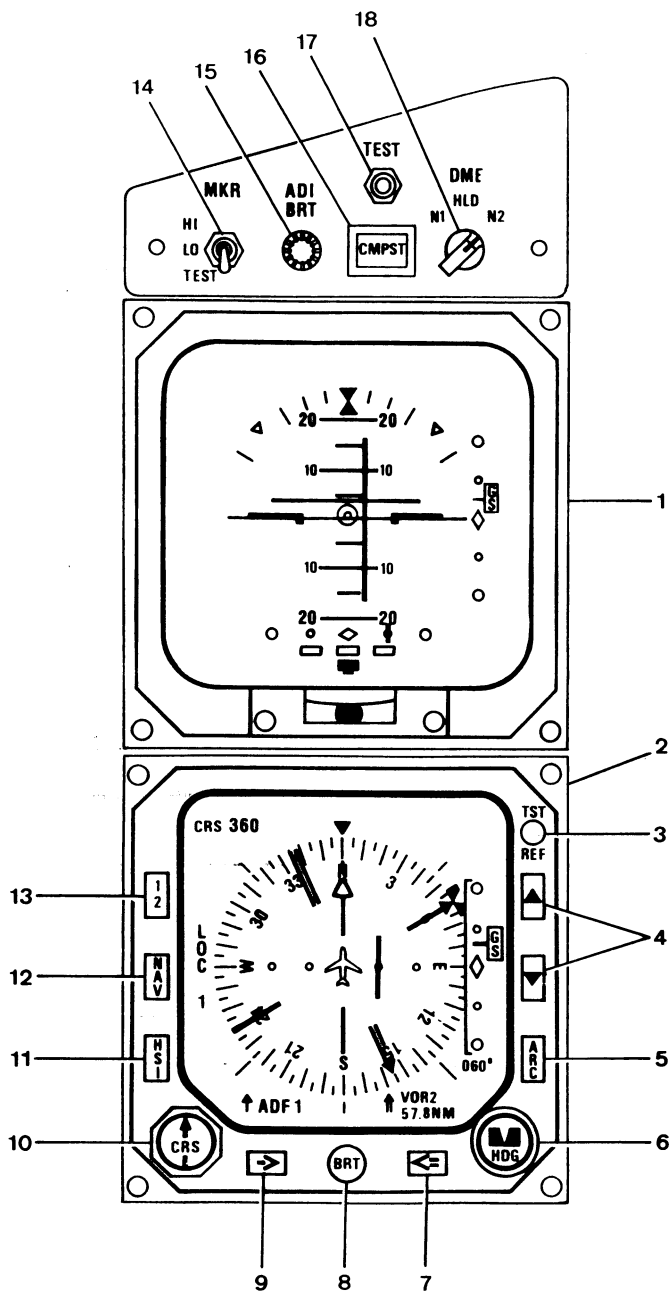


Figure 9.9.2 (2 / 2) - CONTROLS AND DISPLAY

- Item 3 - TST / REF button - It allows to self-test the EFS 40 system by pressing at least 3 seconds. A brief switching allows to alternately display DME ground speed or time-to-station.
- Item 4 - PUSH-BUTTONS Δ and ∇ - They allow to modify the range scale either in NAV MAP or WEATHER mode.
- Item 5 - ARC PUSH-BUTTON - It allows to select the desired ARC figuration :
by switching :
 - . ARC COMPASS ROSE
 - . ARC NAV MAP
 - . ARC NAV MAP WITH WEATHER
 - . ARC COMPASS ROSE WITH WEATHER
- Item 6 - HDG KNOB - It allows to set the bug to the desired heading. Depress to synchronise with the present heading.
- Item 7 - PUSH-BUTTON \leq - It allows to allocate the ERMI dual pointer to the different navigation sensors.
- Item 8 - BRT KNOB - It allows to set the EHSI brightness.
- Item 9 - PUSH-BUTTON \rightarrow - It allows to allocate the ERMI single pointer to the different navigation sensors.
- Item 10 - CRS KNOB - It allows to display the desired radial. Depress to select the present QDM.
- Item 11 - HSI PUSH-BUTTON - It allows to select the EHSI desired figuration :
by switching :
 - . HSI COMPASS ROSE
 - . HSI NAV MAP
 - . HSI NAV MAP WITH WEATHER
- Item 12 - NAV PUSH-BUTTON - It allows to select the primary navigation source.
- Item 13 - NAVIGATION SYSTEM SELECTING PUSH-BUTTON - It allows to select the navigation system used (system 1 or 2).

Figure 9.9.3 (1 / 2) - EHSI CONTROLS

S.4.700.34.0011


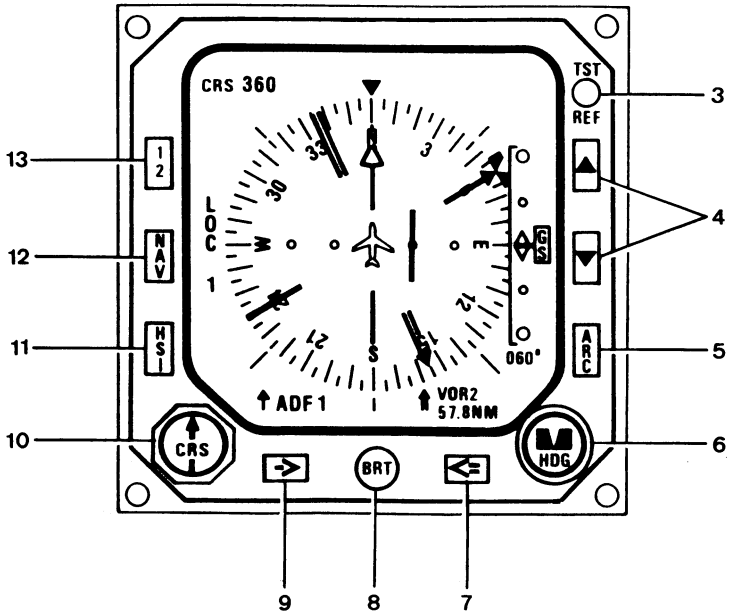


Figure 9.9.3 (2 / 2) - EHSI CONTROLS

- Item 14 - MKR TOGGLE - It allows to test the Marker system (TEST) and select the receiver sensitivity (LO, HI).
- Item 15 - ADI BRT KNOB - EADI display brightness setting knob.
- Item 16 - CMPST PUSH-BUTTON - Push-button allowing to select COMPOSITE MODE figuration, which is an image uniting EADI display information with some navigation information including a heading scale along the horizon line.
- Item 17 - TEST PUSH-BUTTON - It allows to test the CMPST push-button lamp.
- Item 18 - DME ROTARY SWITCH - It allows to tune DME receiver frequency to the navigation system 1 or 2 (N₁ and N₂ positions). Furthermore, when tuning is performed, the rotator allows to memorize the selected frequency in the DME receiver (HLD position).
- Item 19 - EFIS MASTER SWITCH - It controls the power to all EFIS system components.


Figure 9.9.4 (1 / 2) - EADI CONTROLS

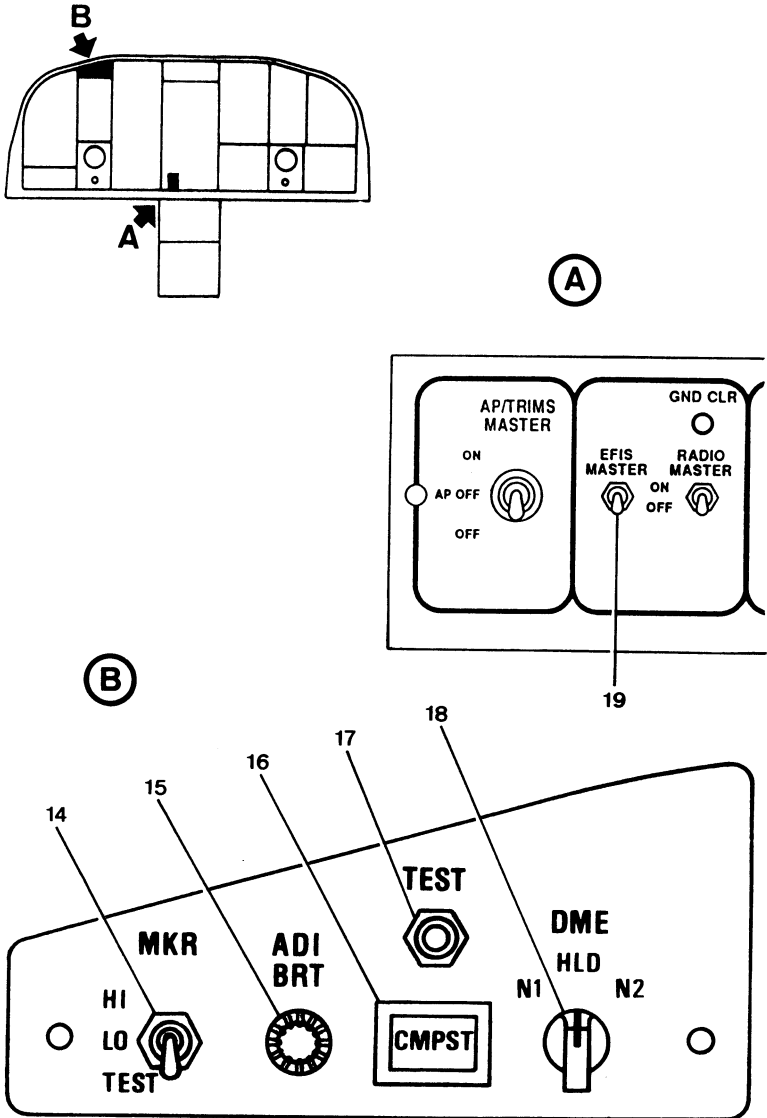

54342800AAAEMAFM00

Figure 9.9.4 (2 / 2) - EADI CONTROLS

INTENTIONALLY LEFT BLANK

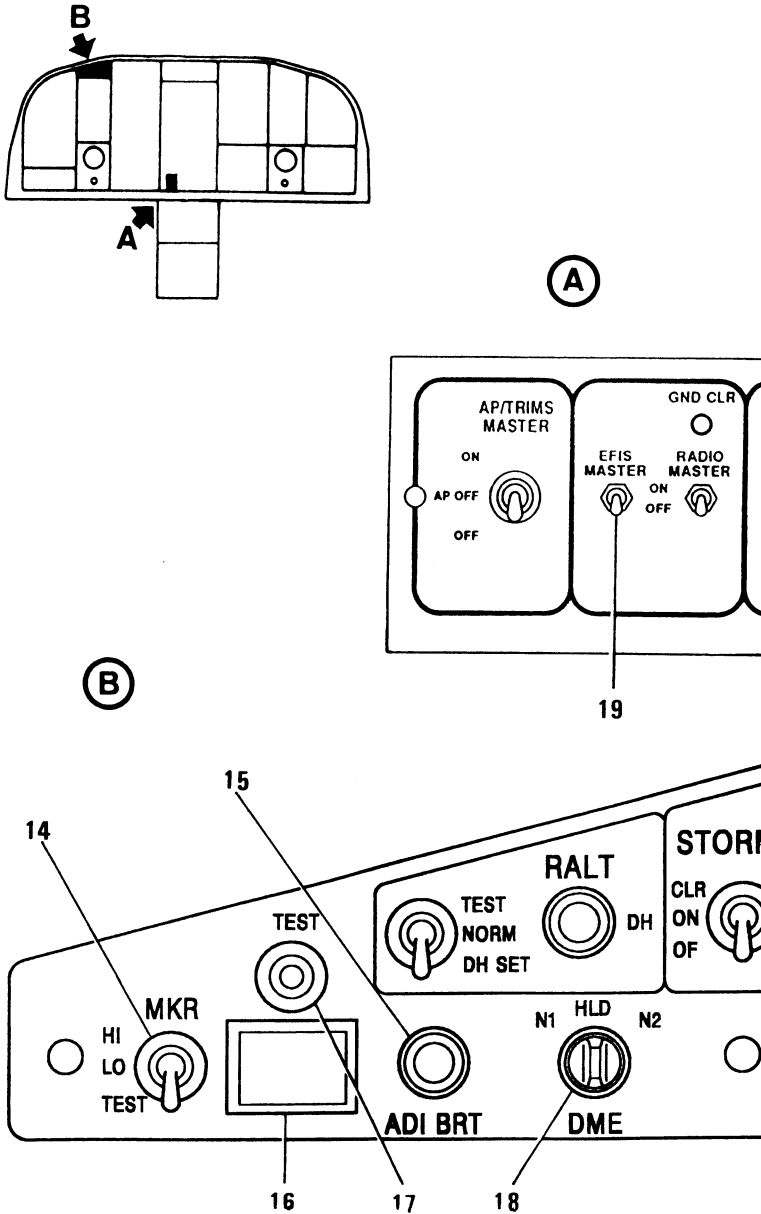


54342800AAAFMAFM00

Figure 9.9.4A (2 / 2) - EADI CONTROLS

7.2 - EADI SYMBOLOGY

- 1) Roll scale
- 2) Pitch scale
- 3) Airplane symbol (for split-cue FD command bars)
- 4) Side-slip indicator
- 5) Radar altimeter display
- 6) Glide Slope scale
- 7) Decision height alert
- 8) Airplane symbol (for single-cue FD command bars)
- 9) Localizer scale
- 10) Selected decision height display
- 11) Rate of turn display
- 12) FD command bars (split-cue)
- 13) Autopilot modes annunciator
- 14) FD command bars (single-cue)

Figure 9.9.5 (1 / 2) - EADI

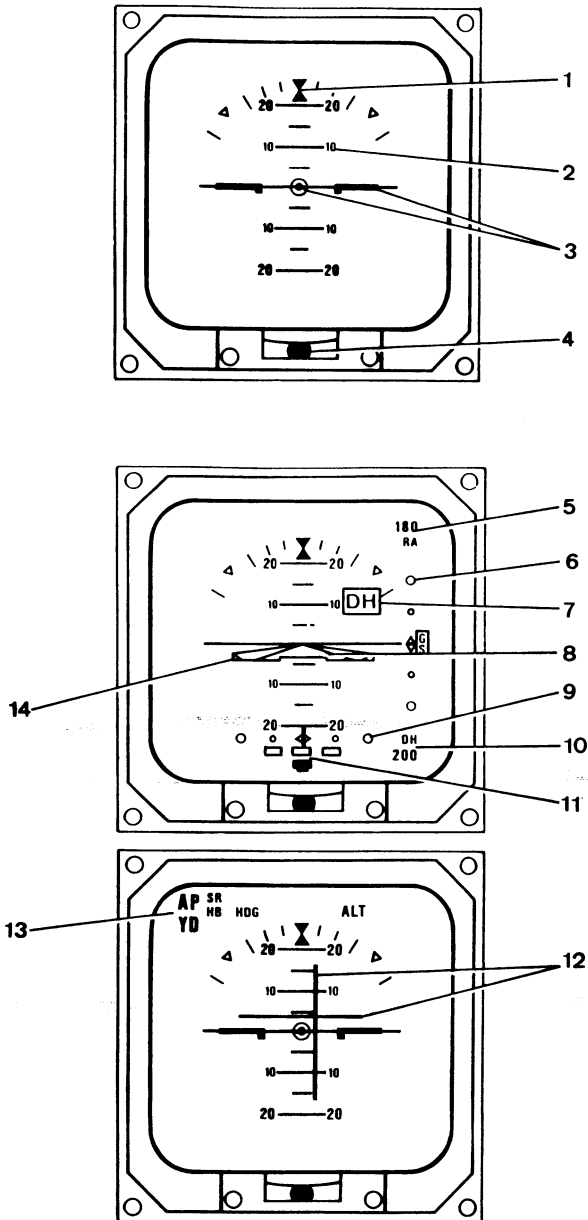


S.4.700.34.0013

Figure 9.9.5 (2 / 2) - EADI

7.3 - EHSI SYMBOLOGY

- 1) Selected course
- 2) Lubber line
- 3) Selected heading bug
- 4) Distance bound to the primary navigation source (or other navigation system when in HLD function)
- 5) Ground speed or time-to-station or navigation source frequency when in HLD function
- 6) Glide Slope scale
- 7) Glide Slope pointer
- 8) Selected heading value
- 9) Heading rose
- 10) ERMI dual pointer
- 11) DME 2 distance
- 12) Navigation system allocated to ERMI dual pointer
- 13) DME 1 distance
- 14) Navigation system allocated to ERMI single pointer
- 15) ERMI single pointer
- 16) Deviation bar
- 17) Navigation system Nr 1 or Nr 2 used
- 18) Primary navigation source selected
- 19) Airplane symbol
- 20) Selected radial pointer

Figure 9.9.6 (1 / 2) - STANDARD EHSI SYMBOLOGY

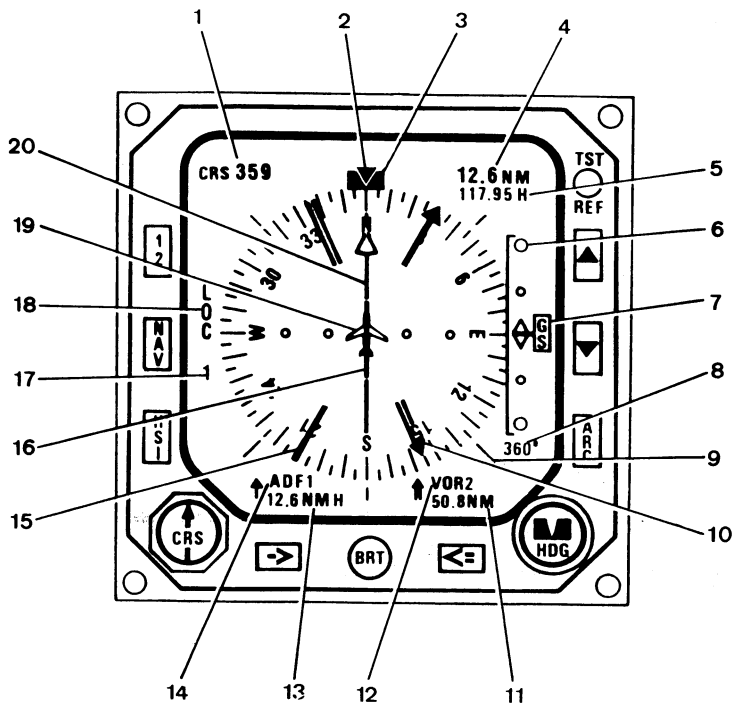




S.4.700.34.0014

Figure 9.9.6 (2 / 2) - STANDARD EHSI SYMBOLOGY

AP / TRIMS	AP & trims general protec.	ADVISORY 1	Visual warn. protec.
RUD TRIM	Rudder trim protec.	ADVISORY 2	Visual warn. protec.
AIL TRIM	Aileron trim protec.	AUDIO WARN	Audio warnings protec.
PITCH TRIM	Pitch trim protec.	FLAPS SIG	Flaps signalization protec.
FLAPS	Flaps protec.	LDG GR CONT	Landing gear control protec.
LDG GR	Landing gear general protec.	LDG GR SIG	Landing gear signalization protec.
ESS BUS TIE	Essential bus NORM & EMER switch	AP DISC	Trim and AP cont. protec.
PITOT 1 HTR	Pitot 1 deicing protec.	AP ALERT	Trim and AP audio signalization protec.
PITOT 2 & STALL HTR	Pitot 2 and stall warning deicing protec.	AP ALT SEL	Altitude selector protec.
INERT SEP	Inertial separator protec.	ESS BUS 1	Essential bus 1 circuit protec.
LW/S DE ICE	L.H. windshield deicing protec.	ESS BUS 2	Essential bus 2 circuit protec.
RW/S DE ICE	R.H. windshield deicing protec.	EHSI	EHSI protec.
PROP DE ICE	Propeller deicing protec.	EADI	EADI protec.
AIRFRAME DE ICE	Empennage and wing leading edges deicing protec	GYRO	Gyros protec.
ICE LIGHT	L.H. wing leading edge lighting protec.	RMI	RMI protec.
L LDG	L.H. landing light protec.	ADI 2	ADI Nr 2 protec.
TAXI	Taxi light protec.	PHONES	Reception line protec.
R LDG	R.H. landing light protec.	SPKR	Loudspeaker line protec.
NAV	Navigation lights protec.	COM 1	VHF 1 protec.
STROBE	Strobe lights protec.	GND CLR	Ground communication protec.
CABIN	Passenger's reading lamps protec.	NAV 1	NAV 1 radio protec.
ACCESS	FWD dome light, cabin, baggage compartment bottom & access door lighting protec.	COM 2	VHF 2 & NAV 2 radio protec.
INSTR	Instruments light. protec.	NAV	NAV 1 radio protec.
PANEL NORM	Instrument panel normal lighting protec.	ENCOD ALTI	Encoding altimeter protec.
PANEL EMER	Instrument panel emergency lighting protec.	XPDR	Transponder protec.
FUEL GAGE 1	L.H. gage protec.	RMI 2	RMI 2 protec.
FUEL GAGE 2	R.H. gage protec.	RADIO FAN	Radio fan protec. + radio master
FUEL SEL	Timer protec.	ADF	ADF protec.
AUX BP	Fuel pump protec.	DME	DME protec.
MEMORY & CLOCK	Stop watch and flowmeter protec.	MKR	MKR protec.
ENGINE INDIC 1	Power plant cont. protec. : Oil temp. & pres., torque, propeller	STORM	Stormscope protec.
ENGINE INDIC 2	Power plant cont. protec. : Ng, flowmeter & ITT	WSR	Weather radar protec.
IGNIT	Power plant ignit. protec.	GC	Radar graphic protec.
		LRN	LORAN long range navigation protec.
		CABIN BLEED	Cabin air bleed valve protec.
		CABIN TEMP	Cabin temperature valve protec.
		FAN	Ground fan protec.

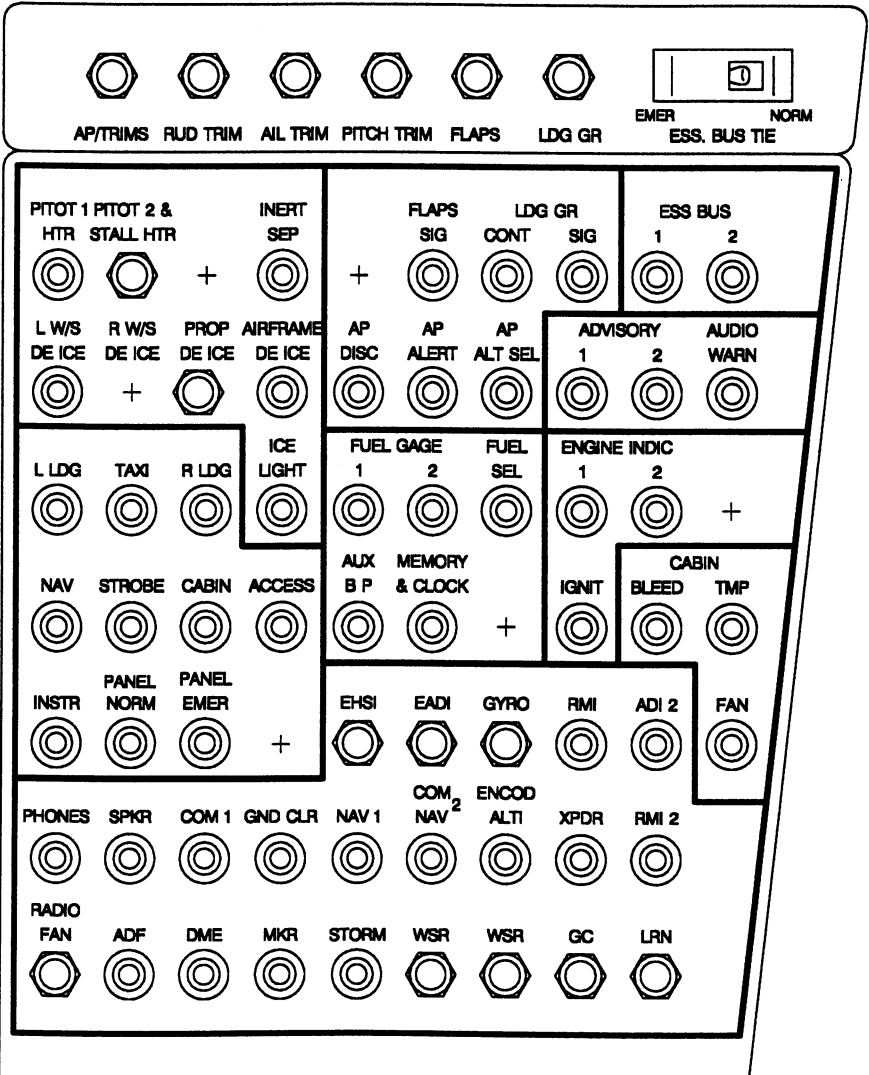Figure 9.9.7 (1 / 2) - EFIS CIRCUIT BREAKERS PANEL




-  Disjoncteur déclenchable
"PULL-OFF" type circuit breaker
-  Disjoncteur non déclenchable
Circuit breaker which cannot be pulled off

14255004AAA-HMA8201

Figure 9.9.7 (2 / 2) - EFIS CIRCUIT BREAKERS PANEL

AP / TRIMS	AP & trims general protec.	FUEL GAGE 1	L.H gage protec.
RUD TRIM	Rudder trim protec.	FUEL GAGE 2	R.H gage protec.
AIL TRIM	Aileron trim protec.	FUEL SEL	Timer protec.
PITCH TRIM	Pitch trim protec.	AUX BP	Fuel pump protec.
FLAPS	Flaps protec.	ENGINE INDIC 1	Power plant cont. protec. : Oil temp. & pres., torque, propeller
LDG GR	Landing gear general protec.	ENGINE INDIC 2	Power plant cont. protec. : Ng, flowmeter & ITT
ESS BUS TIE	Essential bus NORM &	IGNIT	Power plant ignit. protec.
PITOT 1 HTR	Pitot 1 deicing protec.	CABIN BLEED	Cabin air bleed valve protec.
PITOT 2 & STALL HTR	Pitot 2 and stall warning deicing protec.	CABIN TEMP	Cabin temperature valve protec.
INERT SEP	Inertial separator protec.	FAN	Ground fan protec.
LW/S DE ICE	L.H. windshield deicing protec.	MEMORY & CLOCK ACCESS	Stop watch and flowmeter protec. FWD dome light, cabin, baggage compartment bottom, access door lighting & access door closing geared motor protec.
RW/S DE ICE	R.H. windshield deicing protec.	EHSI	EHSI protec.
PROP DE ICE	Propeller deicing protec.	EADI	EADI protec.
AIRFRAME DE ICE	Empennage and wing leading edges deicing protec.	GYRO	Gyros protec.
FLAPS SIG	Flaps signalization protec.	RMI	RMI protec.
LDG GR CONT	Landing gear control protec.	ADI 2	ADI Nr 2 protec.
LDG GR SIG	Landing gear signalization protec.	RMI 2	RMI 2 protec.
AP DISC	Trim and AP cont. protec.	HSI 2	HSI 2 protec.
AP ALERT	Trim and AP audio signalization protec.	ELT	ELT 90 protec.
AP ALT SEL	Altitude selector protec.	PHONES	Reception line protec.
ESS BUS 1	Essential bus 1 circ. protec.	SPKR	Loudspeaker line protec.
ESS BUS 2	Essential bus 2 circ. protec.	COM 1	VHF 1 protec.
ADVISORY 1	Visual warn. protec.	GND CLR	Ground communication protec.
ADVISORY 2	Visual warn. protec.	NAV 1	NAV 1 radio protec.
AUDIO WARN	Audio warnings protec.	COM 2	VHF 2 & NAV 2 radio protec.
L LDG	L.H. landing light protec.	NAV	Encoding altimeter protec.
TAXI	Taxi light protec.	ENCOD ALTI	Encoding altimeter protec.
R LDG	R.H. landing light protec.	ALTI	Altitude indicator protec.
NAV	Navigation lights protec.	XPDR	Transponder protec.
STROBE	Strobe lights protec.	RADIO ALTI	RADIO ALTI protec.
INSTR	Instruments light. protec.	RADIO + FAN	Radio fan protec. + radio master
PANEL NORM	Instrument panel normal lighting protec.	ADF	ADF protec.
PANEL EMER	Instrument panel emergency lighting protec.	DME	DME protec.
CABIN	Passenger's reading lamps protec.	MKR	MKR protec.
ICE LIGHT	L.H. wing leading edge lighting protec.	STORM	Stormscope protec.
		WSR	Weather radar protec.
		GC	Radar graphic protec.
		LRN	LORAN long range navigation protec.

Figure 9.9.7A (1 / 2) - EFIS CIRCUIT BREAKERS PANEL

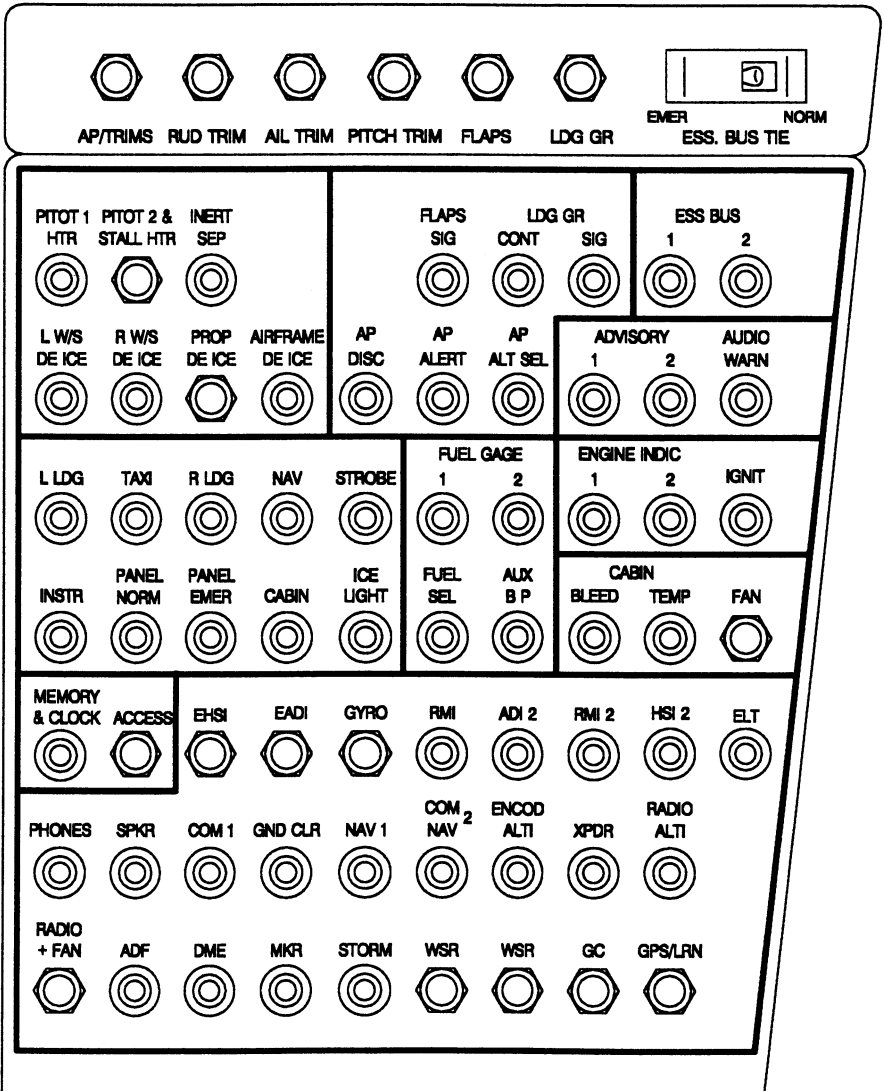




-  Disjoncteur déclenchable
"PULL-OFF" type circuit breaker
-  Disjoncteur non déclenchable
Circuit breaker which cannot be pulled off

Figure 9.9.7A (2 / 2) - EFIS CIRCUIT BREAKERS PANEL

14255004AAAH1MA8002

AP / TRIMS	AP & trims general protec.	FUEL GAGE 1	L.H gage protec.
RUD TRIM	Rudder trim protec.	FUEL GAGE 2	R.H gage protec.
AIL TRIM	Aileron trim protec.	FUEL SEL	Timer protec.
PITCH TRIM	Pitch trim protec.	AUX BP	Fuel pump protec.
FLAPS	Flaps protec.	ENGINE INDIC 1	Power plant cont. protec. : Oil temp. & pres., torque, propeller
LDG GR	Landing gear general protec.	ENGINE INDIC 2	Power plant cont. protec. : Ng, flowmeter & ITT
ESS BUS TIE	Essential bus NORM &	IGNIT	Power plant ignit. protec.
PITOT 1 HTR	Pitot 1 deicing protec.	CABIN BLEED	Cabin air bleed valve protec.
PITOT 2 & STALL HTR	Pitot 2 and stall warning deicing protec.	CABIN TEMP	Cabin temperature valve protec.
INERT SEP	Inertial separator protec.	FAN	Ground fan protec.
LW/S DE ICE	L.H. windshield deicing protec.	MEMORY & CLOCK ACCESS	Stop watch and flowmeter protec. FWD dome light, cabin, baggage compartment bottom, access door lighting & access door closing geared motor protec.
RW/S DE ICE	R.H. windshield deicing protec.		
PROP DE ICE	Propeller deicing protec.		
AIRFRAME DE ICE	Empennage and wing leading edges deicing protec.		
FLAPS SIG	Flaps signalization protec.	ELT	ELT 90 protec.
LDG GR CONT	Landing gear control protec.	EHSI	EHSI protec.
LDG GR SIG	Landing gear signalization protec.	EADI	EADI protec.
AP DISC	Trim and AP cont. protec.	GYRO	Gyros protec.
AP ALERT	Trim and AP audio signalization protec.	RMI	RMI protec.
AP ALT SEL	Altitude selector protec.	ADI 2	ADI Nr 2 protec.
ESS BUS 1	Essential bus 1 circ. protec.	RMI 2	RMI 2 protec.
ESS BUS 2	Essential bus 2 circ. protec.	HSI 2	HSI 2 protec.
ADVISORY 1	Visual warn. protec.	RADIO ALTI	RADIO ALTI protec.
ADVISORY 2	Visual warn. protec.	PHONES	Reception line protec.
AUDIO WARN	Audio warnings protec.	SPKR	Loudspeaker line protec.
L LDG TAXI	L.H. landing light protec.	COM 1	VHF 1 protec.
R LDG	R.H. landing light protec.	GND CLR	Ground communication protec.
NAV	Navigation lights protec.	NAV 1	NAV 1 radio protec.
STROBE	Strobe lights protec.	COM 2	VHF 2 & NAV 2 radio protec.
INSTR	Instruments light. protec.	NAV	NAV radio protec.
PANEL NORM	Instrument panel normal lighting protec.	ENCOD ALTI	Encoding altimeter protec.
PANEL EMER	Instrument panel emergency lighting protec.	XPDR	Transponder protec.
CABIN	Passenger's reading lamps protec.	LRN	LORAN long range navigation protec.
ICE LIGHT	L.H. wing leading edge lighting protec.	ADF	ADF protec.
		DME	DME protec.
		MKR	MKR protec.
		STORM	Stormscope protec.
		WSR	Weather radar protec.
		GC	Radar graphic protec.
		RADIO + FAN	Radio fan protec. + radio master

Figure 9.9.7B (1 / 2) - EFIS CIRCUIT BREAKERS PANEL

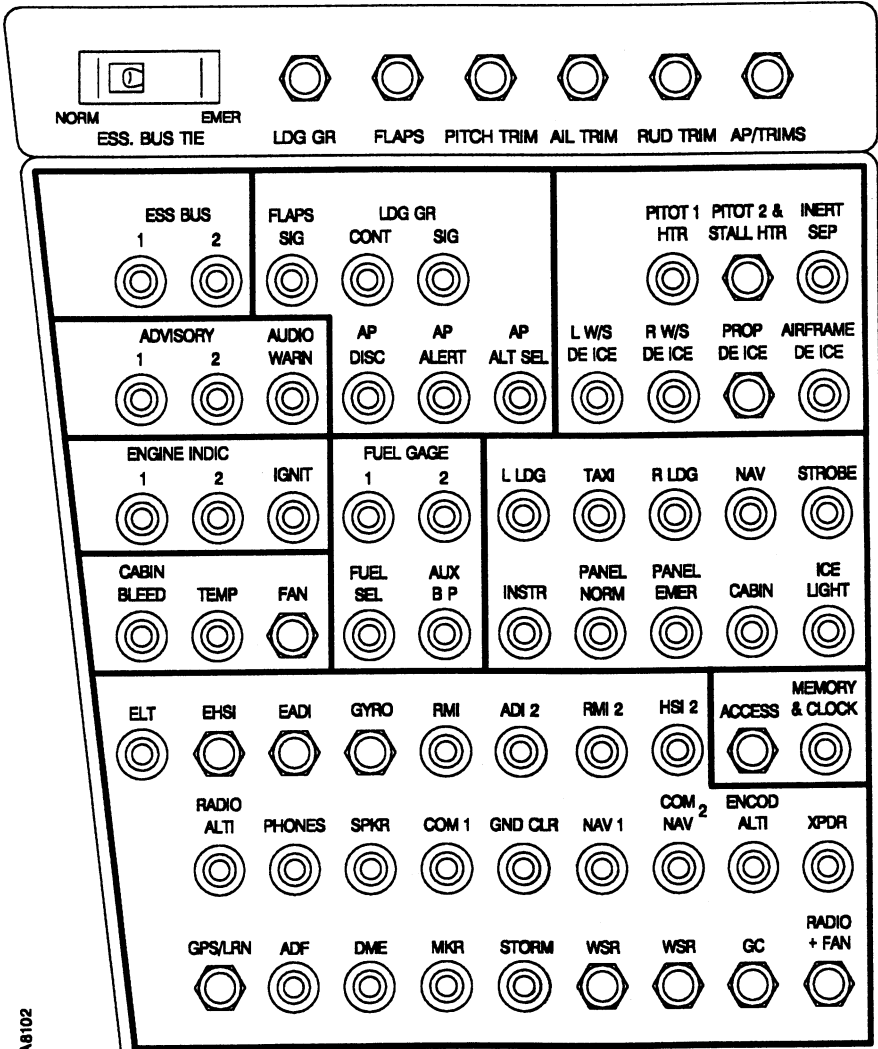

1425004AAAHHM8102



Disjoncteur déclenchable
"PULL-OFF" type circuit breaker



Disjoncteur non déclenchable
Circuit breaker which cannot be pulled off

Figure 9.9.7B (2 / 2) - EFIS CIRCUIT BREAKERS PANEL

INTENTIONALLY LEFT BLANK

SUPPLEMENT

"BENDIX / KING" AUTOPILOT

TYPE KFC 325

TABLE OF CONTENTS

	Page
1 - GENERAL	9.10.2
2 - LIMITATIONS	9.10.3
3 - EMERGENCY PROCEDURES	9.10.4
4 - NORMAL PROCEDURES	9.10.6
5 - PERFORMANCE	9.10.20
6 - WEIGHT AND BALANCE	9.10.20
7 - DESCRIPTION	9.10.21

SECTION 1 GENERAL

This supplement is provided to acquaint the pilot with the limitations as well as normal and emergency operating procedures of the BENDIX / KING KFC 325 Digital Autopilot. The limitations presented are pertinent to the operation of the KFC 325 System as installed in the TBM 700 airplane. The Autopilot must be operated within the limitations herein specified.

The KFC 325 Autopilot is certified in this airplane with 3 axis control, pitch, roll and yaw damper. The various instruments and the controls for the operation of the KFC 325 System are described in the following pages.

The KFC 325 Autopilot has an electric pitch trim system which provides autotrim during autopilot operation and manual electric trim for the pilot when the autopilot is not engaged. The trim system is designed to withstand any single inflight malfunction.

A lockout device prevents autopilot engagement until the system has been successfully preflight tested.

The following conditions will cause the Autopilot to automatically disconnect :

- A - Power failure.
- B - Internal Flight Control System failure.
- C - Roll rates in excess of 10° / sec. except when the "CWS" push-button is held depressed.
- D - Pitch rates in excess of 5° / sec. except when the "CWS" push-button is held depressed.
- E - Accelerations outside of a 0.3 g to 1.6 g envelope (1.0 g's being normal for straight and level flight).
- F - The presence of "ATTITUDE FAIL" and big "SG" flags.
- G - A movement of the roll trim except when the "CWS" push-button is held depressed.
- H - A movement of the pitch trim.

SECTION 2

LIMITATIONS

These limitations supplement those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

- A - During autopilot operation, a pilot with seat belt fastened must be seated at the left pilot position.
- B - The autopilot and yaw damper must be OFF during takeoff and landing.
- C - Do not engage autopilot below 1000 ft (300 m) above ground level in cruise or climb.
- D - Do not use autopilot in approach under 200 ft (60 m).
- E - Autopilot engagement is prohibited with the "PITCH TRIM" circuit-breaker pulled.
- F - IAS for localizer interception is limited to 160 kt.
- G - In "APR" mode - "GS" coupled, flaps must be fully extended in landing position before crossing the OM.

NOTE 1 :

Use of basic pitch attitude hold mode is recommended during operation in severe turbulence.

NOTE 2 :

It is recommended not to use the autopilot with a too high rate of descent below 2000 ft (600 m) above ground level.

SECTION 3 EMERGENCY PROCEDURES

These procedures supplement those of standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

AUTOPILOT OR ELECTRIC PITCH TRIM MALFUNCTION

- 1 - "AP / TRIMS DISC INT" push-button **PRESSED
and HELD**
- 2 - "AP / TRIMS MASTER" switch **OFF**
- 3 - "AP / TRIMS DISC INT" push-button **RELEASED**
- 4 - If necessary, control wheel **RETRIM**

CAUTION

**WHEN DISCONNECTING THE AUTOPILOT AFTER A PITCH TRIM
MALFUNCTION, HOLD THE CONTROL WHEEL FIRMLY ; UP TO
30 POUNDS OF FORCE ON THE CONTROL WHEEL MAY BE
NECESSARY TO HOLD THE AIRPLANE LEVEL**

NOTE :

Maximum altitude losses due to autopilot malfunction :

<u>Configuration</u>	<u>Altitude loss</u>
<i>Cruise, climb</i>	<i>200 ft</i>
<i>Maneuver, descent</i>	<i>800 ft</i>
<i>Approach</i>	<i>90 ft</i>

**ENGINE FAILURE
(AUTOPILOT COUPLED)**

- 1 - "AP / TRIMS DISC INT" push-button **PRESSED**
- 2 - In case of engine failure, apply the basic airplane Pilot's Operating Handbook procedures.

SECTION 4 NORMAL PROCEDURES

4.1 - GENERAL

These procedures supplement those of standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook.

4.2 - LIST OF GROUND CHECKS

BEFORE TAXIING	
AUTOPILOT AUTOTEST	
1 - Check no flags "ATTITUDE FAIL", "HDG", "SG", "DU"	
2 - "TEST" button	PRESS
3 - Check :	
- All annunciator lights of control box ON ("TRIM" annunciator flashing).	
- After approximately 5 seconds, all annunciator lights of control box OFF except "AP" which will flash approximately 12 times prior to extinguishing and red "AP" of EADI which will flash approximately 5 times prior to extinguishing and be accompanied by the autopilot audible disconnect tone.	
NOTE : <i>If "TRIM" warning light on the mode controller or if the "PTRM" annunciator on the EADI stays ON, the autotrim did not pass preflight test. The "AP / TRIMS MASTER" switch must be turned to "AP OFF" position. The flight director may be used but the electric pitch trim will be inoperative and the autopilot should not be engaged.</i>	



BEFORE TAXIING (Cont'd)

MANUAL ELECTRIC TRIM TEST

- 1- Actuate left side of split switch unit to the fore and aft positions. The trim wheel should not move on its own. Rotate the trim wheel manually against the engaged clutch to check the pilot's trim overpower capability.
- 2- Actuate right side of split switch unit to the fore and aft positions. Trim wheel should not move on its own and normal trim wheel force is required to move it manually.
- 3- Press the "AP / TRIMS DISC INT" push-button down and hold.
Manual electric trim should not operate either nose up or nose down when both halves of the split switch are actuated to the fore and aft positions.

AUTOMATIC ELECTRIC TRIM TEST

- 1- "AP" button **PRESS**
to engage autopilot
- 2- Control wheel **MOVE**
aft, fore, left and right to verify that
the autopilot can be overpowered
- 3- "AP / TRIMS DISC INT" push-button **PRESS**
Verify that the autopilot disconnects
and all flight director modes are cancelled
- 4- Trim **SET**
to takeoff position

BEFORE TAKEOFF

- 1- "AP / TRIMS DISC INT" push-button **PRESS**

4.3 - LIST OF INFLIGHT CHECKS

AUTOPILOT ENGAGEMENT	
<p>"AP" button</p>	<p>PRESS</p>
<p>Note "AP", "FD" and "YD" annunciators ON. If no other flight director modes are selected at the time of autopilot engagement the mode of operation will be flight director wings level and pitch attitude hold.</p>	
<p>CAUTION</p> <p>DO NOT EXERT ANY PRESSURE ON THE PITCH CONTROL AS THE AUTOPILOT WILL RUN THE PITCH TRIM TO OPPOSE YOUR ACTION</p>	
<p><i>NOTE :</i> <i>Significant balance changes can occur with speed / power changes or fuel imbalance. With AP engaged it is therefore necessary to check regularly that the plane is trimmed in the roll axis by pressing the "CWS" push-button and if needed retrimming the plane. In case of action on the roll trim, the "CWS" push-button must be kept depressed, otherwise the AP will disconnect.</i></p>	

BASIC MODES**USING CWS**

- 1 - "CWS" push-button **PRESS and MOVE**
airplane nose to the desired attitude
- 2 - "CWS" push-button **RELEASE**

The autopilot will maintain airplane pitch attitude up to the pitch limits of + 15° or - 10°.

USING VERTICAL TRIM

- 1 - Vertical trim control **PRESS**
either "**UP**" or "**DOWN**" to modify
airplane attitude at a rate of 0.7 deg / sec.
up to the pitch limits of + 15° or - 10°
- 2 - Vertical trim control **RELEASE**
when desired airplane attitude is reached

The autopilot will maintain the desired pitch attitude.

ALTITUDE MODES

ALTITUDE HOLD

- 1 - "ALT" mode selector button **PRESS**
Note ALT mode annunciator ON

The autopilot will maintain the selected pressure attitude.

ALTITUDE CHANGE

- 1 - Using "CWS" (recommended for altitude changes greater than 100 ft).
 - "CWS" push-button **PRESS**
and fly airplane to desired pressure altitude
 - "CWS" push-button **RELEASE**
when desired pressure altitude is reached

The autopilot will maintain the desired pressure altitude.

- 2 - Using Vertical Trim (recommended for altitude changes less than 100 ft).
 - Vertical trim control **PRESS**
either "UP" or "DOWN"

Vertical Trim will seek an altitude rate of change of about 500 ft / min.

- Vertical trim control **RELEASE**
when desired pressure altitude is reached

The autopilot will maintain the desired pressure altitude.

SPEED MODES

INDICATED AIRSPEED HOLD

- 1- "IAS" mode selector button **PRESS**
Note the IAS mode annunciator ON

The autopilot will maintain the current indicated airspeed.

SELECTED INDICATED AIRSPEED CHANGE

- 1- Using "CWS" (recommended for airspeed changes of 10 KIAS or greater)
- "CWS" push-button **PRESS**
and fly airplane to desired airspeed
 - "CWS" push-button **RELEASE**
when desired airspeed is reached

The autopilot will maintain the desired airspeed.

- 2- Using Vertical Trim (recommended for airspeed changes less than 10 KIAS).
- Vertical trim control **PRESS**
either "UP" or "DOWN"

Vertical Trim will seek a new airspeed at a rate of about 0.75 knots per second.

- Vertical trim control **RELEASE**
when desired time in seconds has past
i.e. 10 KIAS change desired hold V / T
for approximately 13 seconds

The autopilot will maintain the desired airspeed.

HEADING MODES

HEADING HOLD

- 1 - Heading selector knob **SET**
bug to desired heading
- 2 - "HDG" mode selector button **PRESS**
Note HDG mode annunciator ON

The autopilot will automatically turn the airplane to the selected heading

MANUAL HEADING CHANGE (basic mode)

- 1 - "CWS" push-button **PRESS and TURN**
airplane to the desired heading
- 2 - "CWS" push-button **RELEASE**

The autopilot will maintain airplane in wings level attitude.

NOTE :

Airplane heading may change in the wings level mode due to an airplane out of trim condition.

HEADING CHANGE ("HDG" mode)

- 1 - Heading selector knob **SET**
bug to desired heading

The autopilot will automatically turn the airplane to the new selected heading.

NAVIGATION MODE

- 1 - Course bearing pointer **SET**
to desired course
- 2 - Establish intercept angle using wings level or "HDG" modes.
- 3 - "NAV" mode selector button **PRESS**
 - If the Course Deviation Bar is greater than 2 to 3 dots : the airplane will continue in "HDG" mode (or wings level if "HDG" not selected) with the "NAV-ARM" annunciators illuminated. When the computed capture point is reached, the "HDG" will disengage, the "ARM" annunciator will turn off and the selected course will be automatically captured and tracked.
 - If the D-Bar is less than 2 to 3 dots : the "HDG" mode will disengage upon selecting "NAV" mode ; the "NAV" annunciator will illuminate and the capture / track sequence will automatically begin.

NOTE :

When making relatively small course changes with "NAV" mode engaged, it may be necessary to reinitiate the "NAV" coupling procedures described in the previous paragraph. This will force the autopilot back into a capture mode, allowing the system to establish tracking the new course more rapidly.

CAUTION

IT IS BETTER NOT TO PERFORM AUTOMATIC CAPTURE OF AN "ADF" HEADING.

IT IS RECOMMENDED TO ENGAGE "NAV" MODE WHEN ADF CAPTURE IS PERFORMED.

APPROACH MODE

- 1- Course bearing pointer **SET**
to desired course
- 2- Establish intercept angle using wings level or "HDG" modes.
- 3- "APR" mode selector button **PRESS**
 - If the Course Deviation Bar is greater than 2 to 3 dots : the airplane will continue in "HDG" mode (or wings level if "HDG" not selected) with the "APR-ARM" annunciators illuminated. When the computed capture point is reached the "HDG" will disengage, the "ARM" annunciators will turn off and the selected course will be automatically captured and tracked.
 - If the D-Bar is less than 2 to 3 dots : the "HDG" mode will disengage upon selecting "APR" mode ; the "APR" annunciator will illuminate steady and the capture / track sequence will automatically begin.

BC APPROACH MODE

- 1- Course bearing pointer **SET**
to the ILS front course inbound heading
- 2- Establish intercept angle using wings level or "HDG" mode.
- 3- "BC" mode selector button **PRESS**
 - If the Course Deviation Bar is greater than 2 to 3 dots : the airplane will continue in "HDG" mode (or wings level if "HDG" not selected) with "APR-ARM", "BC" annunciated. When the computed capture point is reached the "HDG" will disengage, the ARM annunciators will turn off and the selected course will be automatically captured and tracked.
 - If the D-Bar is less than 2 to 3 dots : the "HDG" mode will disengage upon selecting "BC" mode ; the "APR" and "BC" annunciators will illuminate and the capture / track sequence will automatically begin.

CAUTION

WHENEVER THE AIRPLANE IS EQUIPPED WITH "BENDIX / KING" EFS 40, AND THE EHSI FIGURATION IS ON HSI NAV MAP, THE LOCALIZER CDI LEFT-RIGHT DEVIATION IS AUTOMATICALLY CORRECTED BY THE EFS 40 TO ELIMINATE THE NEED TO FLY REVERSE SENSING ON THE BACK COURSE. BC IS ANNUNCIATED AND THE CDI IS CORRECTED FOR PROPER STEERING COMMANDS WHEN THE AIRPLANE HEADING DEVIATES MORE THAN 105° FROM THE COURSE POINTER. THE COURSE POINTER SHOULD BE SET TO THE LOCALIZER FRONT COURSE INBOUND HEADING.

GLIDE SLOPE MODE

NOTE :

"Glide Slope" coupling is inhibited when operating in "NAV" or "APR" + "BC" modes. "Glide Slope" coupling occurs automatically in the "APR" mode.

- 1 - "APR" mode **ENGAGED**
- 2 - At Glide Slope centering **CHECK "GS" annunciator ON**

NOTE :

The autopilot can capture "Glide Slope" from above or below the beam while operating in either pitch attitude hold, IAS hold, VS hold or ALT hold modes.

NOTE :

If after "Glide Slope" coupling the "Glide Slope" signal becomes inadequate ("GS" flag in view), the "Glide Slope" annunciator will flash at least six times before extinguishing and the system will transfer to pitch attitude hold.

If a valid "Glide Slope" signal returns within six seconds the system will automatically recouple.

If a valid "Glide Slope" signal does not return within six seconds, the airplane must once again pass through the "Glide Slope" beam to achieve "Glide Slope" coupling.

GO-AROUND MODE

- 1 - Power lever "GA" push-button **PRESS**
 to disengage the autopilot (if engaged)
 and engage the flight director
 (if not engaged) in a wings level,
 pitch up command.
 Note GA mode annunciator ON
- 2 - MISSED APPROACH **EXECUTE**
- 3 - Airplane **TRIM**
- 4 - Lateral guidance (Select one mode)
 - "HDG" mode **SET bug**
 and **PRESS "HDG" push-button**
 - "NAV" mode **PRESS**
"NAV" push-button
 - "APR" mode **PRESS**
"APR" push-button

Glide Slope coupling will be inhibited so that the LOC can be tracked outbound (the autopilot will not couple to false Glide Slope signals as long as "GA" is engaged).

"GA" is disconnected whenever a vertical mode is engaged.

HALF-BANK ANGLE MODE

"HALF-BANK" mode button **PRESS**

The commanded bank angle will be reduced to $\frac{1}{2}$ the normal value. This mode is functional during "HDG" and "NAV" mode operations but will be automatically deselected and inhibited during "APR" (normal or BC) coupled operations.

SOFT RIDE MODE

"SOFT RIDE" mode button **PRESS**

This mode softens the autopilot's commands to provide a smoother ride during operations in turbulence. The normal autopilot performance (maintaining heading, maintaining wings level, maintaining attitude, maintaining airspeed and / or maintaining altitude) will be degraded by use of the Soft Ride mode.

BEFORE LANDING

"AP / TRIMS DISC INT" push-button **PRESS**
to disengage autopilot
and yaw damper

4.4 - FLIGHT DIRECTOR OPERATION

The flight director modes of operation are the same as those used for autopilot operations except the autopilot is not engaged and the pilot must maneuver the airplane to satisfy the flight director commands.

SECTION 5 PERFORMANCE

The installation and the operation of the autopilot do not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6 WEIGHT AND BALANCE

Weight and balance corresponding to KFC 325 "BENDIX KING" autopilot are given in the optional equipment list attached to Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

SECTION 7
DESCRIPTION

7.1 - KMC 321 CONTROLLER

This mode controller consists of nine Flight Director mode select push-buttons (Push On - Push Off), mode annunciators, the vertical trim control, the yaw damper engage / disengage push-button, the autopilot engage / disengage push-button and the preflight test push-button.

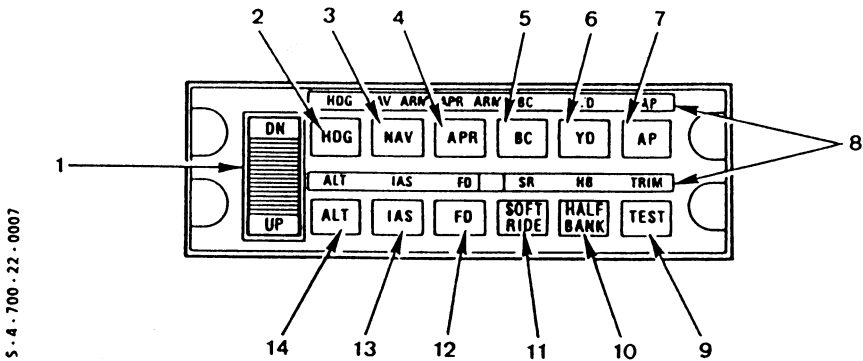


Figure 9.10.1 - KMC 321 AUTOPILOT MODE CONTROLLER

Item 1 - VERTICAL TRIM CONTROL

A spring loaded to center rocker switch which will provide up or down pitch command changes :

- While in Pitch Attitude Hold mode will adjust the pitch attitude at a rate of 0.7° / sec.
- While in Altitude Hold mode will adjust the altitude at a rate of 500 ft / min.
- While in Indicated Airspeed Hold mode will adjust the airspeed at a rate of 0.75 kt / sec.
- While in the Vertical Speed Hold mode will adjust the vertical speed at a rate of 100 ft / min / sec.

- Item 2 - **HEADING (HDG) MODE SELECTOR PUSH-BUTTON**
When pushed, will select the Heading mode which commands the airplane to turn to and maintain the heading selected by the heading bug on the EHSI. A new heading may be selected at any time and will result in the airplane turning to the new heading with a maximum bank angle of about 25°. Selecting "HDG" mode will cancel "NAV", "APR" or "BC" track modes.
- Item 3 - **NAVIGATION (NAV) MODE SELECTOR PUSH-BUTTON**
When pushed, will select the Navigation mode. The mode provides all angle intercepts, automatic beam capture and tracking of "VOR", "RNAV", "ADF" or LOC signals. The "NAV-ARM" annunciators located above this push-button will illuminate until the automatic capture sequence is initiated, then "ARM" will extinguish. The EADI mode annunciator will announce the same sequence. A loss of radionavigation signal during more than 7.5 sec. will turn autopilot to wings level attitude basic mode. In that case, "NAV" mode flashes on the EADI mode annunciator.
- Item 4 - **APPROACH (APR) MODE SELECTOR PUSH-BUTTON**
When pushed, will select the Approach mode. This mode provides all angle intercepts, automatic beam capture and tracking of "VOR", "RNAV" or "LOC" signals plus glideslope coupling in the case of an ILS. The tracking gain of the "APR" mode is greater than the gain in the "NAV" mode. The "APR-ARM" annunciators located above this button will illuminate until the automatic capture sequence is initiated, then "ARM" will extinguish. The EADI mode annunciator will announce the same sequence.
- Item 5 - **BACK COURSE APPROACH (BC) MODE SELECTOR PUSH-BUTTON**
When pushed will select the Back Course Approach mode. This mode functions identically to the Approach mode except that response to LOC signals is reversed. Glideslope coupling is inhibited in the Back Course Approach mode. The "BC" annunciators (both the KMC 321 and the EADI) will illuminate when this mode is activated plus the Approach Mode annunciators will function as described in Item 4.

- Item 6 - **YAW DAMPER ENGAGE (YD) PUSH-BUTTON**
When pushed, engages the yaw damper independent of the autopilot. When pushed with the yaw damper engaged, disengages the yaw damper.
- Item 7 - **AUTOPILOT ENGAGE (AP ENG) PUSH-BUTTON**
When pushed, engages autopilot and yaw damper if all logic conditions are met. When pushed again, disengages autopilot but does not disengage the yaw damper.
- Item 8 - **MODE ANNUNCIATORS**
The mode symbol located above each mode push-button will illuminate when the mode is engaged except for the "NAV" and "APR" modes. When either the "NAV", "APR" or "BC" mode push-button is pressed, the appropriate "ARM" annunciator above either the "NAV" or "APR" mode push-button will illuminate until the automatic beam capture sequence is initiated. At beam capture "NAV" or "APR" will be annunciated above either the "NAV" or "APR" mode push-button. Normally, the "NAV" or "APR" coupled conditions follow an "ARM" condition but the coupled condition may be entered into directly if the beam capture criteria are met when "NAV", "APR" or "BC" is selected.
- Item 9 - **PREFLIGHT TEST (TEST) PUSH-BUTTON**
When momentarily pushed, initiates preflight test sequence which automatically turns on all annunciator lights, tests the roll and pitch rate monitors, tests the autotrim fault monitor, checks the manual trim drive voltage and tests all autopilot valid and disengage logic. If the preflight test is successfully passed, the "AP" annunciator light will flash for approximately 6 seconds (an audible tone will also sound simultaneously with the annunciator flashes).
The autopilot cannot be engaged until the autopilot preflight tests are successfully passed.
- Item 10 - **HALF BANK (HB) MODE SELECTOR PUSH-BUTTON**
When pushed, engages the Half Bank mode which reduces the certified autopilot commanded maximum bank angle to one half the normal value. This mode is automatically disengaged when the "APR" or "BC" mode is activated.

Item 11 - SOFT RIDE (SR) MODE SELECTOR PUSH-BUTTON

When pushed, engages the Soft Ride mode which reduces the autopilot commands. This command reduces the autopilot aggressiveness which results in a more comfortable ride in turbulent air conditions. This mode is only intended to be used during turbulent air conditions. Routine use of this mode during all flight conditions will result in less than optimum autopilot performance. This mode is automatically disengaged when the "APR" or "BC" mode is activated.

Item 12 - FLIGHT DIRECTOR (FD) MODE SELECTOR PUSH-BUTTON

When pushed, will select the Flight Director mode bringing the Command Bar in view on the EADI and will command wings level and pitch attitude hold.


Item 13 - INDICATED AIRSPEED HOLD (IAS) MODE SELECTOR PUSH-BUTTON

When pushed, engages the Indicated Airspeed Hold mode. The autopilot varies the airplane pitch attitude in order to maintain the selected airspeed during changing air conditions, power changes and / or airplane configuration changes.

Item 14 - ALTITUDE HOLD (ALT) MODE SELECTOR PUSH-BUTTON

When pushed, will select the Altitude Hold mode, which commands the airplane to maintain the pressure altitude existing at the moment of selection.

Engagement may be accomplished in climb, descent, or level flight. In the "APR" mode, altitude hold will automatically disengage when the Glideslope is captured.

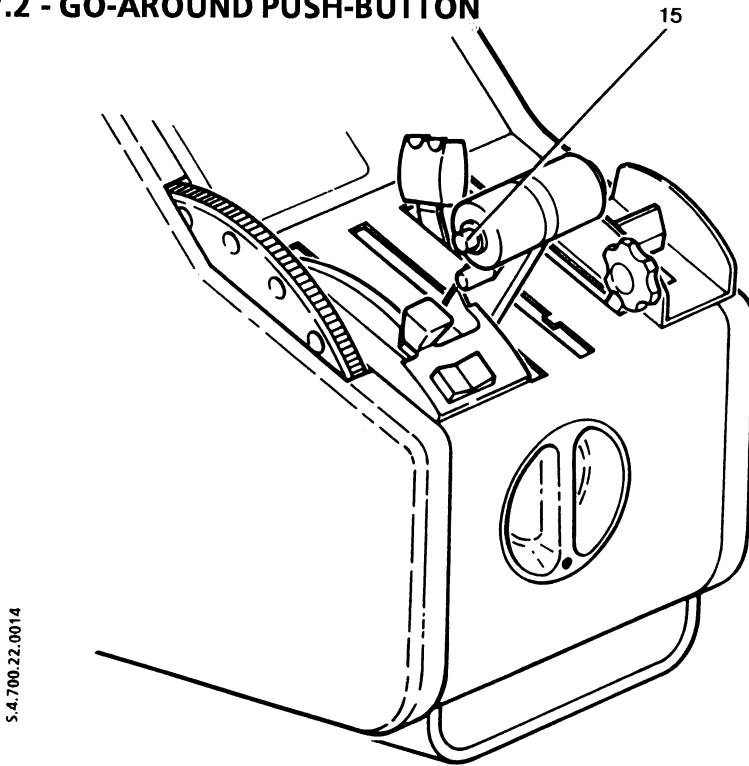7.2 - GO-AROUND PUSH-BUTTON


S.4.700.22.0014

Figure 9.10.2 - GO-AROUND PUSH-BUTTON

Item 15 - GO AROUND (GA) MODE SELECTOR PUSH-BUTTON

The button located on the left side of the throttle lever, when pressed, disengages the autopilot and "NAV" or "APR" modes, if engaged. Flight director gives order which allows keeping a fixed pitch up attitude of 8 degrees. GA will annunciate on the EADI mode annunciator. The autopilot and any lateral mode may be re-engaged after the GO AROUND attitude has been manually established. Initiation of any other vertical mode cancels GO AROUND. If GO AROUND is active, Glideslope mode is inhibited.

7.3 - MODE ANNUNCIATOR ON EADI

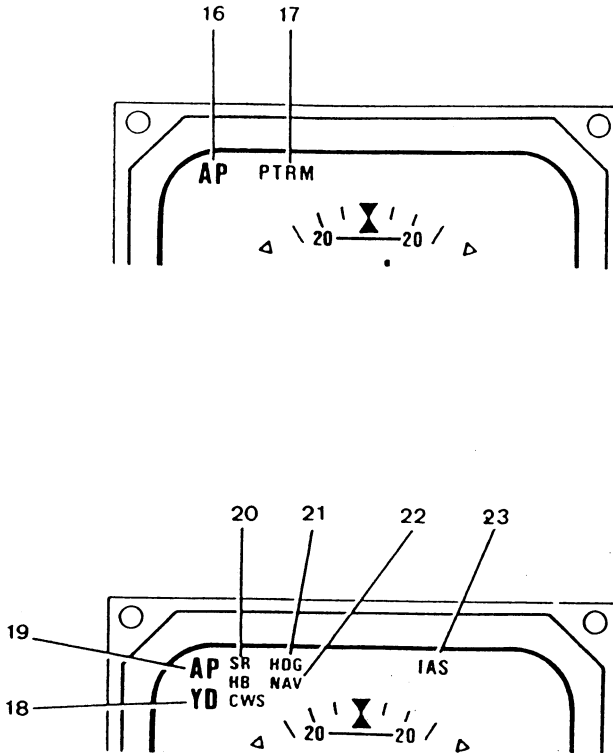

54700.22 0010

Figure 9.10.3 - MODE ANNUNCIATOR ON EADI

Item 16 - AUTOPILOT (red AP) ANNUNCIATOR

Flashes for a short time whenever the autopilot is disengaged (an audible tone operates too during 2 seconds).

- Item 17 - **TRIM WARNING LIGHT (red PTRM)**
Illuminates continuously whenever trim power is not on or the system has not been preflight tested. The "PTRM" warning light illuminates and is accompanied by an audible warning whenever a manual trim fault is detected. The Manual Trim System is monitored for the Trim Servo running without a command. The "PTRM" warning light will illuminate and be accompanied by an audible warning tone whenever an autotrim failure occurs. The autotrim system is monitored for the following failures : trim servo running without a command ; trim servo not running when commanded to run ; trim servo running in the wrong direction.
- Item 18 - **YAW DAMPER (YD) ANNUNCIATOR**
Illuminates continuously whenever the yaw damper is engaged. Flashes for a short time whenever the yaw damper is disengaged.
- Item 19 - **AUTOPILOT (green AP) ANNUNCIATOR**
Illuminates whenever the autopilot is engaged.
- Item 20 - **MODE ANNUNCIATORS**
SR (soft ride) : indicates that mode, which softens autopilot commands, is engaged.

HB (half-bank) : indicates that mode, reducing bank angle by a half, is engaged. This mode is automatically disengaged when approach mode is engaged.

CWS : indicates that pilot is pressing "CWS" push-button, which activates the flight director in attitude and wings level hold mode. If autopilot is engaged, it allows to activate control wheel steering.
- Item 21 - **ENGAGED LATERAL MODE (green)**
Possible modes are "HDG", "NAV", "APR", "LOC" or "BC".
- Item 22 - **ARMED LATERAL MODE (white)**
Possible modes are "NAV", "APR", "LOC" or "BC".
- Item 23 - **ENGAGED LONGITUDINAL MODE (green)**
Possible modes are "ALT", "ALTC", "IAS", "VS" or "GS".

7.4 - DIRECTIONAL GYRO SLAVING CONTROL

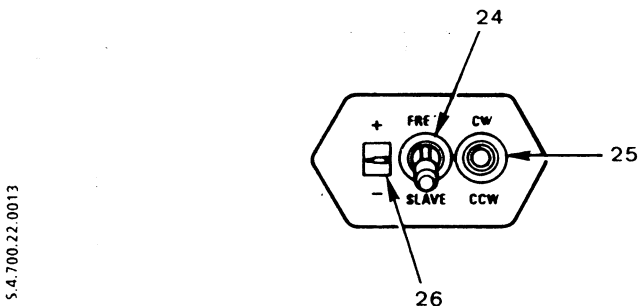


Figure 9.10.4 - KA 51B SLAVING CONTROL AND COMPENSATOR UNIT

- Item 24 - FREE / SLAVE COMPASS SLAVE SWITCH
Selects either the manual (FREE) or automatic slaving (SLAVE) mode for the compass system.
- Item 25 - CW / CCW COMPASS MANUAL SLAVE SWITCH
With the FREE / SLAVE compass slave switch in the FREE position, allows manual compass card to rotate either clockwise or counterclockwise. The switch is spring loaded to the center position.
- Item 26 - SLAVING METER
Indicates the difference between the displayed heading and the magnetic heading. Deflection upwards indicates a clockwise error of the compass card. Deflection downwards indicates a counterclockwise error of the compass card.

7.5 - AUTOPILOT CONTROL WHEEL SWITCH CAP

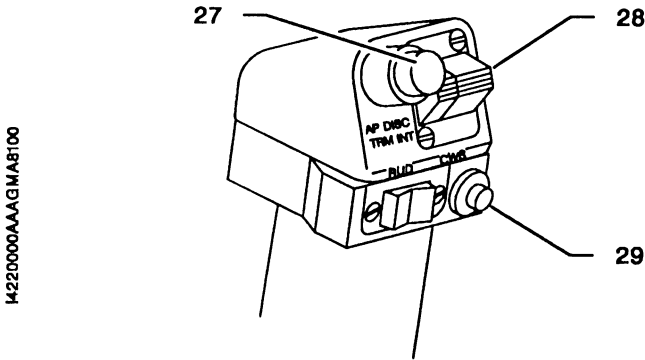


Figure 9.10.5 - AUTOPILOT CONTROL WHEEL SWITCH CAP

Item 27 - AUTOPILOT DISCONNECT / TRIM INTERRUPT (AP / TRIMS DISC INT) PUSH-BUTTON

When shortly depressed, will disengage the autopilot and cancel all operating flight director modes. When depressed and held will interrupt all electric trims power (stop trims motion).


Item 28 - MANUAL ELECTRIC PITCH TRIM CONTROL SWITCHES

A split switch unit in which the left half provides power to engage the trim servo clutch and the right half to control the direction of motion of the trim servo motor. Both halves of the split trim switch must be actuated in order for the manual electric trim to operate in the desired direction. When the autopilot is engaged, operation of the manual electric trim will automatically disconnect the autopilot. (The flight director will remain engaged and the yaw damper will remain engaged if already engaged).

Item 29 - CONTROL WHEEL STEERING (CWS) PUSH-BUTTON

When depressed, allows pilot to manually control the airplane (disengages the pitch, roll and pitch trim servos) without cancellation of any of the selected modes. Will engage the flight director mode if not previously engaged. Automatically synchronizes the flight director / autopilot to the pitch attitude present when the CWS switch is released, to the present pressure altitude when operating in the Altitude hold mode, to the present Vertical Speed when operating in the vertical speed hold mode or to the present Indicated Airspeed when operating in the indicated airspeed hold mode.

7.6 - "AP / TRIMS MASTER" AND "EFIS MASTER" SWITCHES

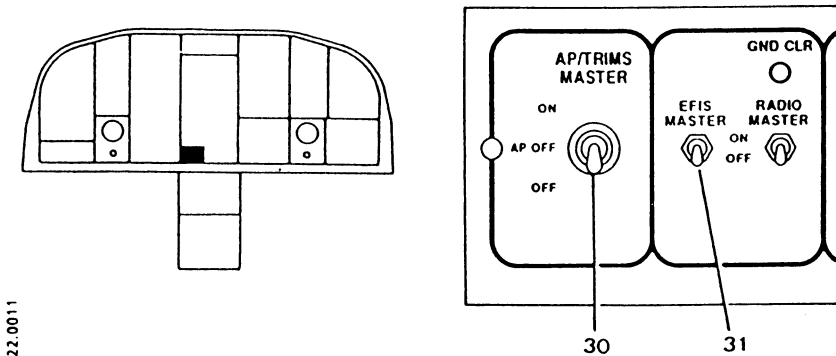

S.4.700.22.0011

Figure 9.10.6 - "AP / TRIMS MASTER" AND "EFIS MASTER" SWITCHES

Item 30 - "AP / TRIMS MASTER" SWITCH

Controls power to all autopilot components and to all electric trims. When set to AP OFF position, autopilot and electric pitch trim are inoperative. When set to OFF position, autopilot and electric trims are inoperative.

Item 31 - "EFIS MASTER" SWITCH

Supplies all components of EFIS system including vertical and directional gyros.

7.7 - CIRCUIT-BREAKERS

Autopilot components are supplied through following circuit-breakers :

<u>LABEL</u>	<u>FUNCTION</u>
AP / TRIMS	Supplies power to KCP 220 autopilot computer, to KS 270A pitch servo, to KS 271A roll servo, to KS 271A yaw servo and to "PITCH TRIM", "AIL TRIM", "RUD TRIM", "AP DISC" and "AP ALT SEL" circuit-breakers.
AP ALERT	Supplies power to the KAA 15 alarm unit.
AP ALT SEL	Supplies power to the KAS 297C vertical speed and altitude selector.
GYRO	Supplies power to the KSG 105 directional compass, to the KVG 350 vertical unit and to the KRG 332 yaw rate gyro.
PITCH TRIM	Supplies power to the KS 272A electric pitch trim.
AP DISC	Delivers a control signal (28 VDC switched by "AP DISC TRM INT" switch) to the KCP 220 autopilot computer and to the KAA 15 alarm unit.
EADI	Supplies power to the SG 465 symbols generator, EADI section
EHSI	Supplies power to the SG 465 symbols generator, EHSI section, to the navigation computer and to the KN 40 navigation converter.

SUPPLEMENT**"BENDIX / KING" KRA 405**
RADAR ALTIMETER**TABLE OF CONTENTS**

	Page
1 - GENERAL	9.16.2
2 - LIMITATIONS	9.16.2
3 - EMERGENCY PROCEDURES	9.16.2
4 - NORMAL PROCEDURES	9.16.3
5 - PERFORMANCE	9.16.4
6 - WEIGHT AND BALANCE	9.16.4
7 - DESCRIPTION	9.16.6

SECTION 1**GENERAL**

This supplement provides information necessary for airplane utilization when the "BENDIX / KING" KRA 405 radar altimeter is installed on TBM airplane not equipped with "GARMIN" G1000 system.

The radar altimeter provides the pilot with altitude information within -20 ft and 2500 ft.

SECTION 2**LIMITATIONS**

These limitations complete those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

The radio altimeter is not approved as an additional accurate approach aid.

SECTION 3**EMERGENCY PROCEDURES**

The emergency procedures given hereafter complete those of the standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

- During the test, if the radio altimeter does not indicate $50 \text{ ft} \pm 5 \text{ ft}$, the information provided by the radio altimeter must not be used.
- If the DH annunciator (EFIS) or the DH lamp (KNI 415) does not illuminate when the TEST button is depressed, the approach decision height will not be annunciated.
- If the flag comes into view, the information provided by the radar altimeter must not be used.

SECTION 4

NORMAL PROCEDURES

The normal procedures given hereafter complete those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook.

After engine starting :

1. Adjust the DH (Decision Height) to 25 ft.
2. Depress the TEST button. The indicated altitude should be 50 ft \pm 5 ft. The DH annunciator or the DH lamp should be out.
When releasing the TEST button, the DH lamp must come on and, if the KNI 415 indicator is installed, the warning tone must sound when the adjusted altitude is reached.
3. With the TEST button depressed, slowly increase the adjusted DH. When the DH annunciator or the DH lamp comes on, the adjusted altitude should be 50 ft \pm 5 ft. The DH annunciator or the DH lamp should also be illuminated at all altitudes above 50 feet.
4. Release the TEST button. The indicated altitude should be 0 ft \pm 5 ft.

Prior to landing :

1. Select the decision height.
2. Depress the TEST button. The indicated altitude should be 50 ft \pm 5 ft and, if the KNI 415 indicator is installed, the warning tone must sound. The DH annunciator or the DH lamp must come on and the warning tone must sound if the adjusted DH is greater than 50 ft.
3. Check that the radar altimeter pointer (KNI 415) or the DH annunciator (EFIS) indicates approximately 2500 ft by using the altimeter as a reference.

**"BENDIX / KING" KRA 405
RADAR ALTIMETER**700
850**SECTION 5
PERFORMANCE**

The installation of the "BENDIX / KING" KRA 405 radar altimeter does not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

**SECTION 6
WEIGHT AND BALANCE**

Weight and balance corresponding to the "BENDIX / KING" KRA 405 radar altimeter are given in the optional equipment list attached to Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

TBM

700
850

SUPPLEMENT 16

"BENDIX / KING" **KRA 405**
RADAR ALTIMETER


INTENTIONALLY LEFT BLANK

**SECTION 7
DESCRIPTION****STANDARD VERSION : KNI 415 INDICATOR** (Figure 9.16.1)

The DH lamp can be disabled by depressing it and rearmed by depressing it once again.

- 1) DH lamp
- 2) Flag
- 3) Indicator pointer
- 4) Altitude scale
- 5) DH bug
- 6) DH knob
- 7) Self-test button

Figure 9.16.1 (1 / 2) - KNI 415 INDICATOR

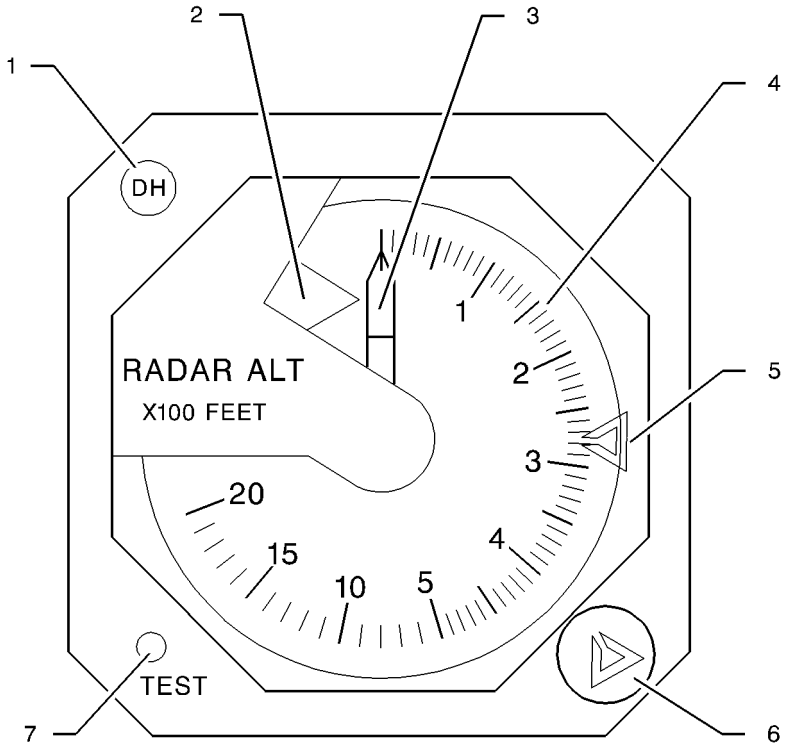


I4341400AAAA MA8001

Figure 9.16.1 (2 / 2) - KNI 415 INDICATOR


**"BENDIX / KING" KRA 405
RADAR ALTIMETER****700**
850**EFIS VERSION** (Figure 9.16.2)

- 1) Radar altimeter altitude display
- 2) DH annunciator
- 3) Selected decision height
- 4) DH selection pull-knob
- 5) TEST button


Figure 9.16.2 (1 / 2) - RADAR ALTIMETER : EFIS VERSION
WITHOUT KNI 415 INDICATOR

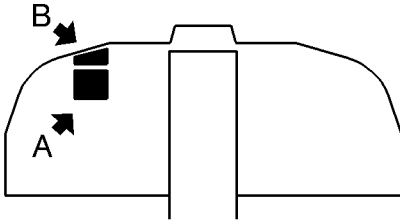

(A)

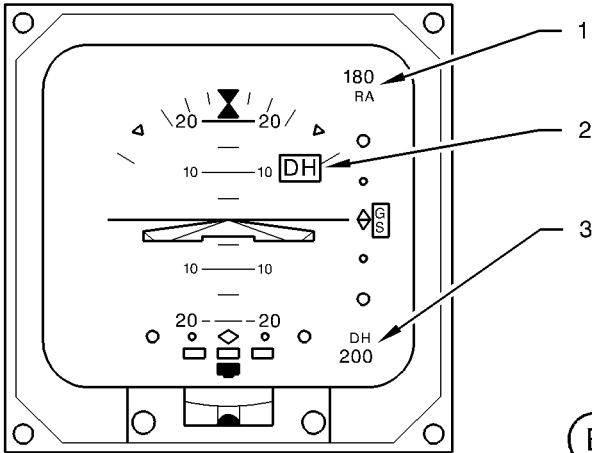

(B)

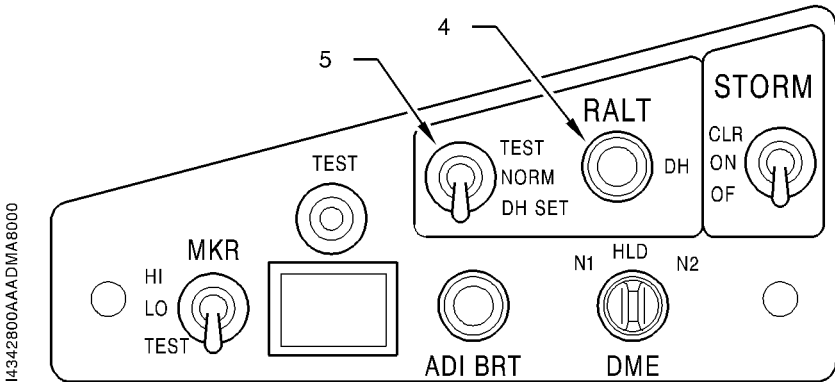

14342800AAAAD/IA8000

Figure 9.16.2 (2 / 2) - RADAR ALTIMETER : EFIS VERSION
WITHOUT KNI 415 INDICATOR

"BENDIX / KING" *KRA 405*
RADAR ALTIMETER

700
850

COMBINED VERSION

The radar altimeter information given in the EADI system are a recopy of the indications and selections made on the KNI 415 indicator.

SUPPLEMENT

ENGINE FIRE DETECTION SYSTEM

TABLE OF CONTENTS

	Page
1 - GENERAL	9.18.2
2 - LIMITATIONS	9.18.2
3 - EMERGENCY PROCEDURES	9.18.3
4 - NORMAL PROCEDURES	9.18.5
5 - PERFORMANCE	9.18.5
6 - WEIGHT AND BALANCE	9.18.6
7 - DESCRIPTION	9.18.7

ENGINE FIRE DETECTION SYSTEM

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to operation when the TBM airplane is equipped with the option "ENGINE FIRE DETECTION SYSTEM".

The generalities hereafter supplement those of the standard airplane described in Section 1 "General" of the basic Pilot's Operating Handbook when the TBM airplane is equipped with the option "ENGINE FIRE DETECTION SYSTEM".

The fire detection system allows engine fire monitoring and indicating.

SECTION 2**LIMITATIONS**

The limitations of the TBM airplane equipped with the engine fire detection system are those of the standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

SECTION 3**EMERGENCY PROCEDURES**

The emergency procedures hereafter supplement those of the standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook when the TBM airplane is equipped with the option "ENGINE FIRE DETECTION SYSTEM".

ENGINE FIRE ON GROUND	
	<p>Indications : ITT increasing, red warning "ITT" ON or "ITT" CAS message, red warning "FIRE" ON or "FIRE" CAS message, smoke, ...</p> <p>1 - Power lever IDLE</p> <p>2 - Condition lever CUT OFF</p> <p>3 - "BLEED VALVE" or "BLEED" switch OFF</p> <p>4 - "FREON" or "AIR COND" switch (if installed) OFF</p> <p>5 - Brakes AS REQUIRED</p> <p>6 - Tank selector OFF</p> <p>7 - Ask for ground assistance, if necessary</p> <p>8 - CRASH lever PULL DOWN</p> <p>9 - EVACUATE as soon as possible</p>

ENGINE FIRE IN FLIGHT

Indications : **"FIRE"** red warning ON or **"FIRE"** CAS message
 Try to confirm the fire warning by looking for other indications such as ITT increase, **"ITT"** red warning ON or **"ITT"** CAS message, smoke from engine cowls or air conditioning system.

If the fire alarm is not confirmed :

- 1 - Monitor the engine parameters, ITT in particular
- 2 - Look for smoke coming through engine cowls or from air conditioning system
- 3 - Land as soon as possible.

If the fire alarm is confirmed :

- 1 - Power lever **IDLE**
- 2 - Propeller governor lever **FEATHER**
- 3 - Condition lever **CUT OFF**
- 4 - "AUX BP" fuel switch **OFF**
- 5 - Tank selector **OFF**
- 6 - "BLEED VALVE" or "BLEED" switch **OFF**
- 7 - "FREON" or "AIR COND" switch (if installed) **OFF**
- 8 - At high altitude (above 12000 ft), undertake an EMERGENCY DESCENT (Refer to Chapter 3.6 of basic Pilot's Operating Handbook).
- 9 - Perform a FORCED LANDING (ENGINE SHUT DOWN) (Refer to Chapter 3.7 of basic Pilot's Operating Handbook).

WARNING

AFTER AN ENGINE FIRE, DO NOT ATTEMPT AN AIR START

SECTION 4**NORMAL PROCEDURES**

The normal procedures hereafter supplement those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook when the TBM airplane is equipped with the option "ENGINE FIRE DETECTION SYSTEM".

- Before starting the engine

"FIRE DETECT TEST" push-button DEPRESS

■ The "FIRE" red warning goes on or the "FIRE" CAS message lights on and causes the illumination of the "MASTER WARNING" light.

SECTION 5**PERFORMANCE**

Installation and operation of the engine fire detection system do not modify the performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6
WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
34 - FIRE PROTECTION				
A	Engine fire detection system (OPT70 26002A) <u>TBM 700A & TBM 700B (without GARMIN flight deck system)</u>	L'HOTELLIER	1.455 (0.66)	96.06 (2.440)
A	Engine fire detection system (OPT70 26002D) <u>TBM 700A & TBM 700B (with GARMIN flight deck system)</u>	L'HOTELLIER	1.455 (0.66)	96.06 (2.440)
A	Engine fire detection system (OPT70 26002B) <u>TBM 700C & TBM 850 (without GARMIN flight deck system)</u>	L'HOTELLIER	1.455 (0.66)	96.06 (2.440)
A	Engine fire detection system (OPT70 26002C) <u>TBM 850 (with GARMIN flight deck system)</u>	L'HOTELLIER	1.455 (0.66)	96.06 (2.440)

SECTION 7

DESCRIPTION

■ Airplane without GARMIN flight deck

The engine fire detection system enables the monitoring and indication of a fire in the engine area.

The system includes :

- 7 detectors
- the control relay
- the test push-button

The system also uses the advisory panel. The system is electrically supplied by "ESS BUS 1" bus bar and is protected by "ADVISORY2" circuit breaker.

DETECTORS

The 7 detectors are secured on supports positioned in the most sensitive engine areas. They consist of thermal switches detecting a temperature greater than 200°C.

RELAY

The relay controls the illumination of the "FIRE" warning light located on the advisory panel. It is positioned on a base plate secured under the floorboard.

PUSH-BUTTON

The push-button enables the pilot to test the detection system by opening the grounding circuit supplying the relay. It is connected in series with the 7 detectors. The push-button is located on the instrument panel on the L.H. side of the advisory panel near the "FIRE DETECT TEST" placard.

DISPLAY

The pilot is informed of the engine fire detection by the illumination of the "FIRE" warning light on the advisory panel, located in the upper central portion of the instrument panel.

Airplane with GARMIN flight deck

The engine fire detection system enables the monitoring and indication of a fire in the engine area.

The system includes :

- 7 detectors
- the test push-button
- the G1000 or G1000 NXi system.

DETECTORS

The 7 detectors are secured on supports positioned in the most sensitive engine areas. They consist of thermal switches detecting a temperature greater than 200°C.

PUSH-BUTTON

The push-button enables the pilot to test the detection system by opening the grounding circuit. It is connected in series with the 7 detectors. The push-button is located on the L.H. side instrument panel the "FIRE DETECT TEST" placard.

DISPLAY**Airplane equipped with GARMIN G1000 flight deck (MOD70-0176-00)**

Refer to the "GARMIN G1000 Integrated Flight Deck Cockpit Reference Guide for TBM 850", P/N 190-00708-00, at its latest revision.

Airplane retrofited with GARMIN G1000 flight deck (MOD70-0276-00)

Refer to the "GARMIN G1000 Integrated Flight Deck Cockpit Reference Guide for TBM 700", P/N 190-01247-00, at its latest revision.

Airplane retrofited with GARMIN G1000 NXi flight deck (MOD70-0539-00)

Refer to the "GARMIN G1000 NXi Integrated Flight Deck Cockpit Reference Guide for TBM 850/900", P/N 190-02349-00, at its latest revision.

SUPPLEMENT**SHADIN
ENGINE TREND MONITOR****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.19.2
2 - LIMITATIONS	9.19.3
3 - EMERGENCY PROCEDURES	9.19.3
4 - NORMAL PROCEDURES	9.19.4
5 - PERFORMANCE	9.19.5
6 - WEIGHT AND BALANCE	9.19.5
7 - DESCRIPTION	9.19.5
8 - HANDLING, SERVICING AND MAINTENANCE	9.19.8

SECTION 1**GENERAL**

This supplement is provided to acquaint the pilot with the limitations as well as the description and the operations necessary for operating a TBM airplane equipped with the SHADIN ETM Option.

The generals hereafter supplement those of the standard airplane described in Section 1 "General" of the basic Pilot's Operating Handbook when the TBM airplane is equipped with the SHADIN ETM Option.

The SHADIN Engine Trend Monitor (referred to as ETM) provides the pilot with a complete, accurate and detailed record of the aircraft's operation, pertaining to both the engine and the airframe.

Furthermore, the ETM provides parameters which will assist the pilot in the conduct of the flight.

The most important information can be recorded anytime in the ETM system. Once analyzed, these records make it possible to immediately detect any deviations of the operating parameters and thus schedule appropriate maintenance operations.

Any exceedance in operating parameters is automatically recorded.

The SHADIN ETM can be connected to a navigation system (LORAN, GPS).

SECTION 2

LIMITATIONS

The limitations hereafter supplement those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook when the TBM airplane is equipped with the SHADIN ETM Option.

The information related to navigation and flight parameters are a recopy of the airplane instruments and must not be used as primary means of flight control.

The ETM Operation Manual, at its latest revision, must be easily accessible to the pilot each time the ETM system is used.

SECTION 3

EMERGENCY PROCEDURES

The installation and the operation of the ETM system do not involve any emergency procedure modification described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

SECTION 4
NORMAL PROCEDURES

The procedures hereafter supplement those of standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook when the TBM airplane is equipped with the SHADIN ETM Option.

The SHADIN ETM operation normal procedures are described in the "Operation Manual", at the latest revision.

Nevertheless, it is important to note the following points :

BEFORE STARTING THE ENGINE

17 - SHADIN ETM

- Fuel remaining Check
- Added fuel Insert
- Fuel flow page Select

CRUISE

4 - SHADIN ETM

When the cruise parameters are fully established :

- RECORD Push

SECTION 5

PERFORMANCE

Installation and operation of the SHADIN ETM system do not modify the performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6

WEIGHT AND BALANCE

Weight and balance corresponding to the SHADIN ETM system are given in the optional equipment list attached to Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

SECTION 7

DESCRIPTION

7.1 - DESCRIPTION

The ETM is designed to monitor, display and record all engine operation parameters as well as aerodynamic airdata. The system provides the pilot with a centralized source of information for engine monitoring, fuel management, navigation and airdata parameters.

The system consists of three major components :

- the panel-mounted indicator / computer
- the various engine and environment transducers
- the external data recorder with the datakey, located under the L.H. back seat

7.2 - CONTROLS

The different controls are described hereafter - see Figure 9.19.1.

- 1 - DISPLAY
The window display of the ETM. It contains two lines, with 12 characters per line.
- 2 - RECORD BUTTON
This button is used to manually generate an output report.
- 3 - STOPWATCH START / STOP SWITCH
When the stopwatch is activated, this switch starts and stops it.
- 4 - STOPWATCH RESET BUTTON
Press this button to activate the stopwatch. Resets the stopwatch once it has been stopped.
- 5 - PAGE UP / DOWN SWITCH
Used for scrolling through the pages of each file.
- 6 - INCREMENT / DECREMENT SWITCH
This switch is used to scroll through subpages and increment or decrement an input value such as gross weight or fuel added.
- 7 - ROTARY SWITCH
Selects from four files : ETM, NAV, FUEL, AIRDATA.
- 8 - ENTER / TEST BUTTON
Used to activate the self test.

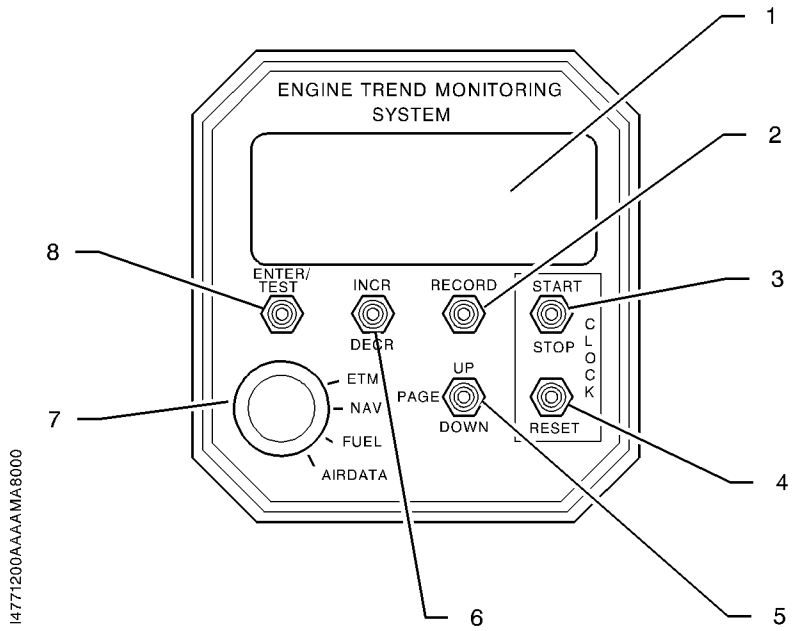


Figure 9.19.1 - ETM SHADIN

SECTION 8**HANDLING, SERVICING AND MAINTENANCE****DATAKEY OPERATION**

The key is inserted into its receptacle in the airplane prior to turning power on and removed after power is turned off. While inserted the reports which are recorded during the flight are electronically written to a memory chip in the key. When the key is removed from the airplane it can then be carried to a personal computer with a receptacle attached for the key and downloaded.

Operating using the Datakey

- a - Insert initialized key into airplane receptacle prior to power up (turn 90°).
- b - Conduct flight.
- c - Remove key after power down.

NOTE :

The key will hold several flights of data depending of the number of events per flight. The key should be downloaded as soon as practical after removal. Exposure to electrostatic charges can cause permanent damage.

SUPPLEMENT**"BENDIX/KING" RDR 2000**
VERTICAL PROFILE WEATHER RADAR**TABLE OF CONTENTS**

	Page
1 - GENERAL	9.22.2
2 - LIMITATIONS	9.22.2
3 - EMERGENCY PROCEDURES	9.22.3
4 - NORMAL PROCEDURES	9.22.3
5 - PERFORMANCE	9.22.5
6 - WEIGHT AND BALANCE	9.22.5
7 - DESCRIPTION	9.22.6

SECTION 1**GENERAL**

This supplement supplies information necessary for the operation of the airplane when the optional “BENDIX/KING” RDR 2000 vertical profile color weather radar system is installed in the TBM airplane.

SECTION 2**LIMITATIONS**

These limitations supplement those of standard airplane described in Section 2 “Limitations” of the basic Pilot’s Operating Handbook.

On ground, the radar radiation is inhibited, when the landing gear shock absorbers are compressed. However, it is important to obey the following restrictions :

- Do not operate the radar during refueling operations or in the vicinity of trucks or containers containing flammables or explosives.
- Do not allow personnel within 15 feet of area being scanned by antenna when system is transmitting.

2.1 - RDR 2000 weather radar not interfaced with multi-function display (KMD 850 or GMX 200)

The “BENDIX/KING” RDR 2000 Pilot’s Guide P/N 006-08755-0000 at its latest revision shall be readily available to the pilot whenever the operation of the radar system is predicted.

2.2 - RDR 2000 weather radar interfaced with KMD 850 multi-function display

The “BENDIX/KING” RDR 2000 Pilot’s Guide P/N 006-08755-0000, the KMD 550/850 Pilot’s Guide P/N 006-18222-0000 and the KMD 850 Wx Radar Pilot’s Guide Addendum P/N 006-18235-0000 at their latest revision shall be readily available to the pilot whenever the operation of the radar system is predicted.

2.3 - RDR 2000 weather radar interfaced with GMX 200 multi-function display

The "BENDIX/KING" RDR 2000 Pilot's Guide P/N 006-08755-0000 and the "GARMIN" GMX 200 Pilot's Guide P/N 190-00607-02 at their latest revision shall be readily available to the pilot whenever the operation of the radar system is predicted.

SECTION 3
EMERGENCY PROCEDURES

Installation and operation of "BENDIX/KING" RDR 2000 vertical profile weather radar system do not change the basic emergency procedures of the airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

CAUTION

IN CASE OF AP COMPUTER FAILURE, THE ANTENNA STABILIZATION WILL NOT BE OPERATIVE

SECTION 4
NORMAL PROCEDURES

The normal procedures hereafter supplement those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook.

Normal operating procedures for the vertical profile weather radar system are outlined in the Pilot's Guides, the references of which are given in Section 2 "Limitations" of this Supplement.

AFTER ENGINE STARTING

- Radar function selection switch **TST**
Check the antenna scanning and that there is no failure message.
- Radar function selection switch **SBY**

**“BENDIX/KING” RDR 2000
WEATHER RADAR**

TAKE OFF

- Radar **As required**

If the radar is switched "ON" with the landing gear shock absorbers compressed, the "TX FLT" message appears in the LH. lower corner of the multi-function display (KMD 850 or GMX 200) screen (if installed) or in the RH. lower corner of the radar screen (if multi-function display not installed). The radar radiation is inhibited. The radar automatically radiates, as soon as the aircraft takes off.

BEFORE LANDING

- Radar function selection switch **SBY**

ENGINE SHUT-DOWN

RDR 2000 weather radar interfaced with multi-function display (KMD 850 or GMX 200) :

- "RADIO MASTER" switch **OFF**

RDR 2000 weather radar not interfaced with multi-function display (KMD 850 or GMX 200) :

- Radar function selection switch **OFF**

SECTION 5
PERFORMANCE

Installation of “BENDIX/KING” RDR 2000 vertical profile weather radar system results in a 5 KIAS decrease in maximum cruise performance and a 3 KIAS decrease in Long Range cruise performance described in Section 5 “Performance” of the basic Pilot’s Operating Handbook.

SECTION 6
WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 “Weight and balance” of the basic Pilot’s Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
	34 - NAVIGATION			
A	Weather radar RDR 2000 (OPT70 34040A)	KING	21,054 (9.550)	163.70 (4.158)
A	Weather radar RDR 2000 GC 360A coupled (OPT70 34040B)	KING	25,154 (11.410)	161.22 (4.095)
A	Weather radar RDR 2000 EFIS coupled (OPT70 34040E)	KING	21,054 (9.550)	163.70 (4.158)
A	Weather radar RDR 2000 KMD 850 or GMX 200 coupled (OPT70 34040F)	KING	11,530 (5.230)	173.46 (4.406)
A	Weather radar RDR 2000 EFIS and GC 360A coupled (OPT70 34040G)	KING	25,154 (11.410)	161.22 (4.095)
A	Weather radar RDR 2000 EFIS coupled (with CP 466A) (OPT70 34040H)	KING	17,394 (7.890)	167.20 (4.247)

**“BENDIX/KING” RDR 2000
WEATHER RADAR****SECTION 7
DESCRIPTION****7.1 - RDR 2000 weather radar not interfaced with multi-function display (KMD 850 or GMX 200)**

All modes and controls, as well as radar clutter display are arranged on a specific screen.

- 1 - Manual gain control knob
- 2 - NAV mode selector button
- 3 - Ground Mapping mode selector button
- 4 - Vertical Profile mode selector button
- 5 - Weather and Weather-Alert toggle selector button
- 6 - Screen brightness control knob
- 7 - Left or right Track mode annunciation
- 8 - Degrees of Track left or right of airplane nose
- 9 - Vertical Profile mode annunciation
- 10 - Relative altitude reference line
- 11 - Plus & minus thousands of feet from relative altitude
- 12 - Radar function selection switch
- 13 - Range selector buttons
- 14 - Left or right Track mode selector buttons
- 15 - Antenna tilt control
- 16 - Range rings
- 17 - Weather or Weather-Alert mode annunciation
- 18 - VP scan angle
- 19 - “TX FLT” annunciation

Figure 9.22.1 (1/2) - Indicator


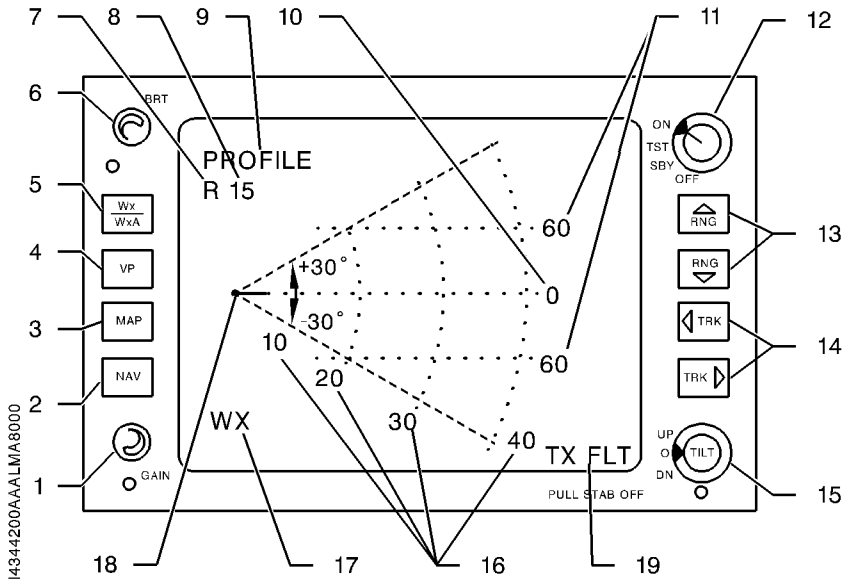


Figure 9.22.1 (2/2) - Indicator

“BENDIX/KING” RDR 2000

WEATHER RADAR

OPERATIONAL CONTROLS

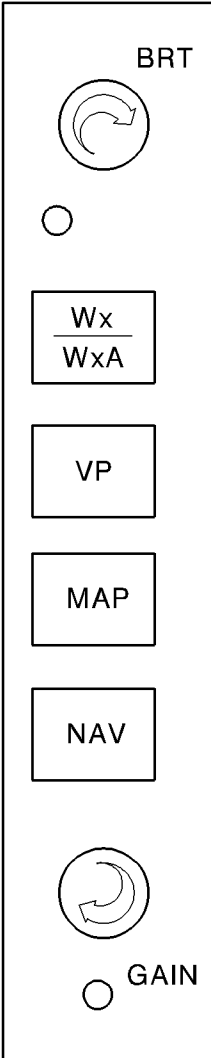

14344200AALLWA8100

BRT Controls brightness of the indicator display.

Wx
WxA Alternately selects between weather (Wx) and “weather-alert” (WxA) modes of operation. “Wx” or “WxA” will appear on the lower left of the display. Areas of high rainfall appear in magenta color. When the WxA mode is selected, magenta areas of storms flash between magenta and black.


VP Selects and deselects the Vertical Profile mode of operation. Selecting the VP mode of operation will not change the selected mode of operation : TST, Wx, WxA or GND MAP. Once in VP, these modes may be changed as desired. VP will engage from the NAV MAP mode, but NAV will be disabled during VP operation.

GND MAP Places indicator in ground-mapping mode disables weather-alert feature and activates gain control. (The magenta is not activated in the GND MAP mode).

NAV MAP Places indicator in navigation mode so that preprogrammed waypoints may be displayed. If other modes are also selected, the NAV display will be superimposed on them. This button is effective only if an optional radar graphics unit and Flight Management System is installed. If actuated without these units, it will cause NO NAV to appear at lower left of screen. The radar is still capable of displaying weather.

GAIN Manual gain control becomes active when GND MAP is selected. In all other modes, gain is internally set.

LOG Used only when the “BENDIX/KING” IU 2023 series radar graphics unit is installed along with a compatible long range navigation system, a listing of the latitudes and longitudes of selected waypoints will be displayed. If a compatible RNAV is installed, selected VOR frequencies, along with bearings and distances to waypoints, will be presented. No radar transmission occurs in this mode.

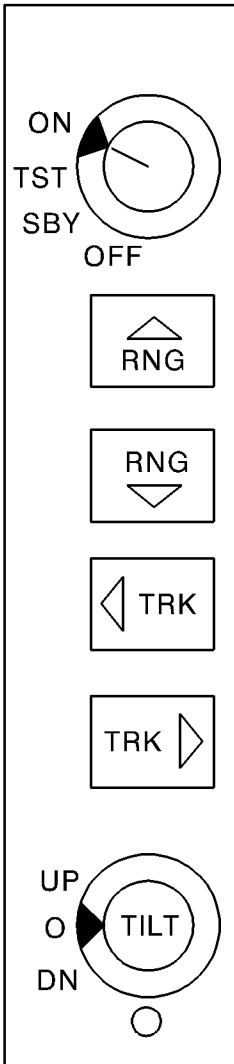

14344200AAALMA8200

ON Radar switch-on/off.

TST The test pattern is displayed on the indicator, no transmission occurs.

SBY After 30 seconds in this mode, the system is in a state of readiness. No radar transmission occurs, and the antenna is parked in the down position. "STBY" is displayed in the lower left of the display.

OFF Removes primary power from the radar indicator and the sensor. The antenna is parked down.

RNG When pressed clears the display and advances the indicator to the next range. Upper button increases range, lower button decreases it. Selected range is displayed in lower right corner on the last range mark and distance to other range rings is displayed along the lower edge.

TRK When pressed provides a yellow azimuth line and a digital display of the azimuth line placement left or right from the nose of the airplane. For VP operations, the TRK button performs two functions.

1) Prior to engaging VP, the appropriate button (left or right) is used to place the track line at the desired azimuth angle to be vertically scanned (sliced). When VP is engaged, the slice will be taken at the last position of the track line, whether it is visible or not. If the track line has not been selected after power has been applied to system and VP is engaged, the slice will be taken at 0° (directly in front of the airplane).

2) Continuously holding the TRK button will result in the system "slicing" in two-degree increments.

TILT Permits manual adjustment of antenna tilt 15° up or down for best indicator presentation. The tilt angle is displayed in the upper right corner of the display. Depending on mode status of the indicator the readout may be in tenths of degree. Pull the Tilt selector knob out for "STAB OFF" operations. "STAB OFF" will appear in the upper left corner of the display. Tilt functions are disabled in VP mode.

“BENDIX/KING” RDR 2000

WEATHER RADAR

7.2 - RDR 2000 weather radar interfaced with KMD 850 multi-function display


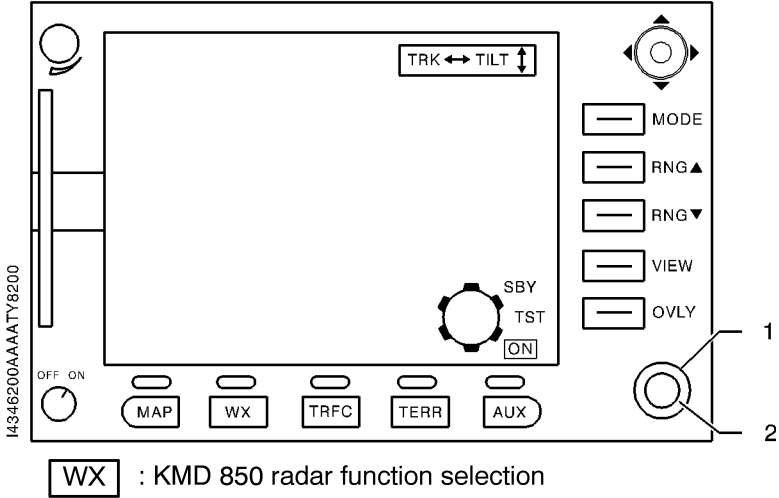


Figure 9.22.2 - KMD 850 Multi-function display

When the KMD 850 is set to radar function, equivalences between KMD 850 and radar standard operational controls described in chapter 7.1 are as follows :

KMD 850 CONTROL	RDR 2000 STANDARD OPERATIONAL CONTROL
MODE	WX/GND MAP
RNG▼ / RNG▲	RNG
VIEW	VP
Joystick horizontal movement	TRK
Joystick vertical movement	TILT
1 - Outer knob	SBY / TST / ON
2 - Inner knob	GAIN

7.3 - RDR 2000 weather radar interfaced with GMX 200 multi-function display

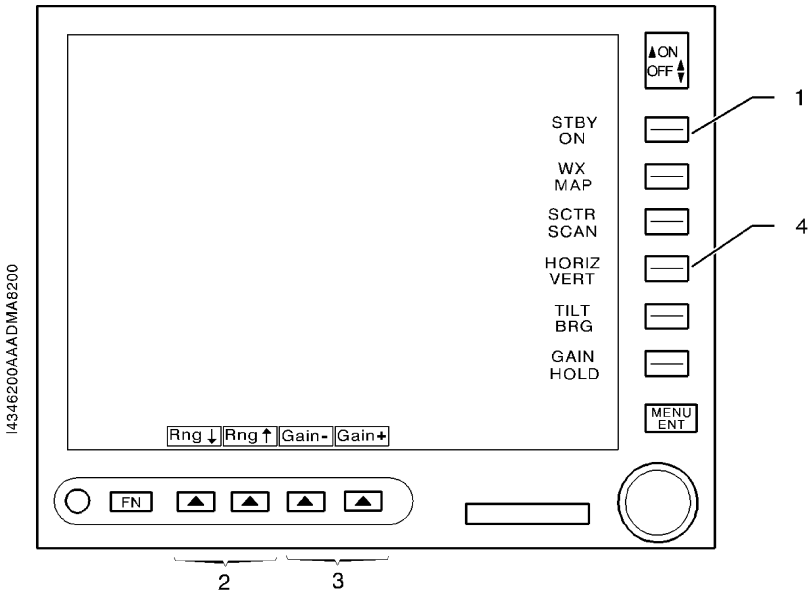

 
 (1) “WX” : GMX 200 radar function selection

Figure 9.22.3 - GMX 200 Multi-function display

When the GMX 200 is set to radar function, equivalences between GMX 200 and radar standard operational controls described in chapter 7.1 are as follows :

GMX 200 CONTROL	RDR 2000 STANDARD OPERATIONAL CONTROL
1 - (label depends on precedent action)	SBY / ON / OFF
2 - Rng ↑ / Rng ↓	RNG
3 - Tilt ↑ / Tilt ↓	TILT
3 - ← Brg / Brg →	TRK
3 - Gain - / Gain +	GAIN
4 - HORIZ / VERT	VP

“BENDIX/KING” RDR 2000
WEATHER RADAR

700
850

Post-MOD70-125-23

Radar setting to ON or OFF is performed by using the “RADIO MASTER” switch.

SUPPLEMENT**"BFG" SKYWATCH
SKY 497 OR SKY 899
TRAFFIC ADVISORY SYSTEM****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.28.3
2 - LIMITATIONS	9.28.3
3 - EMERGENCY PROCEDURES	9.28.3
4 - NORMAL PROCEDURES	9.28.4
5 - PERFORMANCE	9.28.4
6 - WEIGHT AND BALANCE	9.28.5
7 - DESCRIPTION	9.28.6

INTENTIONALLY LEFT BLANK

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM 700 airplane is equipped with the option "BFG" SKYWATCH SKY 497 OR SKY 899 TRAFFIC ADVISORY SYSTEM.

The SKYWATCH traffic advisory system relies on information obtained from nearby aircraft transponders. It does neither detect, nor track aircraft which are not equipped with an operating ATCRBS transponder.

SECTION 2**LIMITATIONS**

The installation of the "BFG" SKYWATCH traffic advisory system does not change the basic limitations of the airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

REMARK :

The SKYWATCH is a TAS (advisory means), not a TCAS.

SECTION 3**EMERGENCY PROCEDURES**

The installation of the "BFG" SKYWATCH traffic advisory system does not change the emergency procedures of the airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

**"BFG" SKYWATCH
TRAFFIC ADVISORY SYSTEM****SECTION 4
NORMAL PROCEDURES**

Normal operating procedures of the "BFG" SKYWATCH traffic advisory system are outlined in :

- the Pilot's Guide for the "BFG" SKYWATCH[®] traffic advisory system, Model SKY 497 P/N 009-10801-001 Rev. B dated 06/00 or any applicable following edition
or
- the Pilot's Guide for the "BFG" SKYWATCH[®] HP traffic alert/advisory system, Model SKY 899 P/N 009-11901-001 Rev. A dated 08/01 or any applicable following edition and :
 - the Multi-function Display Traffic Avoidance Function (TCAS/TAS) Pilot's Guide Addendum P/N 006-18238-0000 Rev. 0 dated 04/01 or any applicable following edition, if data are displayed on a KMD 850 MFD,
 - the "GARMIN" GNS 530 Pilot's Guide, P/N 190-00181-00 Revision A dated 04/00 or any applicable following edition, if data are displayed on a GNS 530 GPS.

WARNING

DO NOT ATTEMPT EVASIVE MANEUVERS BASED SOLELY ON TRAFFIC INFORMATION SHOWN ON THE SKYWATCH DISPLAY. INFORMATION ON THE DISPLAY IS PROVIDED TO THE FLIGHT CREW AS AN AID IN VISUALLY ACQUIRING TRAFFIC; IT IS NOT A REPLACEMENT FOR ATC AND SEE & AVOID TECHNIQUES

When the SKYWATCH traffic advisory system issues a Traffic Alert (aural or visual), look outside for the intruder aircraft. When you spot an intruder aircraft, use normal right-of-way procedures to maintain separation.

**SECTION 5
PERFORMANCE**

The installation of the "BFG" SKYWATCH traffic advisory system does not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6 WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
34 - NAVIGATION				
A	Traffic advisory system SKYWATCH™ SKY 497 (OPT70 34047A)	BFG	15.780 (7.16)	145.91 (3.706)
A	Traffic advisory system (EFIS version) SKYWATCH™ SKY 497 (OPT70 34047B)	BFG	13.140 (5.96)	150.12 (3.813)
A	Traffic advisory system SKYWATCH® HP SKY 899 (OPT70 34059)	BFG	12.720 (5.77)	151.18 (3.840)

SECTION 7
DESCRIPTION

The SKYWATCH is an airborne Traffic Advisory System (TAS). It monitors the airspace around your aircraft and advises the flight crew where to look for transponder equipped aircraft that may pose a collision threat.

SKYWATCH SKY 497

The traffic can be displayed on the stormscope display, whether a stormscope system is installed or not.

The display range is 2 NM or 6 NM.

SKYWATCH SKY 899

The traffic can be shown on a dedicated screen (KMD 850 MFD or GNS 530 GPS) and/or on the EFS 40.

The controls ("TEST" or "TEST/MODE", "ON", "OFF" and "ST-BY/OPR") are remote from the screen (see Figures 9.28.1 and 9.28.2).

The display range is between 2 NM and 20 NM.

All

The traffic detected is displayed, when the vertical separation between your own aircraft altitude and the intruder altitude ranges :

MODE	From	Up to
ABV (Look up)	- 2700 ft	+ 9000 ft
NRM (Normal)	- 2700 ft	+ 2700 ft
BLW (Below)	- 9000 ft	+ 2700 ft

The Traffic Advisory (TA) criteria, which initiates a visual and/or an aural alert, are (sensitivity level B) :

- detection of an intruder aircraft within a 0.55 NM horizontal radius and a \pm 800 ft relative altitude,
- approach of an intruder aircraft on a course that will intercept your course within 20 to 30 seconds.

Post-MOD70-125-23

SKYWATCH setting to ON or OFF is performed by using the "RADIO MASTER" switch.

AIRCRAFT EQUIPPED WITH THE KRA 405B RADIO ALTIMETER


When the aircraft is at a ground height lower than 2000 ft, the Traffic Advisory (TA) criteria, which initiate a visual and/or an aural alert, are (sensitivity level A) :

- detection of an intruder aircraft within a 0.2 NM horizontal radius and a \pm 600 ft relative altitude,
- approach of an intruder aircraft on a course that will intercept your course within 15 to 20 seconds.

When the aircraft is at a ground height lower than 1700 ft, the traffics which ground height is lower than 380 ft will no longer be displayed.

The aural traffic alert is inhibited when the height detected by the radio altimeter is below 400 ft.

I4344400AAAAA/IA8000

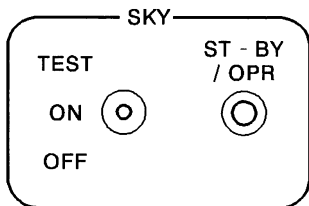


TEST : Held position for test

ST-BY/OPR : 1st press : Skywatch stand-by
2nd press : OPR selection

Figure 9.28.1 - SKYWATCH SKY 899 remote control :
EFS 40 display impossible

I4344400AAAAA/IA8200

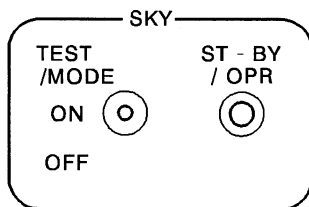

ST-BY/OPR : Skywatch stand-by

TEST/MODE : 1st case : When the SKY 899 is in stand-by, tests the Skywatch

2nd case : When the SKY 899 is in OPR, changes display type (NORM, BLW, ABV) in the EFS 40

NOTE :

EFS 40 TEST/REF knob enables selection of SKY 899 Skywatch data display in the EFS 40.

Figure 9.28.2 - SKYWATCH SKY 899 remote control
with display on EFS 40

SUPPLEMENT**"HONEYWELL" KMD 850**
MULTI-FUNCTION DISPLAY**TABLE OF CONTENTS**

	Page
1 - GENERAL	9.35.2
2 - LIMITATIONS	9.35.3
3 - EMERGENCY PROCEDURES	9.35.4
4 - NORMAL PROCEDURES	9.35.4
5 - PERFORMANCE	9.35.5
6 - WEIGHT AND BALANCE	9.35.5
7 - DESCRIPTION	9.35.6

**“HONEYWELL” KMD 850
MULTI-FUNCTION DISPLAY****SECTION 1
GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM 700 airplane is equipped with the option “HONEYWELL” KMD 850 MULTI-FUNCTION DISPLAY”.

The generalities hereafter supplement those of the standard airplane described in Section 1 “General” of the basic Pilot’s Operating Handbook, when the TBM 700 airplane is equipped with the option “HONEYWELL” KMD 850 MULTI-FUNCTION DISPLAY”.

The KMD 850 is a multifunction display screen which allows to display topographical type information (rivers, roads, ...), aeronautical type information (VOR, Airport, NDB, ...), as well as information issued from a weather radar, a stormscope, an EGPWS and the active flight plan issued from a GPS.

Aeronautical items of information are stored in a data card. This data base is updated every 28 days by replacing the data card.

**SECTION 2
LIMITATIONS**

The limitations hereafter supplement those of the standard airplane described in Section 2 “Limitations” of the basic Pilot’s Operating Handbook, when the TBM 700 airplane is equipped with the option “HONEYWELL” KMD 850 MULTI-FUNCTION DISPLAY”.

KMD 550/850 Multi-function Display Pilot’s Guide, P/N 006-18222-0000, Revision 0 dated Oct/2000 or any applicable following edition, shall be readily available to the pilot.

The KMD 850 may be used only as an aid to navigation, if :

- navigation is based on other approved instruments,
- the KMD 850 data base is current and compatible with the flight,
- KMD 850 and associated GPS data bases cover the same geographical areas.

CAUTION

**KMD 850 TOPOGRAPHICAL DATA MUST NOT BE USED FOR
TERRAIN AND/OR OBSTACLES AVOIDANCE**

"HONEYWELL" KMD 850
MULTI-FUNCTION DISPLAY**SECTION 3**
EMERGENCY PROCEDURES

Installation and operation of the "HONEYWELL" KMD 850 Multi-function Display do not change the emergency procedures described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook.

SECTION 4
NORMAL PROCEDURES

The normal procedures hereafter supplement those of the standard aircraft described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook, when the TB aircraft is equipped with the option ""HONEYWELL" KMD 850 MULTI-FUNCTION DISPLAY".

KMD normal operating procedures recommended by the manufacturer are outlined in the KMD 550/850 Multi-function Display Pilot's Guide, P/N 006-18222-0000, Revision 0 dated Oct/2000 or any applicable following edition.

SECTION 5 PERFORMANCE

The installation and the operation of the “HONEYWELL” KMD 850 Multi-function Display do not change the basic performance of the airplane described in Section 5 “Performance” of the basic Pilot’s Operating Handbook.

SECTION 6 WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 “Weight and balance” of the basic Pilot’s Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
	34 - NAVIGATION			
A	Multi-function display (OPT70 34054) KMD 850	HONEYWELL	6.415 (2.910)	153.54 (3.900)

"HONEYWELL" KMD 850
MULTI-FUNCTION DISPLAY

SECTION 7
DESCRIPTION

- | | |
|----------------------------------|-------------------------------------|
| 1 - Brightness control | 8 - Control knobs (inner and outer) |
| 2 - Data card | 9 - Power key labels |
| 3 - LCD display | 10 - Soft labels |
| 4 - Available function | 11 - Joystick |
| 5 - ON/OFF control | 12 - Power keys |
| 6 - Selected function indicators | 13 - Fault indicator |
| 7 - Function select keys | |

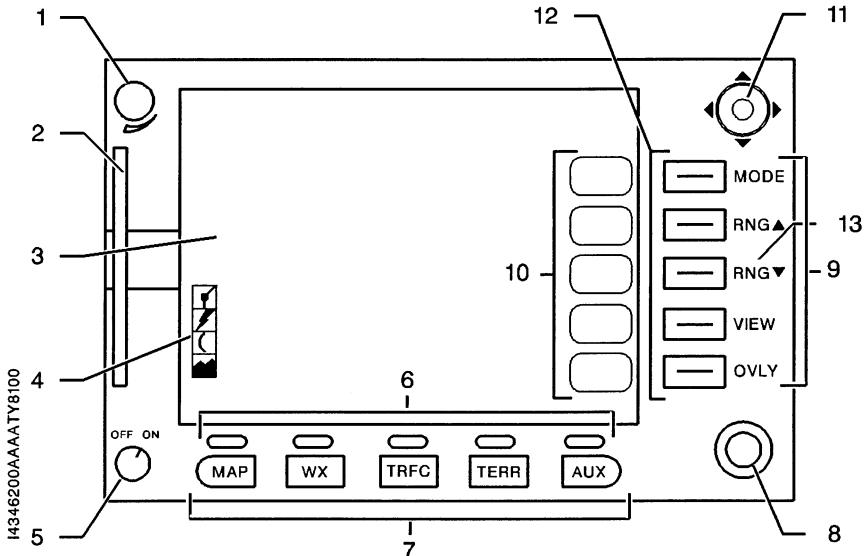


Figure 9.35.1 - KMD 850 Multi-function display (front view)

SUPPLEMENT**"GARMIN GNS 530" GPS
NAVIGATION SYSTEM (B-RNAV)
INTERFACED WITH EHSI OF EFS 40****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.36.2
2 - LIMITATIONS	9.36.3
3 - EMERGENCY PROCEDURES	9.36.6
4 - NORMAL PROCEDURES	9.36.8
5 - PERFORMANCE	9.36.12
6 - WEIGHT AND BALANCE	9.36.12
7 - DESCRIPTION	9.36.13

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM 700 airplane is equipped with the option ”GARMIN GNS 530” GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40”.

Approved utilization types :

- IFR in continental and Terminal Enroute areas as additional source,
- B-RNAV,
- Non precision approaches (GPS, VOR, VOR-DME, TACAN, NDB, NDB-DME, RNAV).

Conformity means :

- ACJ 20X4 and ACJ 20X5
- AC 20-138.

The generalities hereafter supplement those of the standard airplane described in Section 1 ”General” of the basic Pilot’s Operating Handbook, when the TBM 700 airplane is equipped with the option ”GARMIN GNS 530” GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40”.

This supplement does not constitute an operational utilization authorization.

The GPS is an automatic tridimensional (latitude, longitude, altitude) location and navigation means using information provided by satellites (the GNS 530 system is able to track up to 12 satellites at a time). It also uses data recorded in a data base. The data base is housed in a Navdata card to be inserted in the front face and is updated every 28 days by replacing the card.

Each data base contains information about airports, communication frequencies, VORs, NDBs, Intersections, SIDs, STARS, instrument approaches, flight service stations ...

There is also room for up to 1000 user defined waypoints and 20 different flight plans.

SECTION 2 LIMITATIONS

2.1 - General

The limitations hereafter supplement those of the standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook, when the TBM 700 airplane is equipped with the option "GARMIN GNS 530" GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40".

"GARMIN" GNS 530 Pilot's Guide, P/N 190-00181-00 Revision A dated 04/00 or any applicable following edition, shall be readily available to the pilot, each time the GPS navigation system is used.

The system must utilize the following software versions or more recent ones :

Subsystem	Software
MAIN	2.06
GPS	2.10



Data base updating must be verified before each flight.

The navigation sources required for the anticipated flight shall be serviceable and allow an immediate crossed check on available ground aids or shall allow to return to primary navigation sources in case of GPS navigation loss.

Use of GPS as a navigation source is **PROHIBITED**, unless the pilot verifies the currency of the data base and the coordinates of each selected waypoint.

Procedures during flight preparation

During flight preparation, the pilot must get information about GPS constellation, via aeronautical data (consultation of GPS NOTAM).

When less than 24 satellites are available (or less than 23 if equipment uses pressure altitude information), the pilot must make sure that RAIM function is available on the projected route and for the flight period in B-RNAV areas.

RAIM function prediction can be done using prediction software integrated into GNS 530 or any other approved software such as the one provided for the users by EUROCONTROL on INTERNET.

If a loss of RAIM function is predicted on the chosen route for a period of more than 5 minutes, the flight cannot be done. In that case, the flight will either be postponed or another route will be chosen. The prediction software must then be used again.

Preflight procedures

During preflight checks, it is necessary to verify data base validity (updating of the last AIRAC cycle).

The onboard equipment must be initialized in compliance with manufacturer procedures (refer to "GARMIN GNS 530 Pilot's Guide").

In case a pre-programmed or an already stored flight plan is used, an accurate check of the waypoints is also required.

General in-flight procedures

Before entering a B-RNAV area, the pilot must make sure that RAIM function is available.

Flight plan activation, WPT and LEG changes as well as any modification of initialization data must be done in compliance with equipment User's Manual.

For every navigation into areas reserved for B-RNAV, the pilot must be provided with a predicted availability of RAIM on the route, if the constellation disposes of less than 23 satellites.

The check of navigation system information consistency must be regularly performed during the flight :

- when reaching each waypoint or before reaching the position report point of the ATC,
- before leaving a published route and then every 15 minutes during this type of operation (function "Direct To").

The check of position information consistency may be performed by comparing this position with the one determined by the primary radionavigation sources.

2.2 - SID/STAR

The use of SIDs and STARs stored in GPS data base is only authorized, if the pilot has checked that GPS procedure corresponds to the one given in the official documentation (coordinates of various points and paths between points).

2.3 - Instrument approach (Non precision approach)

Use of the GPS to perform an instrument approach is possible, as long as this use is approved by the air navigation local authority for the approach in question.

Instrument approaches performed with the GPS must be achieved according to approved approach procedures given in the GPS data base. The data base must be kept up to date and base data accuracy checked with regard to the official documentation, preferably before the flight.

- a) Instrument approaches must be performed in GPS approach mode and the RAIM must be available at the final approach fix (FAF).
- b) Precision approaches (ILS, LOC, LOC-BC, MLS ...) must not be performed with the GPS.
- c) If a landing is required on a diversion field, an other means than GPS must be available to perform approach to this field. Required on board equipment must be serviceable and ground aids must be operational.

Instrument approaches can only be performed, as long as used point coordinates are referenced with regard to WGS 84 system or an equivalent system.

**”GARMIN GNS 530” GPS NAVIGATION SYSTEM
(B-RNAV) INTERFACED WITH EHSI OF EFS 40**

**SECTION 3
EMERGENCY PROCEDURES**

The emergency procedures hereafter supplement those of the standard airplane described in Section 3 ”Emergency procedures” of the basic Pilot’s Operating Handbook, when the TBM 700 airplane is equipped with the option ”GARMIN GNS 530” GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40”.

EHSI NAV FLAG

In navigation GPS#1 (OPT70-23024) :

Return to VOR, ADF or (if installed) GPS#2 navigation sources and to remaining operational navigation equipment.

Selection of GPS#2 (if installed and BRNAV authorized) **PRESS ONCE**
on ”1-2” push-button of the EHSI

or

Selection of VOR or ADF **PRESS ONCE or TWICE**
on ”NAV” push-button of the EHSI

In navigation GPS#2 (OPT70-23025) :

Return to VOR, ADF or GPS#1 navigation sources and to remaining operational navigation equipment.

Selection of GPS#1 (if BRNAV authorized) **PRESS ONCE**
on ”1-2” push-button of the EHSI

or

Selection of VOR or ADF **PRESS ONCE or TWICE**
on ”NAV” push-button of the EHSI

"MSG" ANNUNCIATOR ILLUMINATION***In navigation with GPS associated to the warning :***

"MSG" push-button of associated GPS **PRESS**

Check the message.

NOTE :

A single "stand-alone" GPS certified as B-RNAV navigation means is required to fly in B-RNAV areas.

In case of loss of RAIM function, the navigation information remains available but its integrity is no longer controlled.

- If RAIM loss occurs out of B-RNAV area, the aircraft must not enter B-RNAV area.
- If RAIM loss occurs in B-RNAV area, GPS navigation can be continued as long as cross-checkings done with conventional means (VOR, DME, NDB and dead reckoning elements) enable making sure that B-RNAV accuracy criteria are observed. When this condition is not met, the Air Traffic Control must be contacted to return to conventional navigation.

If GPS navigation information is lost or declared not valid, use the other available navigation means. If this occurs during instrument approach final phase, a go-around must be made, except if the other approved radio means to perform approach are displayed and available.

SECTION 4 NORMAL PROCEDURES

The normal procedures hereafter supplement those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook, when the TBM 700 airplane is equipped with the option "GARMIN GNS 530" GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40".

Normal operating procedures of the GPS recommended by the manufacturer are outlined in the "GARMIN" GNS 530 Pilot's Guide at the latest revision and Memory Jogger at the latest revision.

However, it is important to precise the following points for the GPS use on TBM 700 :

SET UP CONDITIONS

- Verify if the data base is current. Verify data on the self test page.
- Verify that altitude data is valid for the GPS prior to flight.
- In case of B-RNAV use :

During the preflight planning phase, the availability of GPS integrity (RAIM) shall be confirmed for the intended flight (route and time).

B-RNAV flight dispatch shall not be made in the event of a continuous loss of RAIM for more than 5 minutes predicted in any part of the intended flight.

When less than 24 satellites are available (or less than 23 if equipment uses pressure altitude information), the pilot must make sure that RAIM function is available on the projected route and for the flight period in B-RNAV areas.

When 23 or more satellites are available, the prediction of satellite position is valid for 7 days. Their predicted availability is ensured for 48 hours by EUROCONTROL.

When less than 23 satellites are available, the predicted availability of RAIM shall be confirmed short before each flight.

SYSTEM ANNUNCIATORS / SWITCHES / CONTROLS**"CDI" push-button of the GPS**

This push-button may be used to select data to be displayed on electromechanical instruments (CDI or HSI).

This push-button is ineffective on the EHSI.

EHSI presentation "NAV" push-button

This push-button may be used to select data for presentation on the pilot's EHSI ; either NAV data from NAV 1 or NAV 2 navigation receiver or GPS#1 or (if installed) GPS#2 data or ADF data.

"NAV" symbol is green, **"GPS1"** symbol is blue, **"GPS2"** symbol is yellow and **"ADF"** symbol is green.

Colors relative to EHSI symbols are as follows :

CONFIGURATION	TEXTS	LEG OR NEEDLE
GPS1	Blue	Active leg : Blue Not active leg : White
GPS2	Yellow	Active leg : Yellow Not active leg : White
ADF	Green	Magenta
VOR1	Green	White
VOR2	Yellow	Magenta
LOC1	Green	Green
LOC2	Yellow	Yellow

"MSG" message annunciator**CAUTION**

"MSG" ANNUNCIATOR MAY BE PERMANENTLY ILLUMINATED IF THERE EXISTS A PERMANENT MESSAGE. WHEN A NEW MESSAGE APPEARS, "MSG" ANNUNCIATOR JUST FLASHES.

"MSG" message annunciator will flash to alert the pilot of a situation that requires his attention. Press the **"MSG" push-button** located on the GPS to view the message (Chapter 12 of "GARMIN" GNS 530 Pilot's Guide contains a list of all the messages likely to appear on the "Message" page and their meanings).

"MSG" message annunciator (white color) of the GPS system interfaced with EHSI is displayed on the L.H. side of the EHSI. **"MSG1" message annunciator** of GPS#1 system (OPT70-23024) and/or **"MSG2" message annunciator** of GPS#2 system (OPT70-23025) are displayed on L.H. instrument panel (amber indication - see Figure 9.36.1, Detail A).

"WPT" Waypoint annunciator

This annunciator illuminates 10 seconds before warning "TURN TO XXX".

"WPT" Waypoint annunciator is also displayed on the L.H. side of the EHSI.

"APR" annunciator is also displayed on the L.H. side of the EHSI.

Flight director/autopilot coupled operation

The EHSI may be coupled with KFC 325 autopilot.

Engaging the "NAV" mode on the autopilot mode controller will make the FD appear on the EADI. The FD uses selected course and left/right steering information presented on the EHSI.

This information is related to the navigation source (VOR, GPS or ADF) selected by the push-button "NAV" on the EHSI.

When "AP" is engaged on the mode controller, the autopilot is then coupled to the EHSI and uses displayed information (track and course deviation).

When the GPS suspends the linked navigation (GPS "SUSP" annunciator), the autopilot continues keeping same heading.

NOTE :

When the EHSI is selected on GPS navigation source, the RMI remains selected on NAV 1 source (VOR or RNAV).

REMARK :

The change of steering source for the autopilot, when the latter is set to "NAV" side mode, implies a sequence of checks, some of which may be omitted or require a particular attention. Therefore it is strongly recommended to temporarily disengage the autopilot "NAV" mode before changing source.

GPS flight plan

In the active flight plan, addition of a STAR or an approach is always made at the end of the flight plan. In the scope of these additions, the pilot must pay attention not to duplicate points.

Non precision approach with coupled autopilot

The EHSI must be set in "HSI Compass Rose" mode.

Coupling with autopilot must be made in "NAV" mode, except in the following cases :

- holding pattern,
 - landing pattern turn,
 - interrupted approach,
- which have to be made in "HDG" mode.

For memory, the approach particular point name in the GARMIN system is as follows :

- IA = IAF
- FA = FAF ou FAP
- MA = MAP
- MH = MAHP

**"GARMIN GNS 530" GPS NAVIGATION SYSTEM
(B-RNAV) INTERFACED WITH EHSI OF EFS 40**

**SECTION 5
PERFORMANCE**

The installation and the operation of the "GARMIN GNS 530" GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40 do not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

**SECTION 6
WEIGHT AND BALANCE**

Information hereafter supplement the one given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
23 - COMMUNICATIONS				
A	COM-NAV-GPS # 1 GNS 530 (B-RNAV) interfaced with EHSI (OPT70 23024)	GARMIN	- 1.852 (- 0.840)	169.13 (4.296)
A	COM-NAV-GPS # 2 GNS 530 interfaced with GI 106A CDI and EHSI (OPT70 23025)	GARMIN	1.852 (0.840)	143.15 (3.636)

**"GARMIN GNS 530" GPS NAVIGATION SYSTEM
(B-RNAV) INTERFACED WITH EHSI OF EFS 40****SECTION 7
DESCRIPTION**

Normal operating procedures of the "GARMIN GNS 530" GPS NAVIGATION SYSTEM (B-RNAV) INTERFACED WITH EHSI OF EFS 40 are described in the "GARMIN" GNS 530 Pilot's Guide at the latest revision.

7.1 "GNS 530 System # 1" OPTION (OPT70-23024)

The option includes the GPS#1 system consisting of :


- - one "GNS 530" GPS - see Figure 9.36.1 :
This GPS may be a navigation source for the autopilot. Course deviation information is then displayed on the EHSI.
- one "MSG1" repeater on pilot's instrument panel.

7.2 "GNS 530 System # 2" OPTION (OPT70-23025)

The option includes the GPS#2 system consisting of :

- - one "GNS 530" GPS - see Figure 9.36.1 :
This GPS may be a navigation source for the autopilot. Course deviation information is then displayed on the EHSI.
- one GI 106A CDI,
- one "MSG2" repeater on pilot's instrument panel.

**"GARMIN GNS 530" GPS NAVIGATION SYSTEM
(B-RNAV) INTERFACED WITH EHSI OF EFS 40**

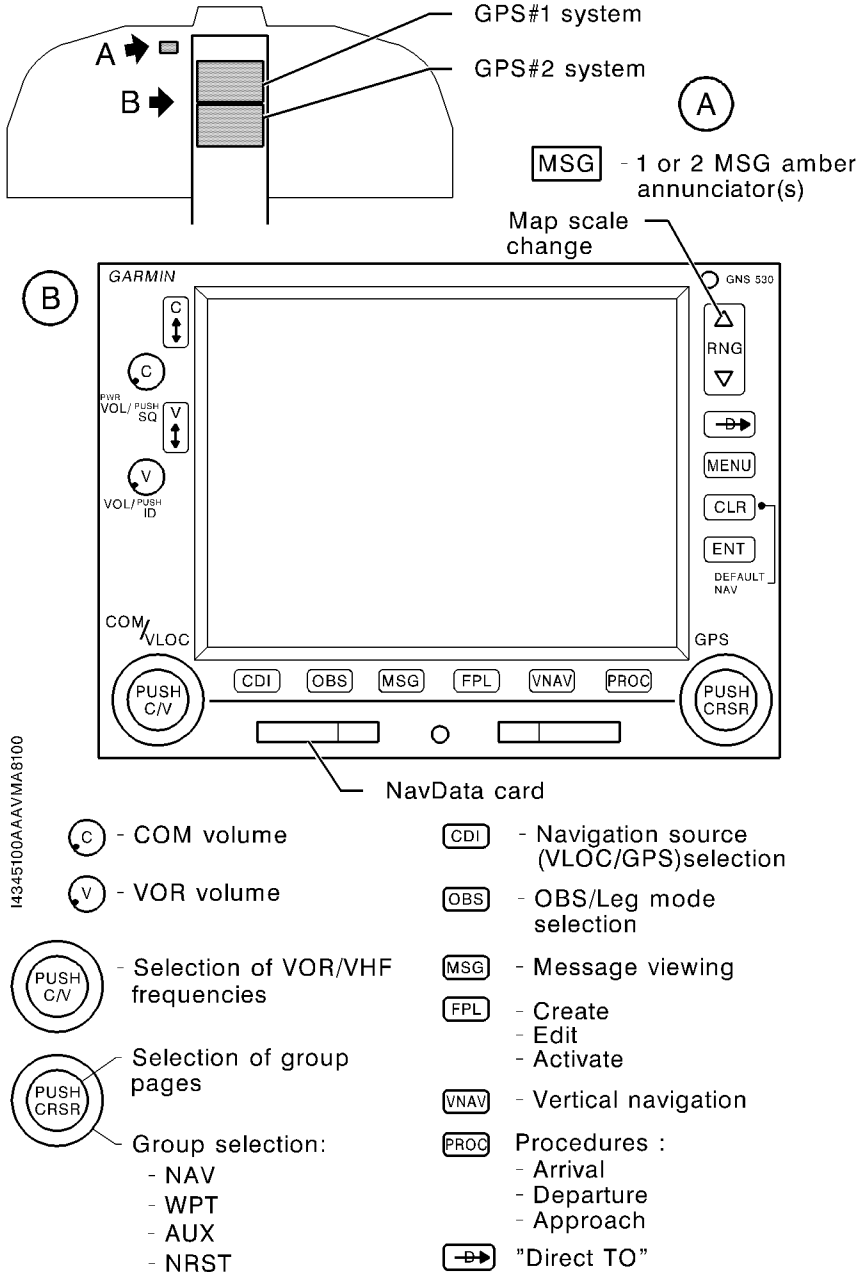

14345100AAVMA 8100

Figure 9.36.1 - "GARMIN GNS 530" GPS SYSTEMS

SUPPLEMENT

**KGP 560 "HONEYWELL"
EGPWS SYSTEM**

TABLE OF CONTENTS

	Page
1 - GENERAL	9.39.2
2 - LIMITATIONS	9.39.2
3 - EMERGENCY PROCEDURES	9.39.3
4 - NORMAL PROCEDURES	9.39.4
5 - PERFORMANCE	9.39.6
6 - WEIGHT AND BALANCE	9.39.6
7 - DESCRIPTION	9.39.7

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM 700 airplane is equipped with the option "KGP 560 "HONEYWELL" EGPWS SYSTEM".

The EGPWS system is an aid for the pilot enabling him to detect if the airplane path is in compliance with the overflowed terrain relief.

SECTION 2**LIMITATIONS**

The limitations hereafter supplement those of the standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook, when the TBM 700 airplane is equipped with the option "KGP 560 "HONEYWELL" EGPWS SYSTEM".

Following documents or any further edition applicable to the latter, shall be readily available to the pilot, each time the EGPWS system is used.

- KMD 550/850 Multi-function Display Pilot's Guide, P/N 006-18222-0000 Revision 1 dated April/2001,
- KMD 550/850 Multi-function Display/Terrain Function (EGPWS) Pilot's Guide Addendum, P/N 006-18236-0000 Revision 1 dated April/2001,
- KGP 560 General aviation Enhanced Ground Proximity Warning System - TSO C151a Class B - Pilot's Guide, P/N 006-18254-0000 Revision 1.

The EGPWS system provides terrain proximity alerting and detection to the pilot. It must not be used for airplane vertical and horizontal navigation.

AC 2318 recommendation : in order to avoid unwillingly warnings, the EGPWS must be inhibited for any landing on a terrain which is not mentioned in the data base.

SECTION 3
EMERGENCY PROCEDURES

The emergency procedures hereafter supplement those of the standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook, when the TBM 700 airplane is equipped with the option "KGP 560 "HONEYWELL" EGPWS SYSTEM".

WARNING LIGHT "TERR N/A" ON

1 - MD41 "TEST" switch **PUSH**

If the following voice message is heard :

"EGPWS Computer OK - External faults : Display configuration"
or

"EGPWS Computer OK - External faults : Display bus inactive" :

2 - Check the KMD 850 is set to ON.

For all other messages :

The EGPWS system is not operational.

**SECTION 4
NORMAL PROCEDURES**

The normal procedures hereafter supplement those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook, when the TBM 700 airplane is equipped with the option "KGP 560 "HONEYWELL" EGPWS SYSTEM".

BEFORE TAKEOFF	
1 - MD41 "TEST" switch	PUSH
2 - "EGPWS System OK" voice message	HEARD

4.1 - WARNINGS

"PULL UP" AURAL WARNING	
The red "TERR" warning light illuminates.	
1 - Level the wings.	
2 - Display the maximum power.	
3 - Choose the optimum rate of climb adapted to airplane configuration and speed, until the warning disappears.	

"Terrain Terrain Pull up", "Obstacle Obstacle Pull up", AURAL WARNINGS	
The red "TERR" warning light illuminates.	
Adjust airplane path in order to make the warning disappear.	

4.2 - CAUTIONS**"Caution terrain", "Caution obstacle",
"Too low terrain"
AURAL WARNINGS**

The amber "TERR" warning light illuminates.

Adjust airplane path in order to make the warning disappear.

"DON'T SINK" AURAL WARNING

The amber "TERR" warning light illuminates.

Re-establish a positive rate of climb.

"SINK RATE" AURAL WARNING

The amber "TERR" warning light illuminates.

Reduce rate of descent.

SECTION 7 DESCRIPTION

7.1 COMPONENTS OF THE OPTION

The EGPWS option is constituted of the following components :

- a KA 92 GPS antenna,
- a KGP 560 computer with integrated GPS,
- an MD41-1208 control box.

The KGP 560 information are displayed on a KMD 850 screen, when the "TERR" function is activated by the pilot. The GPS # 1 flight plan may be overlaid on the EGPWS display.

7.2 FUNCTIONS OF THE EGPWS SYSTEM

The EGPWS system has 5 functions :

- "Look ahead" function

This function provides a protection ahead of the airplane with a 1 minute prediction ("Caution terrain" or "Caution obstacle" aural warning associated with the illumination of the amber "TERR" warning light) and a 30 seconds prediction ("Terrain Terrain Pull up" or "Obstacle Obstacle Pull up" aural warning associated with the illumination of the red "TERR" warning light).


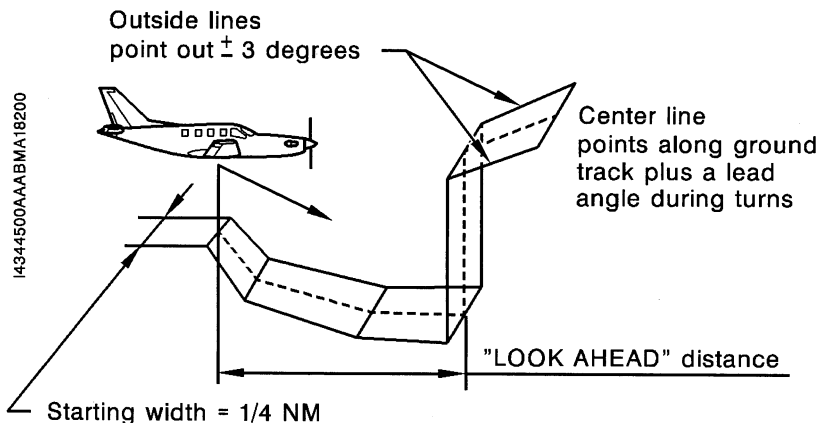


Figure 9.39.1

- "Runway Field Clearance Floor" (RFCF) function

This function is active, when the airplane flies at less than 5 NM from a runway known in the KGP 560 data base ; it generates the "Too low terrain" aural warning and the illumination of the amber "TERR" warning light.

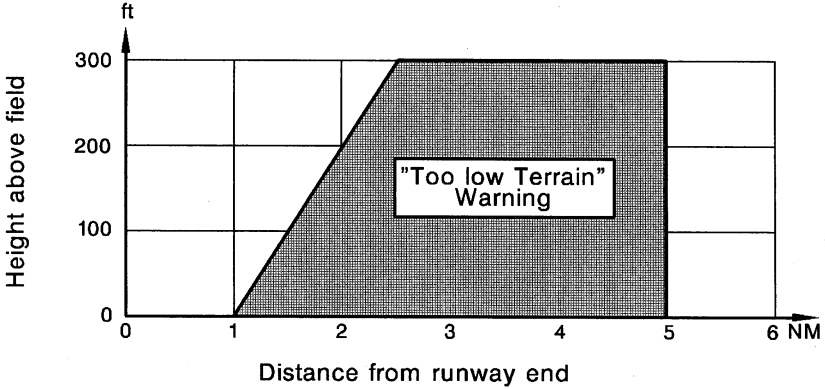


14344500AAAAMA18000

Figure 9.39.2 - "Too low terrain" warning area

- "Excessive rate of descent" function

This function has a lower priority than the "Look ahead" function ; it generates the "Sink rate" aural warning (illumination of the amber "TERR" warning light) and the "Pull up" aural warning (illumination of the red "TERR" warning light).

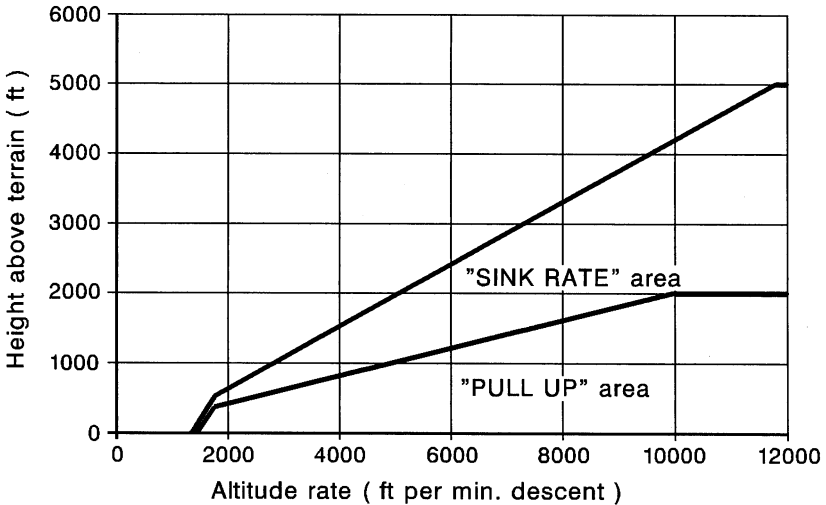

14344500AAAAMA18200

Figure 9.39.3 - "Sink rate" and "Pull up" warnings areas

- "Loss of altitude/negative rate of descent after takeoff" function
 This function is active until the airplane reaches an altitude of approximately 700 ft above the runway ; it generates the "Don't sink" aural warning and the illumination of the amber "TERR" warning light.


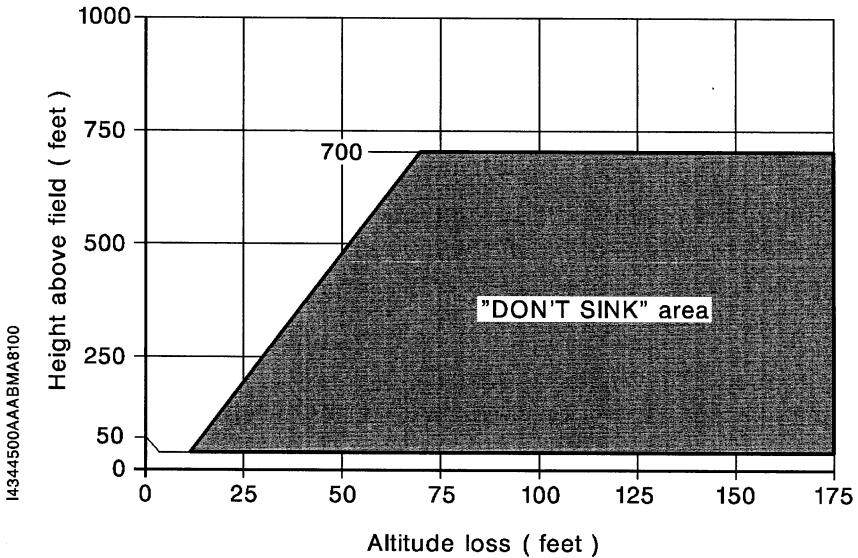


Figure 9.39.4 - "Don't sink" warning area

- "500 ft" function
 This function is active, when the airplane flies at less than 5 NM from a runway known in the KGP 560 data base ; it generates a "500 ft" aural warning. This warning is re-initialized when the airplane reaches a height of 700 ft above the terrain altitude.


7.3 TERRAIN AWARENESS DISPLAY

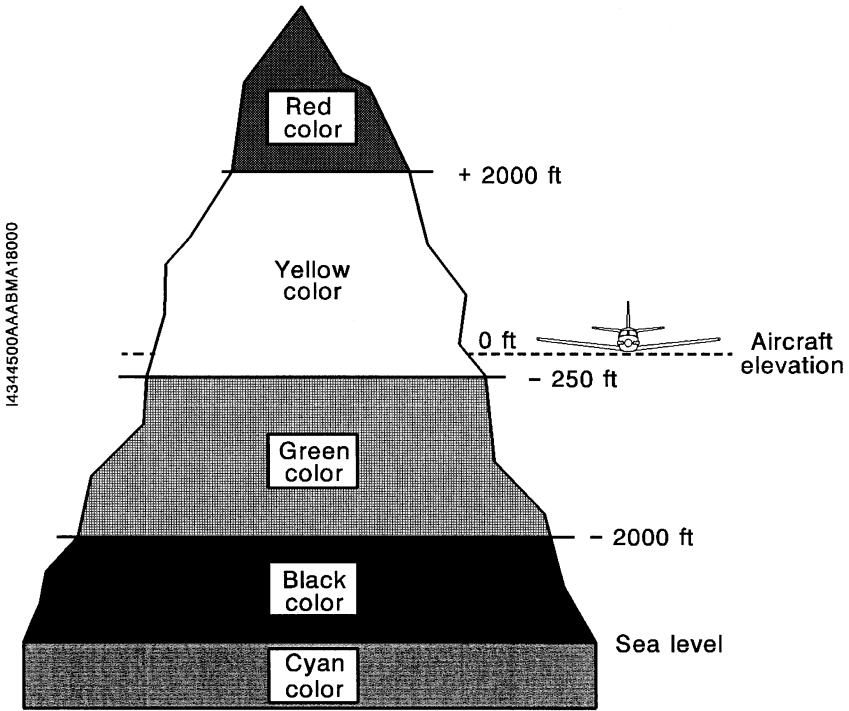


7.4 OBSTACLE DATA BASE

Data for known obstacles such as towers, buildings, antennas, etc. is contained on the same data card as the terrain and airport data. Presently, there are some 70000-plus obstacles in the database, but they are all in the area of North America. As more reliable information becomes available, Honeywell will expand the capability to provide alerting and warning for obstacles in other areas of the world.

Obstacles in the database are those known obstacles more than 100 feet AGL, so obstacles of lower height will not produce GA-EGPWS "Obstacle" alerts or warnings. However, terrain elevations are "rounded" up to the next 100 feet, so alerting and warning protection is generally available for known obstacles that are less than 100 feet AGL.

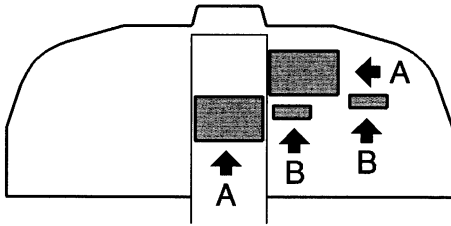


(A)

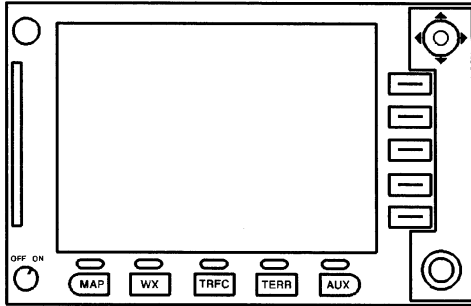

KMD 850

TERR : EGPWS mapping selection

 (B)



MD41 - 1208

TEST : EGPWS system test switch

TERR INHB : EGPWS warning inhibition switch

TERR (red) : Warnings

TERR (amber) : Cautions

TERR INHB (white) : Inhibited EGPWS warnings

TERR N/A (amber) : EGPWS system not operational

Figure 9.39.5 – EGPWS system

14344500AAAAAAMB100

SUPPLEMENT**"HONEYWELL" KMH 880
EGPWS/TAS SYSTEM****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.42.3
2 - LIMITATIONS	9.42.4
3 - EMERGENCY PROCEDURES	9.42.5
4 - NORMAL PROCEDURES	9.42.6
5 - PERFORMANCE	9.42.9
6 - WEIGHT AND BALANCE	9.42.9
7 - DESCRIPTION	9.42.10

INTENTIONALLY LEFT BLANK

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM airplane is equipped with the option "HONEYWELL" KMH 880 EGPWS/TAS SYSTEM.

The KMH 880 system provides two functions which are aids for the pilot :

- the EGPWS function enables to detect if the airplane path is in compliance with the overflown terrain relief.
- the TAS function enables to monitor the traffic by relying on information obtained from nearby airplane transponders. This function does neither detect, nor track airplane which are not equipped with an operating ATRBS transponder.

SECTION 2

LIMITATIONS

The limitations hereafter supplement those of the standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook, when the TBM airplane is equipped with the option "HONEYWELL" KMH 880 EGPWS/TAS SYSTEM.

The KMH 880 EGPWS function provides terrain proximity alerting and detection to the pilot. It must not be used for airplane vertical and horizontal navigation.

AC 2318 recommendation : in order to avoid unwillingly warnings, EGPWS function must be inhibited for any landing on a terrain which is not mentioned in the data base.

REMARK :

The KMH 880 TAS function is an advisory means, not a TCAS.

Following documents or any further edition applicable to the latter, shall be readily available to the pilot, each time the KMH 880 system is used :

- KTA 870/KMH 880 Traffic Advisory System/Multi-Hazard Awareness System Pilot's Guide, P/N 006-18265-0000 Revision 0 dated 03/01,
- EFS 40/50 Pilot's Guide, P/N 006-08701-0000 dated 08/15/93,
- "GARMIN" GNS 530 Pilot's Guide, P/N 190-00181-00 Revision A dated 04/00, if data are displayed on a GNS 530 GPS,

and, depending of the multi-function display used, :

- KMD 550/850 Multi-function Display Pilot's Guide, P/N 006-18222-0000 Revision 1 dated April/2001,
- KMD 550/850 Multi-function Display/Terrain Function (EGPWS) Pilot's Guide Addendum, P/N 006-18236-0000 Revision 1 dated April/2001,
- Multi-function Display Traffic Avoidance Function (TCAS/TAS) Pilot's Guide Addendum P/N 006-18238-0000 Revision 0 dated 04/01, if data are displayed on a KMD 850 MFD,

or

- "GARMIN" GMX 200 Multi-function Display Pilot's Guide, P/N 190-00607-02 Revision A dated June 2006, if data are displayed on a GMX 200 MFD.

SECTION 3
EMERGENCY PROCEDURES

The emergency procedures hereafter supplement those of the standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook, when the TBM airplane is equipped with the option "HONEYWELL" KMH 880 EGPWS/TAS SYSTEM.

WARNING LIGHT "TERR N/A" ON

1 - MD41 "TEST" switch **PUSH**

If the following voice message is heard :

"EGPWS Computer OK - External faults : Display configuration"

or

"EGPWS Computer OK - External faults : Display bus inactive" :

2 - Check the multi-function display (KMD 850 or GMX 200) is set to ON.

For all other messages :

The EGPWS function is not operational.

SECTION 4
NORMAL PROCEDURES

The normal procedures hereafter supplement those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook, when the TBM airplane is equipped with the option "HONEYWELL" KMH 880 EGPWS/TAS SYSTEM.

BEFORE TAKEOFF

- 1 - MD41 "TEST" switch **PUSH**
- 2 - "EGPWS System OK" voice message **HEARD**
- 3 - If KMD 850 installed :
 - KMD 850 "TRFC" knob **PRESS**
 - TAS function test (KMD 850) **OK**
 - "TAS" knob (on KMD 850 "TRFC" page) **ON**
- 4 - If GMX 200 installed :
 - TAS function key (GMX 200) **ON**
 - TAS "Operate" item key (GMX 200) **PRESS**

4.1 - WARNINGS OF THE EGPWS FUNCTION

"PULL UP" AURAL WARNING

The red "TERR" warning light illuminates.

- 1 - Level the wings.
- 2 - Display the maximum power.
- 3 - Choose the optimum rate of climb adapted to airplane configuration and speed, until the warning disappears.

**"Terrain Terrain Pull up",
"Obstacle Obstacle Pull up",
AURAL WARNINGS**

The red "TERR" warning light illuminates.

Adjust airplane path in order to make the warning disappear.

4.2 - CAUTIONS OF THE EGPWS FUNCTION

**"Caution terrain", "Caution obstacle",
"Too low terrain"
AURAL WARNINGS**

The amber "TERR" warning light illuminates.

Adjust airplane path in order to make the warning disappear.

"DON'T SINK" AURAL WARNING

The amber "TERR" warning light illuminates.

Re-establish a positive rate of climb.

"SINK RATE" AURAL WARNING

The amber "TERR" warning light illuminates.

Reduce rate of descent.

4.3 - KMH 880 TAS FUNCTION**WARNING**

DO NOT ATTEMPT EVASIVE MANEUVERS BASED SOLELY ON TRAFFIC INFORMATION SHOWN ON DISPLAY ASSOCIATED TO THE KMH 880 TAS FUNCTION. INFORMATION ON THE DISPLAY IS PROVIDED TO THE FLIGHT CREW AS AN AID IN VISUALLY ACQUIRING TRAFFIC; IT IS NOT A REPLACEMENT FOR ATC AND SEE & AVOID TECHNIQUES

When the KMH 880 TAS function issues a Traffic Alert (aural or visual), look outside for the intruder airplane. When you spot an intruder airplane, use normal right-of-way procedures to maintain separation.

SECTION 5
PERFORMANCE

The installation and the operation of the "HONEYWELL" KMH 880 EGPWS/TAS SYSTEM do not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6
WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT		EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
	34 - NAVIGATION				
A	EGPWS/TAS system (OPT70 34061A)	KMH 880	HONEYWELL	15.63 (7.09)	158.42 (4.024)
A	EGPWS/TAS system (with antenna KA92) (OPT70 34061B)	KMH 880	HONEYWELL	15.89 (7.21)	166.02 (4.217)
A	EGPWS/TAS system (OPT70 34061C)	KMH 880	HONEYWELL	15.65 (7.10)	158.42 (4.024)

SECTION 7

DESCRIPTION

7.1 COMPONENTS OF THE OPTION

The KMH 880 option is constituted of the following components :

- a KA 92 GPS antenna (airplanes equipped with a "HONEYWELL" GPS),
- an MD41-1208 control box for EGPWS function of the option,
- a KMH 880 computer,
- two KA 815 antennas.

KMH 880 terrain type information is displayed on a KMD 850 or on a GMX 200 screen, when the "TERR" function is activated by the pilot.

Traffic information can be displayed on a dedicated screen (KMD 850 / GMX 200 and/or GNS 530) and/or on the EFS 40.

KMH 880 traffic type information is displayed on a KMD 850 or on a GMX 200 screen, when the "TRFC" function is activated by the pilot.

Use EFS 40 "TEST/REF" knob to display TAS information on the EFS 40.

7.2 MODES OF THE KMH 880 EGPWS FUNCTION

The KMH 880 EGPWS function has 5 modes :

- "Look ahead" mode

This mode provides a protection ahead of the airplane with a 1 minute prediction ("Caution terrain" or "Caution obstacle" aural warning associated with the illumination of the amber "TERR" warning light) and a 30 seconds prediction ("Terrain Terrain Pull up" or "Obstacle Obstacle Pull up" aural warning associated with the illumination of the red "TERR" warning light).

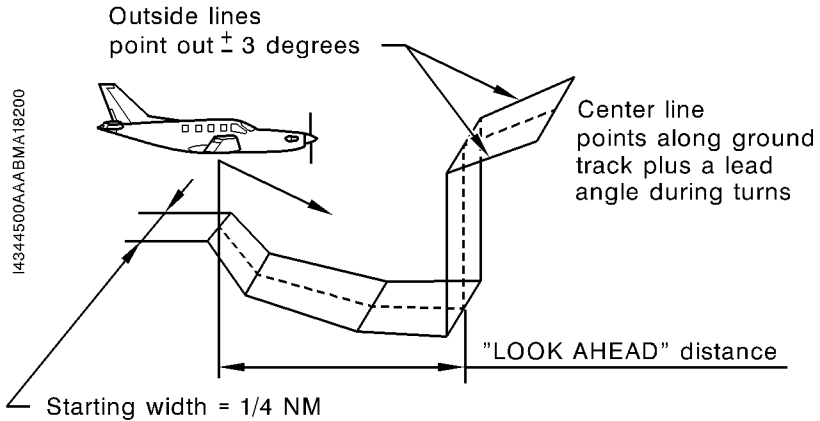


Figure 9.42.1

"HONEYWELL" KMH 880 EGPWS/TAS SYSTEM

- "Runway Field Clearance Floor" (RFCF) mode

This mode is active, when the airplane flies at less than 5 NM from a runway known in the KMH 880 data base ; it generates the "Too low terrain" aural warning and the illumination of the amber "TERR" warning light.

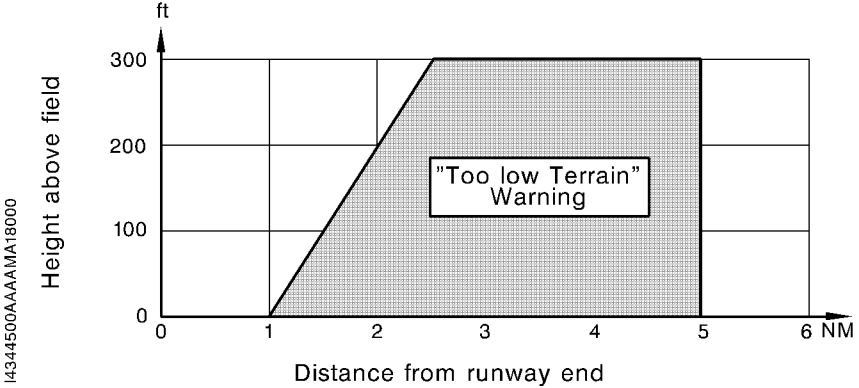


Figure 9.42.2 - "Too low terrain" warning area

- "Excessive rate of descent" mode

This mode has a lower priority than the "Look ahead" mode ; it generates the "Sink rate" aural warning (illumination of the amber "TERR" warning light) and the "Pull up" aural warning (illumination of the red "TERR" warning light).

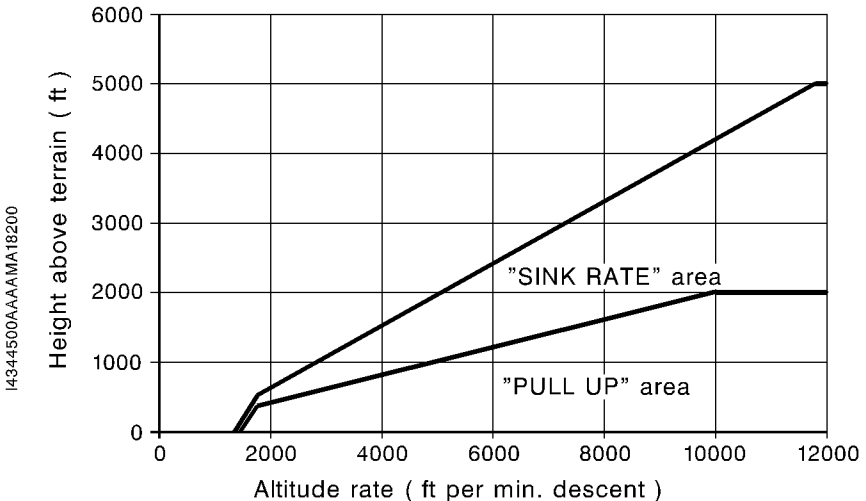


Figure 9.42.3 - "Sink rate" and "Pull up" warnings areas

- "Loss of altitude/negative rate of descent after takeoff" mode
This mode is active until the airplane reaches an altitude of approximately 700 ft above the runway ; it generates the "Don't sink" aural warning and the illumination of the amber "TERR" warning light.

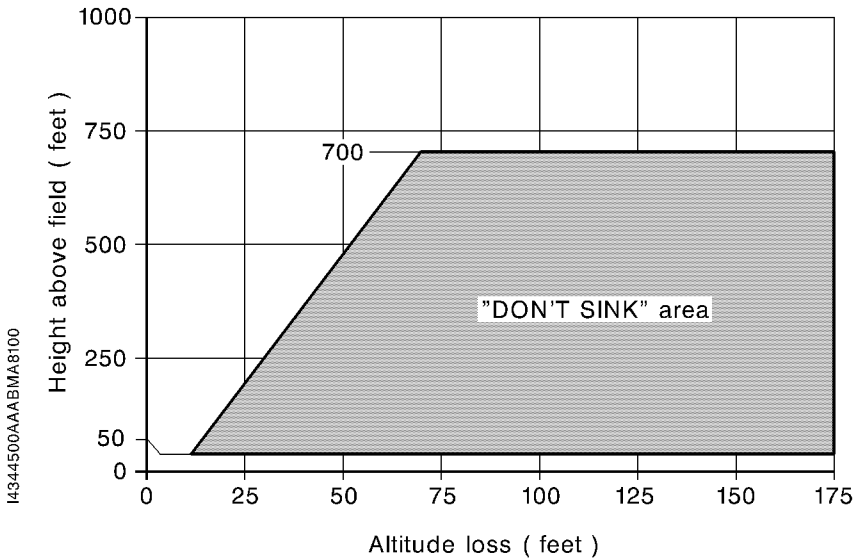


Figure 9.42.4 - "Don't sink" warning area

- "500 ft" mode
This mode is active, when the airplane flies at less than 5 NM from a runway known in the KMH 880 data base ; it generates a "500 ft" aural warning. This warning is re-initialized when the airplane reaches a height of 700 ft above the terrain altitude.

7.3 TERRAIN AWARENESS DISPLAY

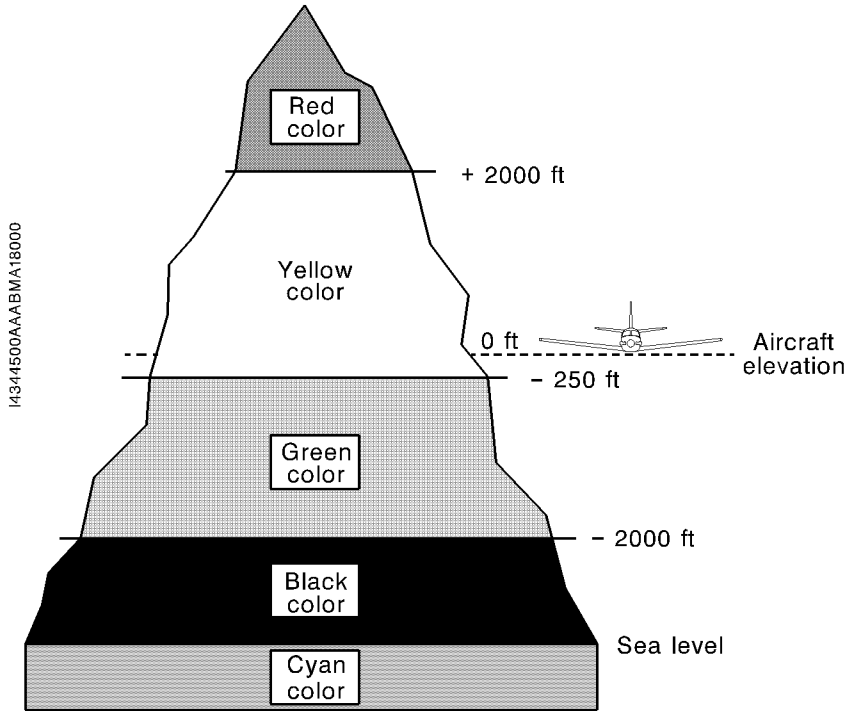


Figure 9.42.5

7.4 OBSTACLE DATA BASE

Data for known obstacles such as towers, buildings, antennas, etc. is contained on the same data card as the terrain and airport data. Presently, there are some 70000-plus obstacles in the database, but they are all in the area of North America. As more reliable information becomes available, Honeywell will expand the capability to provide alerting and warning for obstacles in other areas of the world.

Obstacles in the database are those known obstacles more than 100 feet AGL, so obstacles of lower height will not produce GA-EGPWS "Obstacle" alerts or warnings. However, terrain elevations are "rounded" up to the next 100 feet, so alerting and warning protection is generally available for known obstacles that are less than 100 feet AGL.

7.5 KMH 880 TAS FUNCTION

Traffic detected is displayed, when the vertical separation between your own airplane altitude and the intruder altitude ranges :

MODE	From	Up to
ABV (Look up)	- 2700 ft	+ 9000 ft
NRM (Normal)	- 2700 ft	+ 2700 ft
BLW (Below)	- 9000 ft	+ 2700 ft

Traffic Advisory (TA) criteria, which initiate a visual and/or an aural alert, are (sensitivity level B) :

- detection of an intruder airplane within a 0.55 NM horizontal radius and a \pm 800 ft relative altitude,
- approach of an intruder airplane on a course that will intercept your course within 20 to 30 seconds.

Airplanes equipped with the radio altimeter

When the airplane is at a ground height lower than 2000 ft, Traffic Advisory (TA) criteria, which initiate a visual and/or an aural alert, are (sensitivity level A) :

- detection of an intruder airplane within a 0.2 NM horizontal radius and a \pm 600 ft relative altitude,
- approach of an intruder airplane on a course that will intercept your course within 15 to 20 seconds.



The aural traffic alert is inhibited when the height detected by the radio altimeter is below 600 ft.

TAS function will be automatically activated, if following conditions are combined :

- radio altimeter height is greater than 50 ft,
- KMD 850 TAS selector (outer knob icon) is set to ON.

7.6 SWITCH-ON


To switch ON or OFF the KMH 880, use "RADIO MASTER" switch.

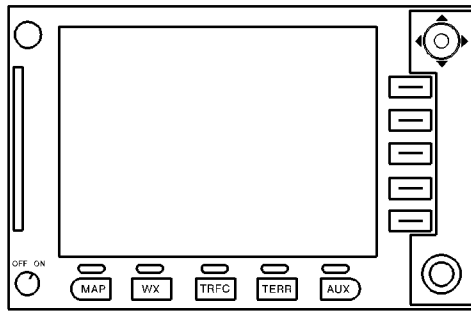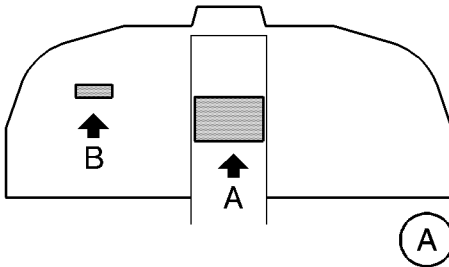

KMD 850

TERR : EGPWS mapping selection

 TRFC : TAS function selection



MD41 - 1208

TEST : EGPWS function test switch

TERR INHB : EGPWS warning inhibition switch

TERR (red) : Warnings

TERR (amber) : Cautions


TERR INHB (white) : Inhibited EGPWS warnings

TERR N/A (amber) : EGPWS system not operational


I4344500AAACMA8100

Figure 9.42.6 - KMH 880 system displayed on KMD 850 MFD

"HONEYWELL" **KMH 880** EGPWS/TAS SYSTEM

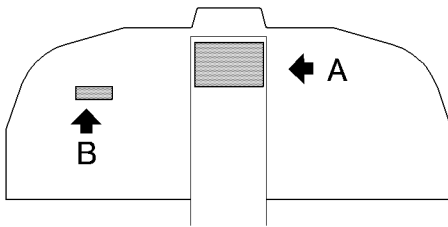


(A)

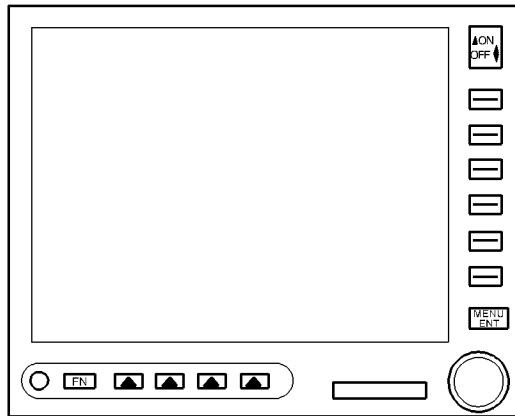

GMX 200

 (B)



MD41 - 1208

TEST : EGPWS function test switch

TERR INHB : EGPWS warning inhibition switch

TERR (red) : Warnings

TERR (amber) : Cautions

TERR INHB (white) : Inhibited EGPWS warnings

TERR N/A (amber) : EGPWS system not operational

14346200AAADMA8100

Figure 9.42.6A - KMH 880 system displayed on "GARMIN" GMX 200 MFD



SUPPLEMENT

CHIP DETECTION SYSTEM

TABLE OF CONTENTS

	Page
1 - GENERAL	9.44.2
2 - LIMITATIONS	9.44.2
3 - EMERGENCY PROCEDURES	9.44.3
4 - NORMAL PROCEDURES	9.44.4
5 - PERFORMANCE	9.44.4
6 - WEIGHT AND BALANCE	9.44.4
7 - DESCRIPTION	9.44.5

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM airplane is equipped with the option "CHIP DETECTION SYSTEM".

SECTION 2**LIMITATIONS**

The installation and the operation of the CHIP DETECTION SYSTEM do not change the limitations of the airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

SECTION 3
EMERGENCY PROCEDURES

The emergency procedures hereafter supplement those of the standard airplane described in Section 3 "Emergency procedures" of the basic Pilot's Operating Handbook, when the TBM airplane is equipped with the option "CHIP DETECTION SYSTEM".

OIL CONTAMINATION CHIP

Indication : "**CHIP**" amber warning on

On ground

Before engine start :

1 - Do not start engine.

After engine start or after landing :

1 - Return to parking area.

2 - Shut down engine.

3 - Inspect chip detector(s) and engine, if required.

In flight

1 - Check and monitor engine parameters.

2 - Land as soon as practical.

3 - Shut down engine.

4 - Inspect chip detector(s) and engine, if required.

**SECTION 4
 PROCEDURES NORMALES**

The normal procedures hereafter supplement those of the standard airplane described in Section 4 "Normal procedures" of the basic Pilot's Operating Handbook, when the TBM airplane is equipped with the option "CHIP DETECTION SYSTEM".

When "CHIP" amber warning goes on, it causes the illumination of the "Master Caution" light.

**SECTION 5
 PERFORMANCE**

The installation and the operation of the CHIP DETECTION SYSTEM do not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

**SECTION 6
 WEIGHT AND BALANCE**

Information hereafter supplement those given for the standard aircraft in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
79 - LUBRICATION				
A	Chip detection system (2 detectors) (MOD70-0169-79A)		Negligible	/
A	Chip detection system (1 detector) (MOD70-0169-79B)		Negligible	/
A	Chip detection system (2 detectors) with GARMIN flight deck system (MOD70-0169-79C)		Negligible	/

SECTION 7
DESCRIPTION

The chip detection system enables the monitoring of engine oil system.

The system includes one chip detector installed on propeller reduction gear box and, if installed, a second chip detector installed on engine accessory gear box.

In case of chip detection, amber warning light “CHIP” on advisory panel or
■ amber CAS message “CHIP” on GARMIN flight deck system screen goes on.

INTENTIONALLY LEFT BLANK

SUPPLEMENT

MEXICO SPECIFICS

TABLE OF CONTENTS

	Page
1 - GENERAL	9.45.2
2 - LIMITATIONS	9.45.2
Internal placards	9.45.2
External placards	9.45.18
Placards relative to optional equipment	9.45.28
3 - EMERGENCY PROCEDURES	9.45.33
4 - NORMAL PROCEDURES	9.45.33
5 - PERFORMANCE	9.45.33
6 - WEIGHT AND BALANCE	9.45.33
7 - DESCRIPTION	9.45.34

SECTION 1
GENERAL

This supplement is intended to inform the pilot about the airplane specifics, among others those required by the relevant Certification Authorities (limitations, description and operations necessary to the operation of the TBM airplane).

SECTION 2
LIMITATIONS

The limitations hereafter supplement or replace those of the standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook.

PLACARDS

Internal placards

- 1) Rear pressurized baggage compartment (in cabin)
- d) On bottom bulkhead

TBM 700A, TBM 700B

I4112003AAAE/MA8001

MÁXIMO 100 kg - (220 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

e) On partition wall

TBM 700C1, TBM 850

I4112003AAAEMA8001

MÁXIMO 100 kg - (220 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

or

I4112003AAAAGMA8201

MÁXIMO 100 kg - (220 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE" DEL MANUAL
DE OPERACIÓN DEL PILOTO Y LA GRÁFICA DE AL LADO.

COMPARTIMIENTO DE CABINA

kg	lbs
100	220
85	187
25	55
35	77

COMPARTIMIENTO TRASERO

TBM 700C2 (Refer to POH Supplement 41)

With partition net version A (refer to Section 6 of TBM 700C1 Pilot's Operating Handbook)

I4112003AAAAGMA8301

MÁXIMO 45 kg - (100 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE
ESTÁ ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA
REFIERASE A LOS "DATOS DE PESO Y BALANCE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

With partition net version B (refer to Section 6 of TBM 700C1 Pilot's Operating Handbook)

14112003AAAAGMA8201

MÁXIMO 100 kg - (220 lbs)

ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.

PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE" DEL MANUAL
DE OPERACIÓN DEL PILOTO Y LA GRÁFICA DE AL LADO.

Weight (kg)	Weight (lbs)
0	100
25	85
35	77
0	220

- 2) Non pressurized FWD baggage compartment
 - a) On baggage compartment door frame

TBM 700A, TBM 700B and TBM 850 S/N 269 and from S/N 434

14112003AAAEMA8100

MÁXIMO 50 kg - (110 lbs)

PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

- 3) Non pressurized rear baggage compartment
a) On internal face of the baggage compartment door

TBM 700C, TBM 850 up to S/N 433 except S/N 269

14112003AAAAGIMA8000

MÁXIMO 35 kg - (77 lbs)


PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

or

14112003AAAAGMJA8101

MÁXIMO 35 kg - (77 lbs)

PARA INSTRUCCIONES DE CARGA
REFIERASE A LOS "DATOS DE PESO Y
BALANCE" DEL MANUAL DE OPERACIÓN
DEL PILOTO Y LA GRÁFICA DE AL LADO.

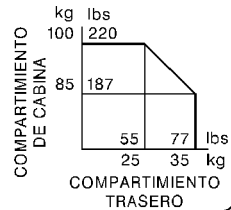

- 4) On cockpit R.H. side, at front seat level

TBM 700A, TBM 700B (chemical oxygen)

14112003AAAEMA18001

OXÍGENO DE EMERGENCIA

EN EL CAJÓN BAJO EL ASIENTO; JALE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- 5) Under seating of intermediate and rear passenger seats (on FWD side), which are fitted with oxygen

TBM 700A, TBM 700B (chemical oxygen)

I4112003AAAEMA8500

<p>PUSH TO OPEN EMPUJE PARA ABRIR</p>
<p>OXÍGENO DE EMERGENCIA EN EL CAJÓN BAJO EL ASIENTO; JALE COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN; CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN. REFIERASE AL MANUAL DE OPERACIÓN DEL PILOTO. NO FUMAR CUANDO ESTÉ EN USO.</p>

- 6) On R.H. side at front seat level and on the first rear passengers masks container (R.H. side on the ceiling)

TBM 700C, TBM 850 (standard definition)

I4112003AAA FMA18101

<p>WARNING GREASY SUBSTANCES ARE CAPABLE OF SPONTANEOUS COMBUSTION ON CONTACT WITH OXYGEN DO NOT SMOKE WHILE OXYGEN IS IN USE</p>	<p>ADVERTENCIA SUSTANCIAS GRASOSAS PUEDEN PROVOCAR COMBUSTIÓN ESPONTÁNEA AL ESTAR EN CONTACTO CON OXÍGENO NO FUMAR CUANDO EL OXÍGENO ESTÁ EN USO</p>
--	---

- 7) On rear passengers masks containers (on R.H. side on the ceiling)

TBM 700C, TBM 850 (standard definition)

I4112003AAA FMA18201

<p>OXYGEN MASKS INSIDE PULL MASKS FOR OXYGEN SUPPLY</p>	<p>MÁSCARAS DE OXÍGENO DENTRO JALE LAS MÁSCARAS PARA SUMINISTRO DE OXÍGENO</p>
--	---


8) On rear passenger's table casing

ALL


LA MESA DEBE ESTAR GUARDADA DURANTE EL DESPEGUE Y ATERRIZAJE.

9) Door internal side

a) On access door - **TBM 700A** from S/N 1 to S/N 49, except airplanes equipped as a retrofit with modification No. MOD70-019-25

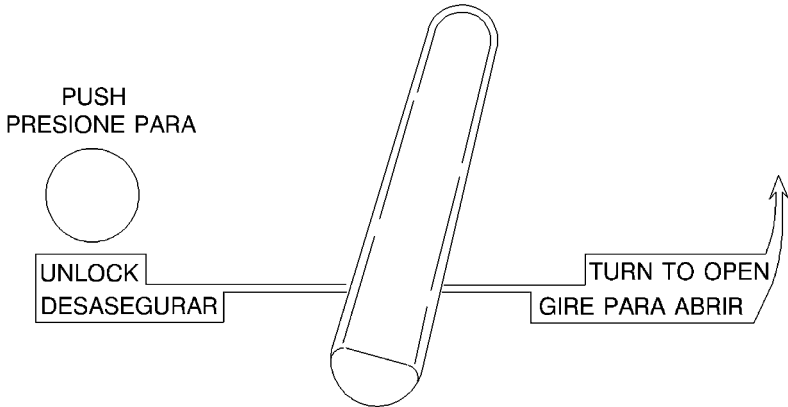

b) On access door - **TBM 700A** from S/N 50 to S/N 125, plus airplanes equipped as a retrofit with modification No. MOD70-019-25

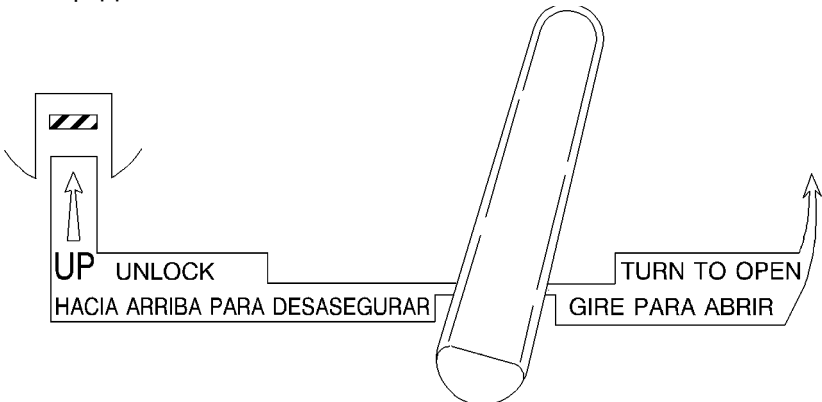


c) On access door - **TBM 700A** S/N 30, 35 and from S/N 50 to S/N 125

I4112003AAAUMAB100



d) On access door - **TBM 700B, TBM 700C, TBM 850 up to S/N 433**
except S/N 269

I4112003AAAUFMAB101

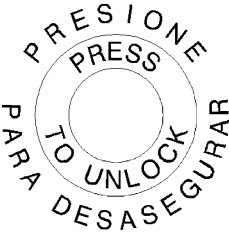

CAUTION: UNLOCK BEFORE OPERATING THE HANDLE
PRECAUCIÓN: DESASEGURE ANTES DE OPERAR LA MANIJA

TURN HANDLE TO OPEN
GIRE LA MANIJA PARA ABRIR

e) On access door - **TBM 850 S/N 269 and from S/N 434**

I4112003AAAQMA8300




CAUTION: UNLOCK BEFORE OPERATING THE HANDLE
PRECAUCIÓN: DESASEGURE ANTES DE OPERAR LA MANIJA

TURN HANDLE TO OPEN
GIRE LA MANIJA PARA ABRIR

f) On "pilot" door (if installed)

TBM 700B, TBM 700C, TBM 850 up to S/N 433 except S/N 269


I4112003AAAFMA8201

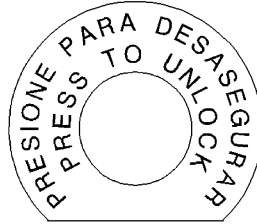


g) On "pilot" door (if installed)

TBM 850 S/N 269 and from S/N 434

 I4112003AAAQMA8200



- 10) On emergency exit handle
 - a) **TBM 700A** From S/N 1 to 23, 25, 28, 33 and 35, except airplanes equipped as a retrofit with modification No. MOD 70-019-25


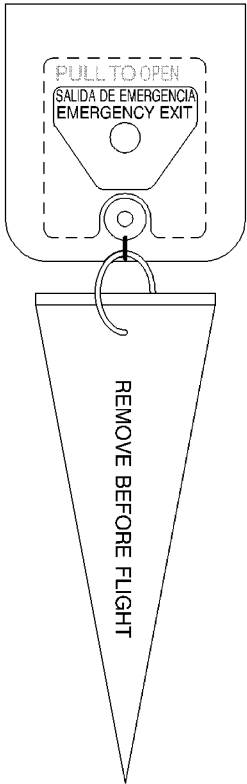


I4112003AAAFMA18500

- b) **ALL** From S/N 24, 26, 27, 29 to 32, 34, 36 to 9999, plus airplanes equipped as a retrofit with modification No. MOD 70-019-25

Marking on cover

Marking on handle

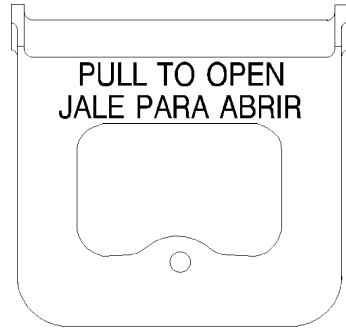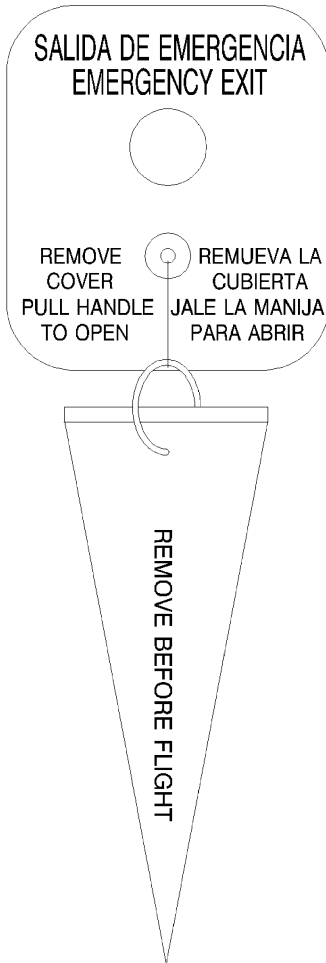

141T2003AAAF/MA/8401

11) On landing gear emergency control access door

- a) **TBM 700A, 700B, TBM 700C, TBM 850 not equipped with MOD70-0189-53**

I4112003AAAAMA8401

LDG GEAR EMERGENCY
UNDER HATCH
TREN DE ATERRIZAJE
DE EMERGENCIA
DEBAJO DE LA ESCOTILLA

- b) **TBM 850 equipped with MOD70-0189-53**

I4112003AAAAMA18400

LDG GEAR EMERGENCY
ACCESS PULL
TREN DE ATERRIZAJE
DE EMERGENCIA
JALE AQUI

12) At the upper corner of the window on each side of the cockpit

ALL

I4112003AAAAMA8301

HANDLE
HERE
MANIJA
AQUI

13) On cabinet drawer

ALL


I4112003AAAIMA18000

GAFAS PARA HUMO

14) On aisle side of rear seats

TBM 700A - PRE-MOD70-019-25

I4112003AAAIMA18301

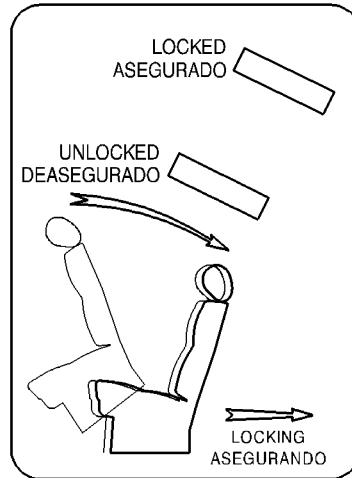

Pre-MOD70-0336-26 and Post-MOD70-0391-26D

14A) On R.H. side at front seat level

I4113207AAAAMA8401

EXTINTOR
ALMACENADO EN EL
CAJÓN INFERIOR DEL GABINETE
QUE ESTÁ DETRÁS DEL ASIENTO DERECHO

14B) On the lower drawer of the R.H. cabinet

I4113207AAAAMA8101

EXTINTOR ADETRO

TBM 850 Airplanes from S/N 434 and equipped with MOD70-0505-25
“Lavatory compartment”

15) - On fixed panel, cabin side

I4113200AAAAMA8300

EL DIVISOR DEBE ESTAR ALMACENADO DURANTE EL DESPEGUE Y EL ATERRIZAJE

- 16) - On fixed panel, toilet side

14113200AAAKMA8000

EL INODORO NO DEBE
ESTAR OCUPADO DURANTE EL
DEPEGUE Y EL ATERRIZAJE

CIERRE Y ASEGURE LA TAPA
DEL INODORO CUANDO NO ESTÉ EN USO

NO CUELGUE O GUARDE OBJETOS
EN EL BAÑO O DIVISOR

EL DIVISOR DEBE ESTAR ALMACENADO
DURANTE EL DESPEGUE Y EL ATERRIZAJE

USE LOS AURICULARES CUANDO EL
DIVISOR ESTÉ DESPLEGADO

- 17) - On access door, cabin side and toilet side

14113200AAAKMAB200

EMERGENCY
STOWAGE
ALMACENADO
DE
EMERGENCIA

REMOVE
COVER
REMUEVA LA
CUBIERTA

18) - Behind access door, cabin side

I4113200AAAKMA8100



19) - Behind access door, toilet side

I4113200AAALMA8100



20) - Front face of lavatory compartment, near opening / closing switches

I4113200AAAKMA18000



I4113200AAAKMA8400



21) - On the magazine rack and on side wall of storage volume

I4113200AAA KMA18100

1,5 KG (3.3 LBS)

ALL


External placards

- 22) Under engine cowling and under each wing

I4112003AAAHHMA1B300



- 23) Near fuel tank caps
 - a) **ALL up to S/N 433 except S/N 269**

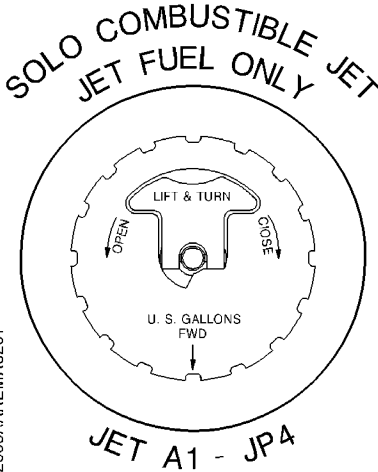

I4112003AAAEMA8201

COMBUSTIBLE JET A

CAPACIDAD TOTAL 550 L (145.3 us gal.)

SE NECESITA ADITIVO ANTICONGELANTE. REFIERASE AL MANUAL DE OPERACION DEL PILOTO PARA OTRAS CANTIDADES DE COMBUSTIBLE Y TIPOS DE ADITIVOS APROBADOS.

OPEN ↔ ABRA


CLOSE ↔ CIERRE

LIFT & TURN ↔ LEVANTE Y GIRE

LOCK ↔ ASEGURAR

FWD ↔ ADELANTE

b) TBM 850 S/N 269 and from S/N 434

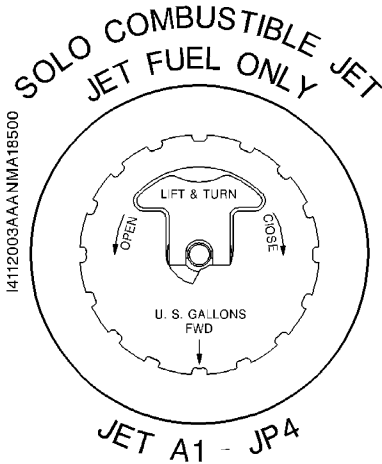


COMBUSTIBLE JET A
CAPACIDAD TOTAL 570 L (150.5 us gal.)
SE NECESITA ADITIVO ANTICONGELANTE. REFERASE AL
MANUAL DE OPERACIÓN DEL PILOTO PARA OTRAS CANTIDADES
DE COMBUSTIBLE Y TIPOS DE ADITIVOS APROBADOS.

- OPEN ← ABRA
- CLOSE ← CIERRE
- LIFT & TURN ← LEVANTE Y GIRE
- LOCK ← CERRAR
- FWD ← ADELANTE

c) ALL

I4112003AAAHMA8201

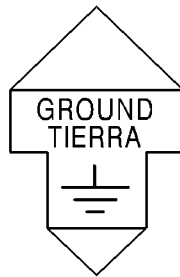

ALL

- 24) Above brakes hydraulic fluid reservoir against firewall

I4112003AAAHMA18101

FRENOS
MIL - H - 5606
AIR 3520
FLUIDO HIDRÁULICO

- 25) On langing gear hydraulic fluid reservoir

I4112003AAAHMA18001

GEARS
TRENES
MIL - H - 5606
AIR 3520
HYDRAULIC FLUID
FLUIDO HIDRÁULICO

- 26) On fuse box in engine cowling

I4112003AAAHMA18200

CAJA DE FUSIBLES
Y FOCOS

- 27) On internal face of L.H. engine cowling
 - a) **ALL**

14112003AAAEMA8300



14112003AAAHMA8101

OILS - ACEITES	
<input type="checkbox"/>	AEROSHELL 560
<input type="checkbox"/>	EXXON 2380 OR ESSO 2380 OR BPTO 2380
<input type="checkbox"/>	MOBIL JET OIL II
<input type="checkbox"/>	MOBIL JET OIL 254
<input type="checkbox"/>	AERO SHELL TURBINE OIL 500
<input type="checkbox"/>	ROYCO TURBINE OIL 500
<input type="checkbox"/>	CASTROL 5000
<input type="checkbox"/>	TURBONYCOIL 525-2A

- b) **TBM 700A, 700B, TBM 700C**


14112003AAAJMA8301

BATERÍA	
<input type="checkbox"/>	NÍQUEL-CADMIO
<input type="checkbox"/>	PLOMO-ÁCIDO EN ESTE CASO LA LUZ ROJA DE ADVERTENCIA "BAT OVHT" ESTÁ DESACTIVADA.

ALL

- 28) On front lower portion of firewall L.H. side

I4112003AAA HMA8401

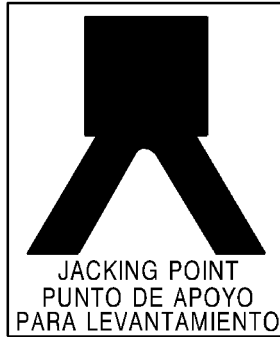


- 29) On engine cowling, in front of compartment door

I4112003AAA EMA18200

**ALIMENTACIÓN EXTERNA:
28 VOLTS C.D. NOMINAL.
CAPACIDAD MÍNIMA DE ARRANQUE:
800 AMPS
NO EXCEDER 1400 AMPS**

- 30) On nose gear door

I4112003AAA EMA18101

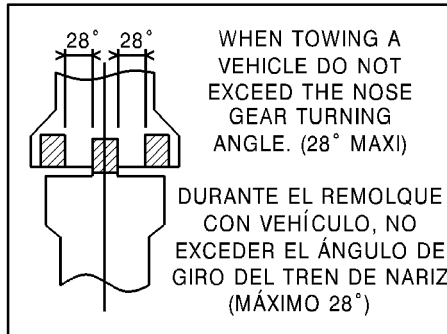

- 31) On nose gear leg

ALL

I4112003AAA IMA8200

TREN DE ATERRIZAJE
DE NARIZ
PRESIÓN DE LLANTA: 6,5 bar
94 psi

- 32) On main gear leg

TBM 700A, TBM 700B, TBM 700C1

I4112003AAA IMA8100

TREN DE ATERRIZAJE
PRINCIPAL
PRESIÓN DE LLANTA: 8,25 bar
120 psi


TBM 700C2, TBM 850

I4112003AAA IMA8300

TREN DE ATERRIZAJE
PRINCIPAL
PRESIÓN DE LLANTA: 8,96 bar
130 psi

33) On internal face of the oxygen cylinder service door

TBM 700C, TBM 850 (standard definition)

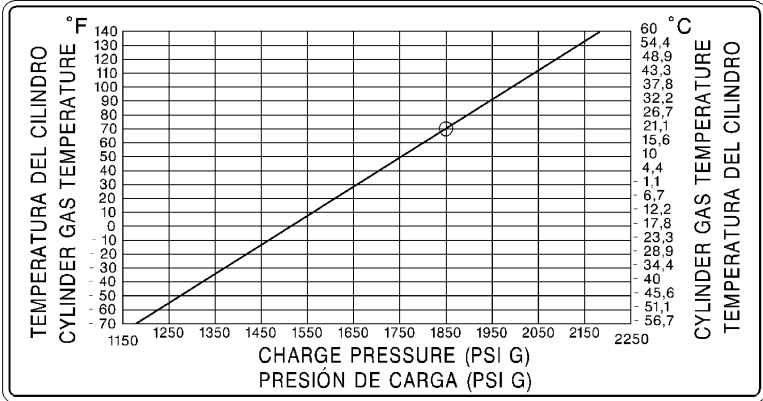

34) On the oxygen service door

TBM 700C, TBM 850 (standard definition)

I4112003AAA IMA18101

PUNTO DE SERVICIO PARA
OXÍGENO. NO USAR LUBRICANTES

35) Near air data system port

ALL

I4112003AAA HMA8001

MANTENGA LIMPIO


- 36) On external side of emergency locator transmitter inspection door
ALL

I4112003AAA AHMA18400



- 37) On emergency exit external side
ALL


I4112003AAA FMA8500

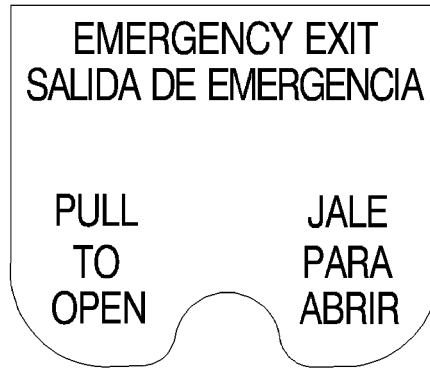


■ 38) Door external side

a) **TBM 700A** - On access door

TBM 700B, TBM 700C, TBM 850 - On "pilot" door (if installed)

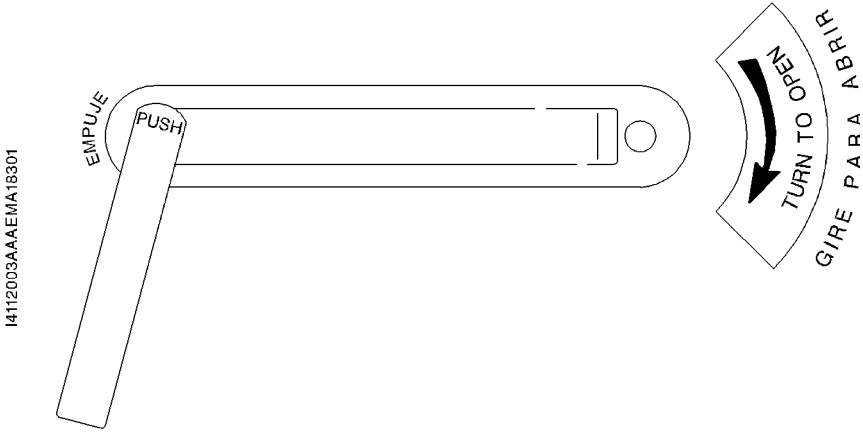

b) **TBM 700B, TBM 700C, TBM 850** - On access door

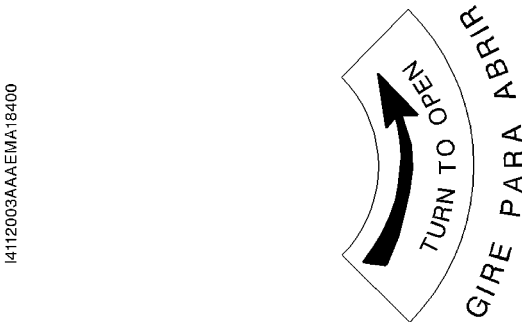

- c) **TBM 700B, TBM 700C, TBM 850** - On outer fuselage skin aft of access door and in the cabin forward of access door

I4112003AAA AFMA8000




- 39) **ALL** - On last step of stairs

I4112003AAA AFMA8300

CARGA MÁXIMA SOBRE LA ESCALERA : UNA PERSONA

- 40) On R.H. access door jamb
TBM 700B, TBM 700C, TBM 850

I4112003AAA AFMA18001

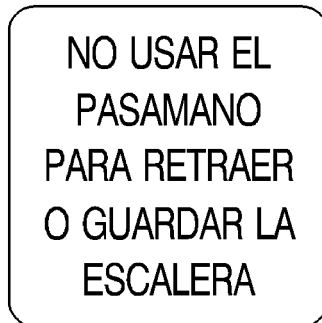

Placards relative to optional equipment

- 41) Airplanes equipped with option OPT70 25002 :
“7-place accomodation” (refer to POH Supplement 7)
 - a) **Specific for S/N 7**
 - On cockpit R.H. side, at front seat level

I4112003AAAEMA18001

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; JALE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- Under seating of intermediate and R.H. rear seats (on FWD side)
equipped with oxygen

I4112003AAAEMA8500

PUSH TO OPEN
EMPUJE PARA ABRIR

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; JALE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- On FWD side of the rear divan seating

I4112003AAAGMA18300

OXÍGENO DE EMERGENCIA
MÁXIMA DURACIÓN: 12 MIN
REFERIRASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- On the rear divan middle seating

I4:112003AAAJMA8201

OXÍGENO DE EMERGENCIA

EN EL CAJÓN ENTRE LOS ASIENTOS, JALE
COMPLETAMENTE LA MÁSCARA; CUANDO ESTÁ
TOTALMENTE EXTENDIDA DÉ UN TIRÓN A LA CUERDA.
MÁXIMA DURACIÓN - 12 MIN
REFIERASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO

b) From S/N 68 to S/N 243, except S/N 72 to 75 and S/N 205 and 240

- On cockpit R.H. side, at front seat level

I4:112003AAAEMA18001

OXÍGENO DE EMERGENCIA

EN EL CAJÓN BAJO EL ASIENTO; JALE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFIERASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- Under seating of L.H. intermediate seat, R.H. rear seat and rear seats (on FWD side)

I4:112003AAAEMA18500

**PULL TO OPEN
JALE PARA ABRIR****OXÍGENO DE EMERGENCIA**

EN EL CAJÓN BAJO EL ASIENTO; JALE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFIERASE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

c) **S/N 7 and from S/N 68 to S/N 243, except S/N 72 to 75 and S/N 205 and 240**

- On bottom bulkhead of rear pressurized baggage compartment (in cabin)

VERSIÓN 6-ASIENTOS : MÁXIMO 100 kg - (220 lbs)
VERSIÓN 7-ASIENTOS : MÁXIMO 35 kg - (77 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE
ESTÁ ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFIERASE
A LOS "DATOS DE PESO Y BALANCE"
DEL MANUAL DE OPERACIÓN DEL PILOTO

- On L.H. side, under R.H and L.H intermediate seat seatings or on L.H. intermediate seat back-rest

JALE LA MANIJA HACIA ARRIBA Y EMPUJE EL
RESPALDO DEL ASIENTO HACIA ADELANTE

I4112003AAAAGM18401

I4112003AAAAIMA18200

- 42) **TBM 700B & TBM 700C1 with pilot door** Airplanes equipped with option OPT70 25027 : “Cargo transportation capability” (refer to POH Supplement 30)

- On the raiser at frame 13bis, inside the cabin

LÍMITES DE CARGA

<p style="text-align: center;">CONTENEDORES, PLATAFORMAS Y CAJAS PESADAS</p> <p style="text-align: center;">MÁXIMO 330 Kg (727 Lbs)</p> <p style="text-align: center;">MÁXIMO 188 Kg/m² (38.5 Lb/Sq.ft)</p>	<p style="text-align: center;"><u>CARGAMENTO A GRANEL</u></p> <p style="text-align: center;">200 Kg (441 Lbs)</p> <p style="text-align: center;">ENTRE REDES DE SEPARACIÓN</p> <p style="text-align: center;">100 Kg (220 Lbs)</p> <p style="text-align: center;">DETRÁS DE LA RED DE</p> <p style="text-align: center;">SEPARACIÓN TRASERA</p> <p style="text-align: center;">100 Kg/m³ (6.24 Lb/Cu.ft)</p>
---	--

PARA INSTRUCCIONES DE CARGA REFIERASE AL SUPLEMENTO APLICABLE EN EL MANUAL DE OPERACIÓN DEL PILOTO.

ES RESPONSABILIDAD DEL PILOTO COMPROBAR QUE TODA LA CARGA ESTÁ ASEGURADA CORRECTAMENTE.

I4112003AAAAGMA18101

- Under L.H. front side window

LÍMITES DE OPERACIÓN VERSIÓN CARGA

SI LA SALIDA DE EMERGENCIA NO ESTÁ ACCESIBLE,
NO USE EL ASIENTO DELANTERO DERECHO

I4112003AAAAGMA18001

- 43) **TBM 700B without pilot door** Airplanes equipped with option OPT70 25031 : “Cargo transportation capability without pilot door” (refer to POH Supplement 40)
 - On the raiser at frame 13bis, inside the cabin

LÍMITES DE CARGA

<p style="text-align: center;">CONTENEDORES, PLATAFORMAS Y CAJAS PESADAS</p> <p style="text-align: center;">MÁXIMO 180 Kg (396 Lbs)</p> <p style="text-align: center;">MÁXIMO 188 Kg/m² (38.5 Lb/Sq.ft)</p>	<p style="text-align: center;">CARGAMENTO A GRANEL</p> <p style="text-align: center;">100 Kg (220 Lbs)</p> <p style="text-align: center;">DETRÁS DE LA RED DE SEPARACIÓN TRASERA</p> <p style="text-align: center;">MÁXIMO 100 Kg/m³ (6.24 Lb/Cu.ft)</p>
---	--

PARA INSTRUCCIONES DE CARGA, REFIERASE AL SUPLEMENTO
APLICABLE EN EL MANUAL DE OPERACIÓN DEL PILOTO.

ES RESPONSABILIDAD DEL PILOTO COMPROBAR QUE
TODA LA CARGA ESTÁ ASEGURADA CORRECTAMENTE.

I4112003AAA/GMA18201

- 44) **TBM 700B** Airplanes equipped with option OPT70 35001 : “EROS/INTERTECHNIQUE” gaseous oxygen system” (refer to POH Supplement 29 or 37)
 - On R.H. side at front seat level and on the first rear passengers masks container (R.H. side on the ceiling)

<p>WARNING</p> <p>GREASY SUBSTANCES ARE CAPABLE OF SPONTANEOUS COMBUSTION ON CONTACT WITH OXYGEN</p> <p>DO NOT SMOKE WHILE OXYGEN IS IN USE</p>	<p>ADVERTENCIA</p> <p>SUSTANCIAS GRASOSAS PUEDEN PROVOCAR COMBUSTIÓN ESPONTÁNEA AL ESTAR EN CONTACTO CON OXÍGENO</p> <p>NO FUMAR CUANDO EL OXÍGENO ESTÁ EN USO</p>
--	---

I4112003AAAFMA18101


- On rear passengers masks containers (on R.H. side on the ceiling)

<p>OXYGEN MASKS INSIDE</p> <p>PULL MASKS FOR OXYGEN SUPPLY</p>	<p>MÁSCARAS DE OXÍGENO DENTRO</p> <p>JALE LAS MÁSCARAS PARA SUMINISTRO DE OXÍGENO</p>
---	--

I4112003AAAFMA18201

- On internal face of the oxygen cylinder service door

I4112003AAA.FMA18301

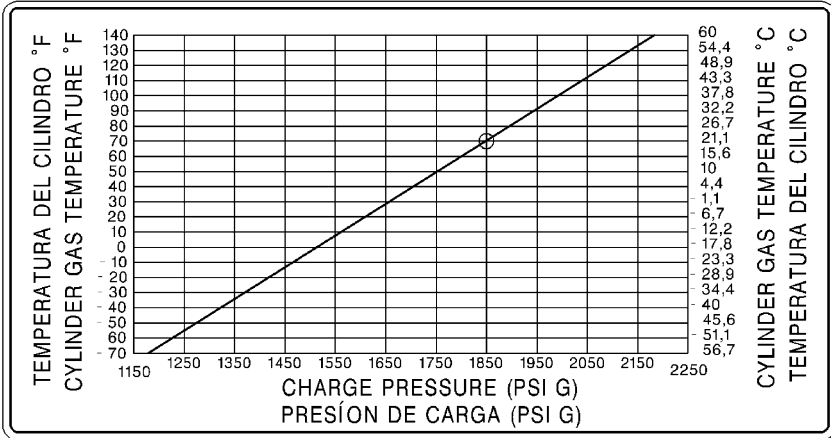

SECTION 3

EMERGENCY PROCEDURES

No specifics

SECTION 4

PROCEDURES NORMALES

No specifics

SECTION 5

PERFORMANCE

No specifics

SECTION 6

WEIGHT AND BALANCE

No specifics

SECTION 7
DESCRIPTION

No specifics



SUPPLEMENT**”GARMIN” GMX 200**
MULTI-FUNCTION DISPLAY**TABLE OF CONTENTS**

	Page
1 - GENERAL	9.46.2
2 - LIMITATIONS	9.46.3
3 - EMERGENCY PROCEDURES	9.46.4
4 - NORMAL PROCEDURES	9.46.4
5 - PERFORMANCE	9.46.5
6 - WEIGHT AND BALANCE	9.46.5
7 - DESCRIPTION	9.46.6

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary to the operation when the TBM airplane is equipped with the option “GARMIN” GMX 200 MULTI-FUNCTION DISPLAY”.

The generalities hereafter supplement those of the standard airplane described in Section 1 “General” of the basic Pilot’s Operating Handbook, when the TBM airplane is equipped with the option “GARMIN” GMX 200 MULTI-FUNCTION DISPLAY”.

The GMX 200 is a multi-function display screen which allows to display topographical type information (rivers, roads, ...), aeronautical type information (VOR, Airport, NDB, ...), as well as information issued from a weather radar, a stormscope, an EGPWS and the active flight plan issued from a GPS.

SECTION 2
LIMITATIONS

The limitations hereafter supplement those of the standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook, when the TBM airplane is equipped with the option "GARMIN" GMX 200 MULTI-FUNCTION DISPLAY".

GMX 200 Multi-function Display Pilot's Guide, P/N 190-00607-02, Revision A dated June 2006 or any applicable following edition, shall be readily available to the pilot.

The GMX 200 may be used only as an aid to navigation, if :

- navigation is based on other approved instruments,
- the GMX 200 data base is current and compatible with the flight,
- GMX 200 and associated GPS data bases cover the same geographical areas.

CAUTION

**GMX 200 TOPOGRAPHICAL DATA MUST NOT BE USED FOR
TERRAIN AND/OR OBSTACLES AVOIDANCE**

CAUTION

**THE GMX 200 CHART VIEW FEATURE DOES NOT CURRENTLY
REPRESENT A SOLE REPLACEMENT FOR THE PAPER CHART
WITHIN THE COCKPIT. THE PRESENTATION OF THE CHART DATA IS
INTENDED FOR SUPPLEMENTAL USE AND TO PROVIDE
ADDITIONAL SITUATIONAL AWARENESS. THE PILOT MUST STILL
HAVE ACCESS TO THE PRINTED CHART AS REQUIRED BY
REGULATIONS**

SECTION 3

EMERGENCY PROCEDURES

Installation and operation of the “GARMIN” GMX 200 Multi-function Display do not change the emergency procedures described in Section 3 “Emergency procedures” of the basic Pilot’s Operating Handbook.

SECTION 4

NORMAL PROCEDURES

The normal procedures hereafter supplement those of the standard airplane described in Section 4 “Normal procedures” of the basic Pilot’s Operating Handbook, when the TBM airplane is equipped with the option ““GARMIN” GMX 200 MULTI-FUNCTION DISPLAY”.

GMX 200 normal operating procedures recommended by the manufacturer are outlined in the “GARMIN” GMX 200 Multi-function Display Pilot’s Guide, P/N 190-00607-02, Revision A dated June 2006 or any applicable following edition.

SECTION 5 PERFORMANCE

The installation and the operation of the “GARMIN” GMX 200 Multi-function Display do not change the basic performance of the airplane described in Section 5 “Performance” of the basic Pilot’s Operating Handbook.

SECTION 6 WEIGHT AND BALANCE



Information hereafter supplement the one given for the standard airplane in Section 6 “Weight and balance” of the basic Pilot’s Operating Handbook.

A or O	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
	34 - NAVIGATION			
A	Multi-function display (MOD70-0210-34A) GMX 200	GARMIN	5.423 (2.46)	153.54 (3.90)
A	Multi-function display with chart view (MOD70-0210-34B) GMX 200	GARMIN	5.423 (2.46)	153.54 (3.90)

SECTION 7
DESCRIPTION

- 1 - Power/Dimming
- 2 - Menu Item Keys
- 3 - Menu Enter Key
- 4 - Rotary knob and push-button
- 5 - Data card
- 6 - Function Item Keys
- 7 - Function key
- 8 - Photosensor
- 9 - Menu Item labels
- 10 - Function Item labels
- 11 - Advisory/Data Flags
- 12 - Traffic and terrain thumbnail
- 13 - To waypoint identifier
- 14 - Bearing to destination (TO) WPT

Key to Figure 9.46.1 - GMX 200 Multi-function display (front view)

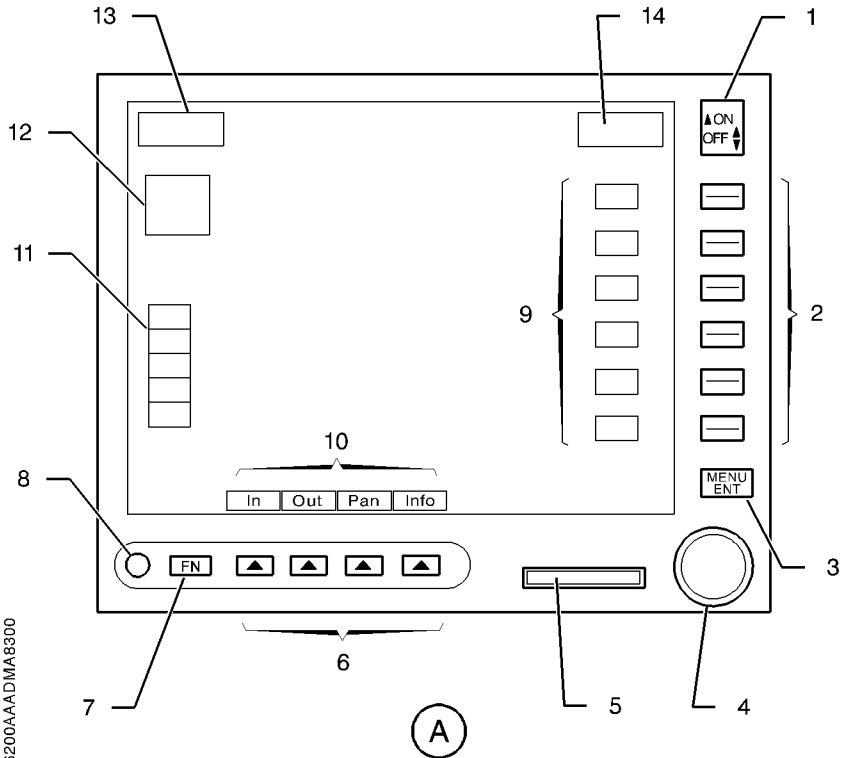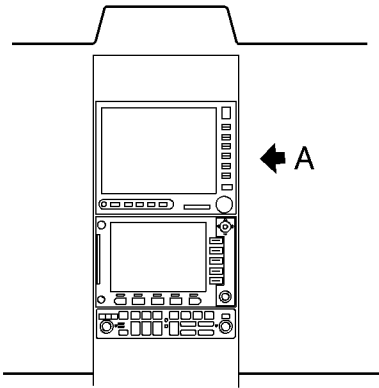

I4346200AAAADMA8300

Figure 9.46.1 - GMX 200 Multi-function display (front view)
(typical arrangement)

INTENTIONALLY LEFT BLANK

Supplement

Argentina specifics

Table of contents

	Page
1 - General	9.54.2
2 - Limitations	9.54.2
Internal placards	9.54.2
External placards	9.54.19
Placards relative to optional equipment	9.54.27
3 - Emergency procedures	9.54.35
4 - Normal procedures	9.54.35
5 - Performance	9.54.35
6 - Weight and balance	9.54.36
7 - Description	9.54.36
8 - Handling, servicing and maintenance	9.54.36

Section 1 General

This supplement is intended to inform the pilot about the airplane specifics, among others those required by the relevant Certification Authorities (limitations, description and operations necessary to the operation of the TBM airplane).

Refer to Supplement A at the beginning of section 9 of the POH for the list of available supplements with their respective applicability.

Section 2 Limitations

The information in this section supplements and/or replaces the information in section 2: Limitations of the standard POH.

Placards

Internal placards

- 1) Rear pressurized baggage compartment (in cabin)
 - a) On bottom bulkhead

TBM 700A, TBM 700B

14112U03AAALMFA8000

MÁXIMO 100 kg - (220 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

b) On partition wall

TBM 700C1

14112003AAAALWA8000

MÁXIMO 100 kg - (220 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

or

14112003AAANNIA8200

MÁXIMO 100 kg - (220 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE" DEL MANUAL
DE OPERACIÓN DEL PILOTO Y LA GRÁFICA DE AL LADO.

Weight (kg)	Weight (lbs)
0	220
55	187
77	187

TBM 700C2 - refer to POH Supplement 41

With partition net version A - refer to section 6 of TBM 700C1 POH

14112003AAANNIA8300

MÁXIMO 45 kg - (100 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE
ESTÁ ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA
REFERIRSE A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.


With partition net version B - refer to Section 6 of TBM 700C1 POH

I4112003AAANMAB200

MÁXIMO 100 kg - (220 lbs)

ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.

PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE" DEL MANUAL
DE OPERACIÓN DEL PILOTO Y LA GRÁFICA DE AL LADO.

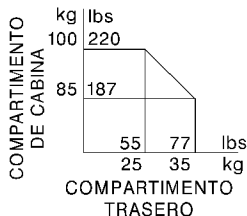


TBM 850 (up to S/N 433)

I4112003AAANMAB200

MÁXIMO 100 kg - (220 lbs)

ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.

PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE" DEL MANUAL
DE OPERACIÓN DEL PILOTO Y LA GRÁFICA DE AL LADO.

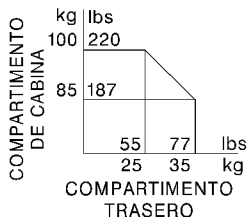

TBM 850 (from S/N 434). TBM 900. TBM 910 (up to S/N 1269). TBM 930

I4112003AAALMAB000

MÁXIMO 100 kg - (220 lbs)

ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

TBM 910 (from S/N 1270)

C4113500AAAEMA8300

MÁXIMO 100 kg - 220 lbsES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE ESTÁ
ASEGURADO CORRECTAMENTE.PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

- c) On the left-side rear cargo compartment panel upper edge
Airplane equipped with coat hanger

TBM 910 (up to S/N 1269), TBM 930 - MOD70-0557-25B

C4113500AAAEMA8000

SOLO ROPA**TBM 850, TBM 900, TBM 910 (from S/N 1270), TBM 930** -
MOD70-0557-25C or MOD70-0641-25A

C4113500AAAEMA8100

CAPACIDAD DE PESO MÁXIMA 4.5 KG - 10 LBS

Airplane equipped with coat and headset hanger

TBM 910 (from S/N 1336), TBM 930 - MOD70-0683-25F

C4113500AAAEMA8200

CAPACIDAD DE PESO MÁXIMA 7 KG - 15.43 LBS

- 2) Post-MOD70-0315-25, as a retrofit or as standard equipment (from S/N 609)

TBM 850 (from S/N 609), TBM 900, TBM 910, TBM 930

- a) For the large cargo net, on the right-side upholstery panel, in the rear baggage compartment



- b) For the small cargo net, on frame C13bis or on the right lower upholstery panel



Pilot's Operating Handbook

3) Non pressurized FWD baggage compartment

a) On baggage compartment door frame

TBM 700A, TBM 700B, TBM 850 (from S/N 434), TBM 900, TBM 910, TBM 930

I4112003AAALMA8100

MÁXIMO 50 kg - (110 lbs)

PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

4) Non pressurized rear baggage compartment

a) On internal face of the baggage compartment door

TBM 700C, TBM 850 (up to S/N 433)

I4112003AAANMAB100

MÁXIMO 35 kg - (77 lbs)

PARA INSTRUCCIONES DE CARGA
REFERIRSE A LOS "DATOS DE PESO Y
CENTRAJE" DEL MANUAL DE OPERACIÓN
DEL PILOTO Y LA GRÁFICA DE AL LADO.

COMPARTIMENTO DE CABINA

or

I4112003AAANMA8000

MÁXIMO 35 kg - (77 lbs)

PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO.

- 5) On the right side of the cockpit, at front seat level

TBM 700A, TBM 700B (chemical oxygen)

I4112003AAALMA18000

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; TIRE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- 6) Under seating of intermediate and rear passenger seats (on FWD side), which are fitted with oxygen

TBM 700A, TBM 700B (chemical oxygen)

I4112003AAALMA8500

**PUSH TO OPEN
EMPUJE PARA ABRIR**

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; TIRE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- 7) On the right side of the cockpit, at front seat level, and on the first rear passenger masks container (right side on the ceiling)

TBM 700C, TBM 850, TBM 900, TBM 910 (up to S/N 1269), TBM 930

I4112003AAAMMA18100


WARNING	ADVERTENCIA
GREASY SUBSTANCES ARE CAPABLE OF SPONTANEOUS COMBUSTION ON CONTACT WITH OXYGEN DO NOT SMOKE WHILE OXYGEN IS IN USE	SUSTANCIAS GRASOSAS PUEDEN PROVOCAR COMBUSTIÓN ESPONTÁNEA AL ESTAR EN CONTACTO CON OXÍGENO NO FUMAR CUANDO EL OXÍGENO ESTÁ EN USO

Pilot's Operating Handbook

- 8) On rear passenger masks containers (right side on the ceiling)

TBM 700C, TBM 850, TBM 900, TBM 910 (up to S/N 1269), TBM 930

I4112003AAAAMMA18200

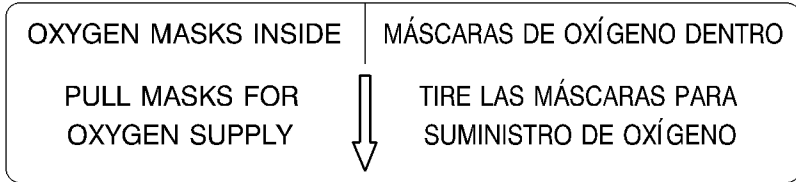

- 9) On rear passenger masks containers

TBM 910 (from S/N 1270)

I4112003AAAASMA8000

OXYGEN MASKS
MÁSCARAS DE OXÍGENO

- 10) On internal face of rear passenger masks containers doors

TBM 910 (from S/N 1270)

C4112003AAABMA08000

PULL MASKS FOR
OXYGEN SUPPLY
TIRE LAS MÁSCARAS
PARA SUMINISTRO DE
OXÍGENO

- 11) On rear passenger's table casing

TBM 700A, TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910 (up to S/N 1269), TBM 930

I4112003AALLMA8400

LA MESA DEBE ESTAR GUARDADA DURANTE EL DESPEGUE Y ATERRIZAJE

- 12) Above passenger's table

TBM 910 (from S/N 1270)

I4112033AAA/IMA8200

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING
LA MESA DEBE ESTAR GUARDADA DURANTE EL DESPEGUE Y ATERRIZAJE

- 13) On cabinet drawer (optional)

All

I4112003AAA/IMA18000


GAFAS PARA HUMO

- 14) Door internal side


- a) On access door

TBM 700A from S/N 1 to S/N 49, except airplanes equipped as a retrofit with modification No. MOD70-019-25


I4112002AAA/IMA8200

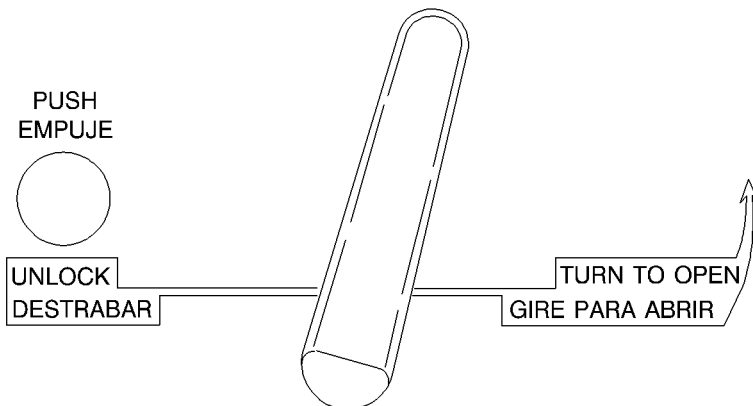

TBM 700A from S/N 50 to S/N 125, plus airplanes equipped as a retrofit with modification No. MOD70-019-25

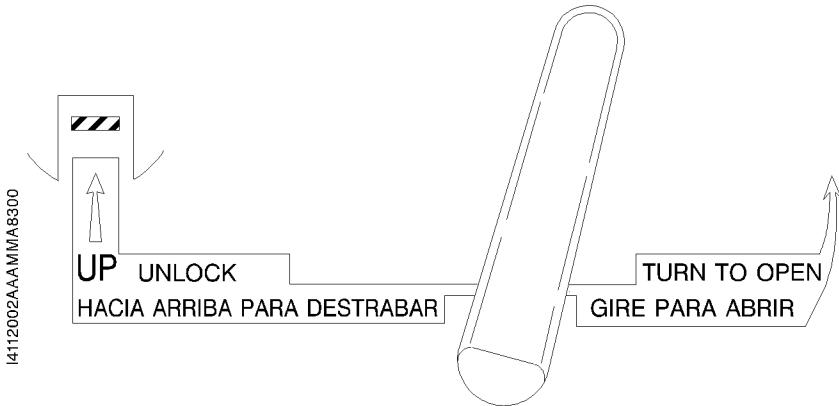

TBM 700B, TBM 700C, TBM 850 (Up to S/N 433)

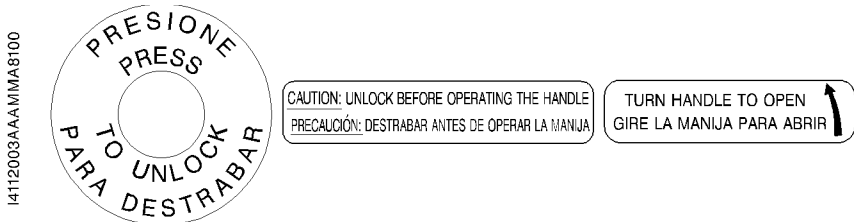

TBM 850 (From S/N 434), TBM 900, TBM 910 (up to S/N 1269), TBM 930



TBM 910 (from S/N 1270)


C4112003AAACMAJ3000



b) In the cabin, forward of access door

TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910 (up to S/N 1269),
TBM 930

I4112003AAAMIMAB000

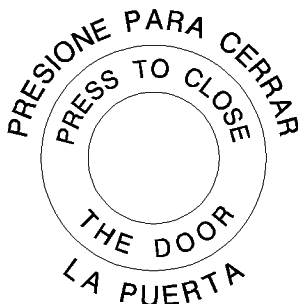

TBM 910 (from S/N 1270)

C4113300AAAHHMA08000


 


Pilot's Operating Handbook

c) On pilot's door, if installed


TBM 700B, TBM 700C, TBM 850 (Up to s/n 433)

I4112003AAA MIMA8200

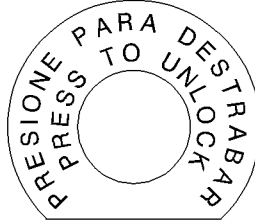

TBM 850 (From S/N 434), TBM 900, TBM 910 (up to S/N 1269), TBM 930

 I4112003AAA PMA8100




TBM 910 (from S/N 1270)

C4112003AAA CMA8150



- 15) On emergency exit handle


TBM 700A S/N 1 to 23, 25, 28, 33 and 35, except airplanes equipped as a retrofit with modification No. MOD 70-019-25

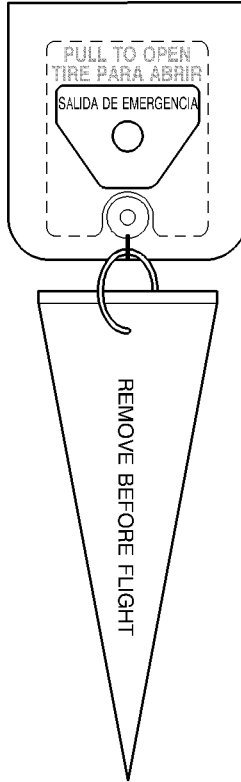

I4112003AAAMMA18500

S/N 24, 26, 27, 29 to 32, 34, 36 to 1269, plus airplanes equipped as a retrofit with modification No. MOD 70-019-25

Marking on cover

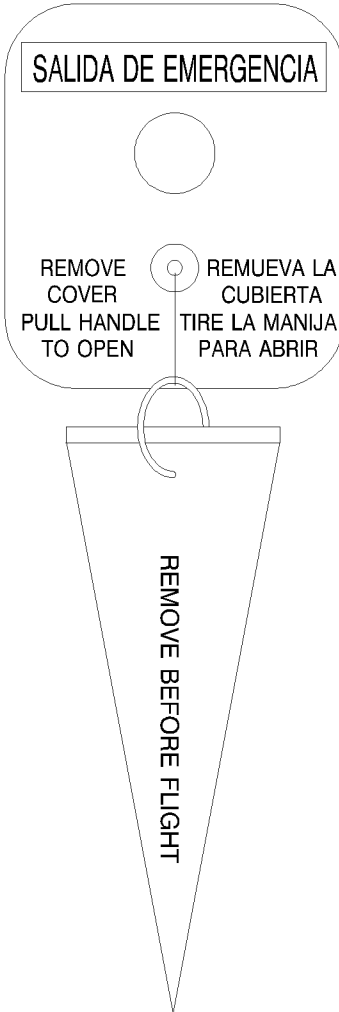


I4112003AAA MMA8400

Marking on handle



From S/N 1270

Marking on cover

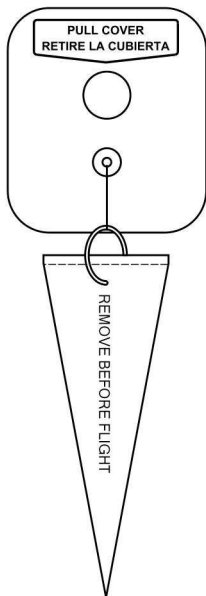

Marking on handle



or



C4112003AAADMA8001

16) Above emergency exit

All

C4113300AAACMA8100



Pilot's Operating Handbook

- 17) On landing gear emergency control access door

TBM 700A, TBM 700B, TBM 700C, TBM 850 not equipped with MOD70-0189-53

I4112003AAAOMAB400

LDG GEAR EMERGENCY
UNDER HATCH
TREN DE ATERRIZAJE
DE EMERGENCIA
DEBAJO DE LA ESCOTILLA

TBM 850 equipped with MOD70-0189-53, TBM 900, TBM 910 (up to S/N 1269), TBM 930

I4112003AAAOM/18400

LDG GEAR EMERGENCY
ACCESS PULL
TREN DE ATERRIZAJE
DE EMERGENCIA
TIRE AQUI

TBM 910 (from S/N 1270)


C411203AAACM48200

LDG GEAR EMERGENCY
ACCESS PULL
TREN DE ATERRIZAJE
DE EMERGENCIA
TIRE AQUI

- 18) On aisle side of rear seats

TBM 700A - Pre-MOD70-019-25


I4112003AAAOMA18300

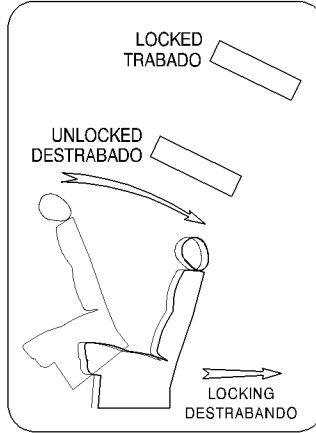


External placards

19) Near fuel tank caps

TBM 700A, TBM 700B, TBM 700C, TBM 850 (Up to S/N 433)

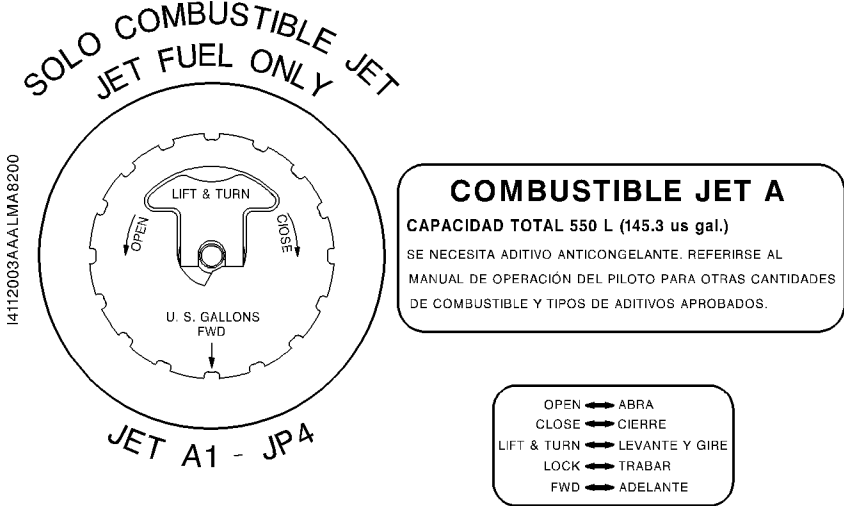

TBM 850 (From S/N 434), TBM 900, TBM 910, TBM 930

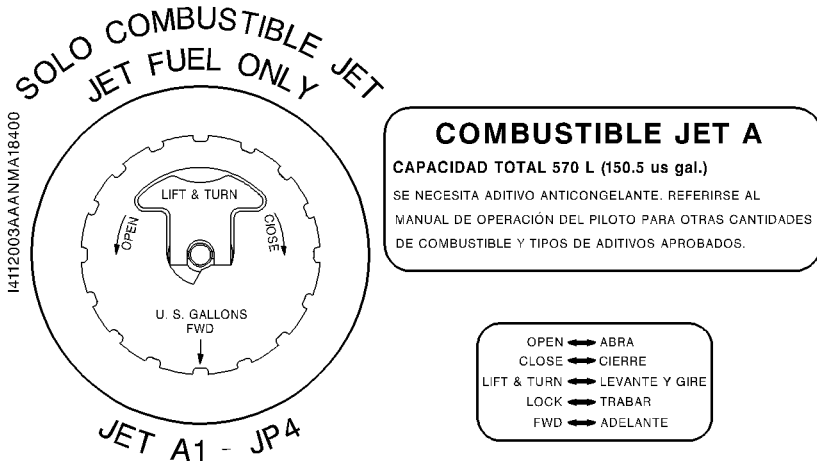

All

- 20) On internal face of the left-side engine cowling


I4112003AAALMA8300



- 21) On internal face of the left-side engine cowling

TBM 700A, TBM 700B, TBM 700C


I4112003AAAPMA8300

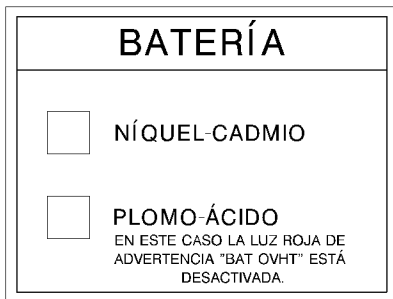

- 22) On engine cowling, in front of compartment door

TBM 700A, TBM 700B, TBM 700C, TBM 850

I4112003AAALMA18200

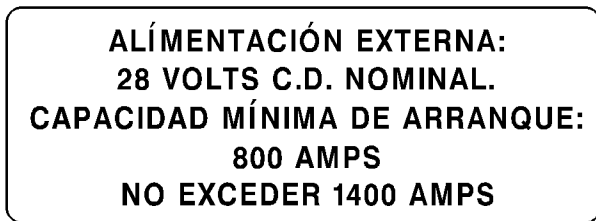

TBM 900, TBM 910, TBM 930


I4112003AAA GMA18500

**ALIMENTACIÓN EXTERNA:
28 VOLTS C.D. NOMINAL.
CAPACIDAD MÍNIMA DE ARRANQUE:
800 AMPS
NO EXCEDER 1000 AMPS**

All

23) On nose gear door

I4112003AAA LMA18100

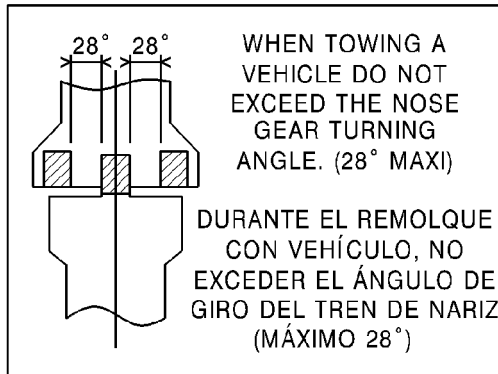

24) On nose gear leg

I4112003AAA OMA8200

**TREN DE ATERRIZAJE
DE NARIZ**

**PRESIÓN DE CUBIERTA: 6,5 bar
94 psi**

25) On main gear leg

TBM 700A, TBM 700B, TBM 700C1

I4112003AAAOMA8100

**TREN DE ATERRIZAJE
PRINCIPAL**

PRESIÓN DE CUBIERTA: 8,25 bar
120 psi

TBM 700C2, TBM 850, TBM 900, TBM 910, TBM 930

I4112003AAAOMA8300


**TREN DE ATERRIZAJE
PRINCIPAL**

PRESIÓN DE CUBIERTA: 8,96 bar
130 psi

26) On internal face of the oxygen cylinder service door

TBM 700C, TBM 850, TBM 900, TBM 910, TBM 930

I4112003AAAOMA18300

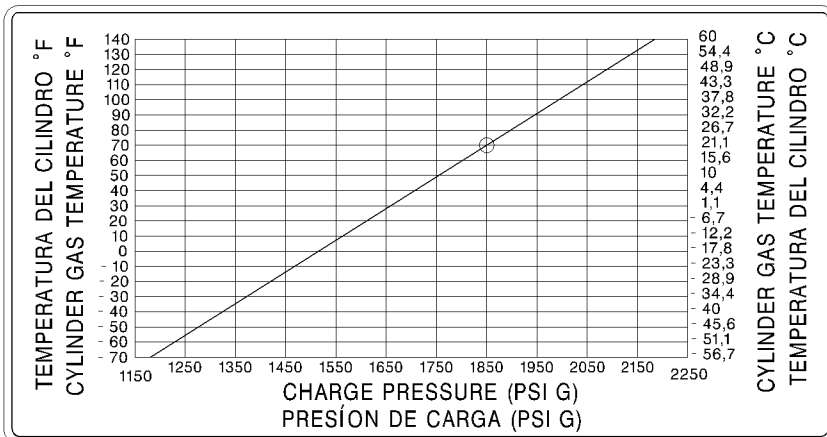

27) On the oxygen service door


TBM 700C, TBM 850, TBM 900, TBM 910, TBM 930

I4112003AAAQCMIA18100

**All**

28) Near air data system port

I4112003AAAQCMIA8000

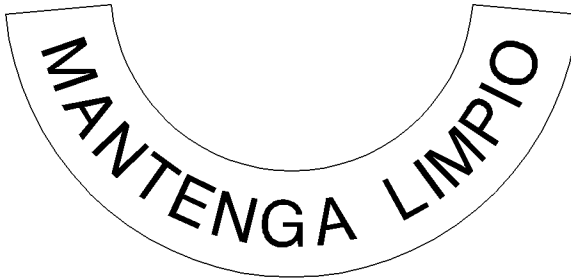


29) On external side of emergency locator transmitter inspection door

I4112003AAAQCMIA8100



- 30) On emergency exit external side

I4112003AAAAMMA8500

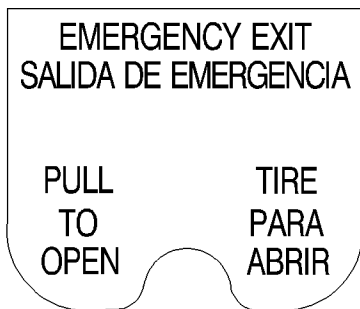


- 31) Door external side

- a) **TBM 700A** - On access door

TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910, TBM 930 - On pilot's door, if installed

I4112003AAAALMA18300

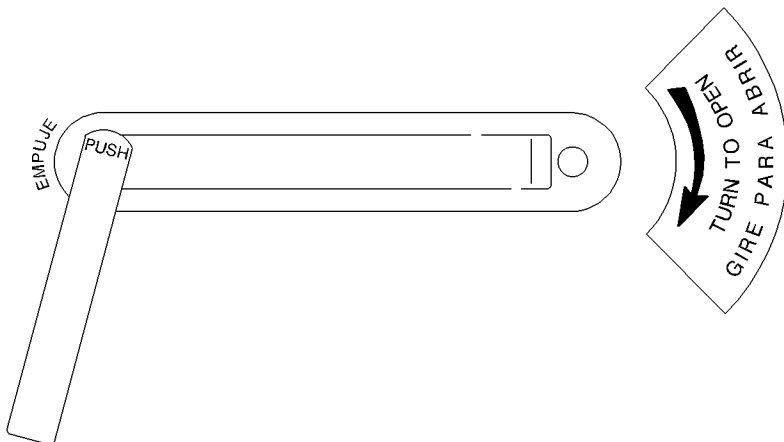

Pilot's Operating Handbook

- b) **TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910, TBM 930** - On access door

I4112003AAA LMA18400



- c) **TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910, TBM 930** - On outer fuselage skin aft of access door and in the cabin forward of access door

I4112003AAA MMA8000



- 32) **TBM 700A** - On external side of lower half-door

TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910 (Up to S/N 1269), TBM 930 - On last step of stairs

I4112003AAA MMA8300

CARGA MÁXIMA SOBRE LA ESCALERA : UNA PERSONA

33) On the right-side access door jamb

TBM 700B, TBM 700C, TBM 850, TBM 900, TBM 910 (up to S/N 1269),
TBM 930

I4112003AAAMMA18000

NO USAR EL
PASAMANO
PARA RETRAER
O GUARDAR LA
ESCALERA

Placards relative to optional equipment

34) Airplanes equipped with option OPT70 25002 :
"7-place accommodation" - refer to POH Supplement 7

a) **Specific for S/N 7**

- On the right side of the cockpit, at front seat level

I4112003AAAALMA18000

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; TIRE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- Under seating of intermediate and right-side rear seats (on FWD side)
equipped with oxygen

I4112003AAAALMA8500

PUSH TO OPEN
EMPUJE PARA ABRIR

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; TIRE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- On FWD side of the rear divan seating

I4112003AAAANMA18300

OXÍGENO DE EMERGENCIA
MÁXIMA DURACIÓN: 12 MIN
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

- On the rear divan middle seating

I4112003AAAAPMA8200

OXÍGENO DE EMERGENCIA
EN EL CAJÓN ENTRE LOS ASIENTOS, TIRE
COMPLETAMENTE LA MÁSCARA; CUANDO ESTÁ
TOTALMENTE EXTENDIDA DÉ UN TIRÓN A LA CUERDA.
MÁXIMA DURACIÓN - 12 MIN
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO

b) **From S/N 68 to S/N 243, except S/N 72 to 75 and S/N 205 and 240**

- On the right side of the cockpit, at front seat level, and under seating of left-side intermediate seat, right-side rear seat and rear seats (on FWD side)

I4112003AAALMA18000

OXÍGENO DE EMERGENCIA
EN EL CAJÓN BAJO EL ASIENTO; TIRE
COMPLETAMENTE LA MÁSCARA FUERA DEL CAJÓN;
CUANDO ESTÁ TOTALMENTE EXTENDIDA DÉ UN
TIRÓN A LA CUERDA. MÁXIMA DURACIÓN: 12 MIN.
REFERIRSE AL MANUAL DE OPERACIÓN DEL PILOTO.
NO FUMAR CUANDO ESTÉ EN USO.

c) **S/N 7 and from S/N 68 to S/N 243, except S/N 72 to 75 and S/N 205 and 240**

- On bottom bulkhead of rear pressurized baggage compartment (in cabin)

I4112003AAANMA8400

VERSIÓN 6-ASIENTOS : MÁXIMO 100 kg - (220 lbs)
VERSIÓN 7-ASIENTOS : MÁXIMO 35 kg - (77 lbs)
ES RESPONSABILIDAD DEL PILOTO
COMPROBAR QUE TODO EL EQUIPAJE
ESTÁ ASEGURADO CORRECTAMENTE.
PARA INSTRUCCIONES DE CARGA REFERIRSE
A LOS "DATOS DE PESO Y CENTRAJE"
DEL MANUAL DE OPERACIÓN DEL PILOTO

- On left side, under the right-side and left-side intermediate seat seatings or on the left-side intermediate seat back-rest

I4112003AAAOMA18200

TIRE LA MANIJA HACIA ARRIBA Y EMPUJE EL
RESPALDO DEL ASIENTO HACIA ADELANTE

- 35) **TBM 700B & TBM 700C1 with pilot door** Airplanes equipped with option OPT70 25027 : "Cargo transportation capability" - refer to POH Supplement 30

- On the raiser at frame 13bis, inside the cabin

LÍMITES DE CARGA

CONTENEDORES, PLATAFORMAS Y CAJAS PESADAS

MÁXIMO 330 Kg (727 Lbs)
MÁXIMO 188 Kg/m² (38.5 Lb/Sq.ft)

CARGAMENTO A GRANEL

200 Kg (441 Lbs)
ENTRE REDES DE SEPARACIÓN
100 Kg (220 Lbs)
DETRÁS DE LA RED DE
SEPARACIÓN TRASERA
100 Kg/m³ (6.24 Lb/Cu.ft)

PARA INSTRUCCIONES DE CARGA REFERIRSE AL SUPLEMENTO
APLICABLE EN EL MANUAL DE OPERACIÓN DEL PILOTO.

ES RESPONSABILIDAD DEL PILOTO COMPROBAR QUE
TODA LA CARGA ESTÁ ASEGURADA CORRECTAMENTE.

I4112003AAANMA18100

- Under the left front side window

I4112003AAANMA18000

LÍMITES DE OPERACIÓN VERSIÓN CARGA

SI LA SALIDA DE EMERGENCIA NO ESTÁ ACCESIBLE,
NO USE EL ASIENTO DELANTERO DERECHO

36) **TBM 700B without pilot door**

Airplanes equipped with option OPT70 25031 : "Cargo transportation capability without pilot door" - refer to POH Supplement 40

- On the raiser at frame 13bis, inside the cabin

I4112003AAANMA18200

LÍMITES DE CARGA

CONTENEDORES, PLATAFORMAS Y CAJAS PESADAS

MÁXIMO 180 Kg (396 Lbs)

MÁXIMO 188 Kg/m² (38.5 Lb/Sq.ft)

CARGAMENTO A GRANEL

100 Kg (220 Lbs)

DETRÁS DE LA RED DE
SEPARACIÓN TRASERA

MÁXIMO 100 Kg/m³ (6.24 Lb/Cu.ft)

PARA INSTRUCCIONES DE CARGA, REFERIRSE AL SUPLEMENTO
APLICABLE EN EL MANUAL DE OPERACIÓN DEL PILOTO.

ES RESPONSABILIDAD DEL PILOTO COMPROBAR QUE
TODA LA CARGA ESTÁ ASEGURADA CORRECTAMENTE.

37) **TBM 700A with MOD70-019-25 and TBM 700B**

Airplanes equipped with option OPT70 35001 : "EROS/INTERTECHNIQUE" gaseous oxygen system" - refer to POH Supplement 29 or 37

- On the right side of the cockpit, at front seat level, and on the first rear passenger masks container (right side on the ceiling)

I4112003AAAAMMA18100

WARNING	ADVERTENCIA
GREASY SUBSTANCES ARE CAPABLE OF SPONTANEOUS COMBUSTION ON CONTACT WITH OXYGEN	SUSTANCIAS GRASOSAS PUEDEN PROVOCAR COMBUSTIÓN ESPONTÁNEA AL ESTAR EN CONTACTO CON OXÍGENO
DO NOT SMOKE WHILE OXYGEN IS IN USE	NO FUMAR CUANDO EL OXÍGENO ESTÁ EN USO


- On rear passenger masks containers (right side on the ceiling)

I4112003AAAAMMA18200

<p>OXYGEN MASKS INSIDE</p> <p>PULL MASKS FOR OXYGEN SUPPLY</p>		<p>MÁSCARAS DE OXÍGENO DENTRO</p> <p>TIRE LAS MÁSCARAS PARA SUMINISTRO DE OXÍGENO</p>
--	--	---

- On internal face of the oxygen cylinder service door

I4112003AAAAMMA18300

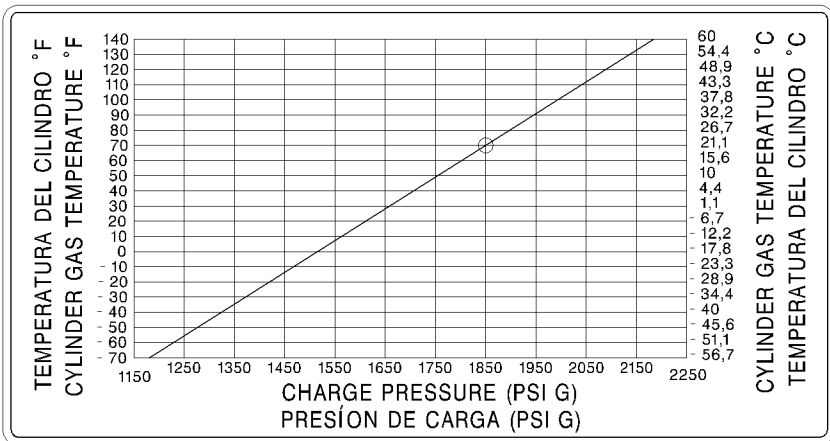

38) Airplanes equipped with optional MOD70-0505-25C "Cabinet installation : Lavatory compartment"

- On fixed panel, cabin side

14113200AAACMA8000

EL DIVISOR DEBE ESTAR ALMACENADO DURANTE EL DESPEGUE Y EL ATERRIAJE

- On fixed panel, toilet side

14113200AAACMA8100

**EL INODORO NO DEBE
ESTAR OCUPADO DURANTE EL
DEPEGUE Y EL ATERRIAJE**

**CIERRE Y ASEGURE LA TAPA
DEL INODORO CUANDO NO ESTÉ EN USO**


**NO CUELQUE O GUARDE OBJETOS
EN EL BAÑO O DIVISOR**

**EL DIVISOR DEBE ESTAR ALMACENADO
DURANTE EL DESPEGUE Y EL ATERRIAJE**

**USE LOS AURICULARES CUANDO EL
DIVISOR ESTÉ DESPLEGADO**

- On access door, cabin side and toilet side

C4113200AABMA08000

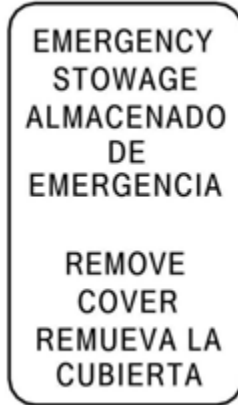

- Behind access door, cabin side and toilet side

C4113200AAAAMA8200



- Front face of lavatory compartment, near opening / closing switches

ALMACENAR

DESPLEGAR

- On the magazine rack

1,5 KG (3.3 LBS)

39) Airplanes equipped with optional MOD70-0684-25 "Extended large storage cabinet"

- On the upper surface of the cabinet

WARNING DO NOT SIT DOWN ON THE CABINET NO BAGGAGE ON THE CABINET	ADVERTENCIA NO SENTARSE SOBRE EL GABINETE NO COLOCAR EQUIPAJE SOBRE EL GABINETE
---	--

FOR TAKE-OFF AND LANDING : - NO OBJECTS ALLOWED ON THE CABINET - CABINET DRAWERS MUST BE STOWED	PARA DESPEGUE Y ATERRIZAJE: NO SE PERMITEN OBJETOS SOBRE EL GABINETE LOS CAJONES DEL GABINETE DEBEN ESTAR CERRADOS
--	---

- Inside large drawers, on side wall

C4113300AAAHMA8200

12,5 kg - 27.5 lbs MÁXIMO

- Inside small internal drawer, on side wall

C4113300AAAHMA8300

5 kg - 11 lbs MÁXIMO

Section 3

Emergency procedures

No specifics

Section 4

Normal procedures

No specifics

Section 5

Performance

No specifics

Section 6

Weight and balance

The information in this section supplements and/or replaces the information in section 6: Weight and Balance of the standard POH.

S/ R/ A/ O	Item OPT70 or MOD70	Required (R) or Standard (S) or Optional (A or O) equipment	Weight per unit lb (kg)	Arm in. (m)
01 - Specific optional equipment				
A	0289-11	Argentina markings	/	/
A	0619-11F	Argentina markings	/	/
34 - Navigation				
A	0176-00H	ADF RA 3500 system	7.61 (3.45)	214.65 (5.452)

Section 7

Description

No specifics

Section 8

Handling, servicing and maintenance

No specifics

SUPPLEMENT

"GARMIN" GSR 56 WEATHER DATALINK AND SATELLITE PHONE FOR G600 AND G600 Txi

TABLE OF CONTENTS

	Page
1 - GENERAL	9.56.2
2 - LIMITATIONS	9.56.3
3 - EMERGENCY PROCEDURES	9.56.5
4 - NORMAL PROCEDURES	9.56.6
5 - PERFORMANCE	9.56.7
6 - WEIGHT AND BALANCE	9.56.7
7 - DESCRIPTION	9.56.7

SECTION 1

GENERAL

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary for operation when the airplane is equipped with "GARMIN" GSR 56 WEATHER DATALINK AND SATELLITE PHONE FOR G600 AND G600 Txi".

1.1 - GENERAL

Airplane equipped with MOD70-0331-23 Version I

The GARMIN G600 Pilot's Guide No. 190-00601-02 and GTN 7XX Pilot's Guide No. 190-01007-03 at their latest revision shall be readily available to the pilot whenever the operation of the GARMIN GSR 56 weather datalink and satellite phone system for G600 is predicted.

Airplane equipped with MOD70-0331-23 Version O

The GARMIN G600 Txi Pilot's Guide No. 190-017170-10 and GTN 7XX Xi Pilot's Guide No. 190-02237-03 at their latest revision shall be readily available to the pilot whenever the operation of the GARMIN GSR 56 weather datalink and satellite phone system for G600 Txi is predicted.

All

SECTION 2

LIMITATIONS

These limitations supplement those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook when the airplane is equipped with "GARMIN" GSR 56 WEATHER DATALINK AND SATELLITE PHONE FOR G600 AND G600 Txi.

SATELLITE PHONE functions

- It is forbidden to activate Pilot In Command GTN TEL button as long as the airplane is in the air or moving on the ground.
- Only the Pilot In Command cross side GTN TEL input can be activated at all time of flight for the front passenger and passengers to have the GSR 56 telephone audio functions.

USE OF PHONE BY PIC PROHIBITED DURING ALL AIRCRAFT OPERATIONS

WEATHER DATALINK functions

- The GSR 56 weather datalink is only an advisory weather source. It does not relieve the pilot to comply with the applicable operational regulation in terms of flight preparation especially with regard to the use of approved weather and NOTAM sources during flight planning.

INTERNATIONAL TELECOMMUNICATION REGULATION

The GSR 56 is a telecommunication device approved under FCC ID Q639522B and registered by the ITU (International Telecommunication Union) for international use according to the GMPCS-MoU.

The receiver transmitter RF module embedded in the GSR 56 is a 9522 B manufactured by Iridium Satellite LLC.

Terms of use are subject to changes and are available from the ITU website.

2.1 - PLACARDS

Under L.H. front side window, under instruction plate

I4113207AAA/MA/4200


USE OF PHONE BY PIC PROHIBITED DURING ALL AIRCRAFT OPERATIONS

SECTION 3

EMERGENCY PROCEDURES

These Emergency Procedures supplement those of standard airplane described in Section 3 "Emergency Procedures" of the basic Pilot's Operating Handbook.

3.9 - ELECTRICAL SYSTEM

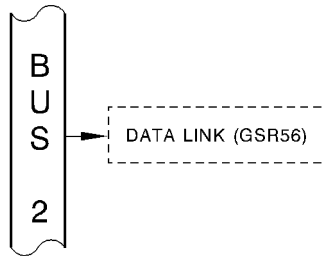

I4246000AAAAMMA8100

Figure 3.9.1 - PARTIAL ELECTRICAL DISTRIBUTION OF BUS BARS

SECTION 4**NORMAL PROCEDURES**

These Normal Procedures supplement or replace those of standard airplane described in Section 4 "Normal Procedures" of the basic Pilot's Operating Handbook when the airplane is equipped with "GARMIN" GSR 56 WEATHER DATALINK AND SATELLITE PHONE FOR G600 AND G600 Txi.

Normal operating procedures of the "GARMIN" GSR 56 weather datalink and satellite phone for G600 and G600 Txi are outlined in the Pilot's Guide, the references of which are given in Section 1 "General" of this Supplement.

BEFORE STARTING ENGINE

On GTN, in "Telephone Setup" page :

- | | |
|------------------------------|--------------------|
| 1 - "Pilot" button | DEACTIVATED |
| 2 - "Copilot" button | DEACTIVATED |
| 3 - "Passenger" button | DEACTIVATED |

BEFORE STARTING A PHONE CALL IN FLIGHT

On GTN, in "Telephone Setup" page :

- | | |
|--------------------------|--------------------|
| 1 - "Pilot" button | DEACTIVATED |
|--------------------------|--------------------|

If passengers intend to take part into a phone call :

- | | |
|------------------------------|------------------|
| 2 - "Passenger" button | ACTIVATED |
|------------------------------|------------------|

If front passenger intends to take part into a phone call :

- | | |
|----------------------------|------------------|
| 3 - "Copilot" button | ACTIVATED |
|----------------------------|------------------|

SECTION 5

PERFORMANCE

Installation and operation of "GARMIN" GSR 56 WEATHER DATALINK AND SATELLITE PHONE FOR G600 AND G600 Txi system do not change the basic performance of the airplane described in Section 5 "Performance" of the basic Pilot's Operating Handbook.

SECTION 6


WEIGHT AND BALANCE

Information hereafter supplement the one given for the standard airplane in Section 6 "Weight and balance" of the basic Pilot's Operating Handbook.

A or O	ITEM OPT70 or MOD70	OPTIONAL EQUIPMENT	EQUIPMENT SUPPLIER	WEIGHT per unit lb (kg)	ARM in. (m)
23 - COMMUNICATIONS					
A	0331-23 I	Weather datalink and satellite phone system GSR 56 coupled with "GARMIN" G600 system	GARMIN	3.82 (1.736)	58.03 (1.474)
A	0331-23 O	Weather datalink and satellite phone system GSR 56 coupled with "GARMIN" G600 Txi system	GARMIN	3.82 (1.736)	58.03 (1.474)

SECTION 7 DESCRIPTION

7.8 - ELECTRICAL SYSTEM

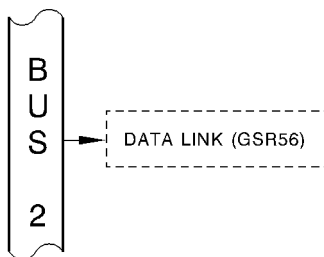

14246000AAA MIMA8100

Figure 7.8.2 - PARTIAL ELECTRICAL DISTRIBUTION OF BUS BARS

7.15 - MISCELLANEOUS EQUIPMENT

DATALINK SYSTEM

"GARMIN" GSR 56 weather datalink and satellite phone system provides airborne low speed datalink and voice communication capability to "GARMIN" G600 and G600 Txi system excluding any voice mail function. GSR 56 weather datalink and satellite phone system contains a transceiver that operates on the Iridium Satellite network.

The weather information are displayed on the MFD maps.

The satellite phone interface is embedded in the MFD and controlled by keys located on the MFD bezel and MFD knobs.

The telephone audio is controlled by the "Telephone" key on the GTN and can be played in the pilot, front passenger and passengers headphones.

INTENTIONALLY LEFT BLANK

SUPPLEMENT**PUBLIC TRANSPORTATION FOR
FRENCH-REGISTERED AIRPLANES****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.57.2
2 - LIMITATIONS	9.57.2
3 - EMERGENCY PROCEDURES	9.57.7
4 - NORMAL PROCEDURES	9.57.7
5 - PERFORMANCE	9.57.7
6 - WEIGHT AND BALANCE	9.57.7
7 - DESCRIPTION	9.57.8
8 - HANDLING, SERVICING AND MAINTENANCE	9.25.8

**PUBLIC TRANSPORTATION FOR
FRENCH-REGISTERED AIRPLANES****SECTION 1****GENERAL**

This supplement supplies information necessary for the operation of the TBM airplane when used for "PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES".

SECTION 2**LIMITATIONS**

These limitations supplement those of standard airplane described in Section 2 "Limitations" of the basic Pilot's Operating Handbook when the TBM airplane is used for "PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES".

2.1 - PLACARDS

(1) On access door - Internal side

CAUTION: UNLOCK BEFORE OPERATING THE HANDLE

ATTENTION: DEVERROUILLER AVANT D'AGIR SUR LA POIGNEE

**TURN HANDLE TO OPEN
TOURNER LA POIGNEE
POUR OUVRIR**



**APPUYER POUR DEVERROUILLER
PRESS TO UNLOCK**

- (2) On access door - External side



- (3) On "pilot" door - External side (if installed)



- (4) On outer fuselage skin aft of access door and in the cabin, forward of access door



**PUBLIC TRANSPORTATION FOR
FRENCH-REGISTERED AIRPLANES**

(5) On emergency exit handle – Internal side

Marking on cover

ISSUE DE SECOURS

Marking on handle

**PULL TO OPEN
TIRER POUR
OUVRIR**

**REMOVE
COVER
PULL HANDLE
TO OPEN**

**RETIRER
LE CACHE
TIRER LA POIGNEE
POUR OUVRIR**

(6) On emergency exit handle – External side

**EMERGENCY EXIT
SORTIE DE SECOURS**

**PULL
TO
OPEN**

**TIRER
POUR
OUVRIR**


- (7) On R.H. access door jamb




- (8) On last step of stairs

CHARGE MAXI SUR ESCALIER : UNE PERSONNE

- (9) On rear passengers masks containers

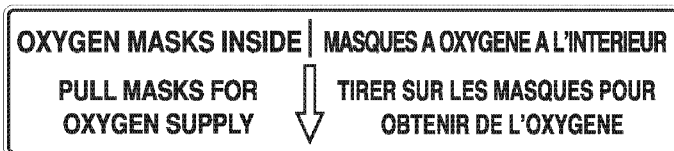

- (10) On R.H. side at front seat level and on the first rear passengers masks container (R.H. side on the ceiling)

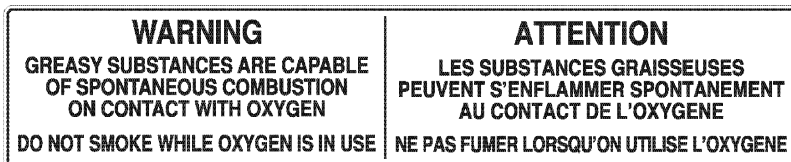

**PUBLIC TRANSPORTATION FOR
FRENCH-REGISTERED AIRPLANES**

(11) Under window, at L.H. intermediate seat



(12) On rear passenger's table edge

LA TABLETTE DOIT ETRE RABATTUE LORS DU DECOLLAGE ET DE L'ATTERRISSAGE

(13) On the chemical toilet cabinet curtain (if installed)

LE RIDEAU DOIT ETRE RANGE LORS DU DECOLLAGE ET DE L'ATTERRISSAGE

SECTION 3**EMERGENCY PROCEDURES**

Use of TBM airplane for “PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES” does not change the basic emergency procedures of the airplane described in Section 3 “Emergency procedures” of the basic Pilot’s Operating Handbook.

SECTION 4**NORMAL PROCEDURES**

Use of TBM airplane for “PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES” does not change the basic normal procedures of the airplane described in Section 4 “Normal procedures” of the basic Pilot’s Operating Handbook.

SECTION 5**PERFORMANCE**

Use of TBM airplane for “PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES” does not change the basic performance of the airplane described in Section 5 “Performance” of the basic Pilot’s Operating Handbook.

SECTION 6**WEIGHT AND BALANCE**

Use of TBM airplane for “PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES” does not change Section 6 “Weight and balance” of the basic Pilot’s Operating Handbook.

**PUBLIC TRANSPORTATION FOR
FRENCH-REGISTERED AIRPLANES****SECTION 7
DESCRIPTION**

Use of TBM airplane for “PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES” does not change Section 7 “Description” of the basic Pilot’s Operating Handbook.

**SECTION 8
HANDLING, SERVICING AND MAINTENANCE**

Use of TBM airplane for “PUBLIC TRANSPORTATION FOR FRENCH-REGISTERED AIRPLANES” does not change Section 8 “Handling, Servicing and Maintenance” of the basic Pilot’s Operating Handbook.

SUPPLEMENT**ADS-B OUT FUNCTION****TABLE OF CONTENTS**

	Page
1 - GENERAL	9.60.2
2 - LIMITATIONS	9.60.2
3 - EMERGENCY PROCEDURES	9.60.2
4 - NORMAL PROCEDURES	9.60.3
5 - PERFORMANCE	9.60.3
6 - WEIGHT AND BALANCE	9.60.3
7 - DESCRIPTION	9.60.4
8 - HANDLING, SERVICING AND MAINTENANCE	9.60.4

SECTION 1

GENERAL

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary for operation when the airplane is equipped with “ADS-B OUT function”.

The ADS-B OUT function is integrated in the optional modification MOD70-0494-34A : Garmin GTX 330 Diversity Mode S transponder # 1 with the extended squitter functionality.

The installed ADS-B OUT system has been shown to meet the equipment requirements of 14 CFR 91.227.

The installed transponder system is able to respond to interrogations in Modes A, C and S and is fully compliant with the requirements of CS ACNS.D.ELS/EHS (Mode S Elementary/Enhanced Surveillance).

The installed ADS-B OUT system is fully compliant with the requirements of CS ACNS.D.ADSB (1090 MHz Extended Squitter ADS-B OUT).

1.4 - ABBREVIATIONS AND TERMINOLOGY

RADIO-NAVIGATION ABBREVIATIONS

ADS-B : Automatic Dependent Surveillance–Broadcast

SECTION 2

LIMITATIONS

Operation of “ADS-B OUT function” does not change the limitations of the airplane described in Section 2 “Limitations” of the basic Pilot’s Operating Handbook.

SECTION 3

EMERGENCY PROCEDURES

Operation of “ADS-B OUT function” does not change the emergency procedures of the airplane described in Section 3 “Emergency Procedures” of the basic Pilot’s Operating Handbook.

SECTION 4 NORMAL PROCEDURES

Operation of “ADS-B OUT function” does not change the normal procedures of the airplane described in Section 4 “Normal Procedures” of the basic Pilot’s Operating Handbook.

SECTION 5 PERFORMANCE

Operation of “ADS-B OUT function” does not change the performance of the airplane described in Section 5 “Performance” of the basic Pilot’s Operating Handbook.

SECTION 6 WEIGHT AND BALANCE

Information hereafter supplement or replace those of the standard airplane described in Section 6 “Weight and Balance” of the basic Pilot’s Operating Handbook when the airplane is equipped with the “ADS-B OUT function”.

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		34 - NAVIGATION		
		34-53 - Transponder		
O	0494-34A	Transponder # 1 Mode S with diversity and extended squitter	GTX330D ES 7.50 (3.400)	153.86 (3.908)

SECTION 7

DESCRIPTION

Information hereafter supplement or replace those of the standard airplane described in Section 7 "Description" of the basic Pilot's Operating Handbook when the airplane is equipped with the "ADS-B OUT function".

The "ADS-B OUT function" enables the airplane to broadcast data, such as position information, to ground stations and to other airplanes equipped with ADS-B IN system.

ADS-B OUT data is only transmitted via transponder # 1. Use of transponder # 2 (if installed) results in a loss of the ADS-B OUT data transmission.

The loss of an interfaced input to the transponder #1 may cause the transponder to stop transmitting ADS-B OUT data. Depending on the nature of the fault or failure, the transponder may no longer be transmitting all of the required data in the ADS-B OUT messages.

If the transponder # 1 detects any internal fault or failure with the ADS-B OUT functionality, the following advisory message "NO ADSB" will be displayed on the transponder screen.

After being informed of ADS-B OUT failure either by the advisory message "NO ADSB" or by Air Traffic Control, it is possible to disable ADS-B OUT function by selecting transponder # 2 (if installed).

SECTION 8

HANDLING, SERVICING AND MAINTENANCE

Operation of "ADS-B OUT function" does not change the handling, servicing and maintenance of the airplane described in Section 8 "Handling, Servicing and Maintenance" of the basic Pilot's Operating Handbook.

SUPPLEMENT

ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600

TABLE OF CONTENTS

	Page
1 - GENERAL	9.61.2
2 - LIMITATIONS	9.61.3
3 - EMERGENCY PROCEDURES	9.61.5
4 - NORMAL PROCEDURES	9.61.11
5 - PERFORMANCE	9.61.19
6 - WEIGHT AND BALANCE	9.61.20
7 - DESCRIPTION	9.61.21
8 - HANDLING, SERVICING AND MAINTENANCE	9.61.31

SECTION 1**GENERAL**

This supplement is intended to inform the pilot about the equipment limitations, description and operations necessary for operation when the airplane is equipped with “ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600”.

1.1 - GENERAL

The Pilot’s Guide for the Electronic Standby Indicator MODEL ESI-2000 P/N 0040-32500-01 Rev. E or any later version as applicable, must be permanently kept in the airplane with the Pilot’s Operating Handbook.

SECTION 2
LIMITATIONS

Information hereafter supplement or replace those of the standard airplane described in Section 2 “Limitations” of the basic Pilot’s Operating Handbook when the airplane is equipped with “ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600”.

2.1 - GENERAL

The Pilot’s Guide for the Electronic Standby Indicator MODEL ESI-2000 P/N 0040-32500-01 Rev. E or any later version as applicable, must be permanently kept in the airplane with the Pilot’s Operating Handbook.

Departure into IMC is not authorized if the battery symbol is present with an amber battery symbol (less than 1 hour remaining), or an amber or red “X” over the battery symbol or a “CAL DUE” message by the battery symbol.

2.8 - MARKINGS

INDICATED AIRSPEED

Indicated airspeed markings and their color code significance are shown in Figure 2.8.1A.

MARKING	KIAS (Value or range)	SIGNIFICANCE
Red line	Below 65	/
White line	65 - 122	Full Flap Operating Range Lower limit is maximum weight V _{SO} in landing configuration.
Green line	Above 122	Normal operating airspeed range
Red line	Above 266	266 = VMO

Figure 2.8.1A - IAS AWARENESS BAR CUES

SUCTION GAGE [Pre-MOD70-0491-34 (ESI-2000 Installation for G600)]

MARKING	CORRESPONDING VALUE
Green	Normal operating from 4.4 to 5.2 in.Hg
Red lines	at 4.4 and 5.2 in.Hg

Figure 2.8.4 - SUCTION GAGE MARKINGS

SECTION 3
EMERGENCY PROCEDURES

Information hereafter supplement or replace those of the standard airplane described in Section 3 “Emergency Procedures” of the basic Pilot’s Operating Handbook when the airplane is equipped with “ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600”.

3.9 - ELECTRICAL SYSTEM


TOTAL LOSS OF ELECTRICAL POWER

- 1 - Maintain aircraft control.
- 2 - Follow display instruction to "PRESS ANY KEY FOR BATTERY POWER".
- 3 - Use the ESI-2000 for attitude, airspeed and/or altitude.
- 4 - Land as soon as possible.

NOTE :

Aircraft power is provided to the ESI-2000 display for normal operation. Operation of the basic ESI system is automatic - the system is powered ON anytime aircraft power is ON. The internal battery will provide power to the ESI-2000 if aircraft power is lost.

Press any key to allow the ESI-2000 to continue operation using the internal battery. If no key is pressed, the ESI-2000 will shut down automatically within (5) minutes.

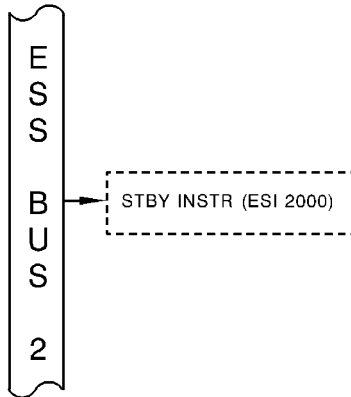

14246000AA1MMA8000

Figure 3.9.1 (2/2) - PARTIAL ELECTRICAL DISTRIBUTION
OF BUS BARS

3.9 - ELECTRICAL SYSTEM

ESI-2000 FAILURES	
1 - Battery indicator symbol meaning	
BATTERY INDICATOR	DESCRIPTION
Not shown	Normal operation - No information needs to be conveyed
Green	More than one hour of operation remains
Amber	Less than one hour of operation remains
Amber "X"	Battery is not available to power unit (over temperature or low battery voltage condition exists)
Red "X"	Battery has failed - Service is required

- 2 - ESI-2000 Attitude invalid in flight
 - Maintain straight and level flight at a constant airspeed.
 - Press the M button twice.
 - Press the S button once
 - The ESI-2000 will initiate the alignment process.
 - When a normal attitude display is available, resume normal flight.
 - If attitude information remains invalid, use attitude information from the primary attitude display.
- 3 - Primary Attitude and/or Air Data Source has failed or is unreliable
 - Maintain control of the aircraft.
 - Land as soon as practicable.
 - Use the ESI-2000 for attitude, airspeed and altitude information.



- 4 - Internal Battery Failure (red X'd battery indicator) in flight
 - Remain clear of IMC.
 - If in visual meteorological conditions :
 - . Cycle power on ESI-2000 (including internal power)
 - . Maintain straight and level while unit aligns
 - . If red "X" reappears, remain clear of IMC.
- 5 - Internal Battery not available (amber X'd battery indicator) in flight (battery above 55°C)
 - Reduce temperature of cockpit environment.
 - Remain clear of IMC until amber "X" is removed from the display.
- 6 - Internal Battery state of charge low (amber battery symbol displayed) in flight
 - Remain clear of IMC until amber battery symbol is removed from display signifying battery is charged sufficiently to have one hour of discharge ability.
- 7 - ESI-2000 in flight shutdown (Manual Procedure)
 - Maintain control of the aircraft using aircraft primary instruments.
 - Remove all aircraft power to the ESI-2000 by opening the 3 Amps "STBY INSTR" circuit breaker.
 - Press any key (button) as stated by the on screen message.
 - Press the M (Menu) button repeatedly until Shutdown menu is shown.
 - Press and hold the + (Hold) button until "SHUTTING DN" message is shown in the upper left corner of the screen.

3.10 - PRESSURIZATION AND AIR CONDITIONING

AMBER WARNING LIGHT	VACUUM LO	ON
Low vacuum may lead to malfunctioning of leading edge deicing, pressurization MONITOR		
If necessary, fly to an altitude \leq 12000 ft and if possible return to VMC conditions		
"BLEED" switch		OFF

SECTION 4
NORMAL PROCEDURES

Information hereafter supplement or replace those of the standard airplane described in Section 4 "Normal Procedures" of the basic Pilot's Operating Handbook when the airplane is equipped with "ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600".

4.3 - CHECK-LIST PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

A - INSIDE INSPECTIONS**Cockpit** (1)40 - ESI-2000 battery indicator symbol **NOT DISPLAYED**

CHECK-LIST PROCEDURES

BEFORE STARTING ENGINE (2/3)

- 26 - Vacuum system WARNING LIGHT **VACUUM LO** ON
- 27 - Fuel
- Gages CHECKED
 - Tank selector L or R - CHECKED
 - "FUEL SEL" switch AUTO
- WARNING LIGHT **AUTO SEL** OFF
- "SHIFT" push-button PRESS
- The selector changes tank
 On ground, observe a tank change
 every minute and 15 seconds**

BEFORE STARTING ENGINE (3/3)

- 28 - Fuel flowmeter totalizer CHECKED - ADJUSTED
- 29 - Engine instruments CHECK
- 30 - ITT TEST CARRY OUT
- 31 - EXT LIGHTS panel
- "STROBE" AS REQUIRED
- 32 - In case of night flight

 - INT LIGHTS panel : "INSTR" + "PANEL" ADJUSTED
 - Navigation lights ON
 - Flashlight (if necessary) IN PLACE

CHECK-LIST PROCEDURES

AFTER STARTING ENGINE

- 1 - GYRO INST panel
- All switches **ON**
Pull on the caging knobs when starting the ADI(s).

Pre-MOD70-0491-34

- 2 - Gyroscopic suction gage indicator **GREEN SECTOR**

WARNING LIGHT **VACUUM LO** OFF

Post-MOD70-0491-34

WARNING LIGHT **VACUUM LO** OFF

All

CHECK-LIST PROCEDURES

SHUT-DOWN

19-“SOURCE” selector **OFF**

CAUTION
**IN CASE OF HIGH OAT [ABOVE 35° C (95° F)], IT IS
REQUIRED TO PERFORM 30 SECONDS DRY
MOTORING RUN AFTER SHUT-DOWN TO IMPROVE
COOLING OF THE BEARING CAVITIES AND MINIMIZE
OIL COKING (REFER TO PARAGRAPH “MOTORING”)**

- ESI-2000 - NORMAL PROCEDURE

No pilot action required for normal shutdown. The ESI-2000 will shut down within 5 minutes.

- ESI-2000 - MANUAL PROCEDURE

The ESI-2000 can be manually shut down when in the discharge mode to conserve battery power :

- . Remove all aircraft power from the ESI
- . Press any key (button) as stated by the on screen message
- . Press the M (Menu) button repeatedly until shutdown menu is shown.
- . Press and hold the + (Hold) button until “SHUTTING DN” message is shown in the upper left corner of the screen.

4.4 - AMPLIFIED PROCEDURES

PREFLIGHT INSPECTION (Cont'd)

A - INSIDE INSPECTIONS

Cockpit (I)40 - ESI-2000 battery indicator symbol **NOT DISPLAYED**

AMPLIFIED PROCEDURES

BEFORE STARTING ENGINE

26 - Vacuum system **WARNING LIGHT** **VACUUM LO** **ON**

If not recycle power by setting the "RADIO MASTER" switch "OFF" then "ON". If "VACUUM LO" warning light is still not ON, then do not take off and check vacuum system.

27 - Fuel
- Gages **CHECKED**
- Tank selector **L or R - CHECKED**
- "FUEL SEL" switch **AUTO**

WARNING LIGHT **AUTO SEL** **OFF**

- "SHIFT" push-button **PRESS**
The selector changes tank
On ground, observe a tank change
every minute and 15 seconds

28 - Fuel flowmeter totalizer **CHECKED - ADJUSTED**
Total fuel quantity on board may be set on flowmeter totalizer - see Section 7 or refer to manufacturer technical data.

29 - Engine instruments **CHECK**

30 - ITT TEST **CARRY OUT**
Check 1888 number appearance in digital readout window, as well as ITT red warning light illumination on advisory panel.

31 - EXT LIGHTS panel
- "STROBE" **AS REQUIRED**
The use of strobe lights may generate discomfort to personnel on ground, particularly by night.

32 - In case of night flight
- INT LIGHTS panel : "INSTR" + "PANEL" **ADJUSTED**
- Navigation lights **ON**
- Flashlight (if necessary) **IN PLACE**

AMPLIFIED PROCEDURES

AFTER STARTING ENGINE

- 1 - GYRO INST panel
 - All switches **ON**
- Pull on the caging knobs when starting the ADI(s).

Pre-MOD70-0491-34

- 2 - Gyroscopic suction gage indicator **GREEN SECTOR**

WARNING LIGHT	VACUUM LO	OFF
---------------	-----------	-----

Post-MOD70-0491-34

WARNING LIGHT	VACUUM LO	OFF
---------------	-----------	-----

All

AMPLIFIED PROCEDURES

SHUT-DOWN

19-“SOURCE” selector **OFF**

<p>CAUTION</p> <p>IN CASE OF HIGH OAT [ABOVE 35° C (95° F)], IT IS REQUIRED TO PERFORM 30 SECONDS DRY MOTORING RUN AFTER SHUT-DOWN TO IMPROVE COOLING OF THE BEARING CAVITIES AND MINIMIZE OIL COKING (REFER TO PARAGRAPH “MOTORING”)</p>

- ESI-2000 - NORMAL PROCEDURE

No pilot action required for normal shutdown. The ESI-2000 will shut down within 5 minutes.

- ESI-2000 - MANUAL PROCEDURE

The ESI-2000 can be manually shut down when in the discharge mode to conserve battery power :

- . Remove all aircraft power from the ESI
- . Press any key (button) as stated by the on screen message
- . Press the M (Menu) button repeatedly until shutdown menu is shown.
- . Press and hold the + (Hold) button until “SHUTTING DN” message is shown in the upper left corner of the screen.

SECTION 5
PERFORMANCE

Operation of “ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600” does not change the performance of the airplane described in Section 5 “Performance” of the basic Pilot’s Operating Handbook.

ELECTRONIC STANDBY INDICATOR ESI-2000
 INSTALLATION FOR G600

SECTION 6
WEIGHT AND BALANCE

Information hereafter supplement or replace those of the standard airplane described in Section 6 "Weight and Balance" of the basic Pilot's Operating Handbook when the airplane is equipped with "ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600".

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		34 - NAVIGATION		
		34-11 - Air data systems		
R		Electronic Standby Indicator	2.75 (1.250)	154.29 (3.919)
		34-24 - ADI and standby horizon		
R		Electronic Standby Indicator	2.75 (1.250)	154.29 (3.919)

SECTION 7
DESCRIPTION

Information hereafter supplement or replace those of the standard airplane described in Section 7 "Description" of the basic Pilot's Operating Handbook when the airplane is equipped with the "ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600".

7.3 - ACCOMODATIONS

Left instrument panel (Figure 7.3.3) includes :

- Electronic Standby Indicator (ESI-2000).

- 1) Barometric pressure window
- 2) Altimeter digital readout
- 3) Slip/skid indicator
- 4) Airspeed readout
- 5) Horizon
- 6) Battery indicator

Figure 7.3.3 (1/2) - LEFT INSTRUMENT PANEL



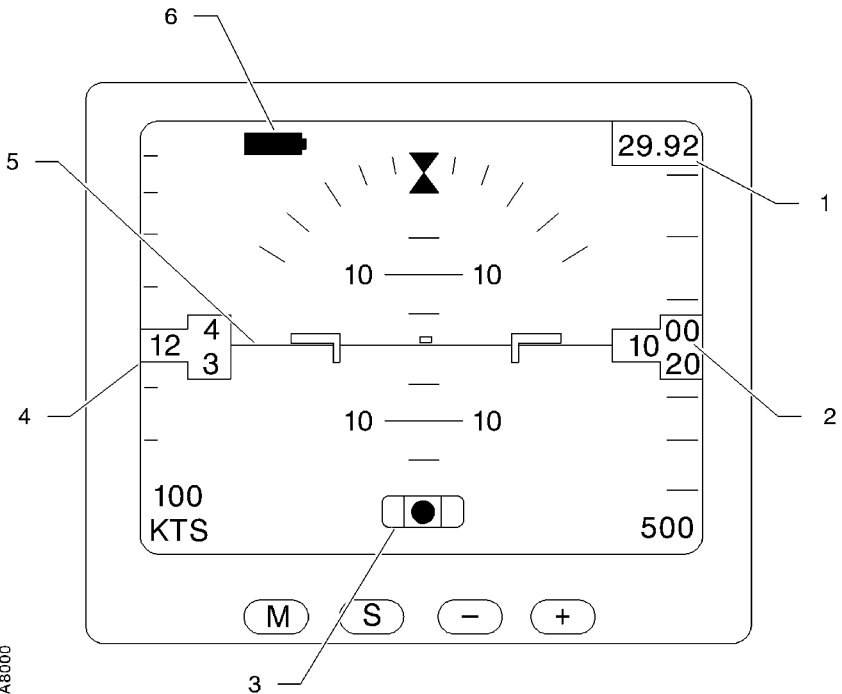



Figure 7.3.3 (2/2) - LEFT INSTRUMENT PANEL

7.8 - ELECTRICAL SYSTEM

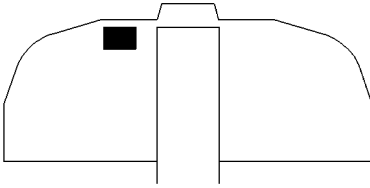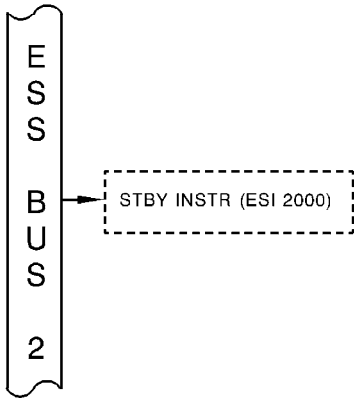

14246000AA1MMA8000

Figure 7.8.2 (2/2) - PARTIAL ELECTRICAL DISTRIBUTION OF BUS BARS

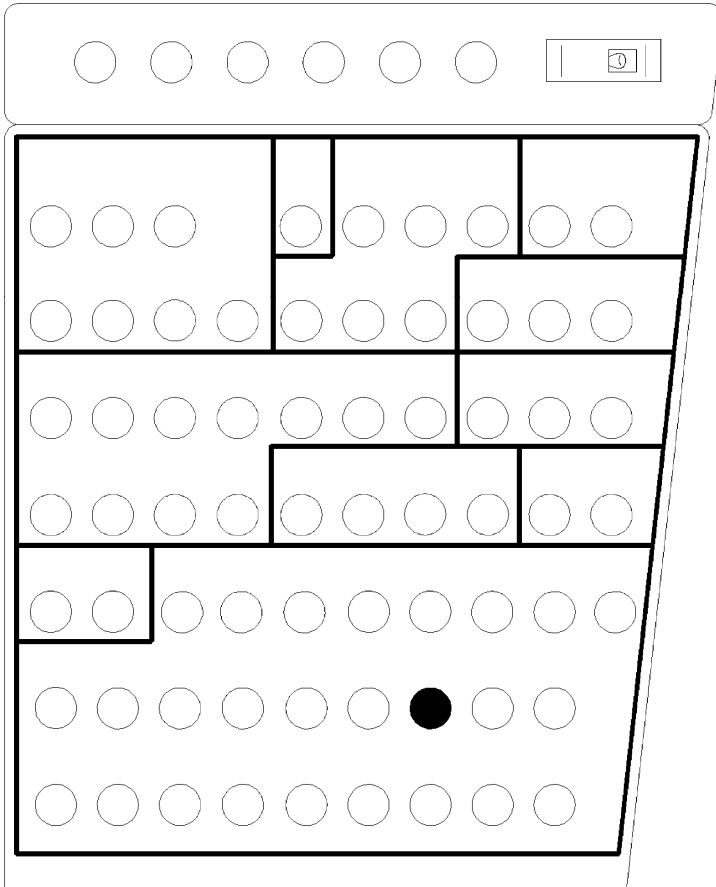

14255004AAAQMA8000

STBY ATT Electronic Standby Indicator (ESI-2000) protection

Figure 7.8.3 - PARTIAL CIRCUIT BREAKER PANEL
(Typical arrangement)

7.11 - AIR DATA SYSTEM AND INSTRUMENTS

Airplane air data system consists of :

- two separate static pressure systems supplying the Electronic Standby Indicator (ESI-2000). They also provide a static pressure reference to the ΔP cabin and to the Autopilot system Air Data Computer (ADC).
- two separate dynamic pressure systems equipped with two heated pitot probes installed under the L.H. wing. The first one supplies the Electronic Standby Indicator (ESI-2000) and the Autopilot system Air Data Computer (ADC), the second one supplies V_{MO} audio warning detector and optional equipment.

- 1) Pitot 1
- 2) Pitot 1 dynamic drain
- 3) Electronic Standby Indicator (ESI-2000)
- 4) FWD pressure bulkhead
- 5) Static drain
- 6) Emergency static drain
- 7) Static source (Normal / Alternate)
- 8) Rear pressure bulkhead
- 9) R.H. static ports
- 10) Emergency bleed on frame C19
- 11) L.H. static ports
- 12) Instrument panel

Figure 7.11.1 (1/2) - AIR DATA SYSTEM

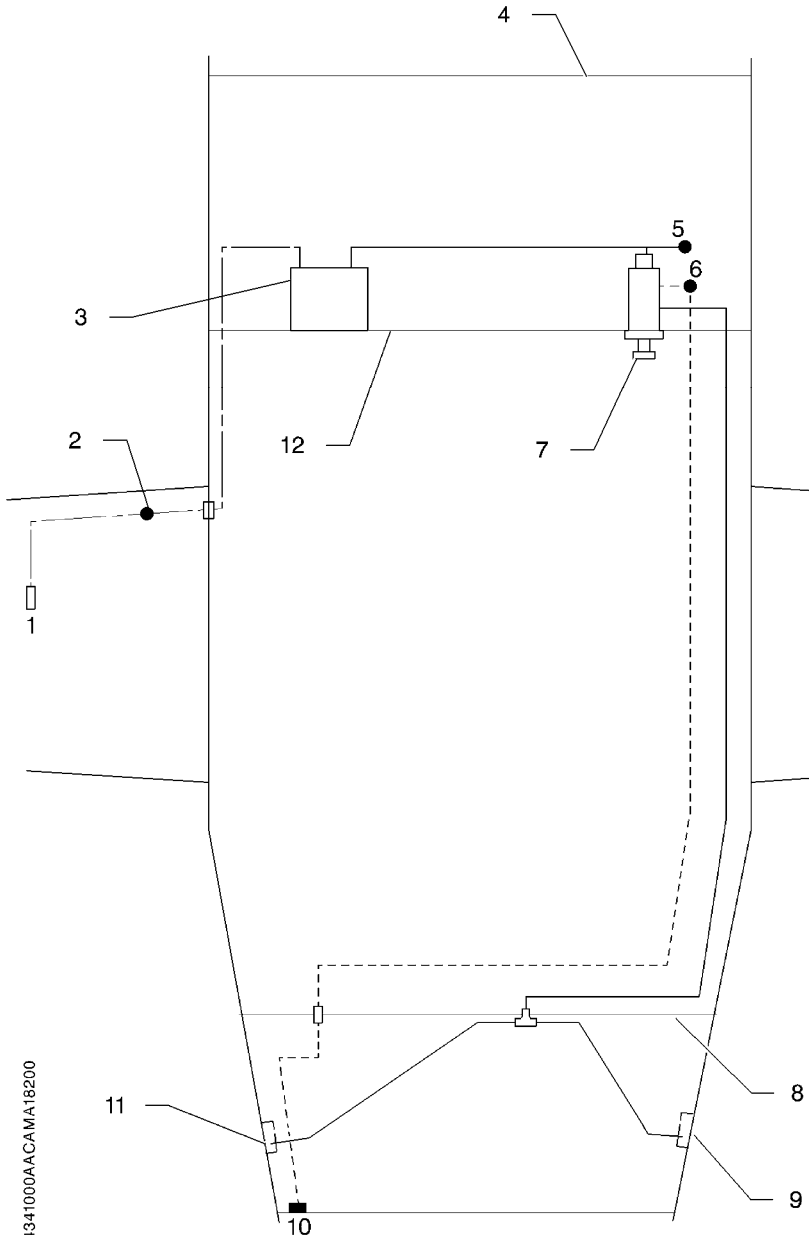


Figure 7.11.1 (2/2) - AIR DATA SYSTEM

7.12 - VACUUM SYSTEM AND INSTRUMENTS (Figure 7.12.1)

The airplane is fitted with a vacuum system providing the suction necessary to operate the cabin pressurization and the leading edge deicing.

Vacuum system includes :

- A pressure regulator
- An ejector
- A regulating and relief valve
- A signalization microswitch

Compressed air necessary for the ejector to create decompressed air is taken from the powerplant. The air flow is regulated before going into the ejector which creates necessary vacuum by venturi effect.

A relief valve fixed in cabin to frame C2, maintains the vacuum for pressurization and instrument systems. In case of pressure drop, a microswitch, installed in the system, indicates the failure by illuminating "VACUUM LO" warning light on the advisory panel.

ELECTRONIC STANDBY INDICATOR (ESI-2000)

The L-3 Communications Avionics Systems ESI-2000 Electronic Standby Instrument System consists of an AMLCD display. An air data sensor is integral to the ESI-2000 housing. A replaceable battery assembly provides back up power. The Electronic Standby Indicator displays attitude (pitch and roll), along with altitude and airspeed. The ESI-2000 is powered from the "ESSENTIAL BUS 2", or internal battery ensuring that the aircraft can continue safe flight and landing in the event of a loss of primary attitude and air data displays. Pitot and static pressures are provided to the ESI-2000 using the aircraft's pitot probe and static sources.

- 1) Pressure regulator
- 2) Ejector
- 3) Valve
- 4) Regulating and relief valve
- 5) Pressure switch
- 6) Failure warning light

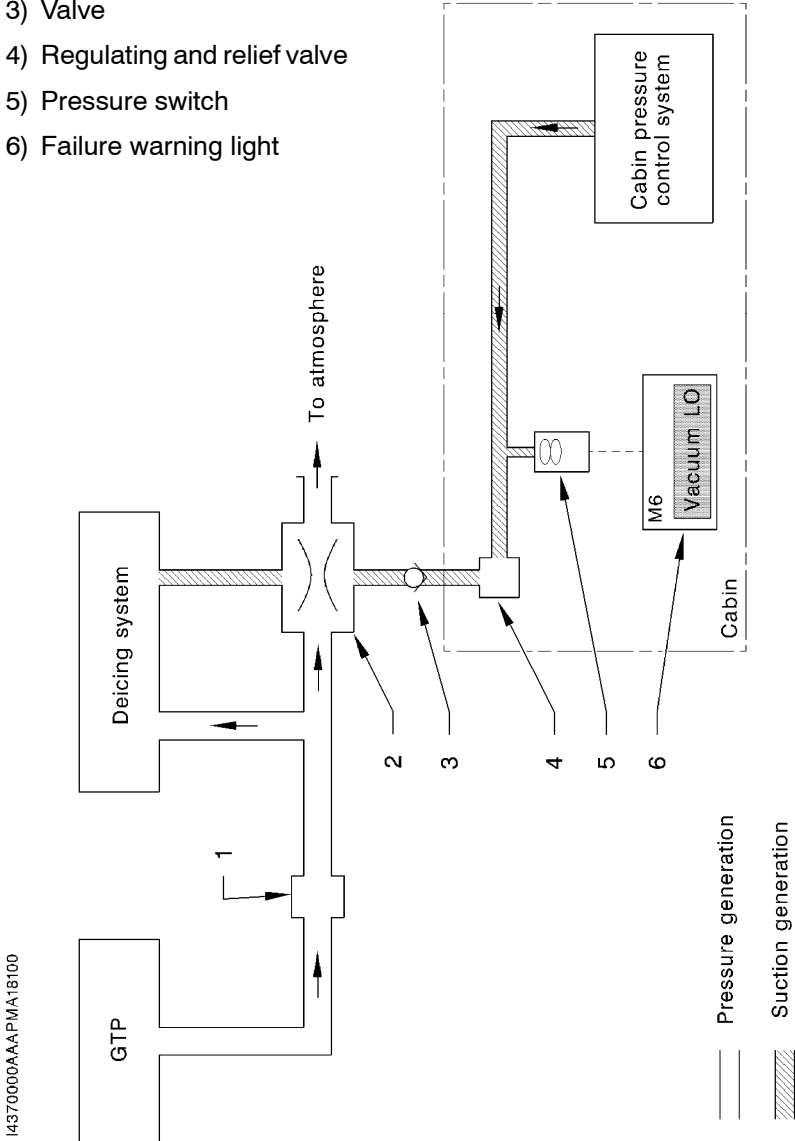


Figure 7.12.1 - VACUUM SYSTEM

SUCTION GAGE

[Pre-MOD70-0491-34 (ESI-2000 Installation for G600)]

The suction gage is calibrated in inches of mercury and indicates the suction available for operation of the attitude indicator. The desired vacuum range is 4.4 to 5.2 in.Hg.

A vacuum reading out of this range may indicate a system malfunction or improper adjustment. In this case, all pneumatic instruments should be considered unreliable.

The suction gage is located on L.H. panel of pilot's instrument panel.

SECTION 8**HANDLING, SERVICING AND MAINTENANCE**

Operation of “ELECTRONIC STANDBY INDICATOR ESI-2000 INSTALLATION FOR G600” does not change the handling, servicing and maintenance of the airplane described in Section 8 “Handling, Servicing and Maintenance” of the basic Pilot’s Operating Handbook.

INTENTIONALLY LEFT BLANK

SUPPLEMENT
ICARUS Aural Warning Box
Table of contents

	Page
1 - General	9.70.2
2 - Limitations	9.70.2
3 - Emergency procedures	9.70.2
4 - Normal procedures	9.70.3
5 - Performance	9.70.3
6 - Weight and balance	9.70.4
7 - Description	9.70.4
8 - Handling, servicing and maintenance	9.70.8

SECTION 1

General

This supplement is intended to inform the pilot about the procedures and description necessary for operation when the airplane is equipped with the ICARUS Aural Warning Box.

SECTION 2

Limitations

The ICARUS Aural Warning Box does not change the limitations of the airplane described in Section 2: Limitations of the standard POH.

SECTION 3

Emergency procedures

The ICARUS Aural Warning Box does not change the emergency procedures of the airplane described in Section 3: Emergency procedures of the standard POH.

SECTION 4

Normal procedures

The information in this section supplements and/or replaces the information in Section 4: Normal procedures of the standard POH when the airplane is equipped with the ICARUS Aural Warning Box.

4.3 - Check-list Procedures

PREFLIGHT INSPECTION

(See Figure 4.3.1 of the standard POH)

During the preflight inspection, from outside the airplane, check correct operation of all lights and the stall warning alert.

4.4 - Amplified Procedures

PREFLIGHT INSPECTION

During the preflight inspection, from outside the airplane, check correct operation of all lights and the stall warning alert.

SECTION 5

Performance

The ICARUS Aural Warning Box does not change the performance of the airplane described in Section 5: Performance of the standard POH.

SECTION 6

Weight and balance

The information in this section supplements and/or replaces the information in Section 6: Weight and Balance of the standard POH when the airplane is equipped with ICARUS Aural Warning Box.

S/ R/ A/ O	Item OPT70 or MOD70	Required (R) or Standard (S) or Optional (A or O) equipment	Weight per unit lb (kg)	Arm in. (m)
		31 - Indicating / Recording systems		
		31-50 - Aural warning		
O	0653-31	ICARUS Aural Warning Box	Δ Neglig.	/

SECTION 7

Description

The information in this section supplements and/or replaces the information in Section 7: Description of the standard POH when the airplane is equipped with the ICARUS Aural Warning Box.

7.3 - Accomodation

Instrument Panel

Aural Warnings

The aural warnings are intended to alert the pilot in certain airplane configurations.

The aural warnings are played through the loudspeakers and through the buzzer located on the right-side instrument panel for the KRA 405 radar altimeter (if installed).

Aural warnings are also played in the headsets.

>> *Airplanes equipped with MOD70-0276-00*

Aural warning system is also used to play the other Garmin system alerts. Please refer to Garmin Pilot's Guide for further information.

Pilot's Operating Handbook

>> All

Aural Warning Box

The aural warning box consists of logic circuitry, which creates the voice alerts heard in the loudspeaker and through the headsets.

According to the airplane configuration, different aural warnings will be played:

- Gear up and power lever in the IDLE position → "Landing gear / Landing gear"
- Gear up and extended flaps → "Landing gear / Landing gear"
- Stall → "Stall / Stall"
- Gear up, power lever in the IDLE position and stall → "Stall / Landing gear" / "Stall / Landing gear"
- Gear up, extended flaps and stall → "Stall / Landing gear" / "Stall / Landing gear"
- IAS > 266 KIAS → "Overspeed / Overspeed"
- Cabin altitude > 11,000 ft → "Use oxygen mask / Use oxygen mask" 3 times

The aural warning box is mounted under the cabin floor, on the left side, between Frames C5 and C6.

Electrical protection

>> *Airplanes not equipped with MOD70-0276-00*

The aural warning box is electrically supplied by the "ESS BUS 1" bar and protected by the "AUDIO WARN" circuit breaker.

The alarm loudspeaker is electrically supplied by the aural warning box.

The altitude preselection indicating buzzer is powered by the "BUS 3" bar and protected by the "AP / ALT SEL" circuit breaker.

The autopilot disconnection indicating buzzer is electrically supplied by the "BUS 3" bar and protected by the "AP / ALERT" circuit breaker.

>> *Airplanes equipped with MOD70-0276-00*

The aural warning box is electrically supplied by the "ESS BUS 2" bar and protected by the "AUDIO WARN" circuit breaker.

The alarm loudspeaker is electrically supplied by the aural warning box.

>> All

The emergency lighting rheostat is electrically supplied by the "BUS BAT" bar and protected by the "PANEL EMER" circuit breaker.

Upper Panel

The overhead panel includes the following elements:

- the alarm loudspeaker,
- the V_{MO} buzzer (inhibited),
- the altitude preselection indicating buzzer,
- the autopilot disconnection indicating buzzer,
- the "HORN TEST" knob,
- the emergency lighting rheostat.

It is attached to the cabin upper part between Frames C6 and C7.

Aural Warning Operation

The voice alert loudspeaker receives signals from the aural warning box.

Buzzers receive their signal directly from the concerned circuit.

>> *Airplanes not equipped with MOD70-0276-00*

All warning signals go through the amplifier before being played in headsets and in the loudspeaker.

>> All

The "HORN TEST" knob enables a validation of the aural warning correct operation. To test the correct operation, proceed as follows:

- Set the "SOURCE" selector to "BAT" or to "GPU".

>> *Airplanes equipped with MOD70-0276-00*

- Set the "AVIONICS MASTER" switch to "ON".

>> All

- Press and hold the "HORN TEST" knob: the loudspeakers plays "*Stall/Landing gear*" voice alert which is also played through the headsets.
- Release the knob to stop the aural warning.

● NOTE ●

The test is effective for headsets when the "AP / TRIMS MASTER" switch is set to "ON".

●

7.5 – Landing Gear

Safety

Landing Gear Voice Alert

The "*Landing gear / Landing gear*" voice alert will be played when:

- power lever is in the IDLE position and landing gear is not down-locked,
- flaps are beyond "TO" position and landing gear is not down-locked.

● NOTE ●

If one of the above conditions exists and the airplane is in stall configuration, the "*Stall / Landing gear*" voice alert will be played.

●

7.10 – Emergency Oxygen System

The "*Use oxygen mask*" voice alert will be played when cabin altitude is higher than 11,000 ft.

7.15 – Miscellaneous Equipment

Stall Warning System

The airplane is equipped with an electrically-deiced stall sensor in the right wing's leading edge. This sensor is fitted with a vane that is electrically connected to an audible warning. The vane senses the change in airflow over the wing and operates the warning unit, which produces a voice alert over the loudspeaker. This alert begins between 5 and 10 knots above the stall in all configurations.

The stall warning system should be checked during the preflight inspection by momentarily turning on the "SOURCE" selector and by manipulating the vane in the wing. The system is operational if a "Stall" voice alert is played on the loudspeaker.

● NOTE ●

The audible stall warning may not work properly in case of severe or prolonged icing.

●

SECTION 8

Handling, servicing and maintenance

The ICARUS Aural Warning Box does not change the handling, servicing and maintenance of the airplane described in Section 8: Handling, servicing and maintenance of the standard POH.



TBM 850

LIST OF EQUIPMENT

Report NAV No. 34/90 – RJ – App1

From S/N 346 to S/N 433, except S/N 269

The content of this document is the property of SOCATA. It is supplied in confidence and commercial security of its contents must be maintained.
It must not be used for any purpose other than that for which it is supplied, nor may information contained in it be disclosed to unauthorized persons. It must not be reproduced nor transmitted in any form in whole or in part without permission in writing from the owners of the Copyright.
Information in this document is subject to change without notice.

© 2005 thru 2013 - SOCATA - All rights reserved

SOCATA

DIRECTION DES SERVICES
65921 TARBES CEDEX 9
FRANCE

TELEPHONE : 33 (0)5.62.41.73.00
TELEFAX : 33 (0)5.62.41.76.54

Printed in France

TABLE OF CONTENTS

	Page
ATA 01 - Specific optional equipment	3
ATA 21 - Environmental system	4
ATA 22 - Auto flight	6
ATA 23 - Communications	7
ATA 24 - Electrical power	10
ATA 25 - Equipment and furnishings	11
ATA 26 - Fire protection	14
ATA 27 - Flight controls	15
ATA 28 - Fuel system	16
ATA 30 - Ice and rain protection	17
ATA 31 - Indicating / recording systems	19
ATA 32 - Landing gears	20
ATA 33 - Lights	22
ATA 34 - Navigation	23
ATA 35 - Oxygen	32
ATA 37 - Vacuum	33
ATA 52 - Doors	34
ATA 61 - Propeller	35
ATA 71 - Powerplant	36
ATA 77 - Engine indicating	37
ATA 79 - Lubrication	38

The following list contains standard equipment installed on each airplane and available optional equipment.

A separate list of equipment of items installed at the factory in your specific airplane is provided in your airplane file.

Columns showing weight (in pounds) and arm (in inches) provide the weight and center of gravity location for the equipment.

In the list of Required, Standard or Optional equipment (not restrictive), a letter "R", "S", "O" or "A" allows classifying the equipment :

"R" : equipment items required for certification

"S" : standard equipment items

"A" : optional equipment items which are in addition to required or standard items

"O" : optional equipment items replacing required or standard items

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
01 - SPECIFIC OPTIONAL EQUIPMENT				
S	01019A	DME KN63 shield case	0.33 (0.150)	231.50 (5.880)
S		Flight ceiling at 31000 ft	/	/

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
01 - SPECIFIC OPTIONAL EQUIPMENT				
S	01019A	DME KN63 shield case	0.33 (0.150)	231.50 (5.880)
S		Flight ceiling at 31000 ft	/	/
S	01004	Brazil certification markings	/	/

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		21 - ENVIRONMENTAL SYSTEM		
		21-20 - Distribution		
S		Cabin fan 11-93364	7.72 (3.500)	292.72 (7.435)
		21-30 - Pressurization control		
S		Cabin altitude differential pressure and rate of climb indicator 3300-J51 CODE J.51	0.94 (0.425)	157.48 (4.000)
S		Cabin altitude warn switch 214 C40.3.261	0.08 (0.035)	153.94 (3.910)
S		Cabin pressurization dump solenoid valve 5112-1	0.44 (0.200)	181.10 (4.600)
S		Cabin ΔP warn switch 17-600-1 or 17-600-01	0.14 (0.065)	139.76 (3.550)
S		Check valve 985C-63-3	0.20 (0.090)	118.11 (3.000)
S		Outflow valve controller 130618-1	1.65 (0.750)	157.48 (4.000)
S		Outflow valve 103760-1	1.54 (0.700)	317.32 (8.060)
S		Safety valve 103760-2	1.54 (0.700)	317.32 (8.060)
		21-50 - Temperature conditioning system		
S		Pressure regulating and shut-off valve 4429B000-001	1.82 (0.830)	116.14 (2.950)
S		Non-return valve 6066C010	0.11 (0.053)	112.12 (2.848)
S		Shut-off valve 3109A000-001	1.65 (0.750)	114.09 (2.898)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
S		Bleed pressure selection switch 6066C020	0.19 (0.086)	87.87 (2.232)
S		Remote datum 6158C000-001	0.99 (0.45)	115.94 (2.945)
S		Overpressure switch 6085C000-001	0.19 (0.086)	104.99 (2.667)
S		Overtemperature switch 6083C000-001	0.14 (0.065)	115.51 (2.934)
S		Heat exchanger/cooling turbine pack6053C000-003	18.96 (8.600)	109.84 (2.790)
S		Water separator 6055C000-002	2.05 (0.930)	97.80 (2.484)
S		Duct overtemperature switch 6084C000-001	0.14 (0.065)	129.37 (3.286)
21-55 - Vapor cycle cooling system				
S		Compressor/condenser pack 11-92364	55.12 (25.000)	125.39 (3.185)
S		Evaporator 11-91364	11.02 (5.000)	309.45 (7.860)
21-60 - Temperature regulation				
S		Temperature control valve 6094C000-001	2.50 (1.134)	113.15 (2.874)
S		Controller 6054C000-001	2.43 (1.100)	133.31 (3.386)
S		Duct temperature sensor 6080C000-001	0.11 (0.048)	130.87 (3.324)
S		Cabin temperature sensor 6080C000-001	0.11 (0.048)	303.54 (7.710)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		22 - AUTO FLIGHT		
		<i>NOTE :</i> <i>KFC 325 autopilot is included in EFIS equipment</i> <i>(ATA 34)</i>		
S		AFC air data computer KDC 222	0.970 (0.440)	167.32 (4.250)
S		AFC computer KCP 220	3.086 (1.400)	171.26 (4.350)
S		AFC mode selector KMC 321	0.882 (0.400)	155.51 (3.950)
S		Altitude and vertical speed preselector KAS 297C	1.124 (0.510)	155.51 (3.950)
S		Amplifier separator KA21	1.279 (0.580)	194.88 (4.950)
S		Audio alerter KAA 15	0.750 (0.340)	171.26 (4.350)
S		Pitch servo KS 270A	2.601 (1.180)	247.44 (6.285)
S		Pitch trim servo KS 272A	2.403 (1.090)	157.48 (4.000)
S		Roll servo KS 271A	2.403 (1.090)	227.76 (5.785)
S		Yaw servo KS 271A	2.403 (1.090)	253.74 (6.445)
S		Yaw rate gyro KRG 331	0.750 (0.340)	171.26 (4.350)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
23 - COMMUNICATIONS				
S		Antenna (under fuselage) 16-21B-P3	1.04 (0.470)	272.28 (6.916) or 280.31 (7.120)
S		Cockpit loud-speaker AB 100 SC	0.77 (0.350)	181.10 (4.600)
S		Static dischargers Type 2-16SC-1	Neglig.	/
S		Warning loud-speaker AD 2071/Z8	0.11 (0.050)	181.10 (4.600)
A	23009A	Additional equipment for electrostatic dischargers	Neglig.	/
S	23011F	Radio stereo-headset Serie X	/	/
O	23011G	Radio stereo-headset HMEC 25-6A	/	/
A	23012B	Audio-Marker (with EFIS equipment) PMA 7000-MS	1.43 (0.650)	151.57 (3.850)
A	23017C	Transceiver COM1-NAV#1 with EFIS KX 165A	3.99 (1.810)	153.54 (3.900)
A	23022C	Transceiver COM1-NAV#2 with EFIS KX 165A	3.99 (1.810)	153.54 (3.900)
S	23023A	Audio-Marker with EFIS GMA340	1.46 (0.660)	153.54 (3.900)
S	23024B	COM/NAV/GPS # 1 system with EFIS : (antenna rearward of frame 7)		
		. Transceiver GNS530	8.49 (3.850)	151.57 (3.850)
		. VHF antenna (under fuselage) 16-21B-P3	0.86 (0.390)	271.65 (6.900)
		. GPS antenna GA 56	0.46 (0.210)	204.84 (5.203)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
O	23024C	COM/NAV/GPS # 1 system with EFIS : (antenna rearward of frame 7)		
		. Transceiver GNS530	8.49 (3.850)	151.57 (3.850)
		. VHF antenna (under fuselage) 16-21B-P3	0.86 (0.390)	271.65 (6.900)
		. GPS antenna GA 56A	0.46 (0.210)	204.84 (5.203)
A	23025B	COM/NAV/GPS # 2 system with EFIS : (antenna on R.H. side of aircraft centerline)		
		. Transceiver GNS530	8.49 (3.850)	151.57 (3.850)
		. VHF antenna (upper fuselage) 16-21B-P3	0.86 (0.390)	271.65 (6.900)
		. GPS antenna GA 56	0.46 (0.210)	204.84 (5.203)
		. CDI GI 106A	1.46 (0.660)	155.51 (3.950)
A	23025C	COM/NAV/GPS # 2 system with EFIS : (antenna on R.H. side of aircraft centerline)		
		. Transceiver GNS530	8.49 (3.850)	151.57 (3.850)
		. VHF antenna (upper fuselage) 16-21B-P3	0.86 (0.390)	271.65 (6.900)
		. GPS antenna GA 57	0.46 (0.210)	204.84 (5.203)
		. CDI GI 106A	1.46 (0.660)	155.51 (3.950)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
A	23025E	COM/NAV/GPS # 2 system with EFIS : (antenna on R.H. side of aircraft centerline)		
		. Transceiver GNS530	8.49 (3.850)	151.57 (3.850)
		. VHF antenna (upper fuselage) 16-21B-P3	0.86 (0.390)	271.65 (6.900)
		. GPS antenna GA 56A	0.46 (0.210)	204.84 (5.203)
		. CDI GI 106A	1.46 (0.660)	155.51 (3.950)
A	23026	VHF Data Link KDR510		
		. Version A (antenna under wing)	2.45 (1.113)	191.69 (4.869)
		. Version B (antenna under fuselage) (U.S. only)	2.61 (1.188)	188.19 (4.780)
A	0214-23	Receiver GDL 69A Coupled with MFD GMX 200 and Audio Marker GMA 340	2.80 (1.270)	204.72 (5.200)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		24 - ELECTRICAL POWER		
		24-30 - DC generation		
R		Ammeter AM99-05	0.31 (0.140)	175.20 (4.450)
R		Electric power center 160GC02Y05	11.02 (5.000)	127.95 (3.250)
R		Stand-by generator T700A243008000601	12.13 (5.500)	102.36 (2.600)
R		Starter generator 8012F	24.47 (11.100)	110.24 (2.800)
R		Voltmeter VT99-04	0.22 (0.100)	175.20 (4.450)
O	24001A	Battery 4076-1	83.33 (37.800)	112.00 (2.845)
S	24002	Lead-Acid battery RG-380E/44	85.98 (39.000)	112.20 (2.850)
		24-40 - External power supply		
S		Ground power receptacle MS 3506-1	0.79 (0.360)	114.17 (2.900)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
25 - EQUIPMENT AND FURNISHINGS				
S		Map holder	0.46 (0.210)	167.72 (4.260)
S	25026B	Partition net between the cabin and the baggage compartment	3.64 (1.650)	(289.53 (7.354)
A	25004D	Leather upholstery - version D	6.61 (3.000)	212.60 (5.400)
A	25005D	JEPPESEN cabinet	16.09 (7.300)	203.74 (5.175)
A	25006G	Storage box (wood and leather)	17.64 (8.000)	205.79 (5.227)
A	25006H	Refreshment cabinet (wood and leather)	20.28 (9.200)	205.79 (5.227)
A	25009G	BECKER audio cabinet	26.23 (11.900)	225.43 (5.726)
A	171-25	Cabinets - From S/N 328		
		- Vers. A : L.H. low cabinet	9.48 (4.300)	203.74 (5.175)
		- Vers. B : R.H. low cabinet	9.48 (4.300)	203.74 (5.175)
		- Vers. C : Removable (low) insulated picnic bag	9.48 (4.300)	203.74 (5.175)
		- Vers. D : L.H. top storage cabinet	7.72 (3.500)	203.74 (5.175)
		- Vers. E : R.H. top storage cabinet	7.72 (3.500)	203.74 (5.175)
		- Vers. F : R.H. top storage cabinet + audio	7.94 (3.600)	203.74 (5.175)
		- Vers. G : L.H. top baggage cabinet	3.09 (1.400)	203.74 (5.175)
		- Vers. H : R.H. top baggage cabinet	3.09 (1.400)	203.74 (5.175)
A	25024C	Carpet protecting mat	4.19 (1.900)	246.10 (6.250)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
A	25025C	Cabin furnishings "Black chromé"	1.98 (0.900)	314.64 (7.992)
A	25025D	Cabin furnishings "Doré"	1.98 (0.900)	314.64 (7.992)
A	25032	Front seats ease covers	2.76 (1.250)	183.78 (4.668)
A	0151-25	CD reader PCD 7100	2.20 (1.00)	205.04 (5.208)
A	174-25	Optional 12 V plugs	3.31 (1.500)	195.28 (4.960)
A	246-25B	Potty seat (Chemical toilets cabinet) and its associated curtain	54.23 (24.600)	219.96 (5.587)
Leather seats - Belts				
S		. Pilot's seat T700C2500002000	55.12 (25.00)	183.90 (4.671)
S		. Front R.H. seat T700C2500002001	55.12 (25.00)	183.90 (4.671)
S		. L.H. Intermediate seat (back to flight direction) T700C2500003002	35.27 (16.00)	220.94 (5.612)
		. R.H. Intermediate seat (back to flight direction) T700C2500003003	35.27 (16.00)	220.94 (5.612)
S		. Double chair		
		. L.H. seat T700C2500005002	52.91 (24.00)	278.19 (7.066)
		. R.H. seat T700C2500005003	52.91 (24.00)	278.19 (7.066)
S		Reels	1.79 (0.810)	192.91 or 287.40 (4.900 or 7.300)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
25-61 - Emergency locator transmitter				
S	0153-25A	Emergency beacon KANNAD 406AF (installed in tail area) (with support)	2.45 (1.110)	347.09 (8.816)
		. ELT/NAV interface box CS144A	1.81 (0.823)	347.09 (8.816)
		. Antenna 21-41	0.31 (0.140)	339.37 (8.620)
O	0153-25C	Emergency beacon KANNAD 406AF (installed in tail area) (with support)	2.45 (1.110)	347.09 (8.816)
		. ELT/NAV interface box CS144A	1.81 (0.823)	347.09 (8.816)
		. Antenna 1327-82	0.33 (0.150)	339.37 (8.620)
S	25030A	Three-frequency emergency locator transmitter C406-1 (with base) (Nav interface and GPS coupled), of which :	7.63 (3.459)	350.39 (8.900)
		. ELT C406-1	3.36 (1.525)	354.72 (9.010)
		. ELT/NAV interface box 453-6500	2.69 (1.220)	353.15 (8.970)
		. Antenna 21-41	0.31 (0.140)	318.70 (8.095)
O	25030B	Three-frequency emergency locator transmitter C406-1 (with base and reinforcement) (Nav interface and GPS coupled), of which :	7.63 (3.459)	350.39 (8.900)
		. ELT C406-1	3.36 (1.525)	354.72 (9.010)
		. ELT/NAV interface box 453-6500	2.69 (1.220)	353.15 (8.970)
		. Antenna 21-41	0.31 (0.140)	318.70 (8.095)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
S	0208-25A	Emergency Locator Transmitter (installed in tail area) ME-406	4.10 (1.86)	336.46 (8.546)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		26 - FIRE PROTECTION		
S	26001B	Portable fire extinguisher unit 863520-00	3.64 (1.650)	194.17 (4.932)
A	26002B	Engine fire detection system	1.45 (0.660)	96.06 (2.440)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		27 - FLIGHT CONTROLS		
		27-10 - Roll control		
R		Roll trim actuator 145700.02	1.54 (0.700)	212.60 (5.400)
		27-20 - Yaw control		
R		Rudder trim actuator 145700.02	1.54 (0.700)	395.27 (10.040)
R		Trim and flap indicator 4724	1.10 (0.500)	159.45 (4.050)
S		AFC and electric trim control on R.H. control wheel	0.88 (0.400)	157.48 (4.000)
		27-30 - Pitch control		
S		Pitch trim actuator 145400-02	1.21 (0.550)	425.20 (10.800)
		27-50 - Wing flaps (control)		
R		Flap control including :	15.52 (7.040)	218.50 (5.550)
		. Flap motor 6157-1	2.87 (1.300)	216.54 (5.500)
		. Flap actuator 1-5295/2-5295	1.92 (0.870)	216.54 (5.500)
		or 1-5297/2-5297	1.83 (0.830)	220.47 (5.600)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		28 - FUEL SYSTEM		
		28-20 - Fuel supply		
R		Electric boost pump 2022-B	3.48 (1.580)	129.92 (3.300)
R		Electric boost pump 1B9-5	4.41 (2.000)	129.92 (3.300)
R		Engine driven fuel pump 1127-01A	1.54 (0.700)	110.24 (2.800)
R		Engine driven fuel pump 1127-02A	1.54 (0.700)	110.24 (2.800)
R		Fuel sequencer unit	1.10 (0.500)	125.98 (3.200)
R		Fuel unit L88A15-651	4.59 (2.080)	133.07 (3.380)
		28-40 - Fuel indication		
R		Amplifier indicator (in us gal) 748-859-2	1.48 (0.670)	157.48 (4.000)
R		Fuel pressure indicator PC99-06	0.31 (0.140)	157.48 (4.000)
R		Inboard L.H. probe 768-403 or 762 438.1.0	0.33 (0.150)	183.07 (4.650)
R		Inboard R.H. probe 768-404 or 762 439.1.0	0.33 (0.150)	183.07 (4.650)
R		Intermediate probe 766-976-1 or 762 440.1.0	0.22 (0.100)	190.94 (4.850)
R		Low level probe 722-447	0.11 (0.050)	183.07 (4.650)
R		Outboard probe 766-977-1 or 762 441.1.0	0.22 (0.100)	190.94 (4.850)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
30 - ICE AND RAIN PROTECTION				
S		Deicer, L.H. horizontal stabilizer T700A3013003000	4.19 (1.900)	398.42 (10.120)
S		Deicer, R.H. horizontal stabilizer T700A3013003001	4.19 (1.900)	398.42 (10.120)
S		Deicer, vertical stabilizer T700A3014003000	3.97 (1.800)	374.02 (9.500)
S		Deicer, inboard L.H. wing T700A3010001002	5.73 (2.600)	173.23 (4.400)
S		Deicer, inboard R.H. wing T700A3010001003	5.73 (2.600)	173.23 (4.400)
S		Deicer, middle L.H. wing T700A3010001004	3.75 (1.700)	173.23 (4.400)
S		Deicer, middle R.H. wing T700A3010001005	3.75 (1.700)	173.23 (4.400)
S		Deicer, outboard L.H. wing T700A3010012000	2.65 (1.200)	173.23 (4.400)
S		Deicer, outboard R.H. wing T700A3010001007	3.31 (1.500)	173.23 (4.400)
S		Dual port distribution valve 1532-10C	2.43 (1.100)	125.98 (3.200)
S		Timer 42E25-2A	0.77 (0.350)	177.17 (4.500)
S		Water separator and filter 44E21-2A	1.10 (0.500)	125.98 (3.200)
30-40 - Windshield deicing				
S		Windshield heater controller TWH 93-01	0.99 (0.450)	149.61 (3.800)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
31 - INDICATING/RECORDING SYSTEMS				
31-20 - Independent instruments				
S		Chronometer 420000	0.15 (0.070)	157.48 (4.000)
O	31001A	Stop watch Q18-945-22-28-1-LE	0.42 (0.190)	157.48 (4.000)
S	31002B	Hourmeter (flying time) 56457-3	0.55 (0.250)	156.30 (3.970)
O	31002A	Hourmeter (engine running time) 56457-3	0.55 (0.250)	156.30 (3.970)
31-50 - Aural warning				
R		Aural warning system T700A3155011000	0.66 (0.300)	183.07 (4.650)
31-60 - Visual warning				
R		Advisory panel AP 05-09	4.41 (2.000)	157.48 (4.000)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
R		Master cylinder 010-07802	0.88 (0.400)	145.67 (3.700)
R		Nose tire 5.00-5-10PR TL	5.60 (2.540)	89.57 (2.275)
R		Nose tire 5.00-5-10PR TL	6.30 (2.858)	89.57 (2.275)
R		Nose wheel 40-262A	2.98 (1.350)	89.57 (2.275)
R		Main wheel (Model 40-434)	11.28 (5.120)	204.33 (5.190)
R		Parking brake valve T700A3240010 or T700B3240001	0.33 (0.150)	157.48 (4.000)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		33 - LIGHTS		
		33-10 - Instrument panel lighting		
S		L.H. tube 67135 U290 C62S	Neglig.	/
S		R.H. tube 67135 U290 C63S	Neglig.	/
S		DC/AC inverter T700A3310021	0.33 (0.150)	153.54 (3.900)
S		Intensity control T700A3310022	0.22 (0.100)	157.48 (4.000)
S		Instruments emergency lighting 2240-3	0.11 (0.050)	181.10 (4.600)
A	33001A	PULSELITE control 1NC P/N 1220/2410-2	1.27 (0.574)	202.60 (5.146)
		33-40 - External lighting		
S		L.H. wing inspection light (icing detection) T700A3340012	0.20 (0.090)	151.57 (3.850)
S		Landing lights 4596	0.79 (0.360)	179.13 (4.550)
S		Taxi light assy T700A3340006	1.10 (0.500)	93.70 (2.380)
S		NAV/Anticollision system :		
S		- Anticollision power supply A413A HDA-CF-14/28	3.00 (1.360)	204.72 (5.200)
S		- R.H. or L.H. navigation light assy T700A3341019	0.51 (0.230)	185.04 (4.700)
A	33002	Halogen landing lights Q5596	0.79 (0.360)	179.13 (4.550)
		Halogen taxi lights Q5587	1.10 (0.500)	93.70 (2.380)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
O	0159-34	Installation of two altimeters (# 1 and # 2) AM250 - Version A	$\Delta +3.02$ ($\Delta+1.37$)	153.54 (3.900)
		- Version B (provision for "RVSM")	$\Delta +4.10$ ($\Delta+1.86$)	153.54 (3.900)
O	0160-34A	Autorisation to operate in "RVSM" area (Post SB70-120-34) 34-13 - Outside temperature	/	/
S		Outside air temperature indicator 301C	0.27 (0.120)	157.48 (4.000)
		34-21 - Heading reference system		
S		Directional gyro KG 102A	4.30 (1.950)	192.91 (4.900)
A		Flux valve KMT 112	0.31 (0.140)	181.10 (4.600)
S		HSI Slave KA 51B	3.40 (1.540)	153.54 (3.900)
A		HSI KI 525A	3.94 (1.790)	157.48 (4.000)
A	34023B	HSI # 2 KCS 55A (R.H. instrument panel)	3.40 (1.540)	153.54 (3.900)
		34-23 - Magnetic compass		
R		Stand-by compass C2350 L4CM23	0.55 (0.250)	163.39 (4.150)
		34-24 - ADI and standby horizon		
S		Pneumatic ADI (included in option 34001 EFIS - ATA 34-28)		

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
A	34002E	Additional horizon 1100-28LS (7F) (Adjustable pointer) (R.H. instrument panel)	2.65 (1.200)	153.54 (3.900)
		34-25 - Radio magnetic indication		
S		RMI # 1 KI 229 (refer to ATA 34-54)		
O	34020D	RMI # 1 KNI 582 (L.H. instrument panel) EFIS coupled	2.99 (1.360)	172.83 (4.390)
		Converter KN 40	4.23 (1.920)	257.87 (6.550)
O	34020F	RMI # 1 KNI 582 (L.H. instrument panel) EFIS coupled	3.50 (1.590)	161.50 (4.102)
		Converter KN 40	4.23 (1.920)	257.87 (6.550)
		34-28 - Electronic flight instrumentation system		
S	34001C	EFIS (EFS 40 + AP KFC 325) with DME KDI 574 (without KN 40 converter)	67.81 (30.760)	125.63 (3.191)
		34-31 - Marker		
S		MARKER antenna DM N27-3	0.75 (0.340)	129.92 (3.300)
		34-41 - Stormscope		
A	34056	Stormscope, EFIS coupled with indicator on GNS 530 and MFD KMD 850 or GMX 200	4.94 (2.240)	232.28 (5.900)
		. Antenna NY163	0.84 (0.380)	311.02 (7.900)
		. Processor WX500	2.27 (1.030)	255.91 (6.500)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		34-42 - Weather radar		
A	34040F	Weather radar RDR 2000 EFIS coupled, with indicator on MFD KMD 850 or GMX 200	11.53 (5.230)	173.46 (4.406)
		34-43 - Radioaltimeter		
A	34037F	Radioaltimeter, EFIS coupled, of which :	8.18 (3.710)	195.82 (4.974)
		. Transceiver KRA 405B	2.80 (1.270)	231.18 (5.872)
		. Indicator KNI 415	1.70 (0.770)	155.24 (3.943)
		. Antenna DM 19-2-1	0.20 (0.090)	182.09 and 205.83 (4.625 and 5.228)
A	34037H	Radioaltimeter, EFIS coupled, without KNI 415, with aural warning, of which :	5.73 (2.600)	209.37 (5.318)
		. Transceiver KRA 405B	2.80 (1.270)	231.18 (5.872)
		. Antenna DM 19-2-1	0.20 (0.090)	182.09 and 205.83 (4.625 and 5.228)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
A	340371	Radioaltimeter (new version with weight lowering of coaxial cables), EFIS coupled, without KNI 415 or aural warning, of which :	5.622 (2.550)	209.96 (5.333)
		. Transceiver KRA 405B	2.80 (1.270)	231.18 (5.872)
		. Antenna DM 19-2-1	0.20 (0.090)	182.09 and 205.83 (4.625 and 5.228)
		34-44 - Traffic advisory system		
A	34059A	SKYWATCH HP Traffic advisory system SKY 899 with indicator on MFD KMD 850 or GNS 530, of which :	12.72 (5.770)	151.18 (3.840)
		. Antenna NY164	2.29 (1.040)	218.50 (5.550)
		. Processor TRC899	8.88 (4.030)	133.86 (3.400)
A	34059B	SKYWATCH HP Traffic advisory system SKY 899 TAS/EFIS coupled, with indicator on MFD KMD 850 or GNS 530, of which :	12.72 (5.770)	151.18 (3.840)
		. Antenna NY164	2.29 (1.040)	218.50 (5.550)
		. Processor TRC899	8.88 (4.030)	133.86 (3.400)
		34-45 - Enhanced Ground Proximity Warning System		
A	34060A	EGPWS :	2.53 (1.150)	185.39 (4.709)
		. Antenna KA 92	0.26 (0.120)	244.09 (6.200)
		. Computer KGP 560	1.37 (0.620)	192.91 (4.900)
		. Control box MD41-1208	0.24 (0.110)	155.51 (3.950)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
A	34061A	TAS/TAWS KMH 880 system : with indicator on MFD KMD 850 or GMX 200 (not autonomous)	15.63 (7.09)	158.42 (4.024)
		. Processor KMH 880	9.68 (4.390)	133.07 (3.380)
		. Control box MD41-1208	5.00 (2.270)	157.08 (3.990)
		. Antenna (upper fuselage) KA 815	0.95 (0.430)	218.11 (5.540)
		. Antenna (under fuselage) KA 815	0.95 (0.430)	256.69 (6.520)
A	34061B	TAS/TAWS KMH 880 system : with indicator on MFD KMD 850 or GMX 200	15.89 (7.21)	166.02 (4.217)
		. Processor KMH 880	9.68 (4.390)	133.07 (3.380)
		. Control box MD41-1208	5.00 (2.270)	157.08 (3.990)
		. Antenna (upper fuselage) KA 815	0.95 (0.430)	218.11 (5.540)
		. Antenna (under fuselage) KA 815	0.95 (0.430)	256.69 (6.520)
		. Antenna KA 92	0.26 (0.120)	196.85 (5.000)
A	34061C	TAS/TAWS KMH 880 system : with indicator on MFD KMD 850 or GMX 200	15.65 (7.10)	158.42 (4.024)
		. Processor KMH 880	9.68 (4.390)	133.07 (3.380)
		. Control box MD41-1208	5.00 (2.270)	157.08 (3.990)
		. Antenna (upper fuselage) KA 815	0.95 (0.430)	218.11 (5.540)
		. Antenna (under fuselage) KA 815	0.95 (0.430)	256.69 (6.520)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
O	34058B	Transponder # 2 GTX327	5.60 (2.540)	148.66 (3.776)
		Antenna KA 61	0.40 (0.180)	157.48 (4.000)
O	0152-34	Transponder # 1 Mode S GTX330D	7.50 (3.400)	152.60 (3.876)
		- <u>Version A</u> (European countries only, from S/N 312)		
		Antenna (under fuselage) KA 60	0.20 (0.090)	150.08 (3.812)
		(above fuselage)	0.20 (0.090)	193.22 (4.908)
		- <u>Version B</u> (European countries only, from S/N 312)		
		Antenna (under fuselage) KA 61	0.40 (0.180)	150.08 (3.812)
		(above fuselage)	0.40 (0.180)	193.22 (4.908)
		34-54 - Automatic Direction Finder (ADF)		
S	34055B	ADF SC+, EFIS coupled :		
		. Receiver KR 87/Indicator KI 227 P/N 066-01072-0014	3.90 (1.770)	157.48 (4.000)
		. Antenna KA 44B	2.80 (1.270)	195.28 (4.960)
		. RMI 1 P/N 066-03038-0000 (L.H. Instrument panel) (European countries only)	2.87 (1.300)	153.86 (3.908)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
34-55 - DME installation				
S	34014A	DME KN 63 system, of which : (through NAV1 KNS 81 and NAV2 KX 165 channels)	4.32 (1.960)	209.84 (5.330)
		. Indicator in radio rack KDI 572	0.80 (0.363)	151.57 (3.850)
		. Receiver KN 63	2.80 (1.270)	232.28 (5.900)
		. Antenna KA 60	0.20 (0.090)	230.31 (5.850)
A	34014C	DME KN 63 system, of which : (through NAV1 KN53 and NAV2 KN 53 channels)	4.32 (1.960)	209.84 (5.330)
		. Indicator in radio rack KDI 572	0.80 (0.363)	151.57 (3.850)
		. Receiver KN 63	2.80 (1.270)	232.28 (5.900)
		. Antenna KA 60	0.20 (0.090)	230.31 (5.850)
34-62 - Multifunction Display				
S	34054A	MFD KMD 850	6.41 (2.910)	153.54 (3.900)
A	0210-34A	Multifunction display GMX 200	5.42 (2.460)	153.54 (3.900)
A	0210-34B	Multifunction display (with chart view) GMX 200	5.42 (2.460)	153.54 (3.900)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
S	35001B	35 - OXYGEN Gaseous oxygen system	24.69 (11.200)	178.19 (4.526)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		37 - VACUUM		
S		Air ejector valve 19E17-5A	0.66 (0.300)	116.14 (2.950)
S		Gyro suction gage 3-310-5	0.14 (0.065)	157.48 (4.000)
S		Gyro vacuum air filter 1J7-2	0.38 (0.170)	139.76 (3.550)
S		Regulator and relief valve 38E-96-2D	1.32 (0.600)	116.14 (2.950)
S		Vacuum relief valve 691-21A	0.33 (0.150)	139.76 (3.550)
S		Valve 557-18 E	0.35 (0.160)	118.11 (3.000)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
A	52002A	52 - DOORS "Pilot" door	44.092 (20.000)	171.26 (4.350)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		61 - PROPELLER		
		61-10 - Propeller assembly		
S		Propeller HC-E4N.3 / E 9083 S (K)	153.22 (69.500)	43.11 (1.095)
		61-20 - Controls		
R		Overspeed governor A210632	2.73 (1.240)	59.06 (1.500)
S		Propeller governor 8210.007	2.65 (1.200)	59.06 (1.500)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
77 - ENGINE INDICATING				
R		Compressor turbine tacho-generator (Ng) MIL-G-26611C GEU-7/A	0.981 (0.445)	108.27 (2.750)
R		Gas generator speed indicator (Ng) 5428-703-91-03	1.290 (0.585)	151.57 (3.850)
R		Propeller speed indicator 5428-704-91-03	1.290 (0.585)	151.57 (3.850)
R		Power turbine tacho-generator MIL-G-26611C GEU-7/A	0.981 (0.445)	55.12 (1.400)
R		Torquemeter 5428-753-91-03	1.257 (0.570)	151.57 (3.850)
R		Torque transducer 8107.200.00.10 or CZ52E8-G	0.463 (0.210)	53.54 (1.360)
77-12 - Fuel management				
S		Flowmeter 90 12 00 :		
S		- Indicator 912080-38	0.930 (0.422)	143.70 (3.650)
S		- Transmitter 660 526A	1.000 (0.454)	110.20 (2.799)
77-20 - Engine temperature indicating				
R		ITT indicator 5428-558-91-03	1.389 (0.630)	151.57 (3.850)
77-40 - Engine Trend Monitor (ETM)				
O	77003C	ETM (Engine Trend Monitor)	4.034 (1.830)	154.92 (3.935)

S/ R/ A/ O	ITEM OPT70 or MOD70	REQUIRED (R) OR STANDARD (S) OR OPTIONAL (A or O) EQUIPMENT	WEIGHT per unit lb (kg)	ARM in. (m)
		79 - LUBRICATION		
		79-20 - Distribution		
R		Oil cooler L8538233	10.472 (4.750)	90.55 (2.300)
		79-30 - Indicating		
R		Oil dual indicator 5427-350-91-03	1.179 (0.535)	151.57 (3.850)
R		Oil pressure transmitter 8107-400-00-10	0.441 (0.200)	106.30 (2.700)
A	0169-79A	Chip detection system (2 detectors)	Neglig.	/
A	0169-79B	Chip detection system (1 detector)	Neglig.	/